


Service Manual

Plasma Television

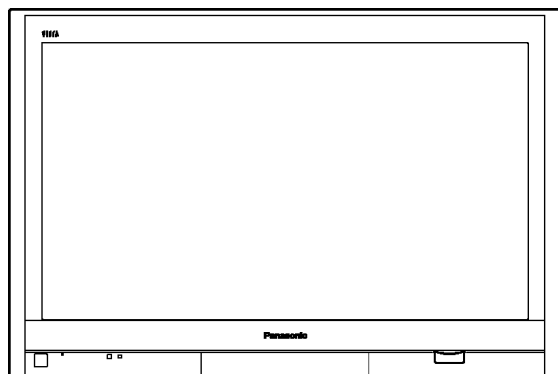

TH-50PV600AZ
TH-50PV600H
TH-50PV600M
TH-50PV600MT
 GP9DE Chassis

Power Source AC 220-240 V, 50/60 Hz

Power Consumption

Average use 448 W

Standby condition 0.3 W

Plasma Display panel

Drive method AC type

Aspect Ratio 16:9

Contrast Ratio Max 10000:1

Visible screen size 127 cmV

(No. of pixels) 1,106 mm (W) × 622 mm (H) × 1,269 mm (diagonal)
 1,049,088 (1,366 (W) × 768 (H)) [4,098 × 768 dots]

Sound

Speaker Woofer (Φ 80 mm) × 2 pcs, Tweeter (23 mm × 100 mm) × 2pcs

Audio Output 31 W [15.5 W + 15.5 W] (10 % THD)

Headphones M3 (3.5 mm) Jack × 1

PC signals

VGA, SVGA, XGA

SXGA.....(compressed)

Horizontal scanning frequency 31-69 kHz

Vertical scanning frequency 59-86 Hz

Receiving Systems/

Band Name
(PV600AZ)

1. PAL B/G	Reception of Off air broadcasts
2. NTSC 4.43	Playback from Video Tape Recorders
3. NTSC 3.58	Playback from Special Video Tape Recorders and Special Video Disc Players
4. PAL 60Hz	(Via the AV Sockets) only.

**Receiving Systems /
Band name (PV600H/M/MT)**

17 Systems	Function
1 PAL B, G, H	Reception of broadcast transmissions and Playback from Video Cassette Tape Recorders
2 PAL I	
3 PAL D, K	
4 SECAM B, G	
5 SECAM D, K	
6 SECAM K1	
7 NTSC M (NTSC 3.58/4.5 MHz)	

17 Systems	Function
8 NTSC 4.43/5.5 MHz	Playback from Special VCR's or DVD
9 NTSC 4.43/6.0 MHz	
10 NTSC 4.43/6.5 MHz	
11 NTSC 3.58/5.5 MHz	
12 NTSC 3.58/6.0 MHz	
13 NTSC 3.58/6.5 MHz	
14 SECAM I	
15 PAL 60 Hz/5.5 MHz	Playback from Special Disc Players and Special VCR's or DVD
16 PAL 60 Hz/6.0 MHz	
17 PAL 60 Hz/6.5 MHz	

**Receiving Channels
(PV600AZ)**

VHF 0 to 12
UHF 21 to 69
S'1 to S'3
S1 to S41

PAL B
PAL G
HYPER TUNER

**Receiving Channels
(Regular TV) (PV600H/M/MT)**
VHF BAND

2-12(PAL/SECAM B,K1)
0-12(PAL B AUST.)
1-9(PAL B N.Z.)
1-12(PAL/SECAM D)
1-12(NTSC M Japan)
2-13(NTSC M USA)

UHF BAND

21-69(PAL,G,H,I/SECAM G,K,K1)
28-69(PAL B AUST.)
13-57(PAL D,K)
13-62(NTSC M Japan)
14-69(NTSC M USA)

CATV

S1-S20(OSCAR)
1-125(USA CATV)
C13-C49(JAPAN)
S21-S41(HYPER)
Z1-Z37(CHINA)
5A,9A(AUST.)

Aerial - Rear

VHF / UHF

Operating Conditions
Temperature

0 °C - 40 °C

Humidity

20% - 80 % RH (non-condensing)

Connection Terminals
**AV1 AUDIO L-R
Input VIDEO**

RCA PIN Type × 2
RCA PIN Type × 1
Mini DIN 4-pin

0.5 V[rms]
1.0 V[p-p] (75 Ω)
Y: 1.0 V[p-p] (75 Ω) C: 0.286 V[p-p] (75 Ω)

**AV2 AUDIO L-R
Input VIDEO
COMPONENT**

RCA PIN Type × 2
RCA PIN Type × 1
Y
P_B/C_B, P_R/C_R

0.5 V[rms]
1.0 V[p-p] (75 Ω)
1.0 V[p-p] (including synchronization)
± 0.35 V[p-p]

**AV3 AUDIO L-R
Input VIDEO
COMPONENT**

RCA PIN Type × 2
RCA PIN Type × 1
Y
P_B/C_B, P_R/C_R

0.5 V[rms]
1.0 V[p-p] (75 Ω)
1.0 V[p-p] (including synchronization)
± 0.35 V[p-p]

**AV4 AUDIO L-R
Input VIDEO
S VIDEO**

RCA PIN Type × 2
RCA PIN Type × 1
Mini DIN 4-pin

0.5 V[rms]
1.0 V[p-p] (75 Ω)
Y: 1.0 V[p-p] (75 Ω) C: 0.286 V[p-p] (75 Ω)

**Others HDMI1/2 Input
PC Input**

TYPE A Connectors
HIGH-DENSITY D-SUB 15 PIN

R, G, B/0.7 V[p-p] (75 Ω)
HD, VD/TTL Level 2.0-5.0 V[p-p] (high impedance)
0.5 V[rms]

**Audio Input
Card slot**

RCA PIN Type × 2
SD CARD slot × 1

**Monitor AUDIO L-R
Output VIDEO**

RCA PIN Type × 2
RCA PIN Type × 1

0.5 V[rms] (high impedance)
1.0 V[p-p] (75 Ω)

Dimensions (W × H × D)

1,266 mm × 802 mm × 138 (panel part: 95) mm

Weight

43.0 kg Net

Note:

Design and Specifications are subject change without notice.

Weight and Dimensions shown are approximate.

WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

CONTENTS

	Page		Page
1 Applicable signals	5	7.2. Lead of Wiring (2)	22
2 Safety Precautions	6	7.3. Lead of Wiring (3)	23
2.1. General Guidelines	6	7.4. Lead of Wiring (4)	24
2.2. Touch-Current Check	6	7.5. Lead of Wiring (5)	25
3 Prevention of Electro Static Discharge (ESD) to		8 Self-check Function	26
Electrostatically Sensitive (ES) Devices	7	8.1. Power LED Blinking timing chart	27
4 About lead free solder (PbF)	8	8.2. No Power	28
5 Service Hint	9	8.3. No Picture	29
6 Plasma panel replacement method	10	8.4. Local screen failure	30
6.1. Remove the Back cover	10	9 Service Mode Function	31
6.2. Remove the fan	10	9.1. How to enter SERVICE 1	31
6.3. Remove the Speaker box ass'y (left)	10	9.2. How to enter SERVICE 2	31
6.4. Remove the Speaker box ass'y (right)	10	9.3. Option Description	33
6.5. Remove the rear terminal cover	10	10 Adjustment Procedure	35
6.6. Remove the P-Board	11	10.1. Driver Set-up	35
6.7. Remove the PA-Board	12	10.2. Initialization Pulse Adjust	36
6.8. Remove the tuner unit	12	10.3. P.C.B. (Printed Circuit Board) exchange	36
6.9. Remove the DG-Board	12	10.4. Adjustment Volume Location	37
6.10. Remove the TA-Board	12	10.5. Test Point Location	37
6.11. Remove the H-Board	13	11 Adjustment	38
6.12. Remove the HC-Board	13	11.1. PAL panel white balance adjustment	38
6.13. Remove the D-Board	13	11.2. HD white balance adjustment	39
6.14. Remove the SU-Board	13	11.3. Sub bright adjustment	40
6.15. Remove the SD-Board	14	11.4. ABL adjustment	41
6.16. Remove the SC-Board	14	11.5. Sub-Contrast adjustment	42
6.17. Remove the SS2-Board	14	11.6. Multi-window adjustment	43
6.18. Remove the SS3-Board	14	12 Hotel mode	44
6.19. Remove the SS-Board	15	13 Conductor Views	45
6.20. Remove the C1-Board	15	13.1. P-Board	45
6.21. Remove the C2-Board	15	13.2. PA-Board	48
6.22. Remove the C3-Board	15	13.3. H, HC and TA-Board	50
6.23. Remove the stand brackets	16	13.4. G-Board	52
6.24. Remove the C4-Board	16	13.5. GK, K and S-Board	53
6.25. Remove the C5-Board	16	13.6. DG-Board	54
6.26. Remove the C6-Board	16	13.7. D-Board	56
6.27. Remove the front bracket	17	13.8. C1-Board	58
6.28. Remove the G-Board, GK-Board and GS-Board	17	13.9. C2-Board	59
6.29. Remove the S-Board	17	13.10. C3-Board	60
6.30. Remove the GS-Board and SD-Module	17	13.11. C4-Board	61
6.31. Remove the Plasma panel section from the Front frame		13.12. C5-Board	62
(glass)	18	13.13. C6-Board	63
6.32. Remove the squawker speaker	19	13.14. SC-Board	64
6.33. Remove the K-Board	19	13.15. SU-Board	67
6.34. Replace the plasma panel (finished)	20	13.16. SD-Board	68
7 Location of Lead Wiring	21	13.17. SS-Board	69
7.1. Lead of Wiring (1)	21	13.18. SS-Board	71

13.19. GS-Board	72	14.36. D-Board (7 of 8) Schematic Diagram	108
14 Block and Schematic Diagram	73	14.37. D-Board (8 of 8) Schematic Diagram	109
14.1. Schematic Diagram Note	73	14.38. C1, C2, C5 and C6-Block Diagram	110
14.2. Main Block Diagram	74	14.39. C3, C4, SS, SS2 and SS3-Board Block Diagram	111
14.3. P-Board Block Diagram	75	14.40. C1-Board (1 of 2) Schematic Diagram	112
14.4. P-Board (1 of 2) Schematic Diagram	76	14.41. C1-Board (2 of 2) Schematic Diagram	113
14.5. P-Board (2 of 2) Schematic Diagram	77	14.42. C2-Board (1 of 3) Schematic Diagram	114
14.6. PA-Board Block Diagram	78	14.43. C2-Board (2 of 3) Schematic Diagram	115
14.7. PA-Board (1 of 3) Schematic Diagram	79	14.44. C2-Board (3 of 3) Schematic Diagram	116
14.8. PA-Board (2 of 3) Schematic Diagram	80	14.45. C3-Board (1 of 2) Schematic Diagram	117
14.9. PA-Board (3 of 3) Schematic Diagram	81	14.46. C3-Board (2 of 2) Schematic Diagram	118
14.10. H and TA-Board Block Diagram	82	14.47. C4-Board (1 of 2) Schematic Diagram	119
14.11. H-Board (1 of 3) Schematic Diagram	83	14.48. C4-Board (2 of 2) Schematic Diagram	120
14.12. H-Board (2 of 3) Schematic Diagram	84	14.49. C5-Board (1 of 3) Schematic Diagram	121
14.13. H-Board (3 of 3) Schematic Diagram	85	14.50. C5-Board (2 of 3) Schematic Diagram	122
14.14. G, GK, HC and K-Board Block Diagram	86	14.51. C5-Board (3 of 3) Schematic Diagram	123
14.15. G, GK and K-Board Schematic Diagram	87	14.52. C6-Board (1 of 2) Schematic Diagram	124
14.16. HC and TA-Board Schematic Diagram	88	14.53. C6-Board (2 of 2) Schematic Diagram	125
14.17. DG-Board (1 of 3) Block Diagram	89	14.54. SS, SS2 and SS3-Board Schematic Diagram	126
14.18. DG-Board (2 of 3) Block Diagram	90	14.55. SC, SU and SD-Board Block Diagram	127
14.19. DG-Board (3 of 3) Block Diagram	91	14.56. SC-Board (1 of 2) Schematic Diagram	128
14.20. DG-Board (1 of 8) Schematic Diagram	92	14.57. SC-Board (2 of 2) Schematic Diagram	129
14.21. DG-Board (2 of 8) Schematic Diagram	93	14.58. SU-Board (1 of 2) Schematic Diagram	130
14.22. DG-Board (3 of 8) Schematic Diagram	94	14.59. SU-Board (2 of 2) Schematic Diagram	131
14.23. DG-Board (4 of 8) Schematic Diagram	95	14.60. SD-Board (1 of 2) Schematic Diagram	132
14.24. DG-Board (5 of 8) Schematic Diagram	96	14.61. SD-Board (2 of 2) Schematic Diagram	133
14.25. DG-Board (6 of 8) Schematic Diagram	97	14.62. GS-Board Block and Schematic Diagram	134
14.26. DG-Board (7 of 8) Schematic Diagram	98	15 Parts Location & Mechanical Replacement Parts List	135
14.27. DG-Board (8 of 8) Schematic Diagram	99	15.1. Parts Location	135
14.28. D-Board (1 of 2) Block Diagram	100	15.2. Packing Exploded Views (1)	136
14.29. D-Board (2 of 2) Block Diagram	101	15.3. Packing Exploded Views (2)	137
14.30. D-Board (1 of 8) Schematic Diagram	102	15.4. Packing Exploded Views	138
14.31. D-Board (2 of 8) Schematic Diagram	103	15.5. Mechanical Replacement Parts List	139
14.32. D-Board (3 of 8) Schematic Diagram	104	16 Electrical Replacement Parts List	140
14.33. D-Board (4 of 8) Schematic Diagram	105	16.1. Replacement Parts List Notes	140
14.34. D-Board (5 of 8) Schematic Diagram	106	16.2. Electrical Replacement Parts List	141
14.35. D-Board (6 of 8) Schematic Diagram	107		

1 Applicable signals

Input signal that can be displayed

* Mark: Applicable input signal for Component (Y, Pb/Cb, Pr/Cr), HDMI and PC (D-sub 15P)

Signal name	Horizontal frequency (kHz)	Vertical frequency (Hz)	Component	HDMI	PC
480i (60 Hz)	15.73	59.94	*	*	
480p (60 Hz)	31.47	59.94	*	*	
576i (50 Hz)	15.63	50.00	*	*	
576p (50 Hz)	31.25	50.00	*	*	
720p (60 Hz)	45.00	60.00	*	*	
720p (50 Hz)	37.50	50.00	*	*	
1,080i (60 Hz)	33.75	60.00	*	*	
1,080i (50 Hz)	28.13	50.00	*	*	
1,080i (50 Hz)* ¹	31.25	50.00	*	*	
640 × 400 @70 Hz	31.46	70.07			*
640 × 480 @60 Hz	31.47	59.94			*
640 × 480 @75 Hz	37.50	75.00			*
800 × 600 @60 Hz	37.88	60.32			*
800 × 600 @75 Hz	46.88	75.00			*
800 × 600 @85 Hz	53.67	85.06			*
1,024 × 768 @60 Hz	48.36	60.00			*
1,024 × 768 @70 Hz	56.48	70.07			*
1,024 × 768 @75 Hz	60.02	75.03			*
1,024 × 768 @85 Hz	68.68	85.00			*
1,280 × 1,024 @60 Hz	63.98	60.02			*
Macintosh13" (640 × 480)	35.00	66.67			*
Macintosh16" (832 × 624)	49.72	74.54			*
Macintosh21" (1,152 × 870)	68.68	75.06			*

Note

- Signals other than above may not be displayed properly.
- The above signals are reformatted for optimal viewing on your display.

2 Safety Precautions

2.1. General Guidelines

1. When servicing, observe the original lead dress. If a short circuit is found, replace all parts which have been overheated or damaged by the short circuit.
2. After servicing, see to it that all the protective devices such as insulation barriers, insulation papers shields are properly installed.
3. After servicing, make the following leakage current checks to prevent the customer from being exposed to shock hazards.

2.2. Touch-Current Check

1. Plug the AC cord directly into the AC outlet. Do not use an isolation transformer for this check.
2. Connect a measuring network for touch currents between each exposed metallic part on the set and a good earth ground such as a water pipe, as shown in Figure 1.
3. Use Leakage Current Tester (Simpson 228 or equivalent) to measure the potential across the measuring network.
4. Check each exposed metallic part, and measure the voltage at each point.
5. Reserve the AC plug in the AC outlet and repeat each of the above measure.
6. The potential at any point (TOUCH CURRENT) expressed as voltage U_1 and U_2 , does not exceed the following values:

For a. c.: $U_1 = 35 \text{ V (peak)}$ and $U_2 = 0.35 \text{ V (peak)}$;

For d. c.: $U_1 = 1.0 \text{ V}$,


Note:

The limit value of $U_2 = 0.35 \text{ V (peak)}$ for a. c. and $U_1 = 1.0 \text{ V}$ for d. c. correspond to the values 0.7 mA (peak) a. c. and 2.0 mA d. c.

The limit value $U_1 = 35 \text{ V (peak)}$ for a. c. correspond to the value 70 mA (peak) a. c. for frequencies greater than 100 kHz .

7. In case a measurement is out of the limits specified, there is a possibility of a shock hazard, and the equipment should be repaired and rechecked before it is returned to the customer.

Measuring network for TOUCH CURRENTS

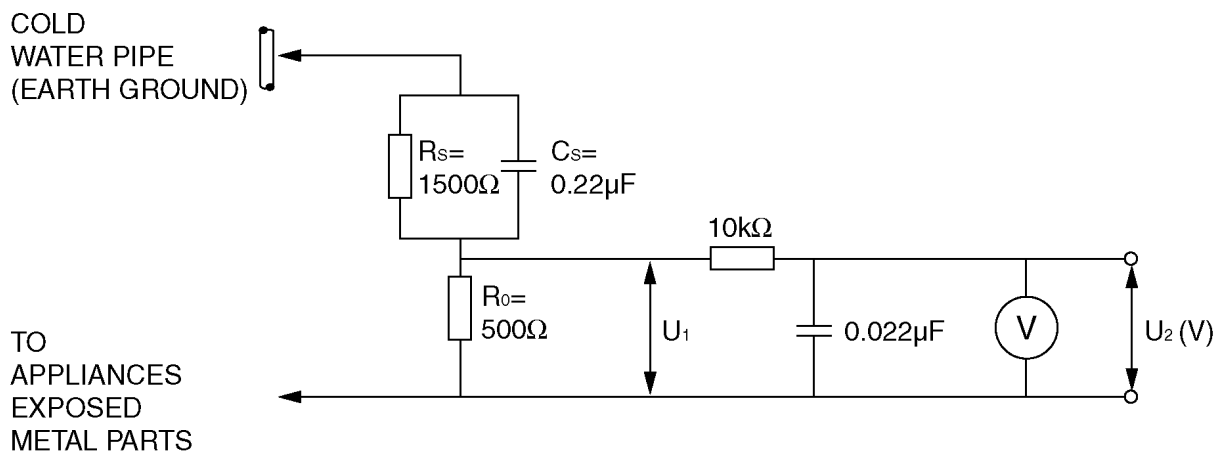

Resistance values in ohms (Ω)

V: Voltmeter or oscilloscope
(r.m.s. or peak reading)

Input resistance: $\geq 1 \text{ M}\Omega$

Input capacitance: $\leq 200 \text{ pF}$

Frequency range: 15 Hz to 1 MHz and d.c. respectively

NOTE - Appropriate measures should be taken to obtain the correct value in case of non-sinusoidal waveforms.

Figure 1

3 Prevention of Electro Static Discharge (ESD) to Electrostatically Sensitive (ES) Devices

Some semiconductor (solid state) devices can be damaged easily by static electricity. Such components commonly are called Electrostatically Sensitive (ES) Devices. Examples of typical ES devices are integrated circuits and some field-effect transistors and semiconductor "chip" components. The following techniques should be used to help reduce the incidence of component damage caused by electro static discharge (ESD).

1. Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any ESD on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging ESD wrist strap, which should be removed for potential shock reasons prior to applying power to the unit under test.
2. After removing an electrical assembly equipped with ES devices, place the assembly on a conductive surface such as aluminum foil, to prevent electrostatic charge buildup or exposure of the assembly.
3. Use only a grounded-tip soldering iron to solder or unsolder ES devices.
4. Use only an anti-static solder removal device. Some solder removal devices not classified as "anti-static (ESD protected)" can generate electrical charge sufficient to damage ES devices.
5. Do not use freon-propelled chemicals. These can generate electrical charges sufficient to damage ES devices.
6. Do not remove a replacement ES device from its protective package until immediately before you are ready to install it. (Most replacement ES devices are packaged with leads electrically shorted together by conductive foam, aluminum foil or comparable conductive material).
7. Immediately before removing the protective material from the leads of a replacement ES device, touch the protective material to the chassis or circuit assembly into which the device will be installed.

Caution

Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.

8. Minimize bodily motions when handling unpackaged replacement ES devices. (Otherwise harmless motion such as the brushing together of your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity (ESD) sufficient to damage an ES device).

IMPORTANT SAFETY NOTICE

There are special components used in this equipment which are important for safety. These parts are marked by  in the schematic diagrams, Exploded Views and replacement parts list. It is essential that these critical parts should be replaced with manufacturer's specified parts to prevent shock, fire, or other hazards. Do not modify the original design without permission of manufacturer.

4 About lead free solder (PbF)

Note: Lead is listed as (Pb) in the periodic table of elements.

In the information below, Pb will refer to Lead solder, and PbF will refer to Lead Free Solder.

The Lead Free Solder used in our manufacturing process and discussed below is (Sn+Ag+Cu).


That is Tin (Sn), Silver (Ag) and Copper (Cu) although other types are available.

This model uses Pb Free solder in it's manufacture due to environmental conservation issues. For service and repair work, we'd suggest the use of Pb free solder as well, although Pb solder may be used.

PCBs manufactured using lead free solder will have the PbF within a leaf Symbol  stamped on the back of PCB.




Caution

- Pb free solder has a higher melting point than standard solder. Typically the melting point is 50 ~ 70 °F (30~40 °C) higher. Please use a high temperature soldering iron and set it to 700 ± 20 °F (370 ± 10 °C).
 - Pb free solder will tend to splash when heated too high (about 1100 °F or 600 °C).
- If you must use Pb solder, please completely remove all of the Pb free solder on the pins or solder area before applying Pb solder. If this is not practical, be sure to heat the Pb free solder until it melts, before applying Pb solder.
- After applying PbF solder to double layered boards, please check the component side for excess solder which may flow onto the opposite side. (see figure below)

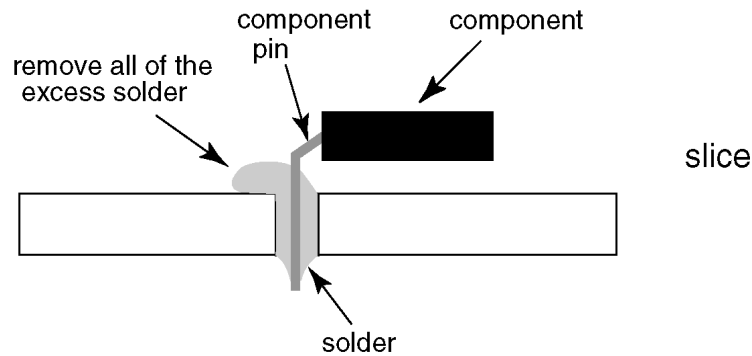


Suggested Pb free solder

There are several kinds of Pb free solder available for purchase. This product uses Sn+Ag+Cu (tin, silver, copper) solder. However, Sn+Cu (tin, copper), Sn+Zn+Bi (tin, zinc, bismuth) solder can also be used.

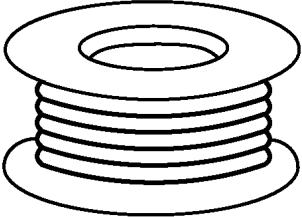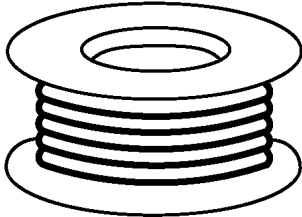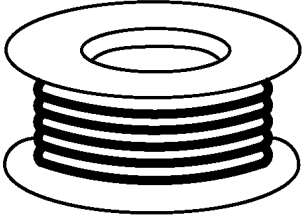0.3mm X 100g	0.6mm X 100g	1.0mm X 100g
		

5 Service Hint

Remove the Rear Cover

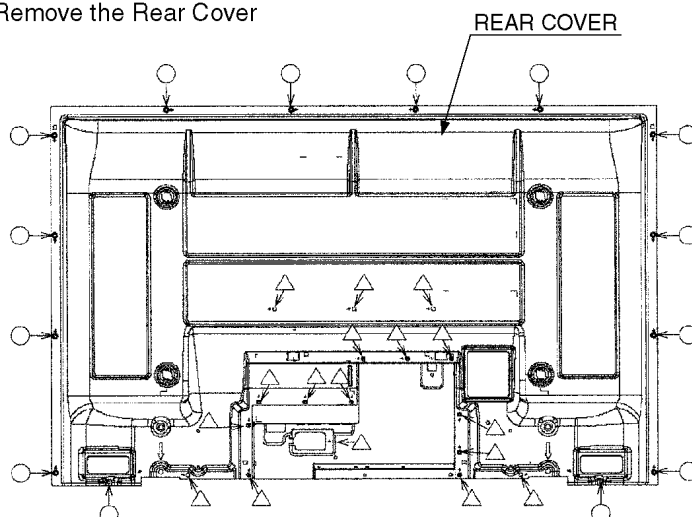


Remove:

14 screws (O) XTB4+12GFJK

17 screws (Δ) THEL0429

Service Position

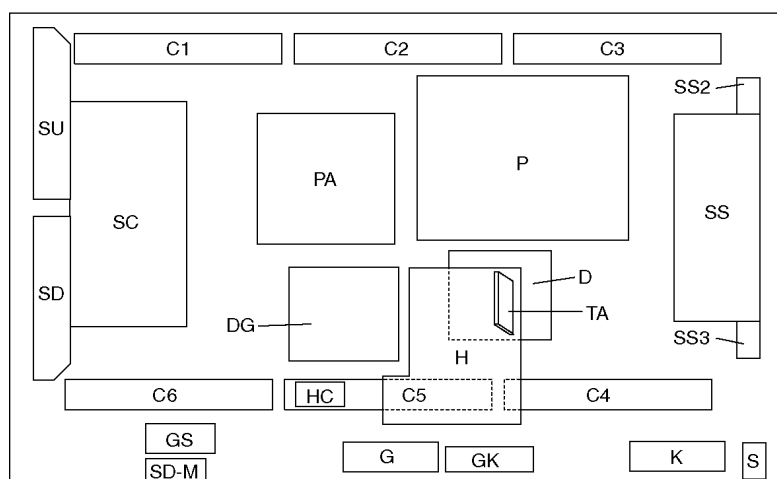

Board Name	Function	Board Name	Function
P	Power Supply	C1	Data Driver (Upper Right)
PA	DC-DC Converter, Power SOS, Speaker out, Audio AMP, Fan Control	C2	Data Driver (Upper Center)
H	AV Terminal, AV Switch, MSP	C3	Data Driver (Upper Left)
TA	Tuner	C4	Data Driver (Lower Left)
DG	Digital Signal Processor, Micom, HDMI Interface	C5	Data Driver (Lower Center)
D	Format Converter, Plasma Ai, Sub-Field Processor	C6	Data Driver (Lower Right)
HC	Jig Connection	SC	Scan Drive
K	Remote receiver, Power LED	SU	Scan out (Upper)
S	Power Switch	SD	Scan out (Lower)
G	Front Terminal	SS	Sustain Drive
GK	Key Switch	SS2	Sustain Connector (Upper)
GS	SD Card Slot	SS3	Sustain Connector (Lower)
		SD-M	SD Module (MPEG4/PHOTO view, SD recording) None serviceable. SD Module should be exchanged for service.


6 Plasma panel replacement method

6.1. Remove the Back cover

1. See Service Hint (Section 5)


6.2. Remove the fan

1. Disconnect the relay couplers.
2. Remove the screws (×3 ➡ each) and remove the fans.

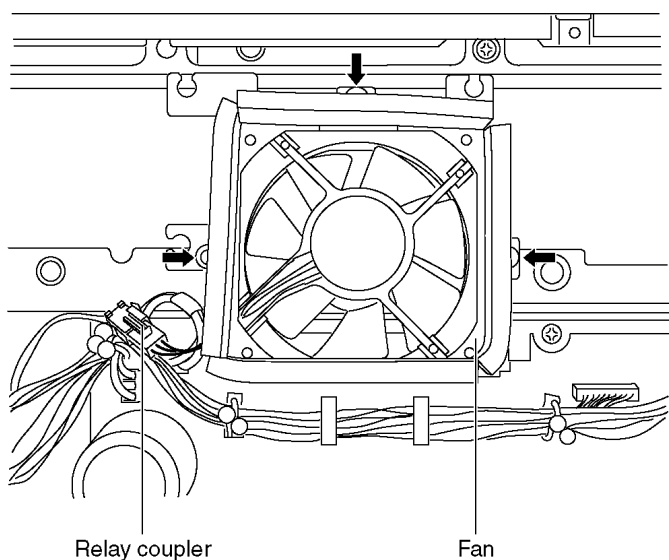


6.3. Remove the Speaker box ass'y (left)

1. Unlock the cable clampers to free the cable.
2. Disconnect the relay coupler.
3. Remove the Speaker box ass'y (left).

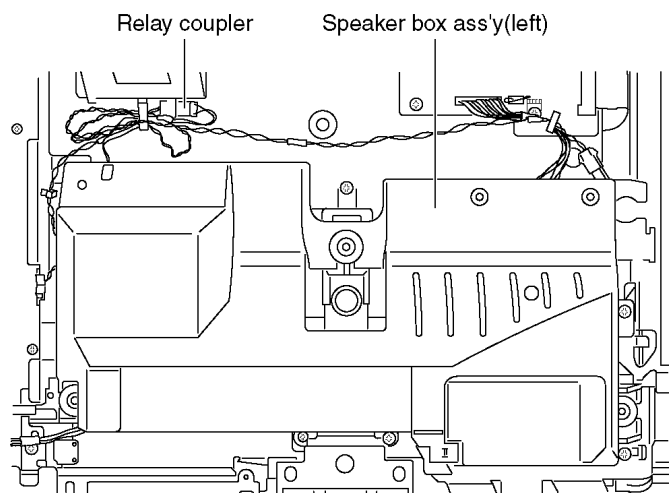


6.4. Remove the Speaker box ass'y (right)

1. Unlock the cable clampers to free the cable.
2. Disconnect the relay coupler.
3. Remove the Speaker box ass'y (right).

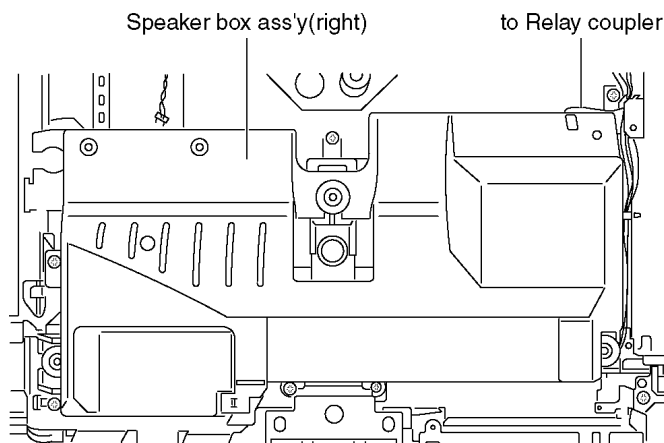

6.5. Remove the rear terminal cover

1. Remove the screws (×8 ➡, ×5 ⇨, ×2 ⇩).
2. Remove the rear terminal cover.

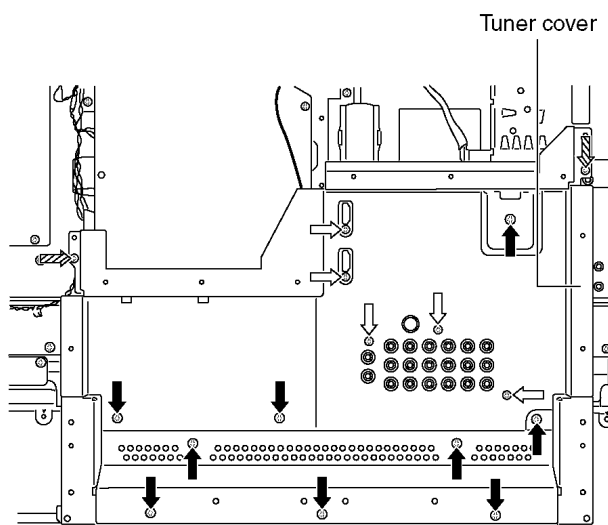


6.6. Remove the P-Board


Caution:

To remove P.C.B. wait 1 minute after power was off for discharge from electrolysis capacitors.


1. Disconnect the couplers (P2, P5, P9, P10, P11, P12, P23 and P25).
2. Remove the screws (×6 ➡) and remove the P-Board unit.

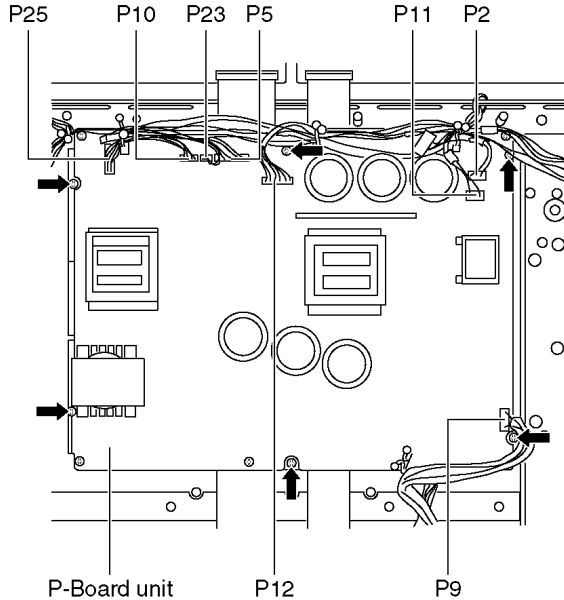

3. Remove the screws (×9 ➡) on the back side.

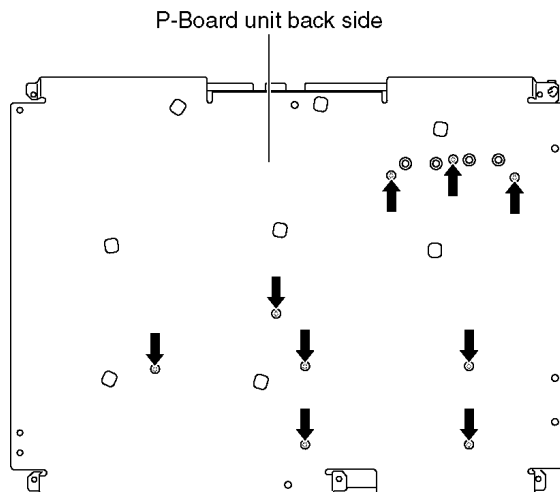


4. Remove the screws (×5 ➡).
5. Remove the molding props (×8 ⇔).
6. Remove the P-Board.

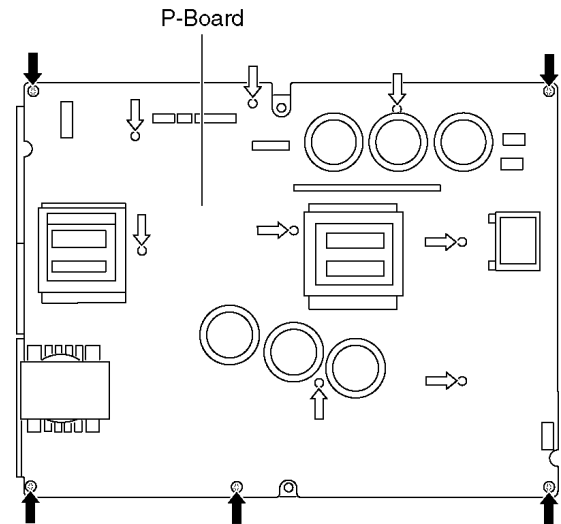


Note:

When assembling the P-Board, the position of each hole of the insulation sheets (A and B) is set to the position of each hole of the P-Board, then assemble them. (➡ marks indicate setting positions.)

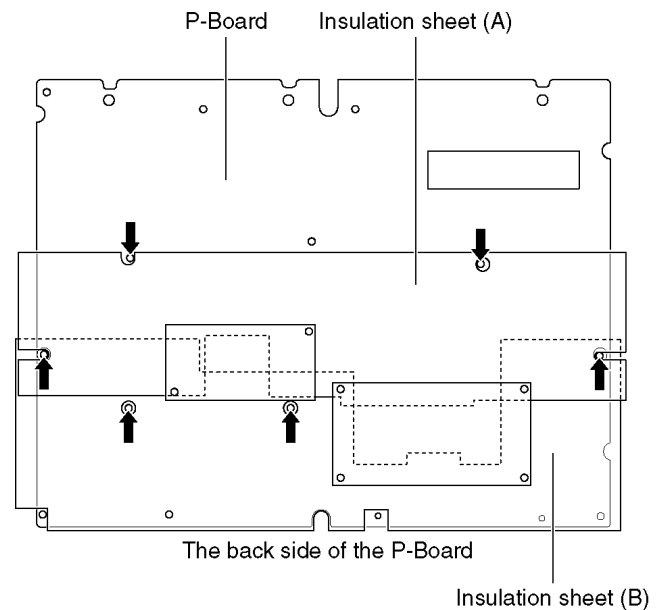


6.7. Remove the PA-Board

1. Unlock the cable clampers to free the cable.
2. Disconnect the couplers (PA1, PA2, PA5, PA10, PA31, PA32, PA33, PA34 and PA40).
3. Disconnect the flexible cable (PA20).
4. Remove the screws (×4 ➡) and remove the earth cable.
5. Remove the PA-Board.

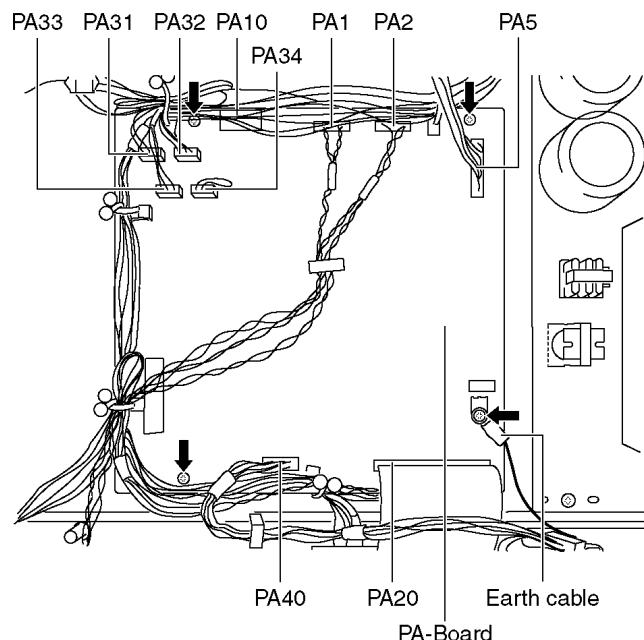


6.8. Remove the tuner unit

1. Unlock the cable clampers to free the cable.
2. Disconnect the couplers (DG5, G51, GS52, PA40 and earth cable).
3. Disconnect the flexible cables (DG3 and PA20).
4. Remove the screws (×4 ➡) and remove the tuner unit.

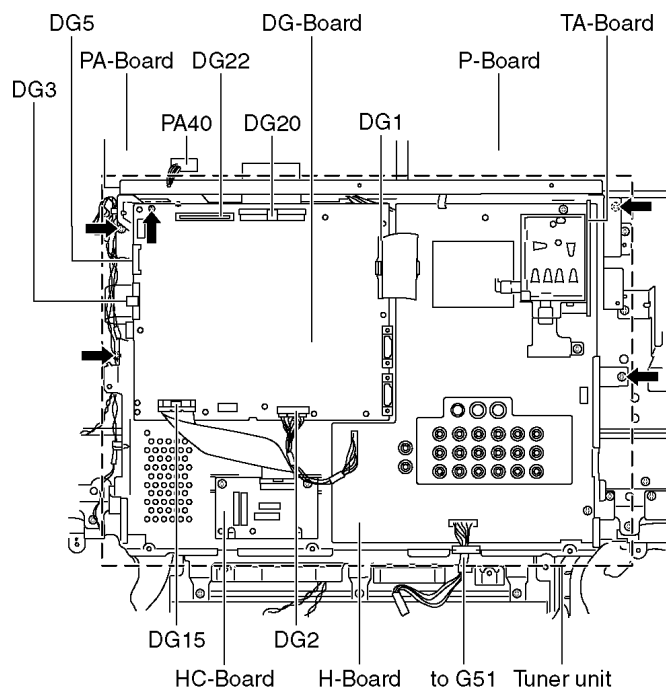


6.9. Remove the DG-Board

1. Disconnect the coupler (DG2).
2. Disconnect the flexible cables (DG1, DG15 and DG20).
3. Remove the screw (×7 ➡) and remove the DG-Board.

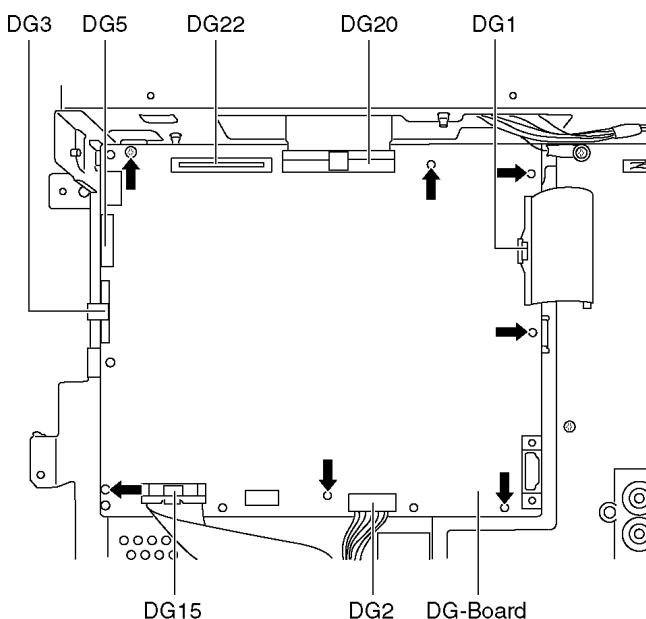


6.10. Remove the TA-Board

1. Disconnect the tuner cable.
2. Remove the screw (×1 ➡) and remove the TA-Board.

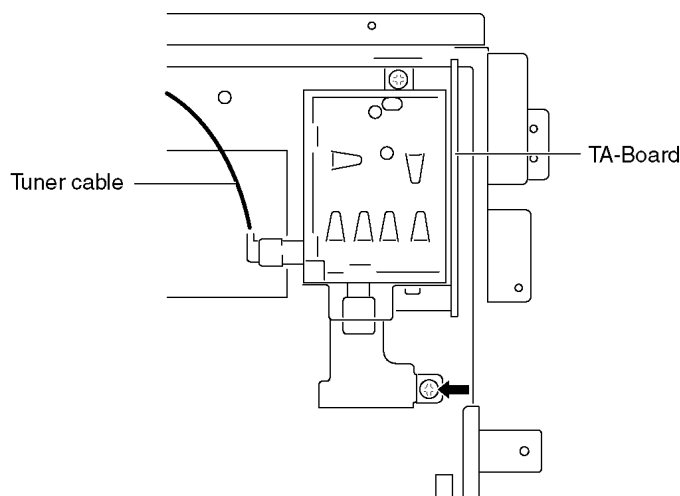


6.11. Remove the H-Board

1. Unlock the cable claspers to free the cable.
2. Disconnect the couplers (H2, H40 and H51).
3. Disconnect the flexible cable (H1).
4. Remove the screws (×6 ➡) and remove the H-Board.

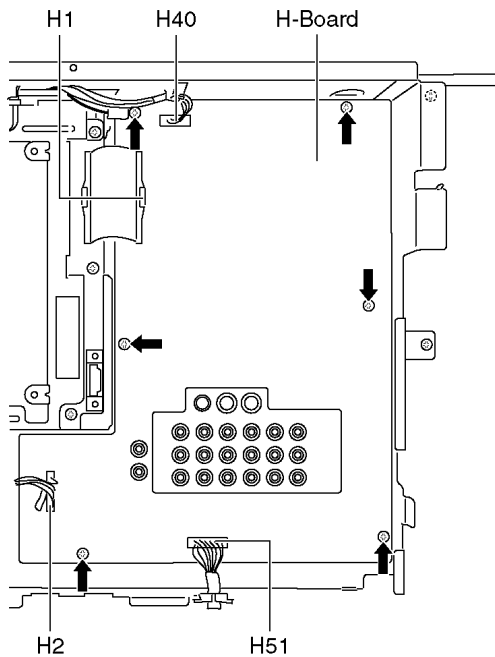


6.12. Remove the HC-Board

1. Disconnect the couple (HC06).
2. Disconnect the flexible cable (HC15).
3. Remove the screws (×2 ➡) and remove the HC-Board.

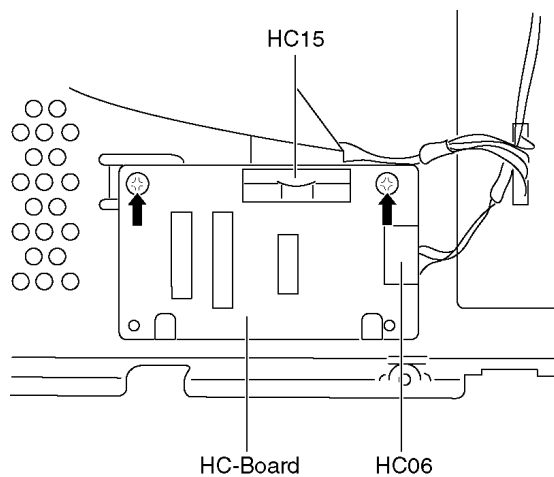


6.13. Remove the D-Board

1. Remove the tuner unit. (See section 6.6.)
2. Disconnect the couplers (D5, D20 and D25).
3. Disconnect the flexible cables (D3, D31, D32, D33 and D34).
4. Remove the screws (×4 ➡) and remove the D-Board.

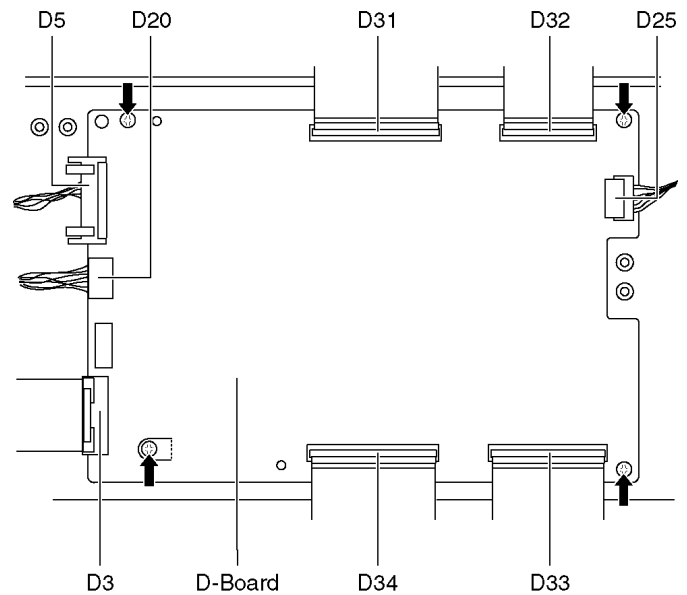


6.14. Remove the SU-Board

1. Remove the screws (×3 ➡).
2. Remove the flexible cables (SU1, SU2, SU3 and SU4) and remove the bridge connector (SU45).
3. Slide the SU-Board to the left to disconnect from a coupler (SC41-SU41) on the SC-Board and remove the SU-Board.

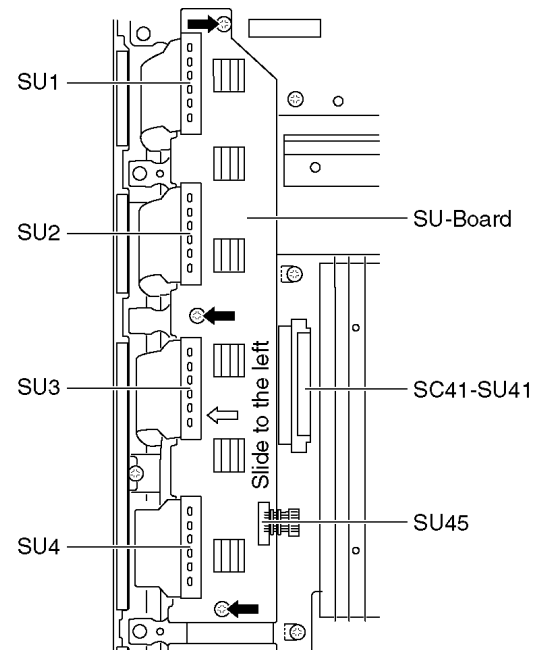


6.15. Remove the SD-Board

1. Remove the screws (×3 ➡).
2. Remove the flexible cables (SD1, SD2, SD3 and SD4) and remove the bridge connector (SD46).
3. Slide the SD-Board to the left to disconnect from a coupler (SC42-SD42) on the SC-Board and remove the SD-Board.

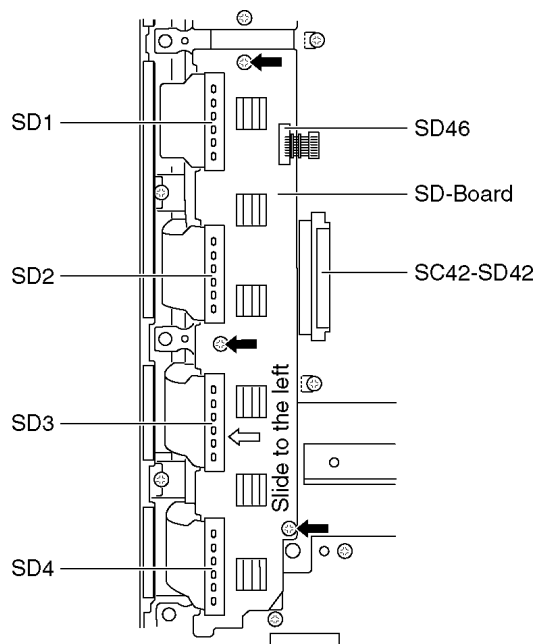


6.16. Remove the SC-Board

1. Unlock the cable clampers to free the cable.
2. Disconnect the couplers (SC2, SC20 and SC23).
3. Remove the screws (×9 ➡) and remove the SC-Board.

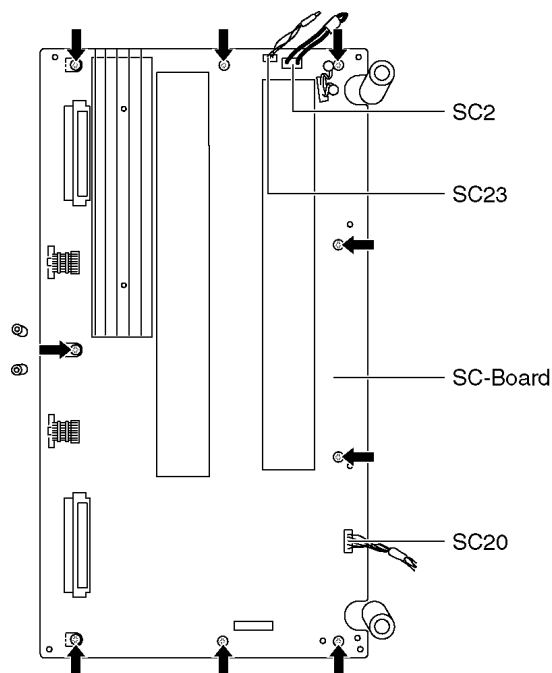


6.17. Remove the SS2-Board

1. Disconnect the coupler (SS23) and disconnect the flexible cable (SS55).
2. Remove the screws (×2 ➡) and remove the SS2-Board.

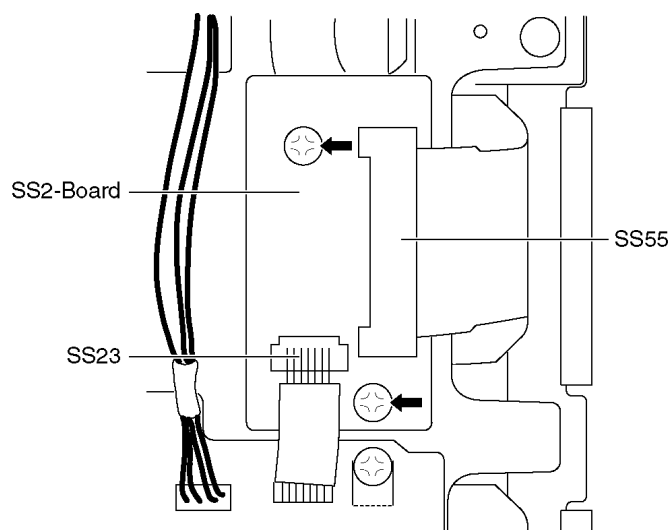


6.18. Remove the SS3-Board

1. Disconnect the coupler (SS22) and disconnect the flexible cable (SS56).
2. Remove the screws (×2 ➡) and remove the SS3-Board.

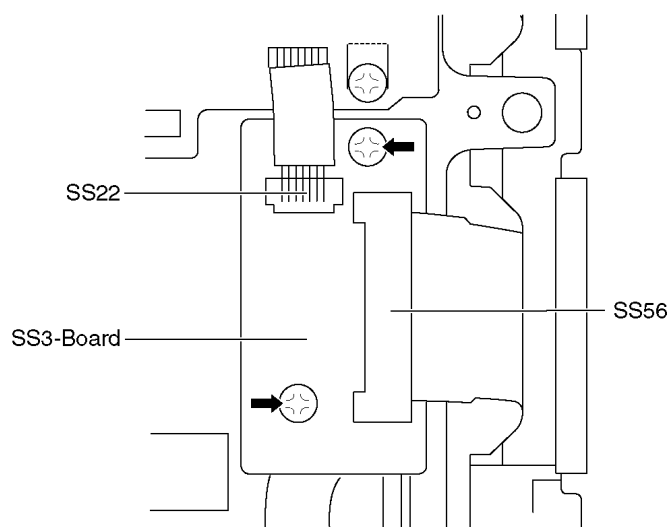


6.19. Remove the SS-Board

1. Remove the SS2-Board and SS3-Board. (See section 6.15. and 6.16)
2. Disconnect the couplers (SS11, SS12, SS33, SS43 and SS44).
3. Disconnect the flexible cables (SS51, SS52, SS53 and SS54).
4. Remove the screws (×7 ➡) and remove the SS-Board.

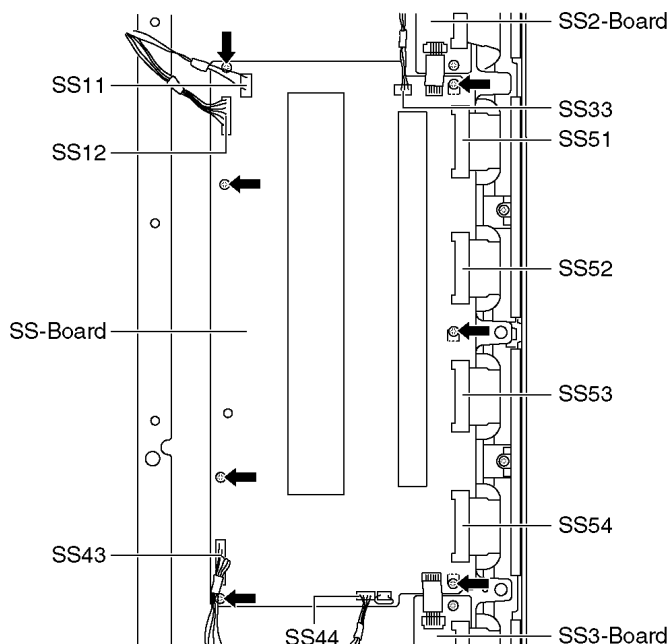


6.20. Remove the C1-Board

1. Remove the flexible cables holder fastening screws (×6 ➡).
2. Disconnect the flexible cables (CA1, CA2 and CA3).
3. Disconnect the flexible cable (C10).
4. Remove the screws (×5 ➡) and remove the C1-Board.

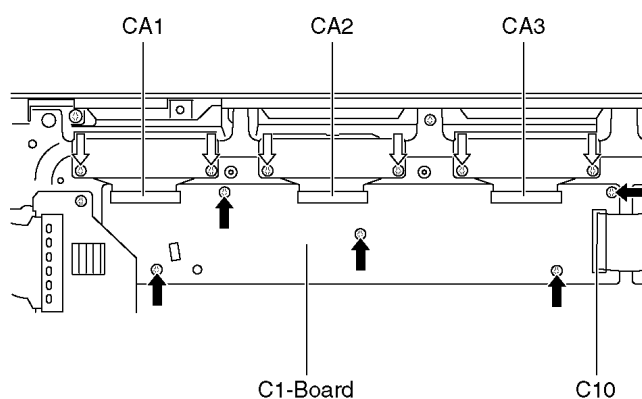


6.21. Remove the C2-Board

1. Remove the flexible cables holder fastening screws (×8 ➡).
2. Disconnect the flexible cables (CA4, CA5, CA6 and CA7).
3. Disconnect the flexible cables (C20, C21 and C22).
4. Remove the screws (×5 ➡) and remove the C2-Board.

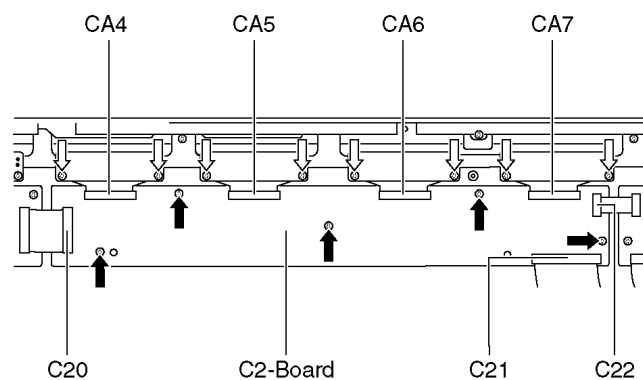


6.22. Remove the C3-Board

1. Remove the flexible cables holder fastening screws (×8 ➡).
2. Disconnect the flexible cables (CA8, CA9, CA10 and CA11).
3. Disconnect the flexible cables (C31 and C32).
4. Disconnect the coupler (C33).
5. Remove the screws (×5 ➡) and remove the C3-Board.

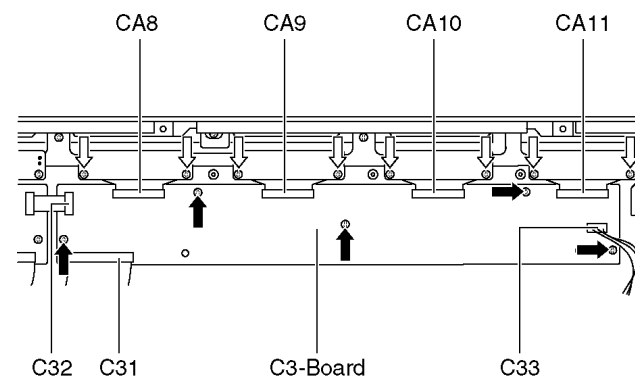


6.23. Remove the stand brackets

1. Remove the plasma panel section from the servicing stand and lay on a flat surface such as a table (covered) with the plasma panel surface facing downward.
2. Remove the stand brackets (left, right) fastening screws (×6 ➡) and remove the stand brackets (left, right).

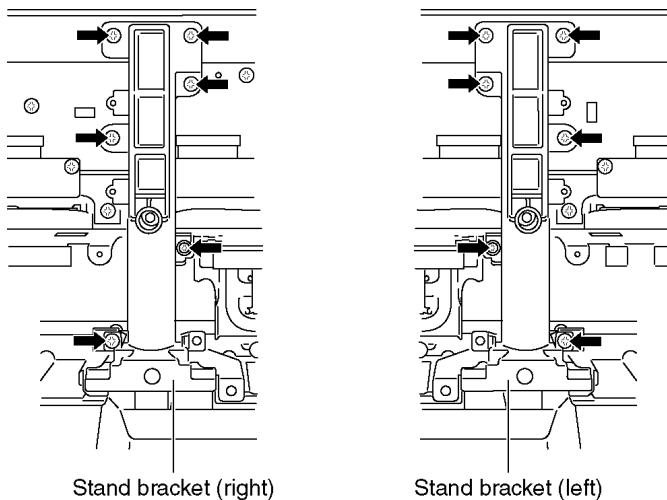


6.24. Remove the C4-Board

1. Remove the stand bracket (left). (See section 6.20.)
2. Remove the flexible cables holder fastening screws (×8 ➡).
3. Disconnect the flexible cables (CB8, CB9, CB10 and CB11).
4. Disconnect the flexible cables (C41 and C42).
5. Disconnect the couplers (C43 and C44).
6. Remove the screws (×5 ➡) and remove the C4-Board.

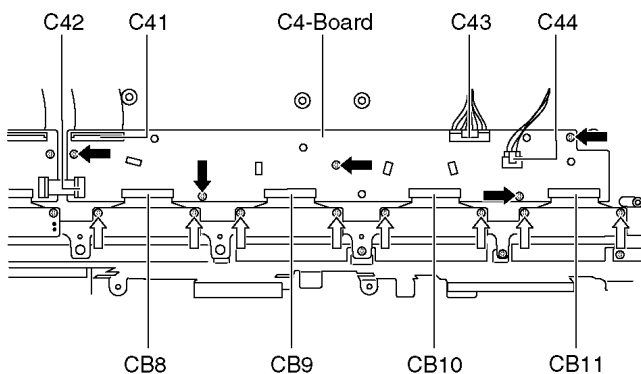


6.25. Remove the C5-Board

1. Remove the flexible cables holder fastening screws (×8 ➡).
2. Disconnect the flexible cables (CB4, CB5, CB6 and CB7).
3. Disconnect the flexible cables (C50, C51 and C52).
4. Remove the screws (×5 ➡) and remove the C5-Board.

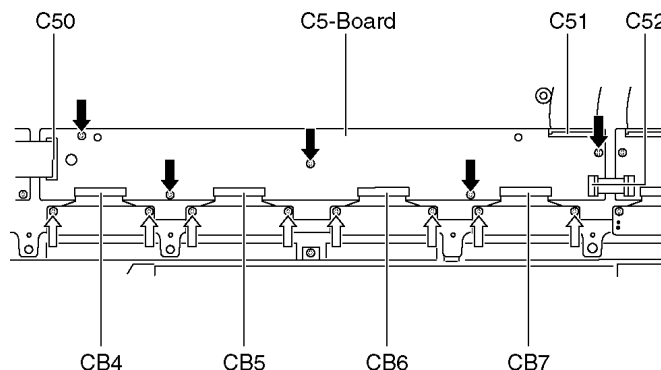


6.26. Remove the C6-Board

1. Remove the stand bracket (right). (See section 6.20.)
2. Remove the flexible cables holder fastening screws (×6 ➡).
3. Disconnect the flexible cables (CB1, CB2 and CB3).
4. Disconnect the flexible cable (C60).
5. Remove the screws (×5 ➡) and remove the C6-Board.

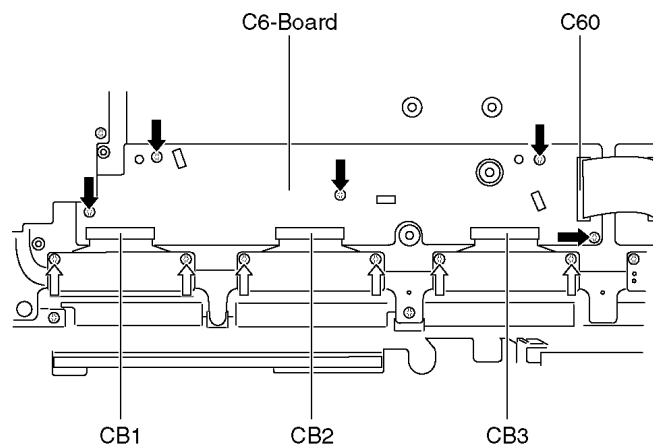


6.27. Remove the front bracket

1. Unlock the cable clampers to free the cable.
2. Disconnect the couplers (G1 and G51).
3. Remove the screws (×5 ➡) and remove the front bracket.

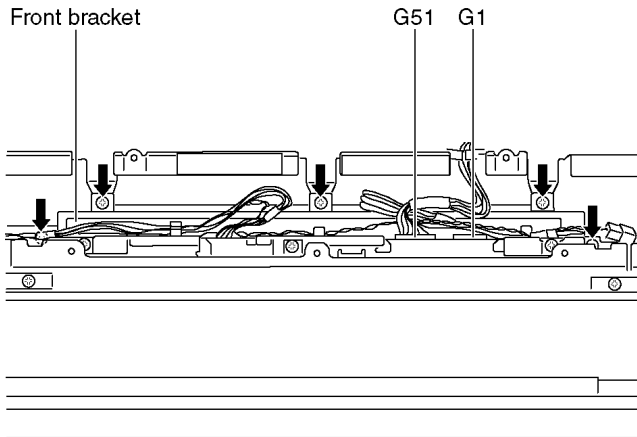


6.28. Remove the G-Board, GK-Board and GS-Board

1. Remove the front bracket. (See section 6.28.)
2. Remove the screws (×3 ➡) and remove the front side metal frame.

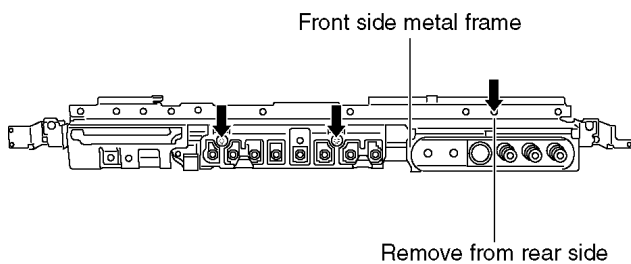


3. Remove the screws (×3 ➡) and disconnect the couplers (G3-GK3).
4. Remove the G-Board and GK-Board.

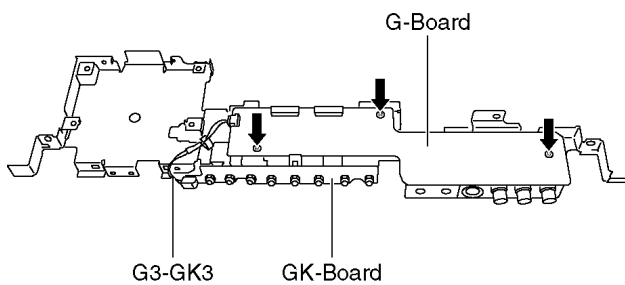


6.29. Remove the S-Board

1. Disconnect the coupler (S1).
2. Remove the screws (×2 ➡) and remove the S-Board metal frame.
3. Remove the screws (×2 ➡) and remove the S-Board.

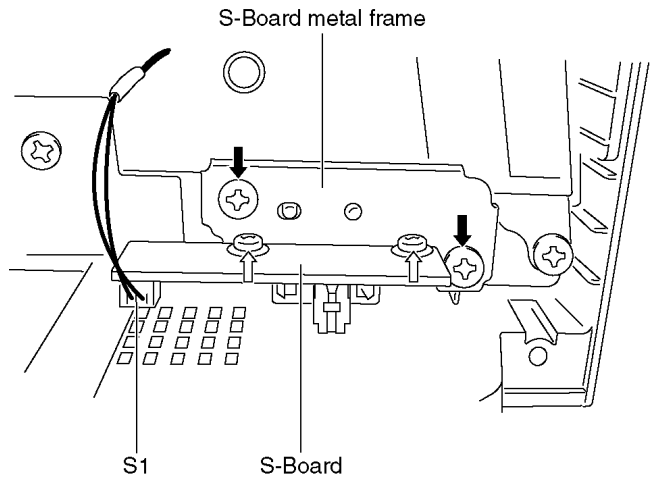


6.30. Remove the GS-Board and SD-Module


1. Remove the stand bracket R. (See section 6.24.)
2. Unlock the cable clampers to free the cable.
3. Disconnect the coupler (G52).
4. Remove the screws (×3 ➡).
5. Remove the SD card unit.

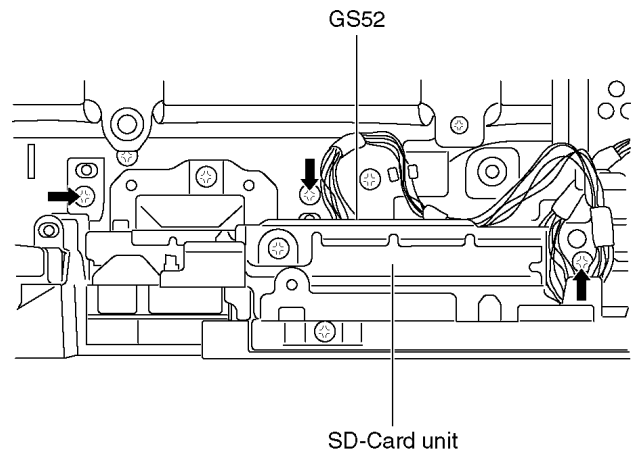

6. Remove the screws (×3 ➡) and remove the SD card unit cover.

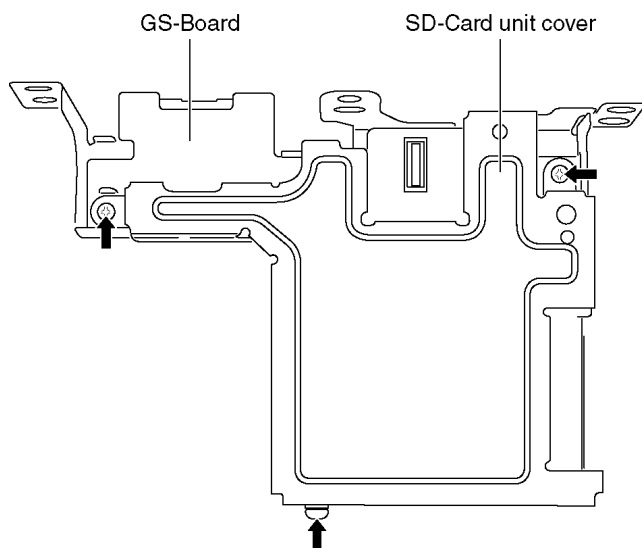


7. Disconnect the flexible cable (GS12).
8. Remove the screw (×1 ➡).
9. Remove the GS-Board and SD-Module.

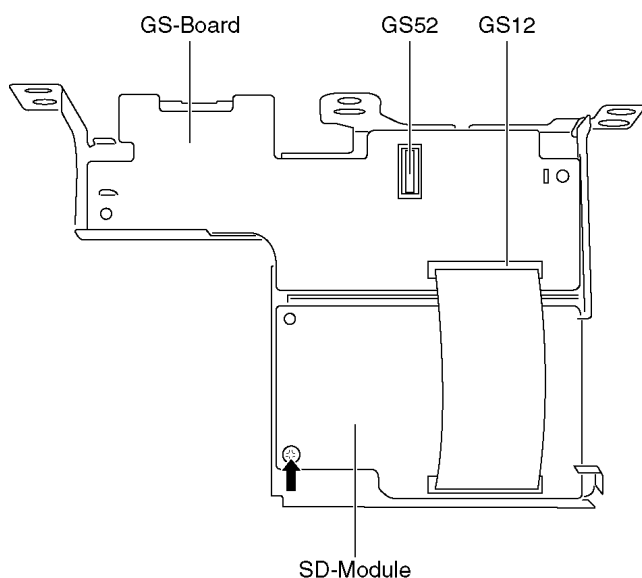


6.31. Remove the Plasma panel section from the Front frame (glass)

1. Remove the front frame and the plasma panel fastening screws (×12 ➡).
2. Remove the front frame and the stand brackets fastening screws (×2 ➡).

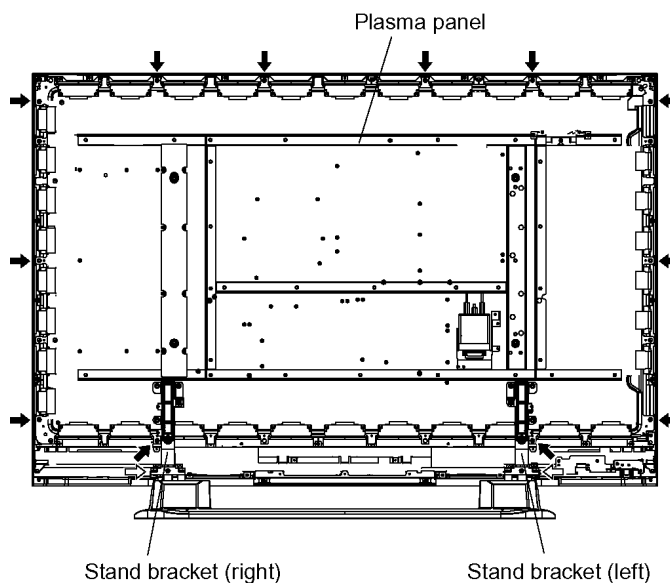


3. For leaving the plasma panel from the front frame, pull the bottom of the front frame forward, lift, and remove.

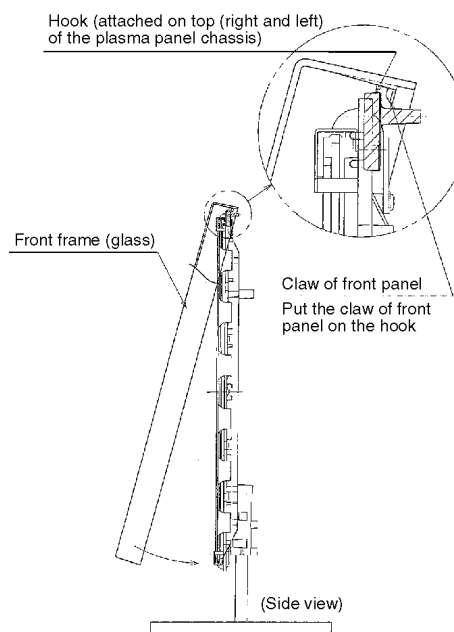


6.32. Remove the squawker speaker

1. Remove the front frame. (See section 6.32.)
2. Remove the screws (×12 ➡).
3. Remove the glass holder R and L.

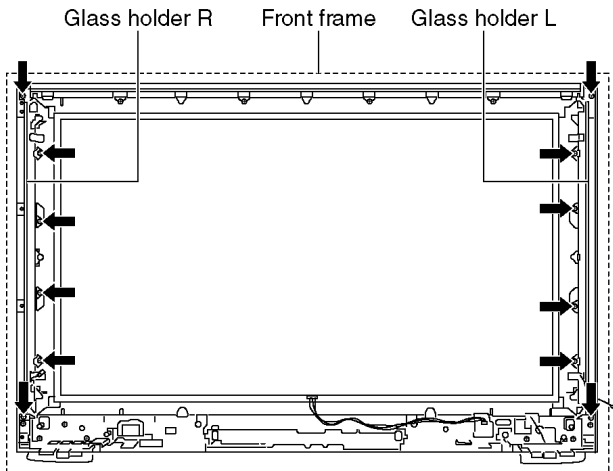


4. Remove the screws (×2 ➡).
5. Remove the squawker speaker.

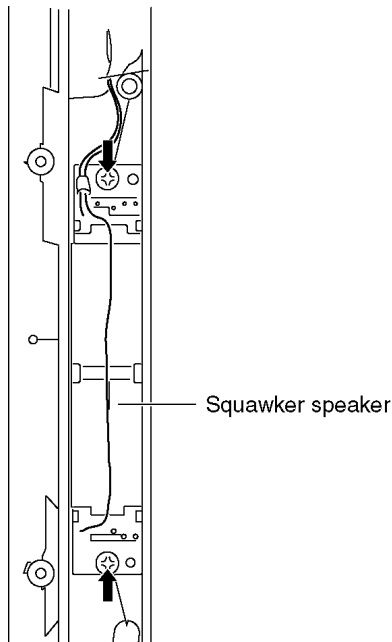


6.33. Remove the K-Board

1. Remove the front frame. (See section 6.32.)
2. Remove the glass holder R and L. (See section 6.33.)
3. Remove the screws (×3 ➡).
4. Remove the bottom shield.
5. Remove the screws (×5 ➡).
6. Remove the glass holder bottom R and L.
7. Remove the screws (×9 ➡).
8. Remove the glass holder bottom.

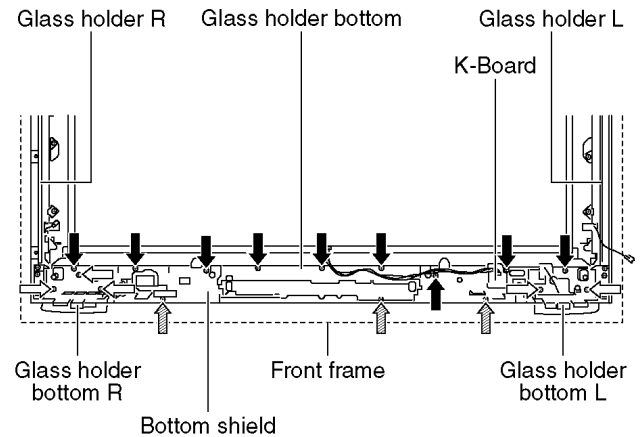

9. Remove the screws (×2 ➡).
10. Disconnect the couplers (K1).
11. Remove the K-board.

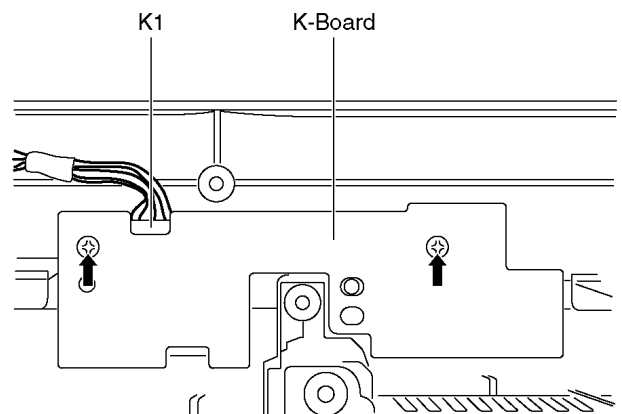


6.34. Replace the plasma panel (finished)

1. Place the new plasma panel (finished) on the flat surface of the table (covered by a soft cloth), with the plasma panel surface facing downward.
2. Attach the C1, C2, C3, C4, C5 and the C6-Board, connect the flexible cables (×22) from the Plasma panel to the C1, C2, C3, C4, C5 and the C6-Board, and fit the flexible cable holders.
3. Attach the Hooks (left, right) and fit the stand brackets (L, R) to the new plasma panel.
4. Place the plasma panel section on the servicing stand.
5. Attach the front frame and each P.C.Board and so on, to the new plasma panel.


*** When fitting the front frame, be careful to allow any debris, dust or handling residue to remain between the front glass and plasma panel.**

7 Location of Lead Wiring

7.1. Lead of Wiring (1)

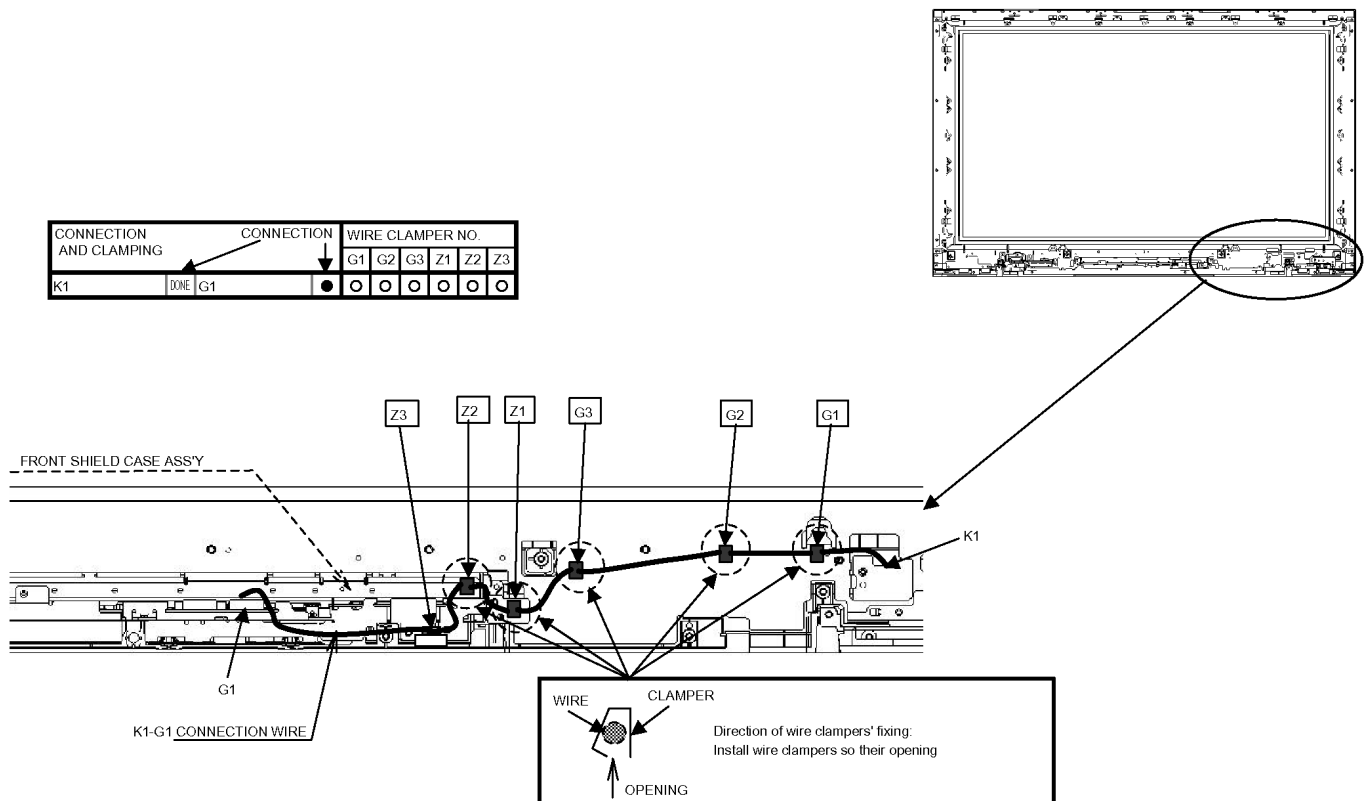

7.2. Lead of Wiring (2)

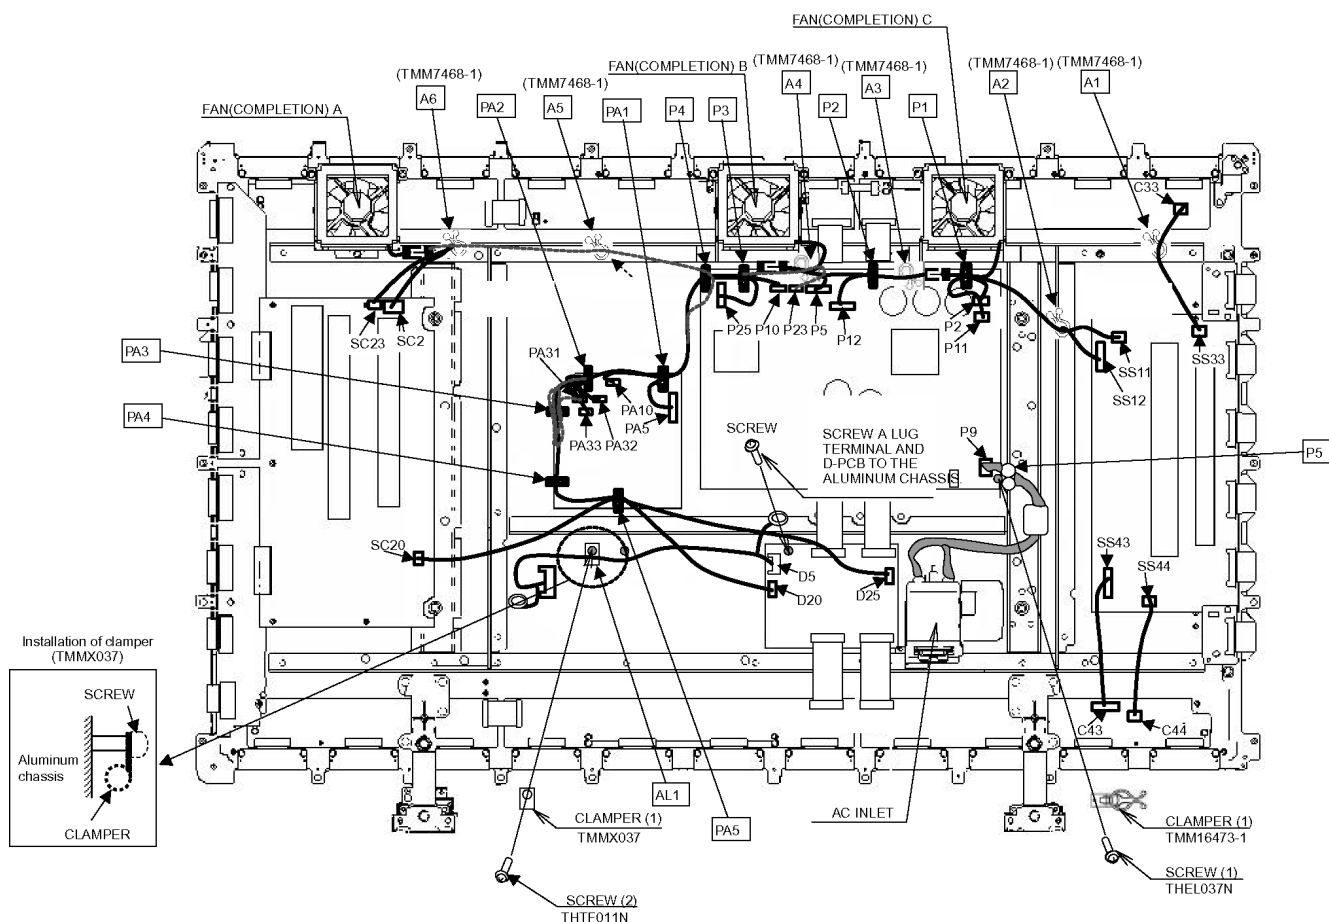


- 1) MANAGE WIRES NOT TO TOUCH TO FAN MOUNT METAL.
- 2) PASS THE SS11 WIRE AND THE SS12 WIRE BETWEEN A M8 BOSS AND P-PCB, MANAGE THEM TO KEEP AWAY FROM A M8 BOSS.

CONNECTION AND CLAMPING		CONNECTION	WIRE CLAMPER NO.																				
			P1	P2	P3	P4	P5	PA1	PA2	PA3	PA4	PA5	A1	A2	A3	A4	A5	A6	AL1				
FAN A	END	PA31	●			○		○	○	④							○	○					
FAN B	END	PA32	●		○	○		○	○								○						
FAN C	END	PA33	●	○	○	○	○	○	○							○	○						
P10	●	PA10	●		○	○		○															
P5	●	PA5	●		○	○		○									○						
P23	●	SC23	●		○	○											○	○	○				
P2	●	SC2	●	○	○	○	○									○	○	○	○				
SS11	●	P11	●	○											○								
SS12	●	P12	●	○	○										○	○							
D25	END	P25	●		○	○		○	○	○	○	○											
AC-INLET	／	P9	●				○																
SS43	／	C43	●																				
SS44	／	C44	●																				
SS33	／	C33	●												○								
D20	END	SC20	●										○										
DG5(TUNER UNIT)		D5	END																○				

④ : 4 TIMES




7.3. Lead of Wiring (3)

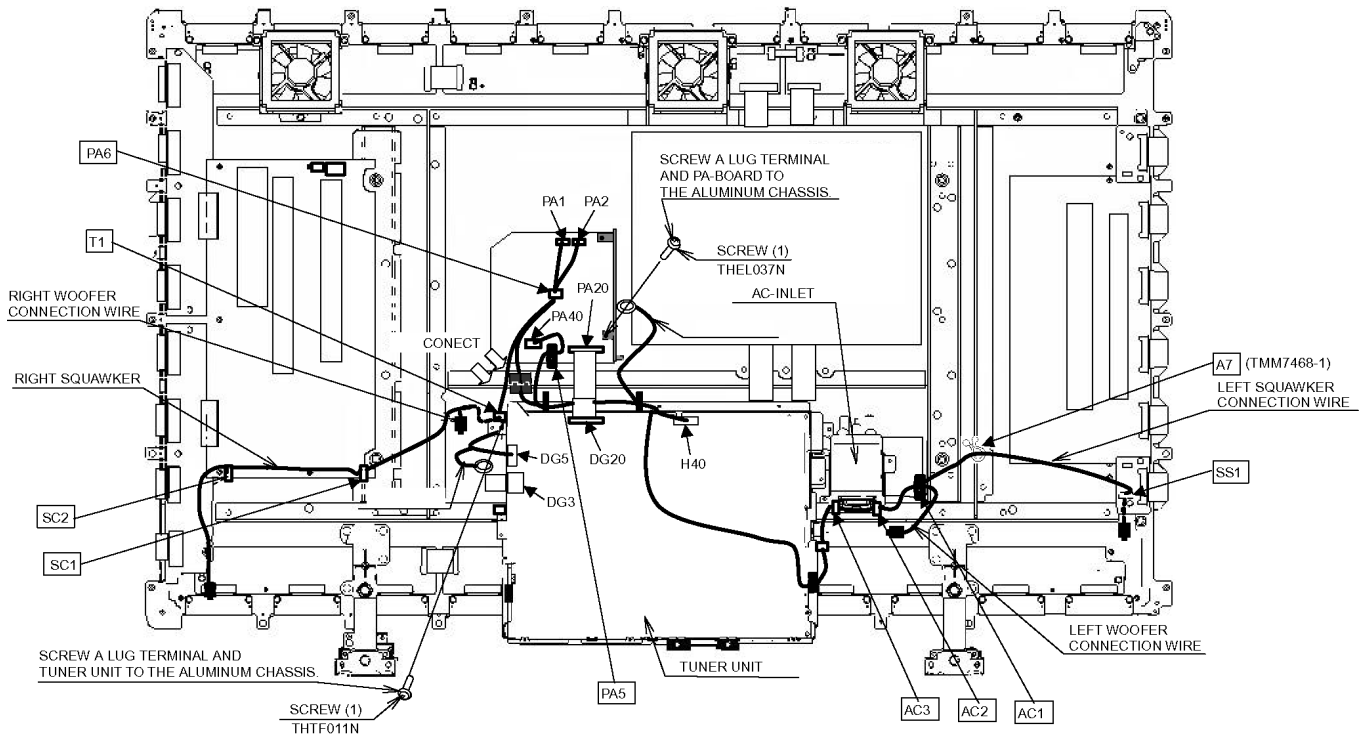


CONNECTION AND CLAMPING		CONNECTION	WIRE CLAMPER NO.										
			PA5	PA6	T1	SC1	SC2	AC1	AC2	AC3	A7	SS1	
R-WOOFER CONNECTION WIRE	PA2	●	○	○									
R-SQUAWKER CONNECTION WIRE	PA1	●	○			○	○						
L-WOOFER CONNECTION WIRE	PA2	●	○					○	○	○			
L-SQUAWKER CONNECTION WIRE	PA1	●	○					○	○	○	○	○	
H40(TUNER UNIT)	PA40	●	○										
DG20(TUNER UNIT)	PA20	●											
DG3(TUNER UNIT)	D3	●	END										
DG5(TUNER UNIT)	D5	●	END										


7.4. Lead of Wiring (4)

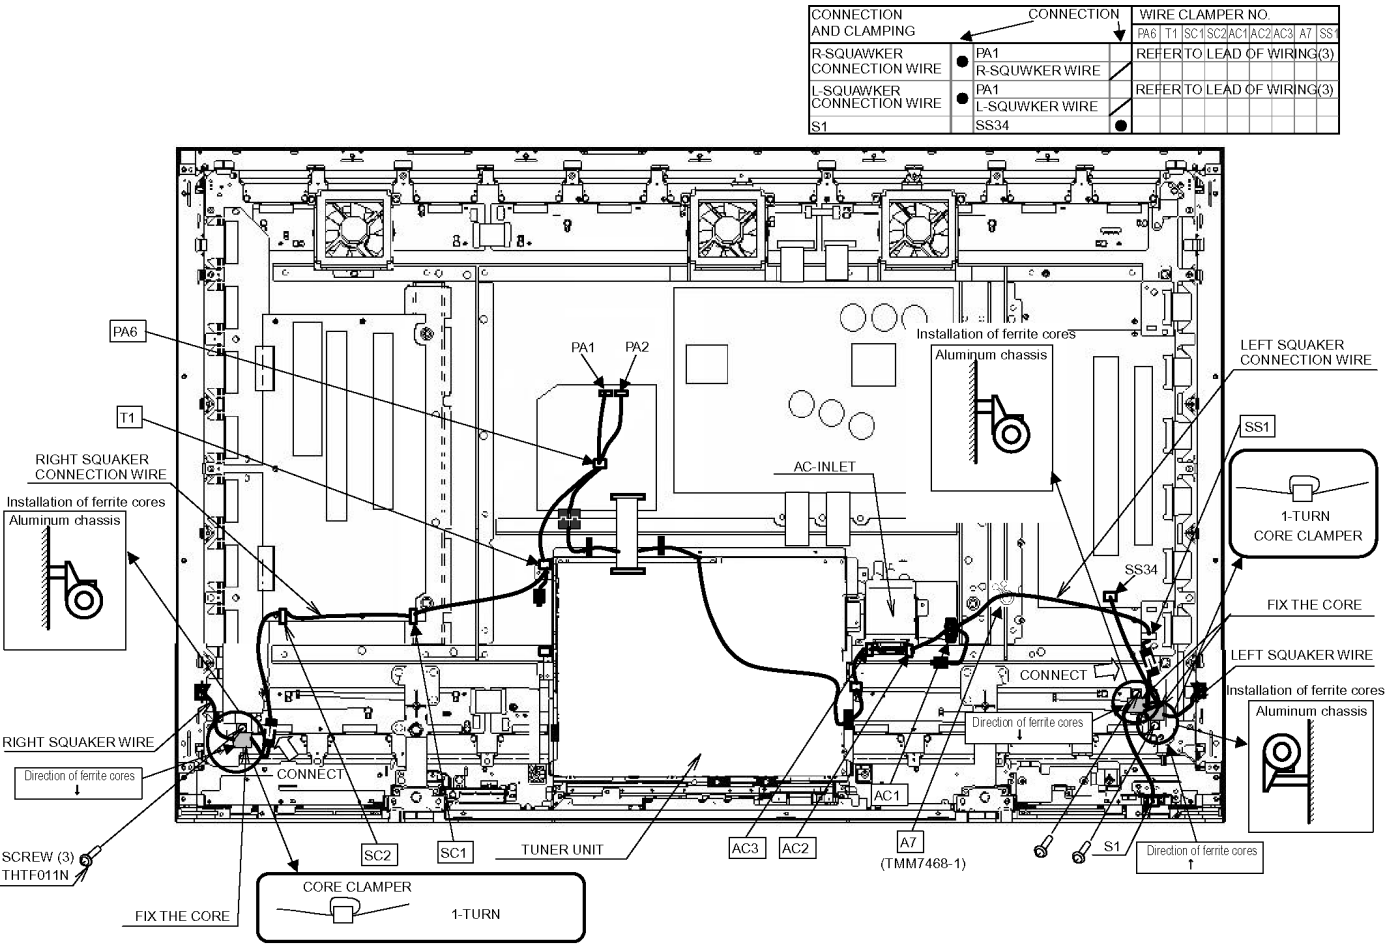


WIRE DRESSING OF GS UNIT

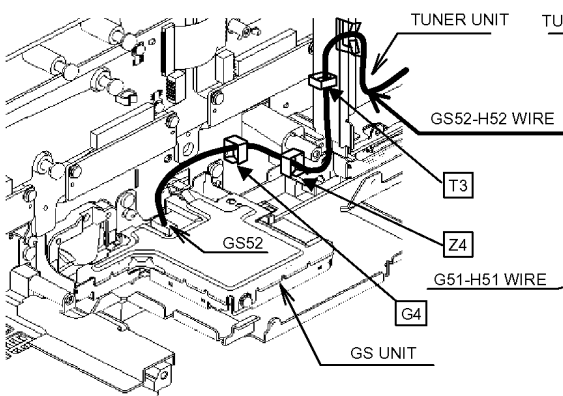

WIRE DRESSING OF FRONT SHIELD CASE

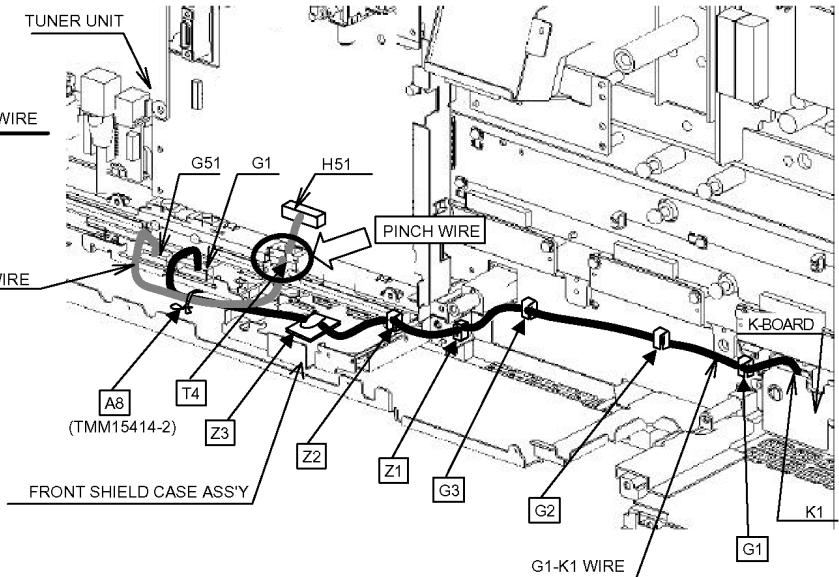


7.5. Lead of Wiring (5)

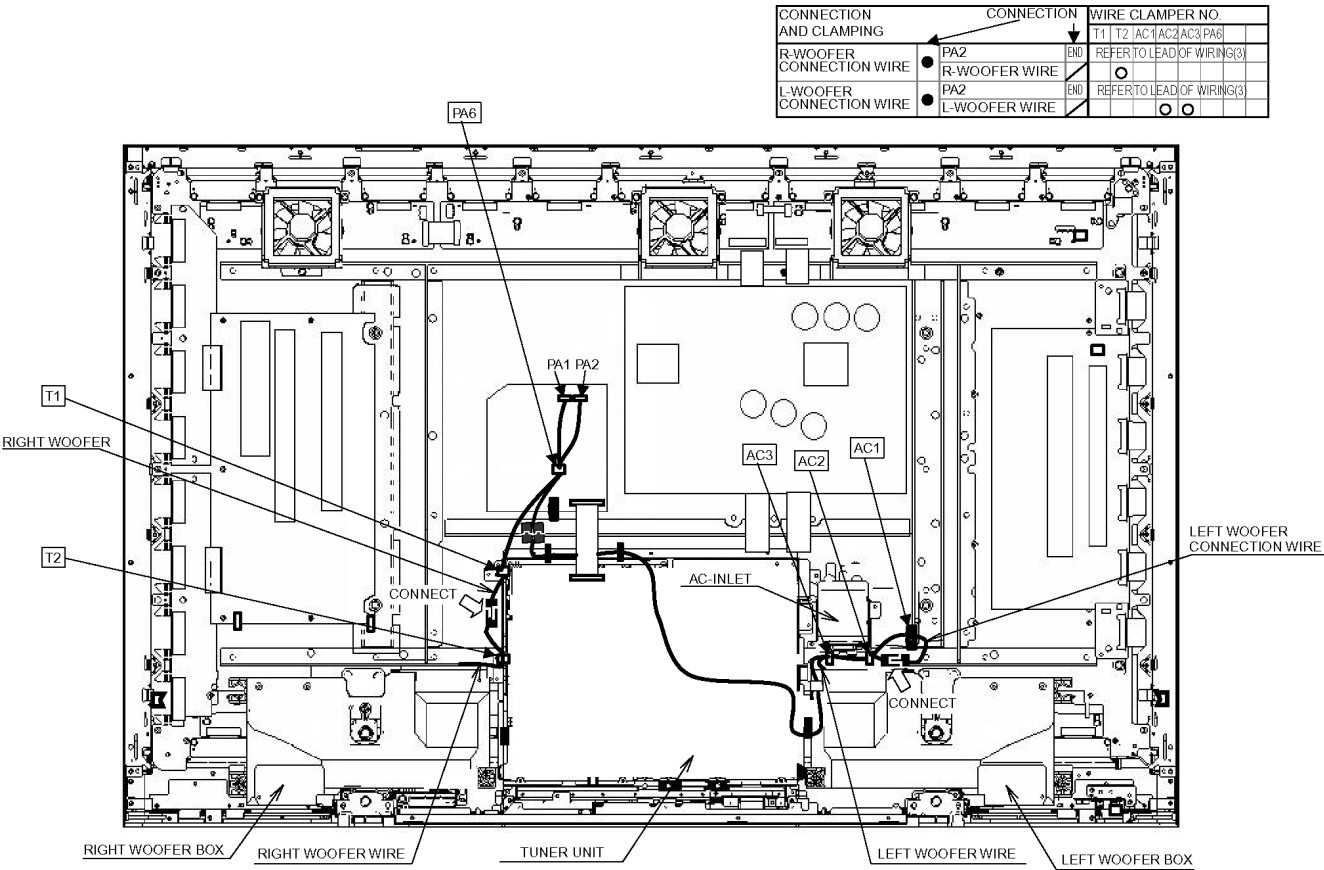

8 Self-check Function

1. Self-Check is used to automatically check the bus lines and hexadecimal code of the TV set.
2. To get into the Self -Check mode press the Down ($\text{—}/\text{V}$) button on the customer controls at the front of the set, at the same time pressing the Recall button on the remote control, and the screen will show :

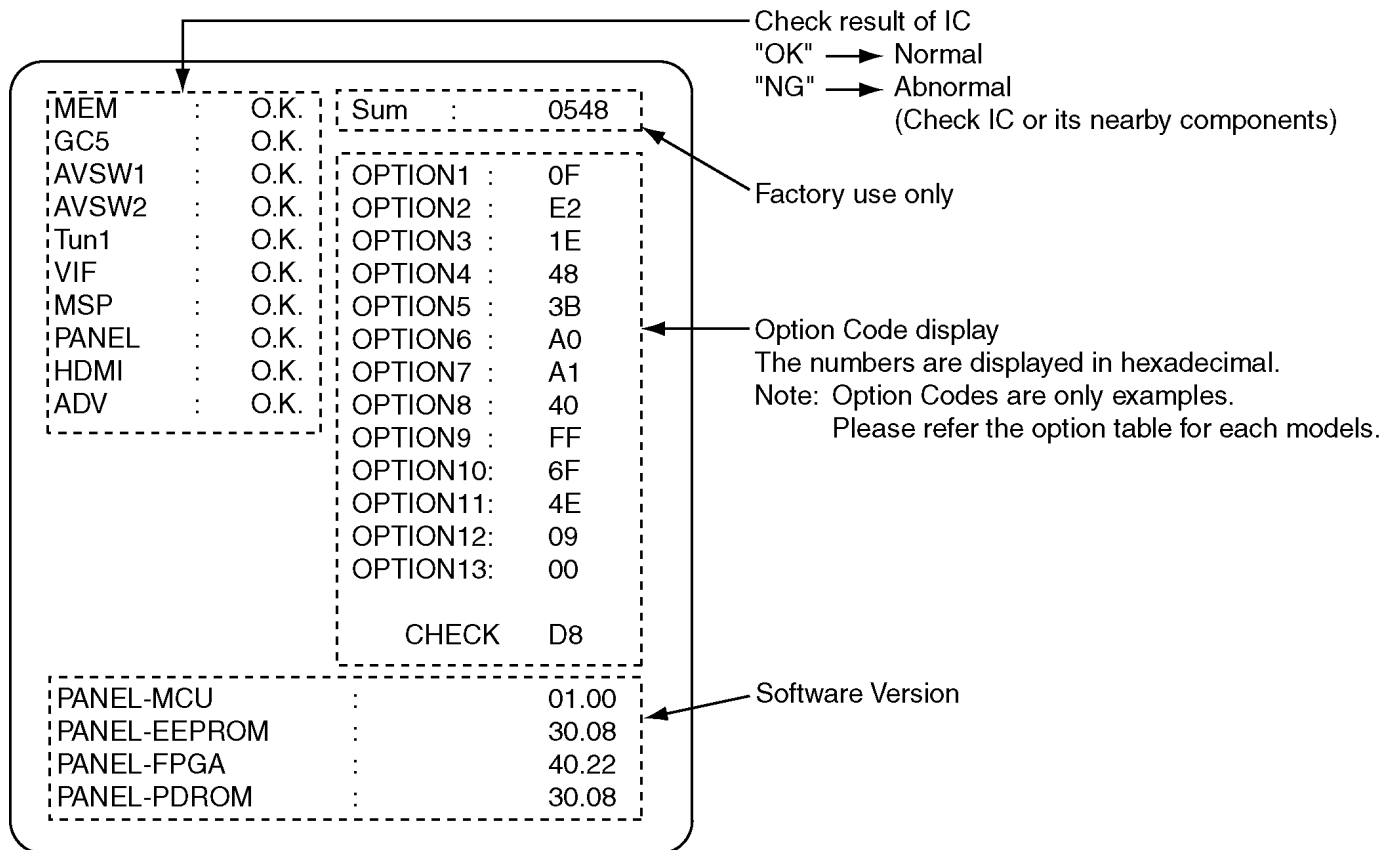

If the CCU ports have been checked and found to be incorrect or not located then "--" will appear in place of "O.K.".

Display	Ref.No.	Description	Board
MEM	IC1102	EEPROM	DG-Board
GC5	IC4037	GC5 Processor	DG-Board
AVSW1	IC3005	Video SW	H-Board
AVSW2	IC2105	Audio SW	H-Board
Tun1	TU001	Tuner (Main)	TA-Board
VIF	-	-	-
MSP	IC2106	Multi Sound Processor	H-Board
PANEL	IC9003	Convert Micon	D-Board
HDMI	IC4026	HDMI I/F Receiver	DG-Board
ADV	IC4019	10bit A/D	DG-Board

8.1. Power LED Blinking timing chart

1. Subject

Information of LED Flashing timing chart.

2. Contents

When an abnormality has occurred the unit, the protection circuit operates and reset to the stand by mode. At this time, the defective block can be identified by the number of blinks of the Power LED on the front panel of the unit.


Blinking Times	Blinking timing	Contents	Check point
1	Once 3 sec -- No Light - Light	No particular check point	-
2		15V SOS	D-Board
3		3.3V SOS	D-Board
4		Power SOS	P-Board
5		5V SOS	D-Board
6		Driver SOS1 (SC Energy recovery circuit)	SU-Board SD-Board SC-Board
7		Driver SOS2 (SC floating voltage area)	SU-Board SD-Board SS-Board
8		Driver SOS3 (SS Energy recovery circuit)	SS-Board
9		Panel Status	-
10		PA SOS Tuner SOS	PA-Board H-Board
11		Fan SOS	Fan
12		Sound SOS	PA-Board

8.2. No Power


First check point

There are following 2 states of No Power indication by power LED.


1. No lit
2. Green is lit then turns red blinking a few seconds later. (See 8.1.)
3. Only red is lit.

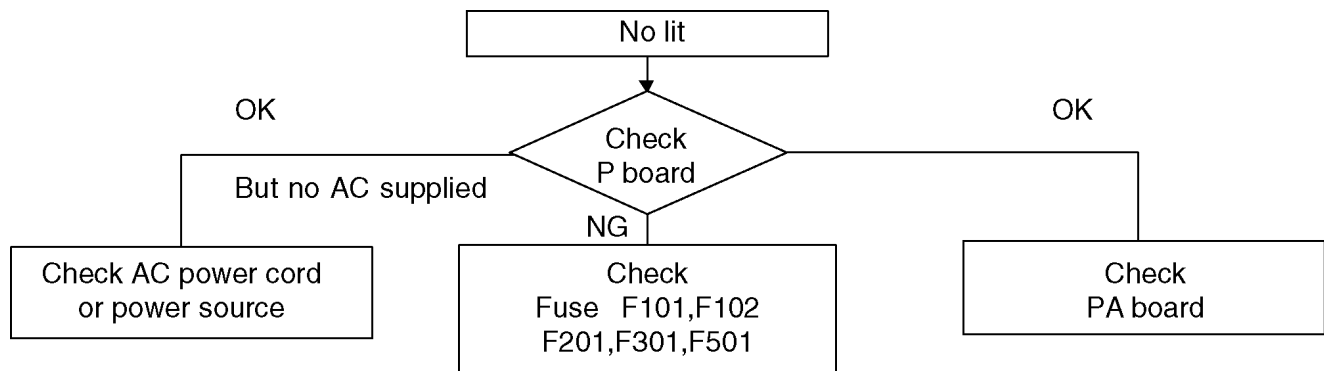

8.3. No Picture

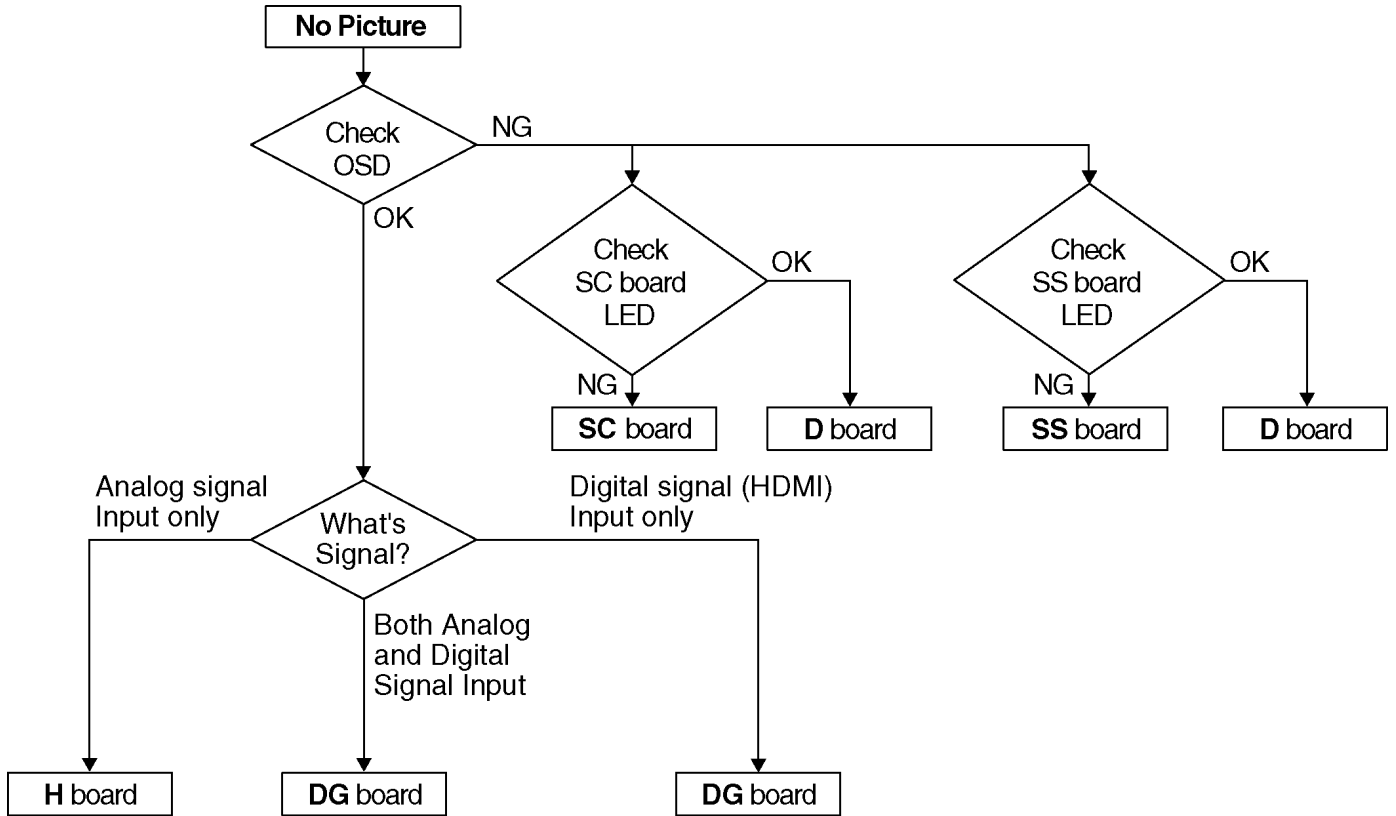


Drive circuits LED indicator

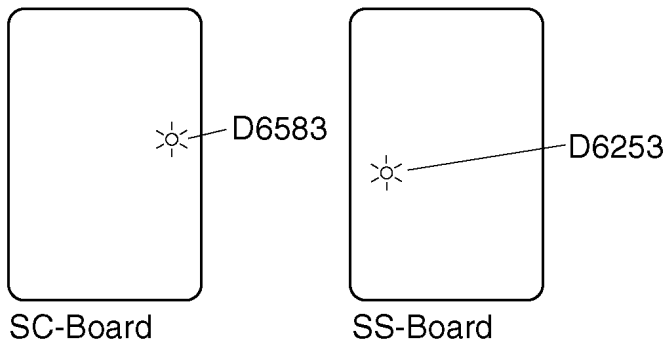

8.4. Local screen failure

Plasma display may have local area failure on the screen. Fig-1 is the possible defect P.C.B. for each local area.

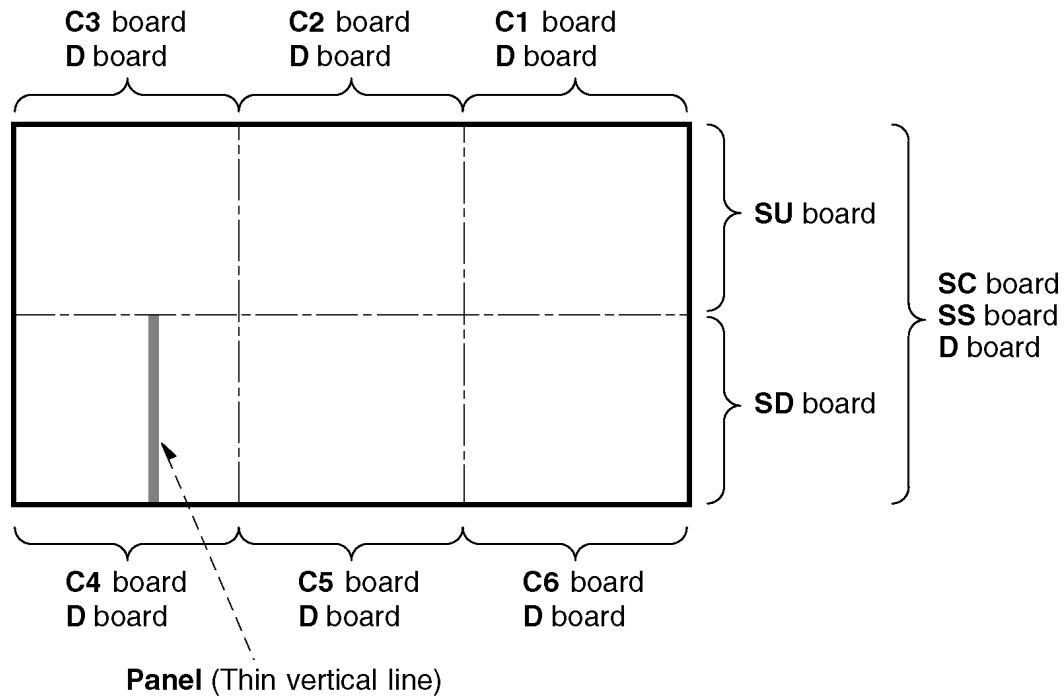

<Local screen failure chart>

Fig-1

9 Service Mode Function

MPU controls the functions switching for each IICs through IIC bus in this chassis. The following setting and adjustment can be adjusted by remote control in Service Mode.

9.1. How to enter SERVICE 1

1. In sound menu, set BASS to MAXIMUM, and set TREBLE to MINIMUM.
2. Simultaneously press **INDEX** button on remote control and **DOWN** button [] on the TV set.


9.2. How to enter SERVICE 2

1. Set the channel to CH99.
2. Select the EQ 12kHz.
3. Press HOLD button on remote control.


Note:

To exit to Service mode, press EXIT or Power button on remote control.

SERVICE 1

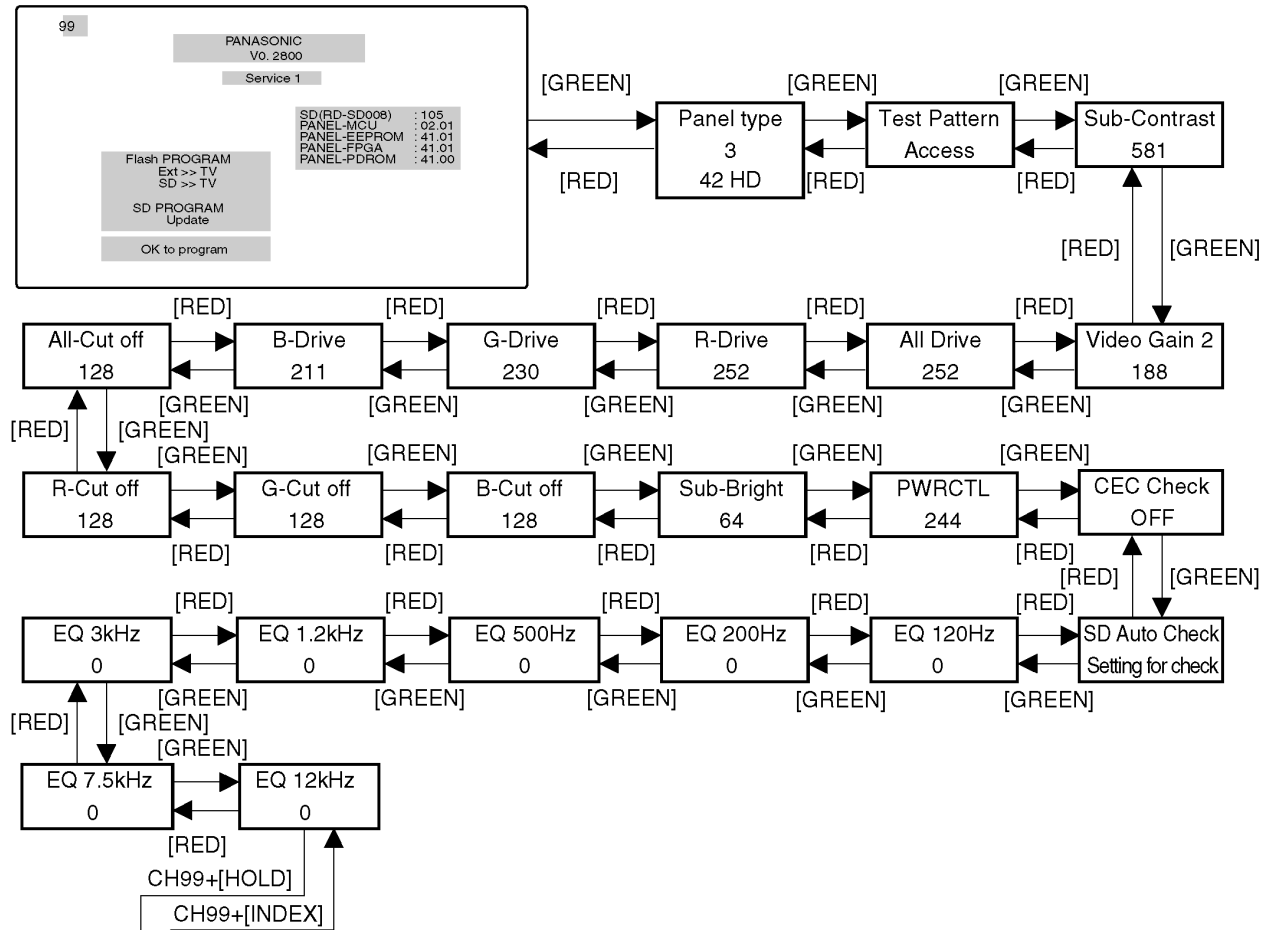

SERVICE 2

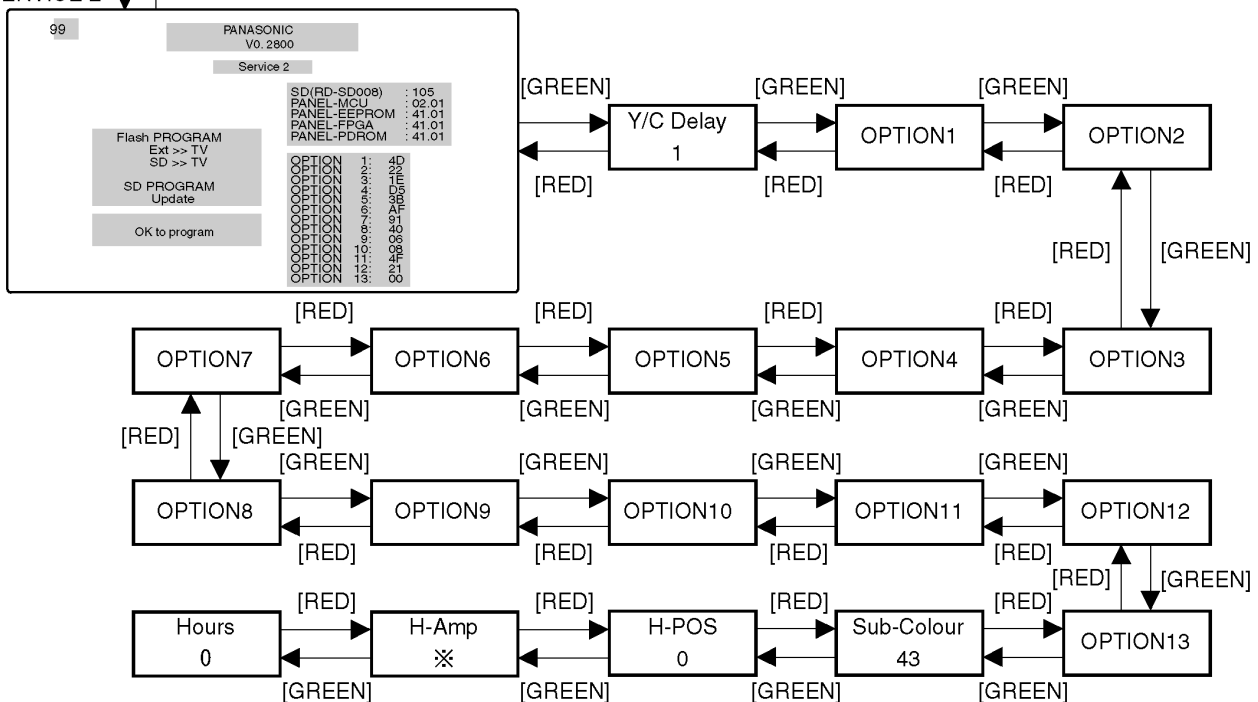

※ : This item appears when "component" selecting

Key Command

- Press the **RED/GREEN** button to step up/down through the functions.
- Press the **YELLOW/BLUE** button to change the function values.
- Press the **OK** button after each adjustment has been made to store the required values.

9.3. Option Description

	H	AZ	M/MT		
option1	0F	4D	0F		
b0	1	1	1	Colour system	Auto(1)
b1	1	0	1		SECAM(1)
b2	1	1	1		NTSC(1)
b3	1	1	1		M.NTSC(1)
b4	0	0	0	A2 select 6.5MHz	5.742MHz(0) 6.742MHz(1)
b5	0	0	0	SIF	4.5/5.5/6.0/6.5(0), 5.5/6.0/6.5(1)
b6	0	1	0		5.5/6.5(2), 6.0/6.5(3)
b7	0	0	0	free	
option2	E2	22	E2		
b0	0	0	0	A2 enable	4.5(1)
b1	1	1	1		5.5(1)
b2	0	0	0		6.0(1)
b3	0	0	0		6.5(1)
b4	0	0	0	NICAM enable	4.5(1)
b5	1	1	1		5.5(1)
b6	1	0	1		6.0(1)
b7	1	0	1		6.5(1)
option3	1E	1E	1B		
b0	0	0	1	SASO enable	SASO enable(1)
b1	1	1	1	Fine tuning	Enable(1)
b2	1	1	0	Search speed	Slow(1) Fast(0)
b3	1	1	1	Tuner	MACO tuner (1), Others (0)
b4	1	1	1	HYPER	UHF only (0), UHF/VHF (1)
b5	0	0	0	IF I2C	I2C controlled Tuner IF module (1)
b6	0	0	0	NICAM C4 bit	enable(1)
b7	0	0	0	Blue Back	BLUE BACK on/off selection in menu(0)
option4	48	D8	48		
b0	0	0	0	Aspect AUTO	enable(1)
b1	0	0	0	S1/S2 enable	enable(1)
b2	0	0	0	ID-1	enable(1)
b3	1	1	1	User aspect Just	enable(1)
b4	0	1	0	User aspect 14:9	enable(1)
b5	0	0	0	ALBD 14:9	14:9 enable, Zoom3 disable at self wide(1)/ Zoom1, Zoom3 enable at self wide (0)
b6	1	1	1	TEXT	enable(1)
b7	0	1	0	TEXT TOP	TOP enable (1)
option5	3B	3B	3B		
b0	1	1	1	CH Blanking	Blanking enable (1)
b1	1	1	1	AV Blanking	Blanking enable (1)
b2	0	0	0	Noise mute	Noise mute enable(0)
b3	1	1	1	sub picture	without sub-picture(0), with sub-picture(1)
b4	1	1	1	2tuner	2tuner(1), 1tuner(0)
b5	1	1	1	AV Input	3rotation(1) / 2rotation without front RCA (0)
b6	0	0	0	Panel (LCD)	Samsung Panel(1)/SHARP Panel(0)
b7	0	0	0	Large size (LCD)	32(1)/26(0) for LCD
option6	AF	AF	AF		
b0	1	1	1	SD module	with SD module (1)
b1	1	1	1	SD module Ext.Rec(PAL)	enable(1)
b2	1	1	1	SD module Ext.Rec(NTSC)	enable(1)
b3	1	1	1	SD module Ext.Rec(SECAM)	enable(1)
b4	0	0	0	IDTV	enable(1)
b5	1	1	1	HDMI	enable(1)
b6	0	0	0	Ext. HV input	without HV input(0) / with HV input(1)
b7	1	1	1	PC	enable(1)
option7	A1	91	B1		
b0	1	1	1	Asia	Asia(1), europe(0)
b1	0	0	0	Australia	Australia(1)
b2	0	0	0	Ireland/India	India(1)
b3	0	0	0	UK/Korea	Korea(1)
b4	0	1	1	Lang1	Large(0)/Small(1)
b5	1	0	1	Lang2	OSD language:With Arabic(1)
b6	0	0	0	Lower POS	Lower POS enable(1)
b7	1	1	1	Owner ID	Enable(1)


	H	AZ	M/MT		
option8	40	40	40	Euro option	
b0	0	0	0	ACI all country	ACI enable(1), only Netherlands(0)
b1	0	0	0	ACI auto MP	ACI auto multi package enable (1)
b2	0	0	0	ACI offset	ACI offset for VCR prog. enable(1)
b3	0	0	0	Power up EC-Mode	Power on EC enable (1)
b4	0	0	0	AVLink	Q-Link off selectable in menu (1)
b5	0	0	0	Volume correction	TV Volume coorrection enable (1)
b6	1	1	1	MPX/NICAM display	Display NICAM (0), Display MPX (1)
b7	0	0	0	Albd Reset Off	enable(1)
option9	FF	06	FF		
b0	1	0	1	CH Plan	ASIA / M.E. / HK/UK / CHINA(1)
b1	1	0	1		NZ/INDNES(1)
b2	1	0	1		AUSTRALIA(1)
b3	1	0	1		E.EUROPE(1)
b4	1	0	1		SPECIAL(1)
b5	1	1	1		AMERICA(1)
b6	1	1	1		CATV(1)
b7	1	0	1		JAPAN(1)
option10	6F	08	6F		
b0	1	0	1	NICAM priority	ASIA/M.E.(1)
b1	1	0	1		HK/UK(1)
b2	1	0	1		CHINA(1)
b3	1	0	1		NZ/INDN(1)
b4	0	0	0		AUSTRA(1)
b5	1	0	1		E.EURO(1)
b6	1	0	1		SPECIAL(1)
b7	0	1	0	HDMI AVI Aspect	enable(1)
option11	4F	4F	4F	Additional	
b0	1	1	1	Remocon Type	Delux(1) / Leader(0)
b1	1	1	1	Environment AI (PDP)	enable, with viewing mode auto (1) / disable, without viewing mode auto(0)
b2	1	1	1	WSS14:9 off	WSS 14:9 off (1)
b3	1	1	1	Child lock	Child Lock on:Tuning Menu skip(1)
b4	0	0	0		
b5	0	0	0	Contrast AI	enable(1)
b6	1	1	1	Service H-POS	enable(1)
b7	0	0	0	Service V-VOS	enable(1)
option12	21	21	21	Additional	
b0	1	1	1	last memory of aspect	each source(1) / ALL source(0)
b1	0	0	0	Reserved	
b2	0	0	0	TEXT Ch Refresh	refresh enable(1) / disenable(0)
b3	0	0	0	STILL	1:Disable / 0:Enable
b4	0	0	0	LATIN	Latin:SAP/Fixed SIF4.5MHz/PAL-M,N/CC/Black level/Language
b5	1	1	1	SRS	enable(1)
b6	0	0	0	HDMI Quali TV	enable(0)
b7	0	0	0	HDMI EC function	enable(1)
option13	00	00	00	Additional	
b0	0	0	0	DVB ALBD	enable(1)
b1	0	0	0	HDMI port	enable(0) 2 ports model/(1)1port model (only for TV MCU port setting)
b2	0	0	0	HDMI format error OSD	display(0)/not display(1)
b3	0	0	0	CEC control	enable(0)
b4	0	0	0	Aspect 4:3 FULL	enable(0)
b5	0	0	0	FTZ	enable(1)
b6	0	0	6		
b7	0	0	0		

10.2. Initialization Pulse Adjust

1. Input the White signal to plasma video input.
2. Set the picture controls as follows.
Picture menu : Dynamic
D.PNR : OFF
Aspect : 16:9
3. Connect Oscilloscope to TPSC1 (T2) and adjust VR6602 for $195 \pm 10 \mu\text{Sec}$.

	Test point	Volume	Level
T2	TPSC1 (SC)	VR6602 (SC)	$195 \pm 10 \mu\text{Sec}$

TPSC1

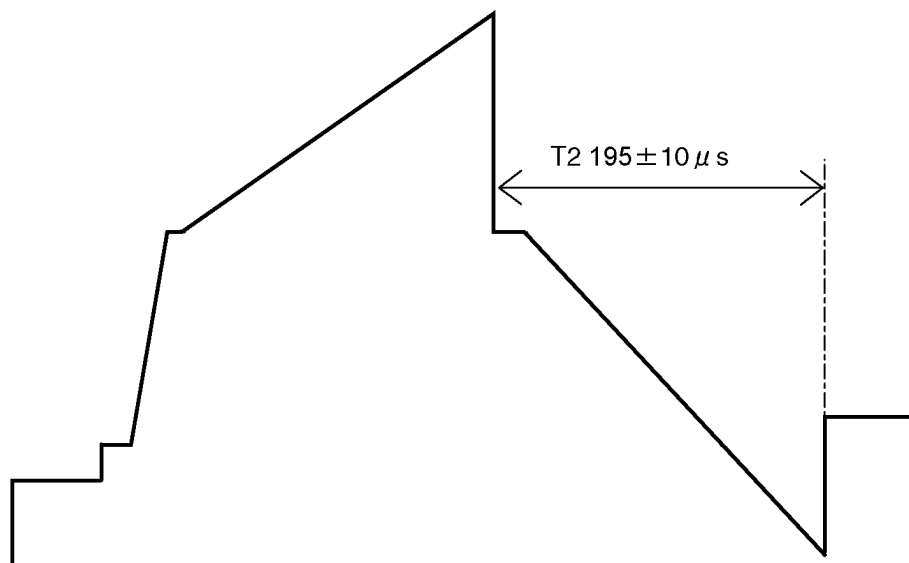

10.3. P.C.B. (Printed Circuit Board) exchange

10.3.1. Caution

1. To remove P.C.B. , wait 1 minute after power was off for discharge from electrolysis capacitors.

10.3.2. Quick adjustment after P.C.B. exchange

Adjust the following voltages with the multimeter.


P.C.B.	Name	Test Point	Voltage	Volume	Remarks
P Board	Vsus	TPVSUS (SS)	$V_{\text{sus}} \pm 2\text{V}$	VR251 (P)	*
SC Board	Vad	TPVAD (SC)	$-105\text{V} \pm 1\text{V}$	VR6600 (SC)	
SS Board	Ve	TPVE (SS)	$V_e \pm 2\text{V}$	VR6000 (SS)	*
D, DG Board	White blance, Pedestal and Sub brightness for NTSC, PAL, HD, PC and 625i signals				

*See the Panel label.


Caution:

Absolutely do not reduce Vsus below Ve not to damage the P.C.B.

10.4. Adjustment Volume Location

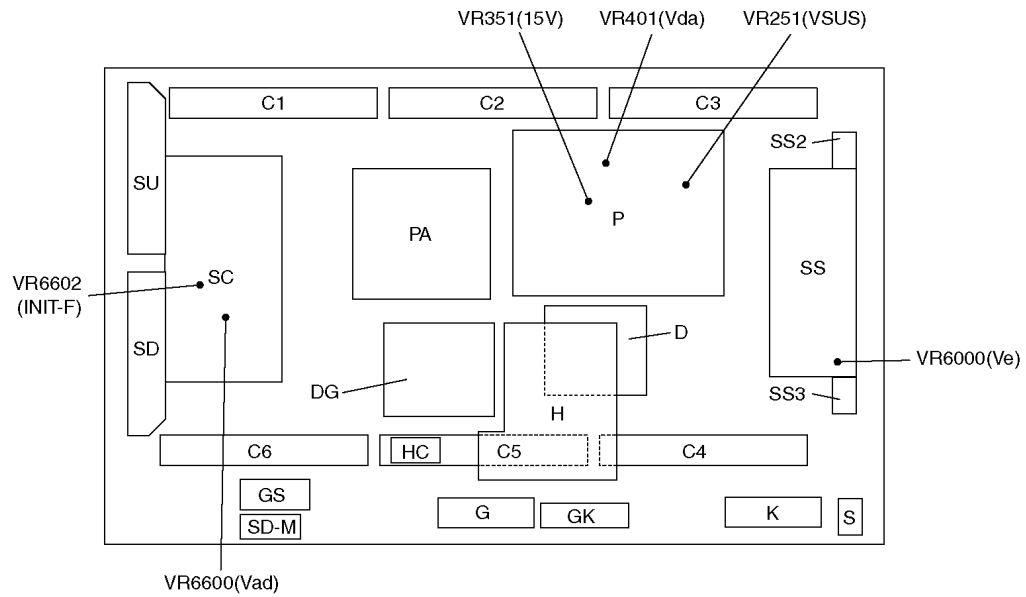


10.5. Test Point Location

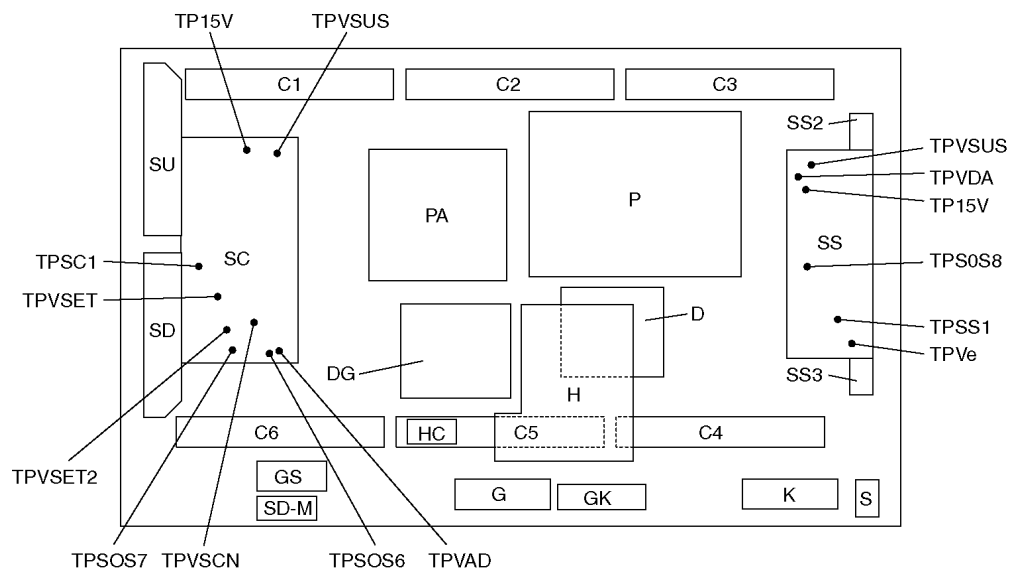


11 Adjustment


11.1. PAL panel white balance adjustment

Instrument Name	Connection	Remarks												
- W/B pattern - Color analyzer (Minolta CA-100 or equivalent)	RF input Panel surface	User setting: Normal												
Procedure		Remarks												
- Asing time is longer than 15min. - Make sure the front panel to be used on the final set is fitted. - Make sure a color signal is not being shown before adjustment. - Put the color analyzer where there is little colour variation. Complete the adjustment within 10 minutes after the turn on electricity. Turn on the power supply again when it is not possible to complete it by aging etc. - Display the white balance pattern. - Check that the color balance is "cool". - Enter the <Service1> mode. - Select "G-CUTOFF" item, using the color-key "Red" or "Green", and set to "128", using the color-key "Yellow" or "Blue". Also, "B-CUTOFF" and "R-CUTOFF" set to "128". - Set "G-DRIVE" at "208". - Touch the signal receiver of color analyzer to the highlight window's center, and adjust B drive and R drive so x, y become the "Color balance Cool" in the below table. - Set "ALL-DRIVE" to "252". - Set colorbalance to "STANDARD". - Fix G cutoff , B cutoff and R cutoff at "128". - Fix G drive at "208". - Adjust B drive and R drive so the highlight window's x, y become the "Color balance "STANDARD" in the below table. - Set "ALL-DRIVE" to "252". - Set color balance to "Warm". - Set G cutoff, B cutoff and R cutoff to "128". - Set G drive to "208". - Adjust B drive and R drive so the highlight window's x, y become the "Color balance Warm" shown in the below table. - Set "ALL-DRIVE" to "252".		Picture menu : Dynamic ASPECT : 16:9 Highlight section Signal amplitude 75% PAL White Balance Pattern  High light 75% Low light 15%												
Table 1. Color balance target value <table border="1"> <thead> <tr> <th>Color Temperature</th><th>x</th><th>y</th></tr> </thead> <tbody> <tr> <td>Cool</td><td>0.276</td><td>0.276</td></tr> <tr> <td>Standard</td><td>0.288</td><td>0.296</td></tr> <tr> <td>Warm</td><td>0.313</td><td>0.329</td></tr> </tbody> </table>		Color Temperature	x	y	Cool	0.276	0.276	Standard	0.288	0.296	Warm	0.313	0.329	
Color Temperature	x	y												
Cool	0.276	0.276												
Standard	0.288	0.296												
Warm	0.313	0.329												


11.2. HD white balance adjustment

Instrument Name	Connection	Remarks												
1080i W/B Pattern - Color analyzer(Minolta CA-100 or equivalent)	- RF input - Panel surface	User setting: Normal												
Procedure		Remarks												
- Asing time is longer than 15min. - Make sure the front panel to be used on the final set is fitted. - Make sure a color signal is not being shown before adjustment. - Put the color analyzer where there is little colour variation. - Complete the adjustment within 10 minutes after the turn on electricity. Turn on the power supply again when it is not possible to complete it by aging etc. - Display the white balance pattern. - Check that the color balance is "cool". - Enter the <Service1> mode. - Select "G-CUTOFF" item, using the color-key "Red" or "Green", and set to "128", using the color-key "Yellow" or "Blue". Also, "B-CUTOFF" and "R-CUTOFF" set to "128". - Set "G-DRIVE" at "208". - Touch the signal receiver of color analyzer to the highlight window's center, and adjust B drive and R drive so x, y become the "Color balance Cool" in the below table. - Set "ALL-DRIVE" to "252". - Set colorbalance to "Standard". - Fix G cutoff , B cutoff and R cutoff at "128". - Fix G drive at "208". - Adjust B drive and R drive so the highlight window's x, y become the "Color balance "Standard" in the below table. - Set "ALL-DRIVE" to "252". - Set color balance to "Warm". - Set G cutoff, B cutoff and R cutoff to "128". - Set G drive to "208". - Adjust B drive and R drive so the highlight window's x, y become the "Color balance Warm" shown in the below table. - Set "ALL-DRIVE" to "252".		Picture menu: Dynamic ASPECT:16:9 Highlight section Signal amplitude 75% 1080i White Balance Pattern  High light 75% Low light 15% * The Color balance COOL differs from Japanese model values.												
Table 1. Color balance target value <table border="1"> <thead> <tr> <th>Color Temperature</th><th>x</th><th>y</th></tr> </thead> <tbody> <tr> <td>Cool</td><td>0.276</td><td>0.276</td></tr> <tr> <td>Standard</td><td>0.288</td><td>0.296</td></tr> <tr> <td>Warm</td><td>0.313</td><td>0.329</td></tr> </tbody> </table>			Color Temperature	x	y	Cool	0.276	0.276	Standard	0.288	0.296	Warm	0.313	0.329
Color Temperature	x	y												
Cool	0.276	0.276												
Standard	0.288	0.296												
Warm	0.313	0.329												

11.3. Sub bright adjustment

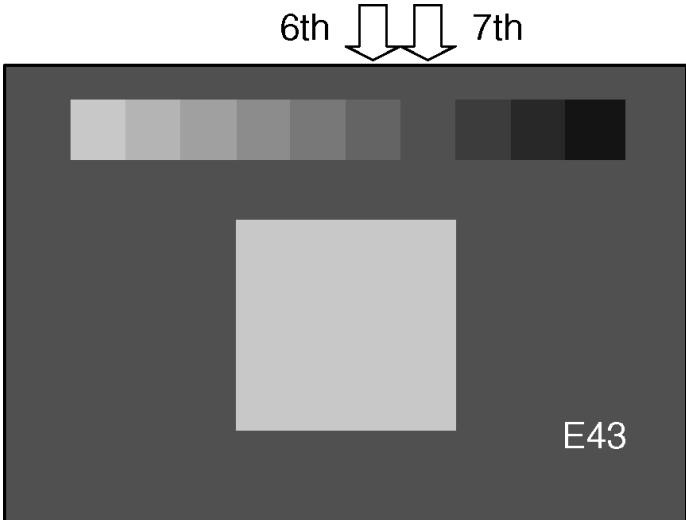Instrument Name	Connection	Remarks
1. PAL signal generator (or RF)	Connect to the input terminal	User setting: Normal
Procedure		Remarks
• White balance adjustment is finished for each signal. • Do adjustments in a dark room. • Complete the adjustment within 10 minutes after the turn on electricity. Turn on the power supply again when it is not possible to complete it by aging etc. 1. Display the 10 steps gray-scale pattern for adjusting subbright from video input. 2. Use "Sub-Bright" in the <Sevice1> mode to adjust so the 6th section shows up and the 7th fades away.		Picture menu: Dynamic Color balance: Normal ASPECT: 16:9
Data Sub-Bright data addresses Sub-Bright (upper) A0-0116 Sub-Bright (lower) A0-0117		
		

11.4. ABL adjustment

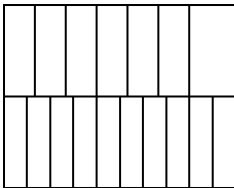Instrument Name	Connection	Remarks
1. HD signal emitter (or Leader : 1080i/No.9 signal) 2. Wattmeter	COMPONENT input terminal Connect the AC power of the set to the wattmeter.	
Procedure		Remarks
- Make sure the set is aged for 30 minutes or more before adjustment. (Do not switch off during or after aging.) - Voltage 230V 50Hz (variation within 1%) - Volume at minimum and screen size at "16:9" Component input, dynamic, standard - Connect the set's AC power to the wattmeter. - Input the signal (top half: color bar, Bottom half :Horizontal 10steps bar). - Select the "PWRCTL" item in the <Service1> mode. - Adjust PWRCTL so the set's power consumption is 438 ±10W Remarks - The initial data are Data address: A0-0102 Default data: 0x00 - The power and data are in reverse relationship. (Lower the data to raise the power.) - Raising direction (↑): 0→255, 254, 253 - Lowering direction (↓): 0→1, 2, 3 - There is a possibility that the adjustment value can do two places, adjust it in that case, that the value of PWRCTL is large.  No.9 Signal Top half: Full color bar Bottom half: Horizontal 10 steps bar		

11.5. Sub-Contrast adjustment

Name of measuring instrument	Connection	Remarks
RF generator Base Band generator		
Preparation (AV)		Remarks
1. Receive AV1 (PAL 100% Full White or Split Colour bar shown as below) . 100% White		
2. Goes into service mode, choose Sub-Contrast, and it checks that data value is 512. (It checks that an initial value is a default)		
Adjustment of AV system		Remarks
1. The colour key yellow button of remote control is pushed. 2. The OSD character of sub-contrast becomes red. (Inside under automatic adjustment) 3. The OSD character of sub-contrast returns to white. 4. End.		
Preparation (RF)		Remarks
1. Receive a RF (PAL 100% Full White or Split Colour bar shown as below.) 100% White		
2. Goes into service mode, choose Sub-Contrast, and it checks that data value is 512. (It checks that an initial value is a default)		
Adjustment of RF system		Remarks
1. The colour key yellow button of remote control is pushed. 2. The OSD character of sub-contrast becomes red. (Inside under automatic adjustment) 3. The OSD character of sub-contrast returns to white. 4. End.		
Preparation (HD)		Remarks
1. Receive Component (1080i/ 60Hz or 1080i/ 50Hz, 100% Full White or Split colour bar as shown below.) 100% White		
2. Goes into service mode, choose Sub-Contrast, and it checks that data value is 384. (It checks that an initial value is a default)		
Adjustment of HD system		Remarks
1. The colour key yellow button of remote control is pushed. 2. The OSD character of sub-contrast becomes red. (Inside under automatic adjustment) 3. The OSD character of sub-contrast returns to white. 4. End.		

11.6. Multi-window adjustment

Name of measuring instrument	Connection	Remarks
Base Band generator		
Condition		Remarks
Sub contrast adjustment is finished.		
Preparation		
1. Come out of market mode and input AV1 PAL 100% full white. 2. Go into service mode, choose VIDEO Gain2, and check that data is 255. (Check that initial value is the default)		
Adjustment		Remarks
1. Check the brightness of main screen and sub screen by watching. 2. Go to procedure 3 when the brightness of sub screen is higher than that of main screen. Oppositely, do not adjust and end when the brightness of sub screen is lower than that of main screen. 3. Adjust VIDEO Gain2 so that the borderline of main and sub screen may become unremarkable by watching.		Press OK button.


12 Hotel mode

1. Purpose

Restrict a function for hotels.

2. Access command

- Enter to the Service 2 Mode.
- Press Information button on remote control and entry to the EEPROM EDITOR Mode.
- Press the RED/GREEN button to step up/down through the address.
- Press the YELLOW/BLUE button to step left/right through the address.
- Press the PROGRAMME UP/DOWN button to step up/down through the page.
- Press the VOLUME UP/DOWN button to change the function values.
- Set the data of EEPROM(ADDRESS 0BAF) to 01.
- Press the OK button to memorize the data.

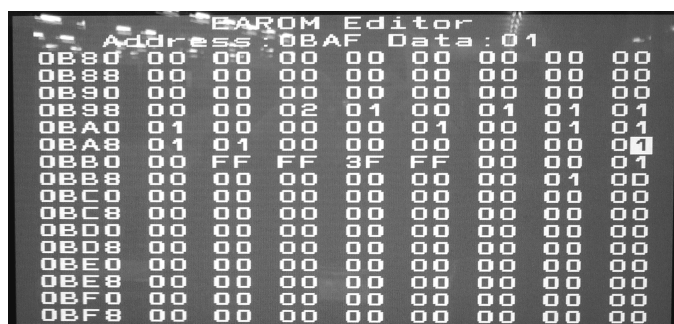

Push the Power switch(button) off/on the set(the remote control) to turn the set off/on.

It can be made Hotel mode.

3. Exit command

- First, set the data of EEPROM(ADDRESS 0BAF) to 00.
- Next, Push the Power switch(button) off/on the set(the remote control) to turn the set off/on.
- Then, it is no longer hotel mode.

4. Access command to the Hotel mode setup menu

- Prerequisite : It is conditions that the data of EEPROM(ADDRESS 0BAF) is 01.

In order to display the Hotel mode setup menu, please enter the following command **(within 2 second)**.

[TV]:down + [REMOTE]:TV/AV(3 times)

Then, the Hotel mode setup menu is displayed.



item	Function
Initial INPUT	Select input signal modes. Set the input, when each time power is switched on. Selection : Off/TV/AV1/AV2/AV2S/AV3/Av3S/AV4/Av4S/Component/PC/HDMI1/HDMI2 • Off: give priority to a last memory. However, Euro model is compulsorily set to TV. • AVnS/AVnC: only Euro model selectable • PC: selectable with VGA option
Initial VOL level	Adjust the volume when each time power is switched on. Selection/Range : Off/0 to 63 • Off: give priority to a last memory
Maximum VOL level	Adjust maximum volume. Range : 0 to 63
Initial POS	Select programme number. Selection : Off/0 to 99 • Off: give priority to a last memory
Button lock	Select local key conditions. Selection : Off/SETUP/MENU/All • Off: altogether valid • SETUP: only F-key is invalid (Tuning guide(menu) can not be selected.) • MENU: only F-key is invalid (only Volume/Mute can be selected.) • All: altogether invalid.
Remote lock	Select remote control key conditions. Selection : Off/SETUP/MENU • Off: altogether valid • SETUP: only Setup menu is invalid • MENU: Picture/Sound/Setup menu are invalid


6. To exit the Hotel mode


Disconnect AC power cord from wall outlet

5. Explain the Hotel mode setup menu

13 Conductor Views

13.1. P-Board

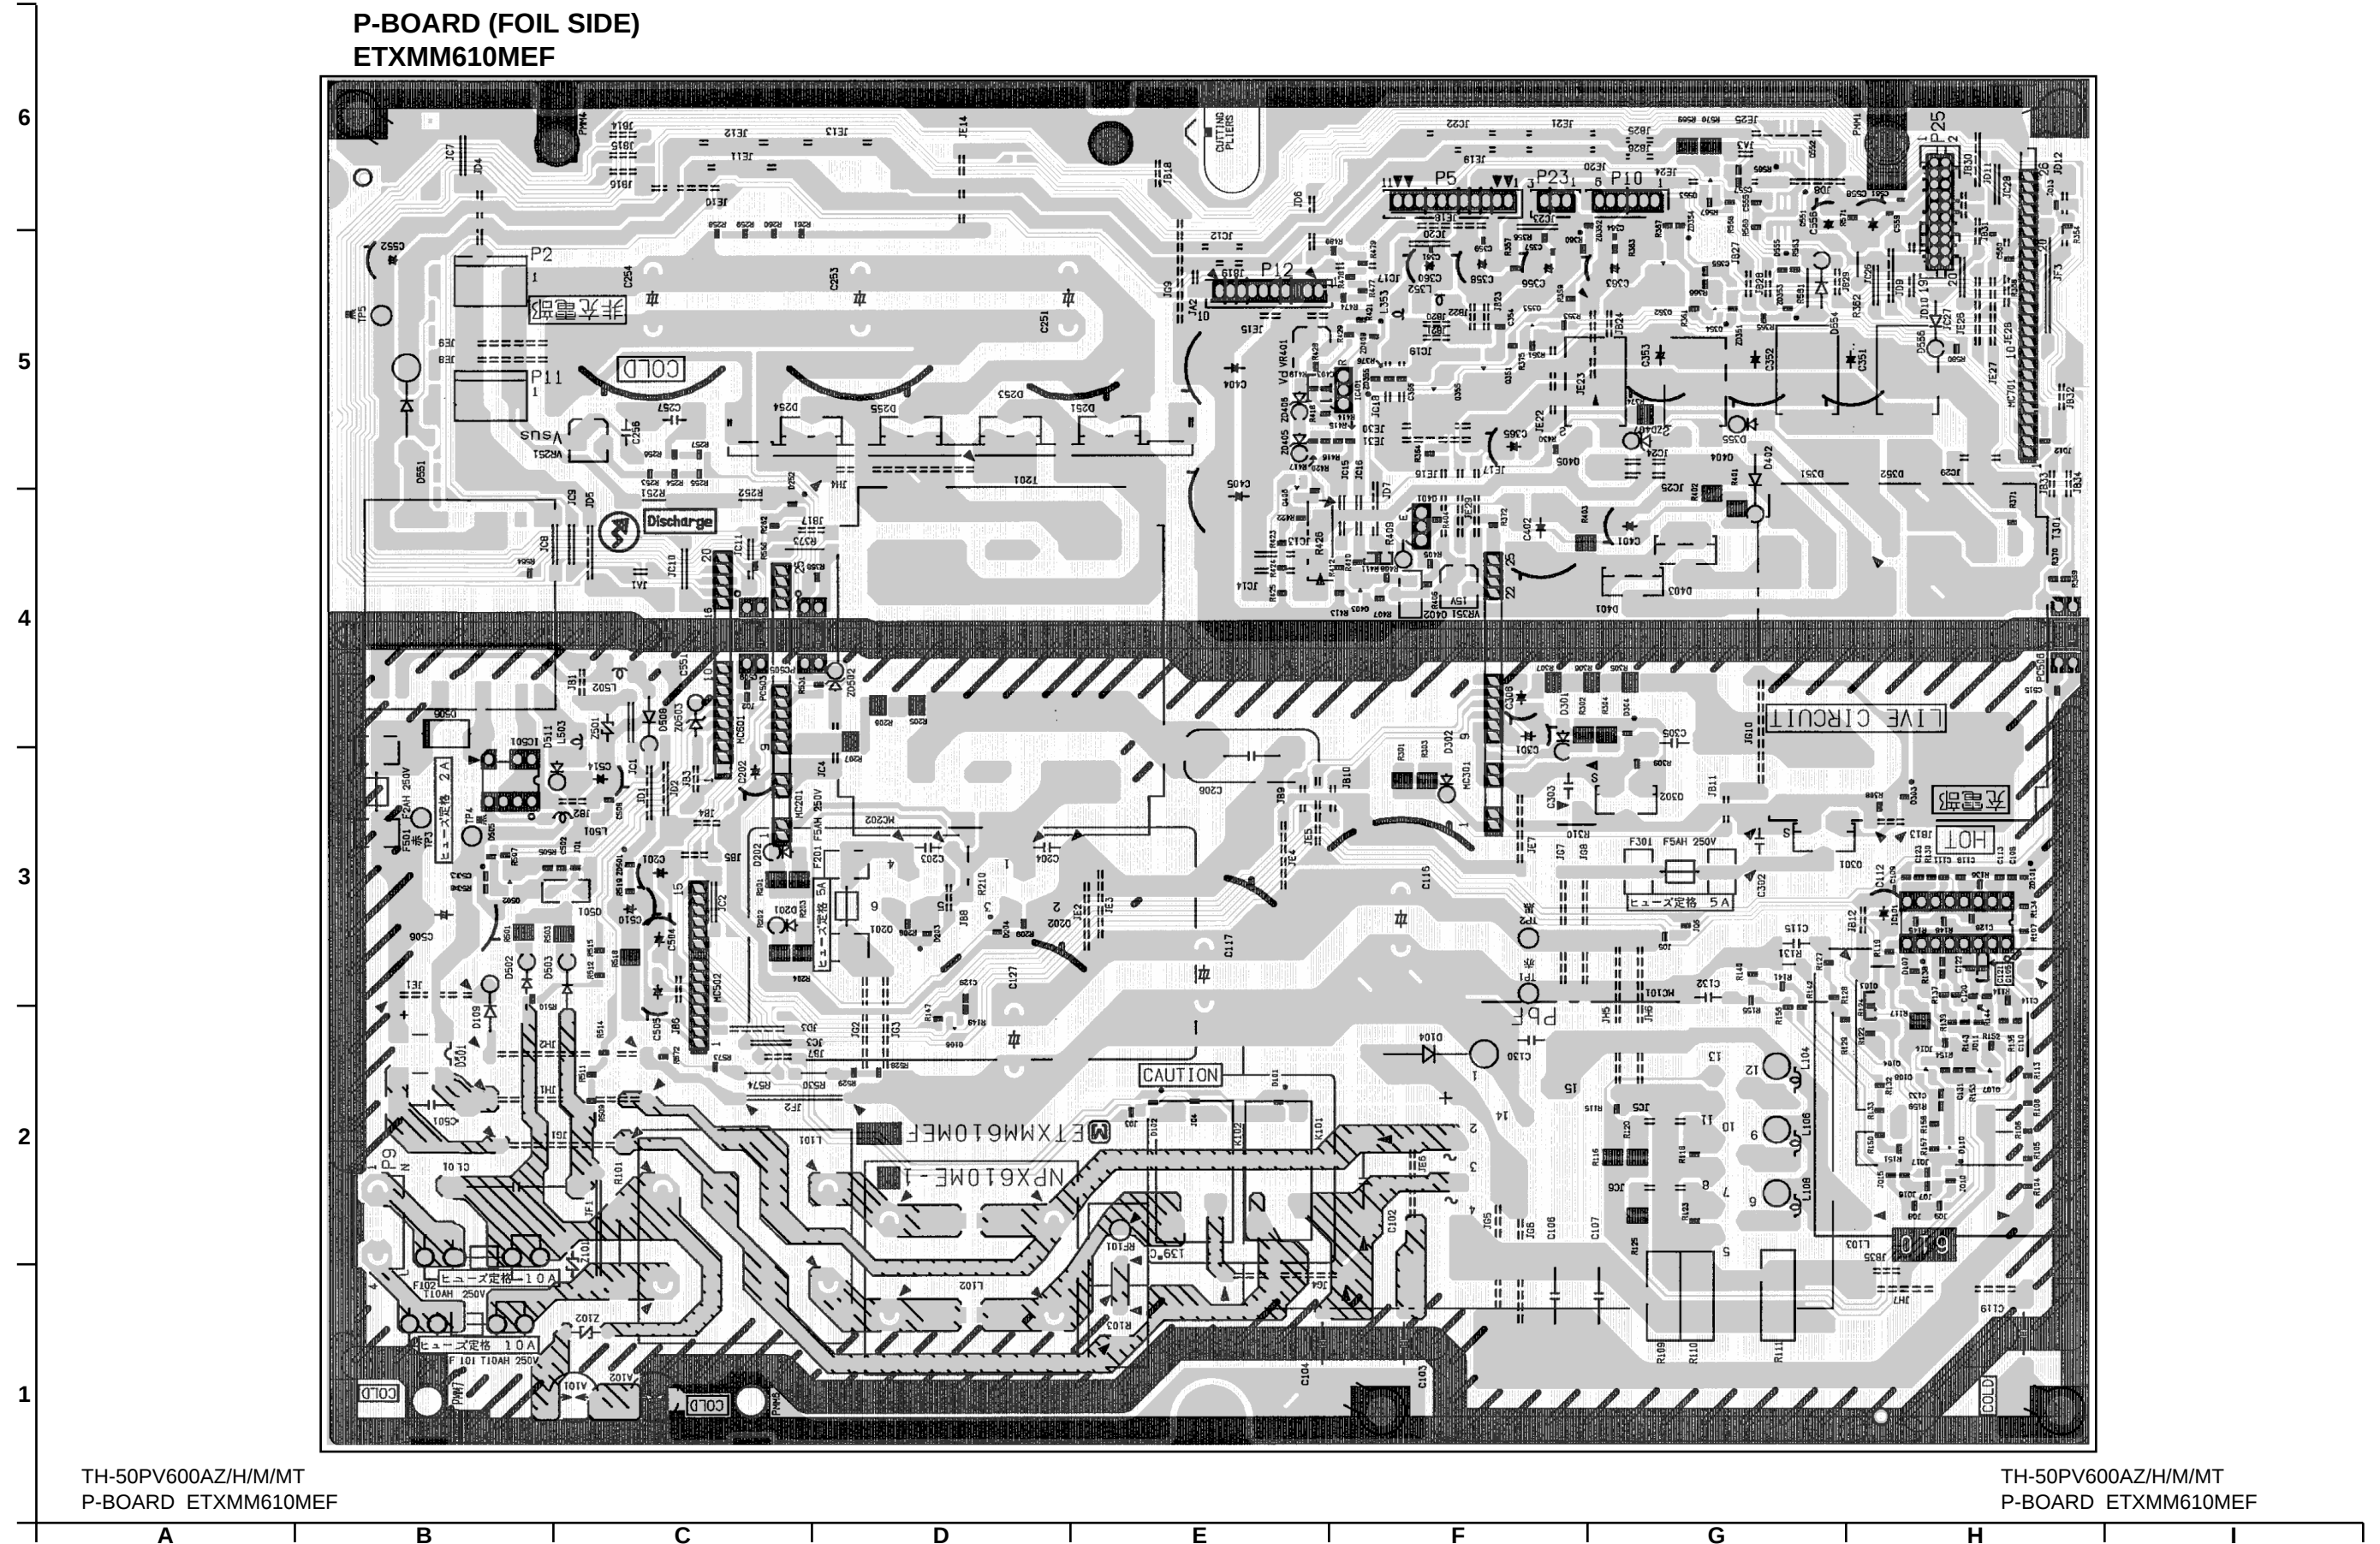

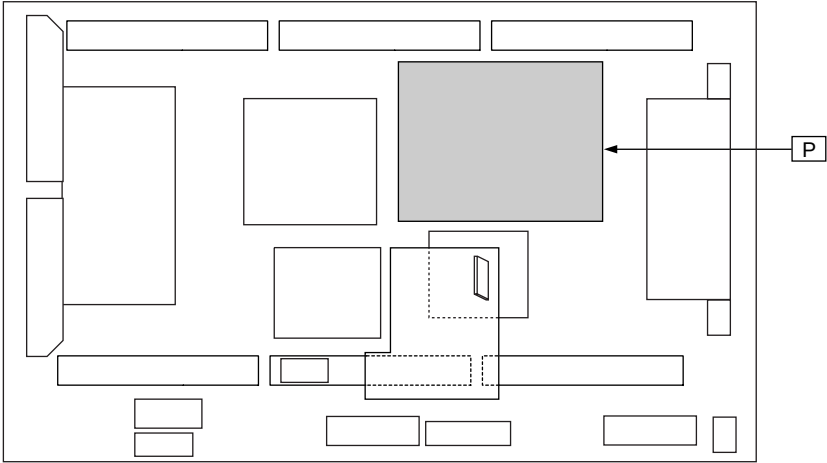


Parts Location

P-BOARD (FOIL SIDE)					
IC		PHOTO COUPLER		TRANSISTOR	
IC101	H-3	PC503	C-4	Q103	H-2
IC401	F-5	PC505	C-4	Q104	H-2
IC501	B-3	PC506	H-4	Q106	H-2
MODULE		VOLUME		Q301	H-3
MC101	G-3	VR251	C-5	Q302	G-3
MC201	C-3	VR351	F-4	Q351	F-5
MC202	D-3	VR401	E-5	Q352	G-5
MC301	F-3			Q353	F-5
MC502	C-2			Q354	F-4
MC601	C-4			Q401	F-4
MC701	H-5			Q402	G-4
				Q403	E-4
				Q404	G-5
				Q405	F-5
				Q406	E-4
				Q501	B-3
				Q502	B-3
				Q551	G-5
				Q552	G-6
				Q553	G-6

Parts Location


P-BOARD (COMPONENT SIDE)					
IC		PHOTO COUPLER		VOLUME	
IC101	B-3	PC503	G-4	VR251	H-5
IC401	E-5	PC505	G-4	VR351	D-4
IC501	H-3	PC506	B-4	VR401	E-5
MODULE		TRANSISTOR			
MC101	C-3	Q301	C-3		
MC201	G-3	Q302	C-3		
MC202	E-3	Q401	E-5		
MC301	D-3	Q402	D-4		
MC502	G-2	Q404	C-5		
MC601	G-4	Q405	D-5		
MC701	B-5	Q501	H-3		

P-BOARD (COMPONENT SIDE)
ETXMM610MEF


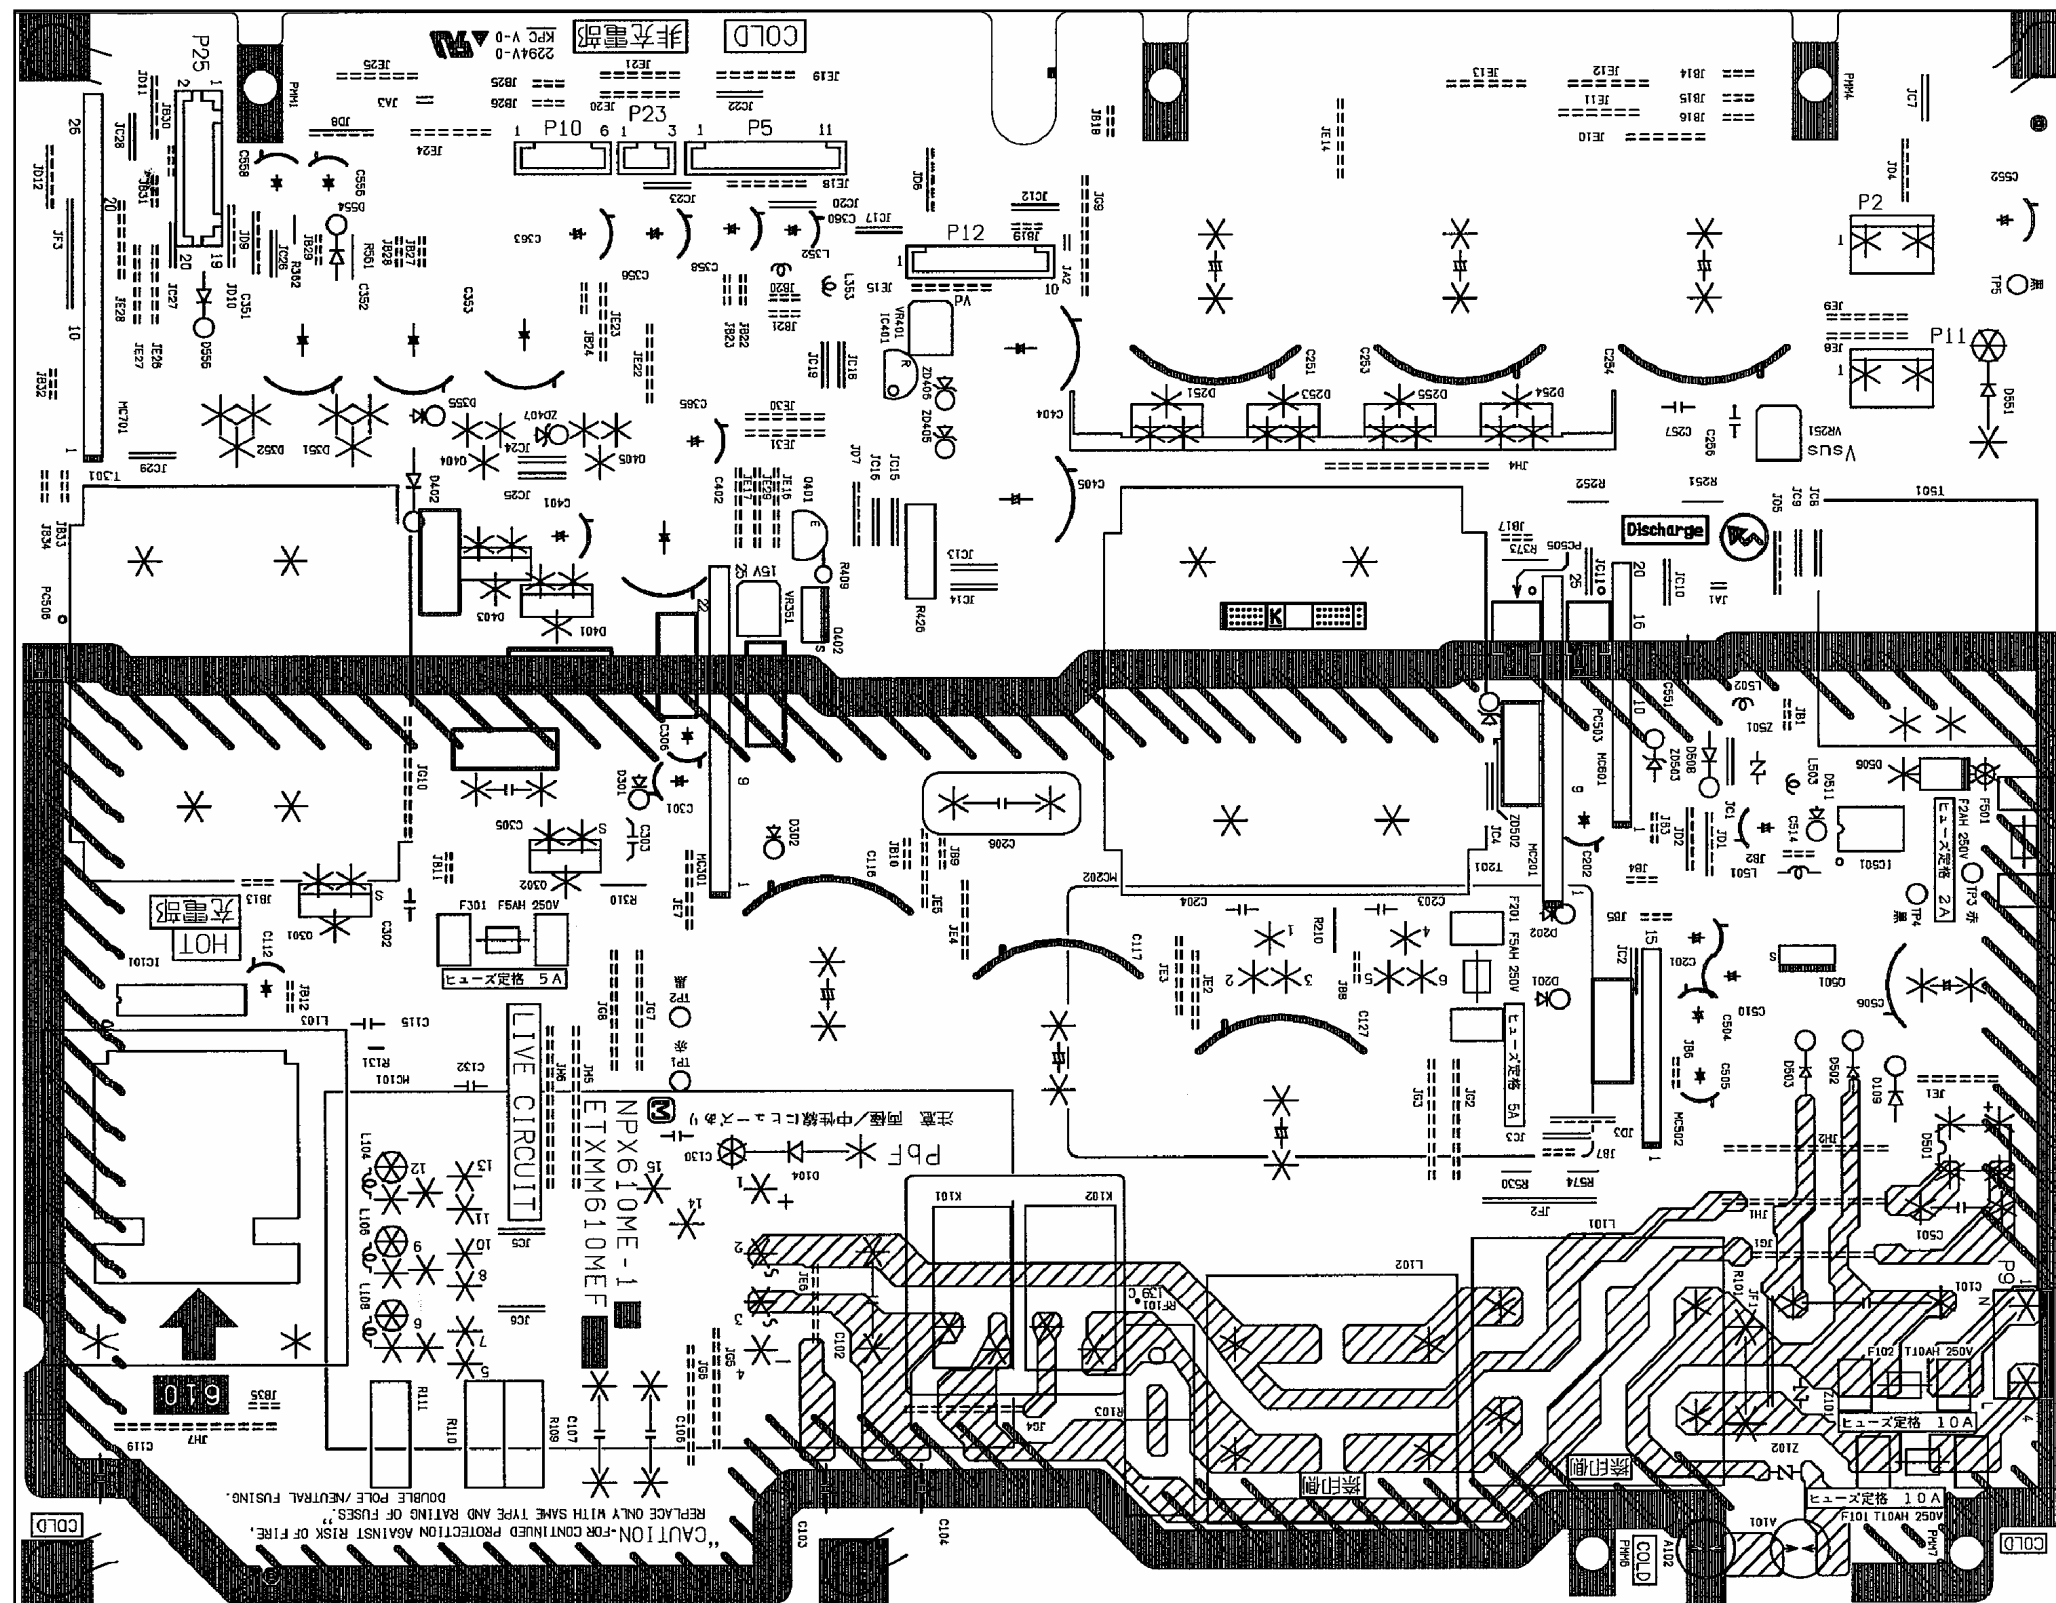


TH-50PV600AZ/H/M/MT
P-BOARD ETXMM610MEF

TH-50PV600AZ/H/M/MT
P-BOARD ETXMM610MEF

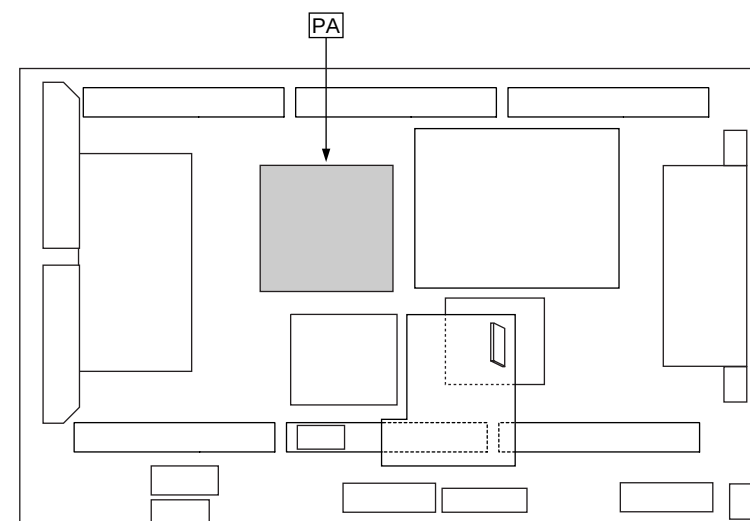


PA-BOARD (FOIL SIDE)			
IC		TP	
IC2306	B-2	TP16	D-6
IC2307	C-2	TP17	D-5
IC5601	E-2	TP5613	B-1
IC5602	F-4	TP5615	B-1
IC5611	D-4	TP5616	A-1
		TP5617	B-1
TRANSISTOR		TPFSOS	B-1
		TPM5	F-2
Q2306	B-3	TPM9	F-2
Q2307	A-2	TPM18	E-3
Q2308	C-3	TPM33	E-4
Q2309	B-3	TPMUTE	D-1
Q5606	E-3	TPS5	E-2
		TPS9	E-3
		TPS33	D-2
		TPSSOS	A-1
		TPSTB5V	D-1

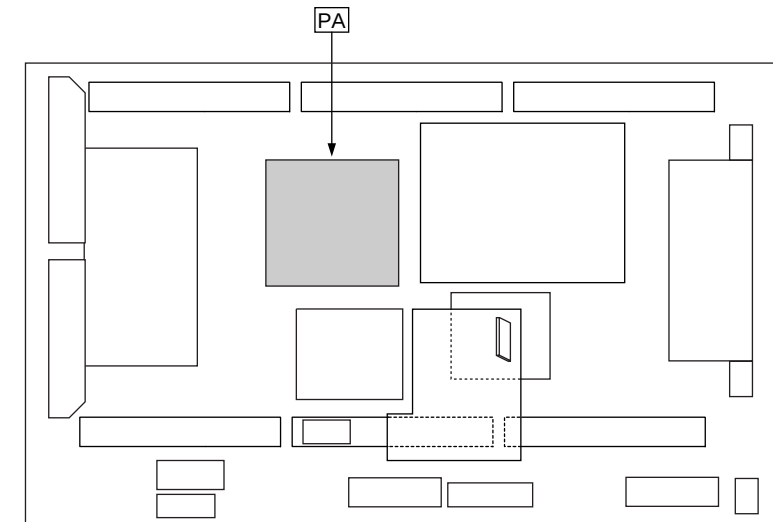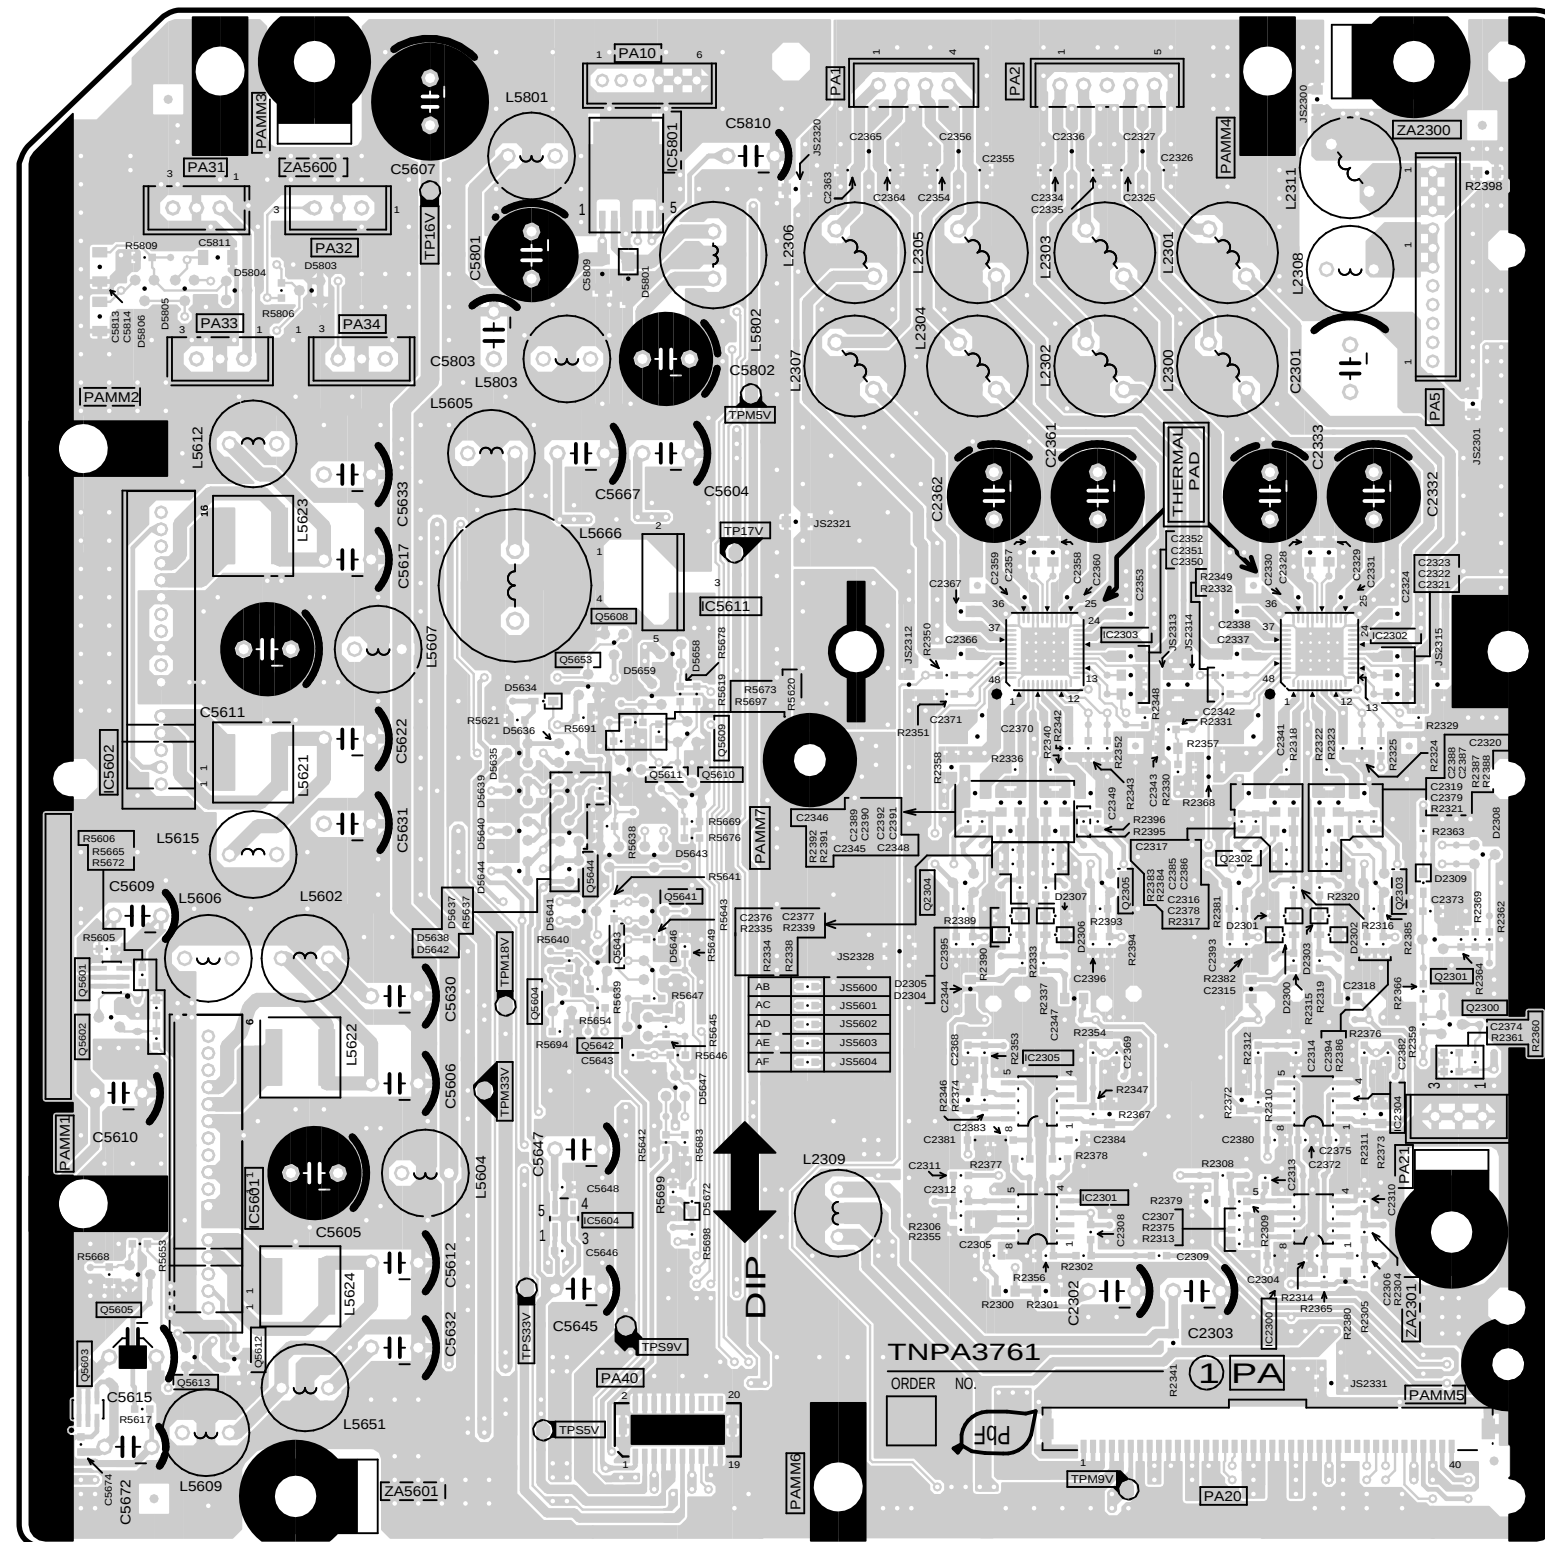

PA-BOARD (COMPONENT SIDE)					
IC		TRANSISTOR		TP	
IC2300	E-2	Q2300	F-3	TP16V	B-5
IC2301	D-2	Q2301	F-3	TP17V	C-4
IC2302	E-4	Q2302	E-3	TPM5V	C-5
IC2303	E-4	Q2303	E-3	TPM18V	B-3
IC2304	E-2	Q2304	D-3	TPM33V	B-2
IC2305	D-3	Q2305	E-3	TPS5V	C-1
IC5601	B-2	Q5601	A-3	TPS9V	C-2
IC5602	A-3	Q5602	A-3	TPS33V	C-2
IC5604	C-2	Q5603	A-1		
IC5611	C-4	Q5604	C-3		
IC5801	C-5	Q5605	A-2		
		Q5608	C-4		
		Q5609	C-4		
		Q5610	C-3		
		Q5612	B-1		
		Q5613	A-1		
		Q5641	C-3		
		Q5642	C-3		
		Q5643	C-3		
		Q5644	C-3		
		Q5653	C-4		

TH-50PV600AZ/H/M/MT
PA-BOARD TNPA3761AE




TH-50PV600AZ/H/M/MT H-BOARD TNPA3760
TH-50PV600AZ/H/M/MT HC-BOARD TNPA3852

TH-50PV600AZ/H/M/MT TA-BOARD TNPA3768AB


H-BOARD (COMPONENT SIDE)

TNPA3760

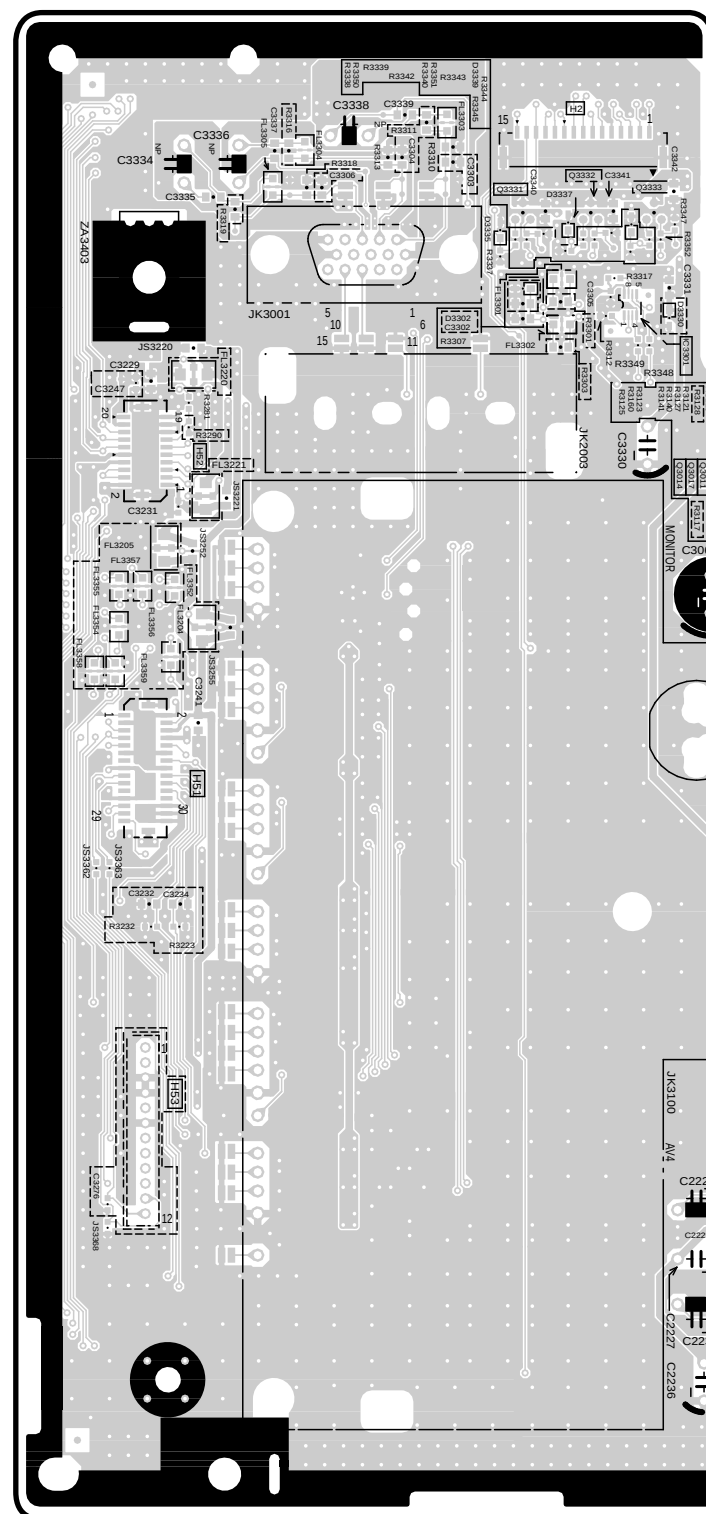


Parts Location


H-BOARD (COMPONENT SIDE)							
IC		TRANSISTOR		Q2300	E-5	Q3018	C-4
IC2103	F-4	Q2011	D-4	Q2301	E-4	Q3023	D-4
IC2104	F-4	Q2012	D-4	Q2302	E-4	Q3203	F-2
IC2105	D-2	Q2013	D-4	Q2314	G-4	Q3204	E-2
IC2106	E-4	Q2102	E-4	Q2315	G-4	Q3205	E-2
IC2107	F-3	Q2103	E-4	Q2316	G-4	Q3206	G-3
IC2108	F-2	Q2104	F-4	Q2317	G-4	Q3207	G-3
IC2109	C-2	Q2105	F-4	Q3002	C-4	Q3209	E-2
IC2210	C-1	Q2106	E-2	Q3008	G-3	Q3210	E-2
IC3005	D-3	Q2107	F-2	Q3011	C-4	Q3331	B-5
IC3200	F-2	Q2108	E-2	Q3012	C-4	Q3332	C-5
IC3301	C-5	Q2109	F-2	Q3013	C-4	Q3333	C-5
IC5603	G-2	Q2113	G-4	Q3014	C-4	Q5614	F-2
		Q2114	G-3	Q3015	C-4		
				Q3017	C-4		

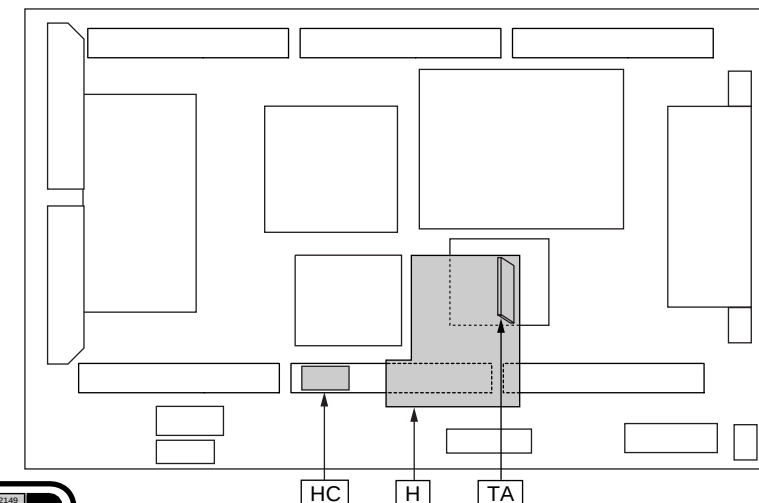

TA-BOARD (COMPONENT SIDE)
TNPA3768AB

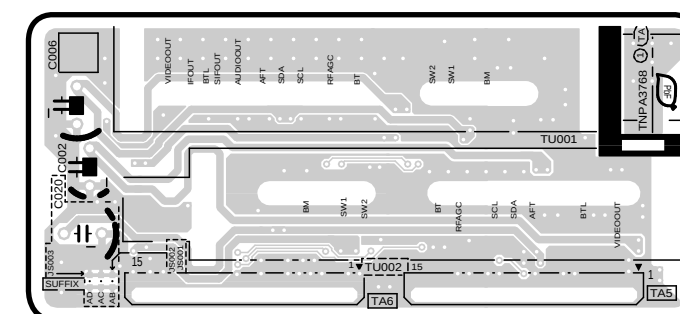

HC-BOARD (COMPONENT SIDE)
TNPA3852

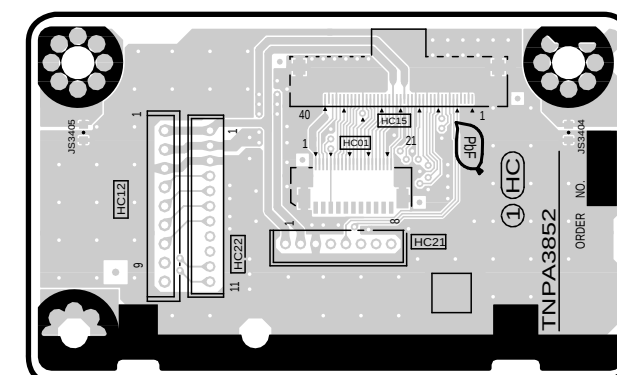


TH-50PV600AZ/H/M/MT H-BOARD TNPA3760
TH-50PV600AZ/H/M/MT HC-BOARD TNPA3852

TH-50PV600AZ/H/M/MT TA-BOARD TNPA3768AB



TH-50PV600AZ/H/M/MT H-BOARD TNPA3760
TH-50PV600AZ/H/M/MT HC-BOARD TNPA3852

TH-50PV600AZ/H/M/MT TA-BOARD TNPA3768AB

13.4. G-Board

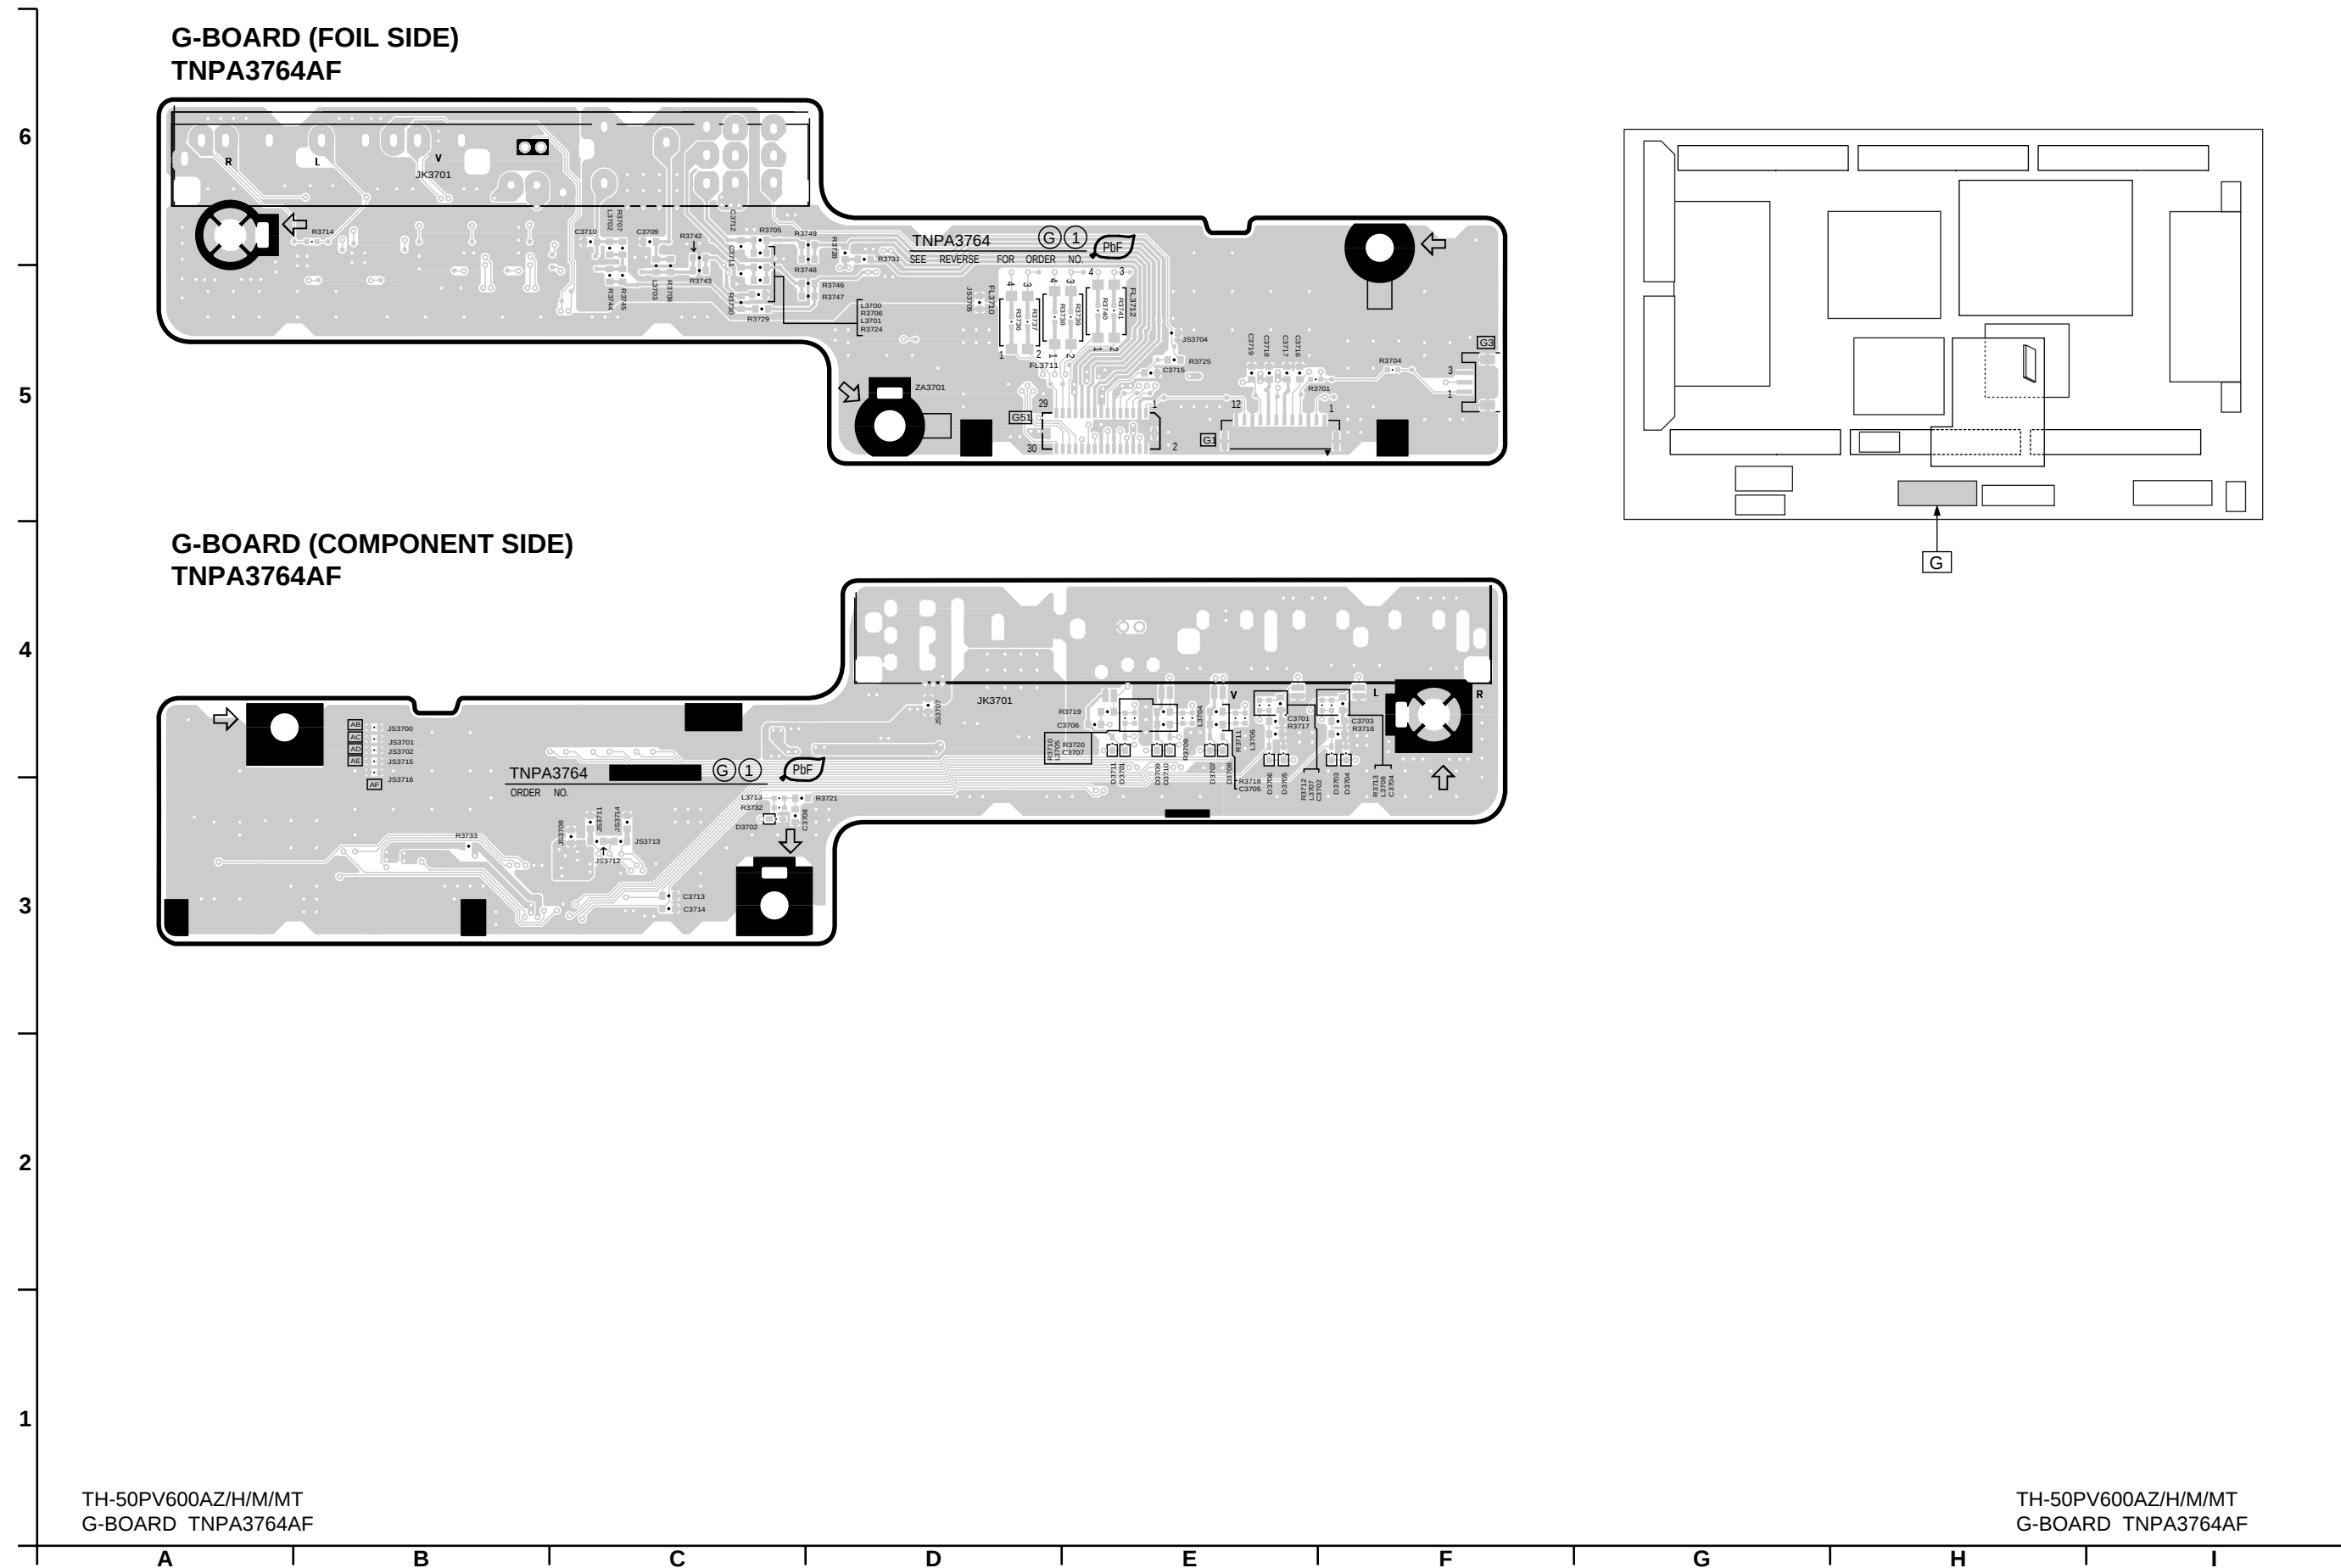



13.6. DG-Board

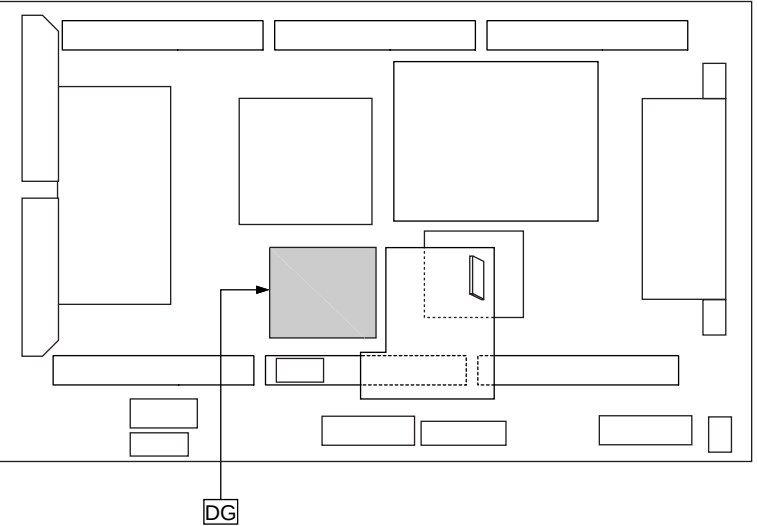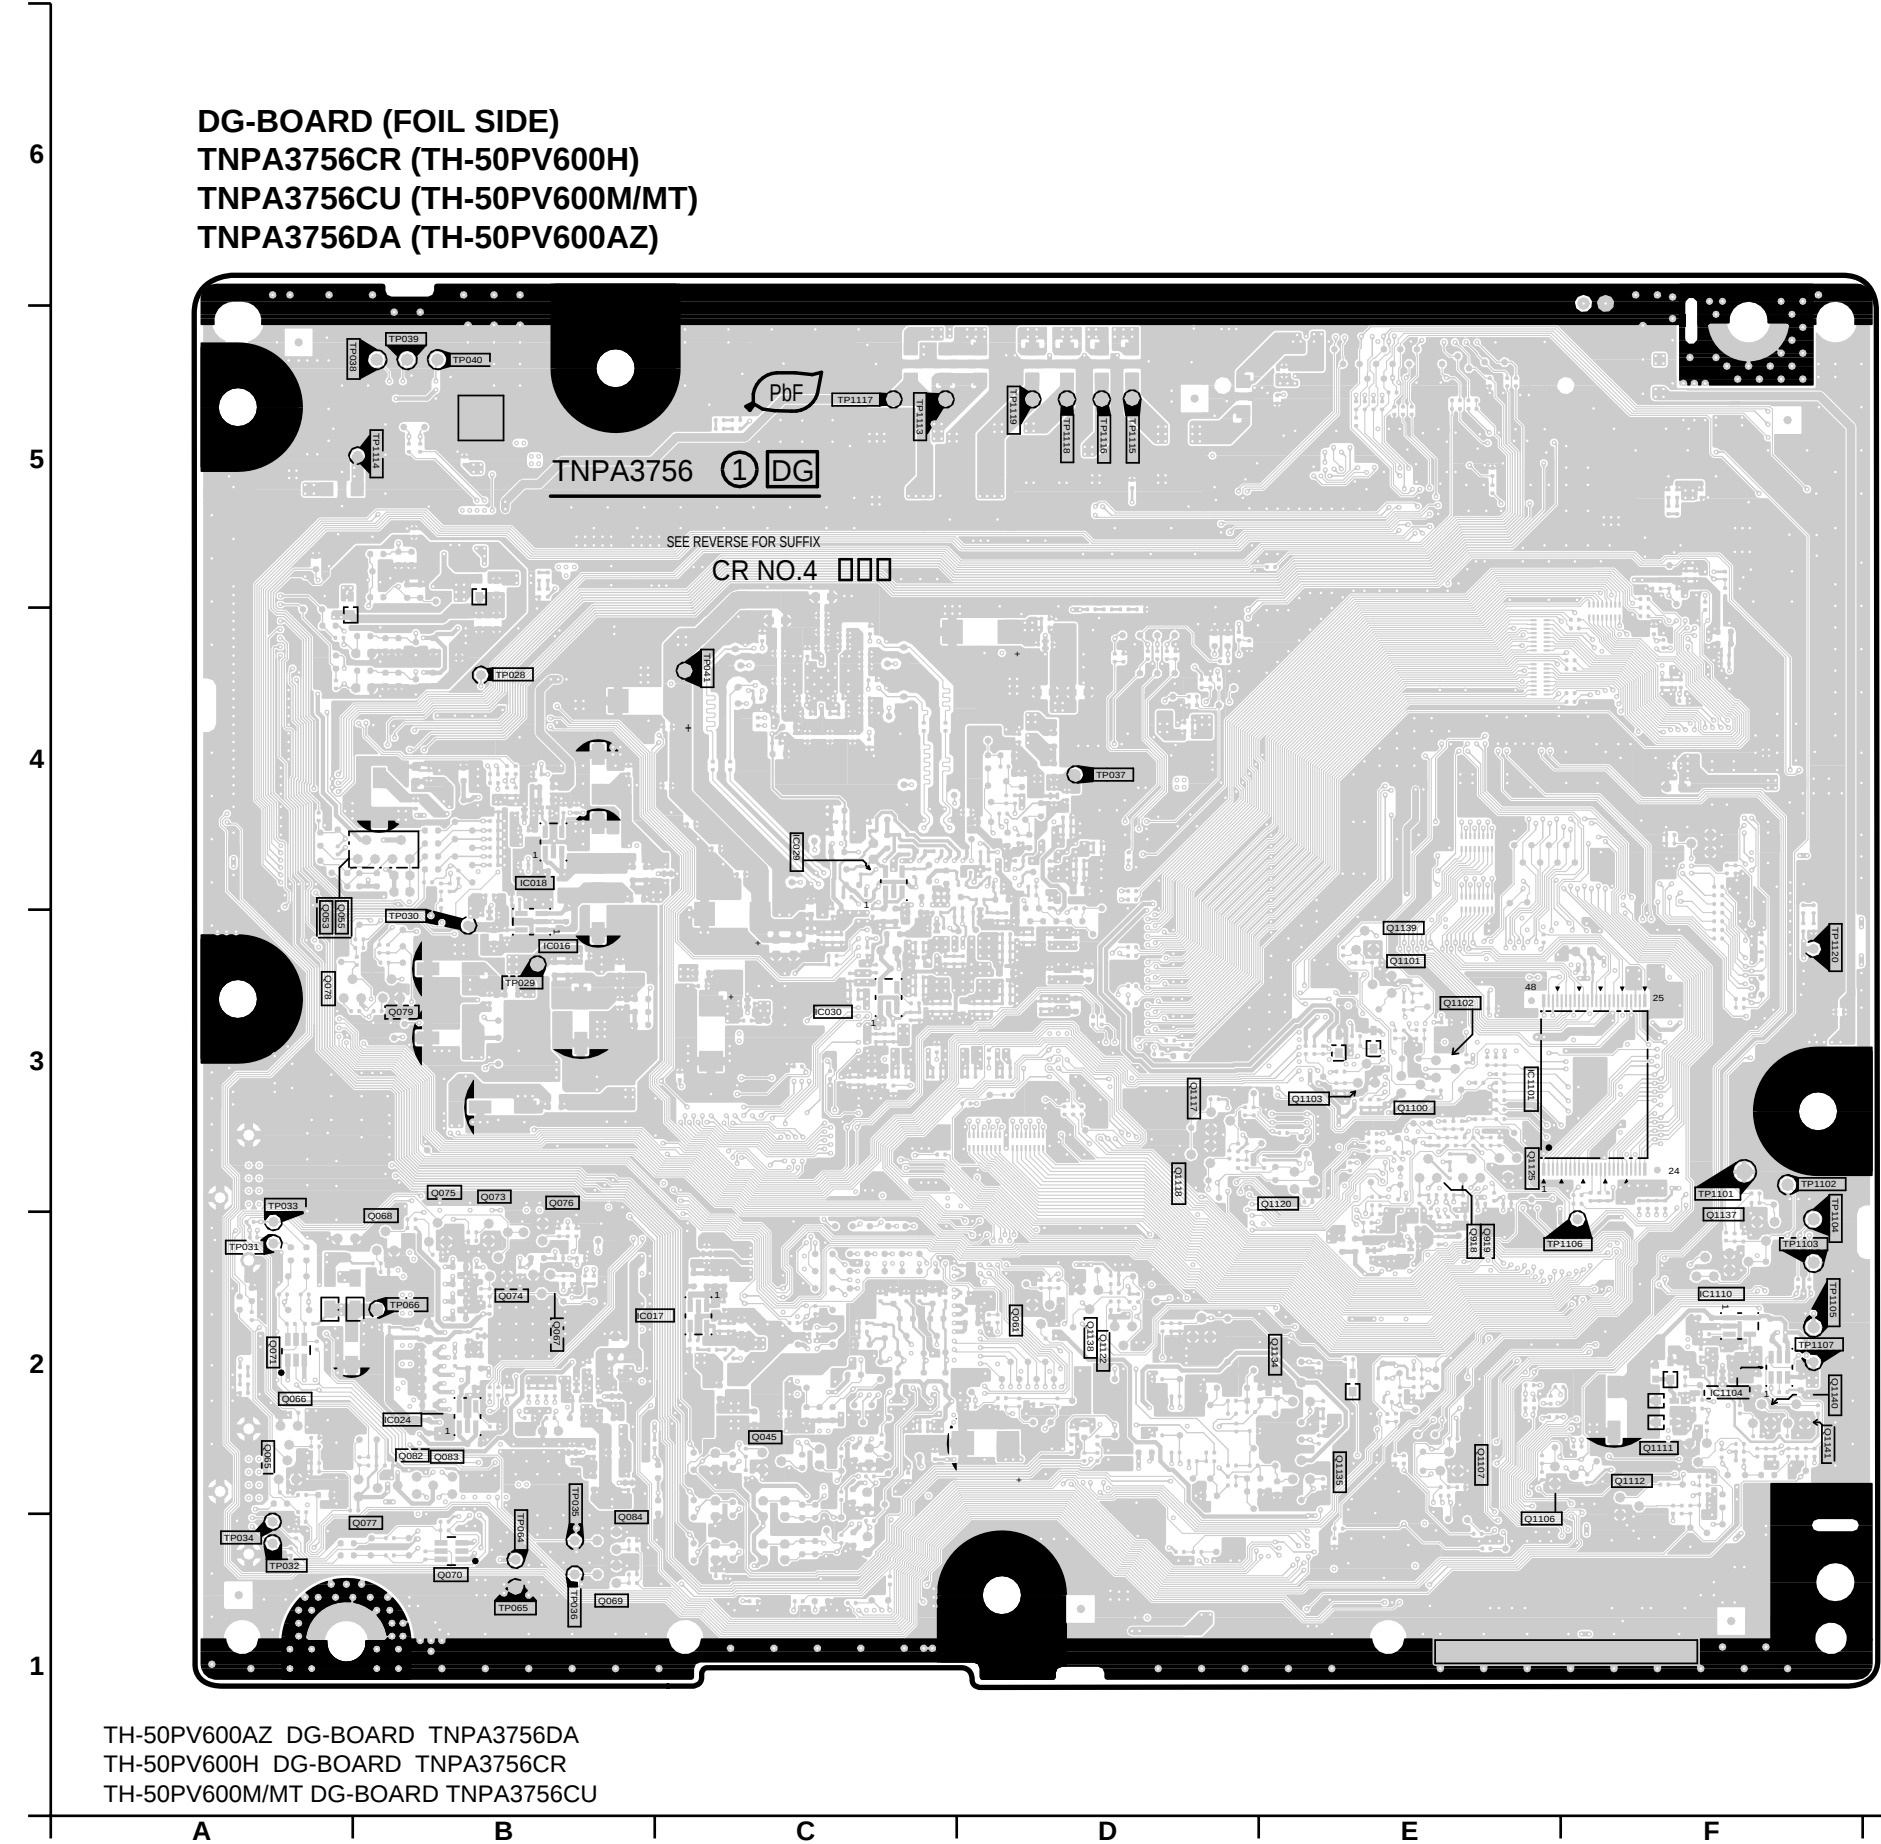

Parts Location					
DG-BOARD (FOIL SIDE)					
IC		C-2		TP	
IC1101	E-3	Q4045	A-3	TP1101	F-3
IC1104	F-2	Q4053	A-3	TP1102	F-3
IC1110	F-2	Q4055	A-3	TP1103	F-2
IC4016	B-3	Q4061	D-2	TP1104	F-2
IC4017	B-2	Q4065	A-2	TP1105	F-2
IC4018	B-4	Q4066	A-2	TP1106	F-2
IC4024	B-2	Q4067	B-2	TP1107	F-2
IC4029	C-4	Q4068	B-2	TP1113	C-5
IC4030	C-3	Q4069	B-1	TP1114	B-5
TRANSISTOR		Q4070	B-1	TP1115	D-5
Q1100	E-3	Q4071	A-2	TP1116	D-5
Q1101	E-3	Q4073	B-3	TP1117	C-5
Q1102	E-3	Q4074	B-2	TP1118	D-5
Q1103	E-3	Q4075	B-3	TP1119	D-5
Q1106	E-1	Q4076	B-3	TP1120	F-3
Q1107	E-2	Q4077	B-1	TP4028	B-4
Q1111	F-2	Q4078	A-3	TP4029	B-3
Q1112	F-2	Q4079	B-3	TP4030	B-3
Q1117	D-3	Q4082	B-2	TP4031	A-2
Q1118	D-3	Q4083	B-2	TP4032	A-4
Q1120	E-3	Q4084	B-1	TP4033	A-3
Q1122	D-2	Q4918	E-2	TP4034	A-1
Q1125	E-3	Q4919	E-2	TP4035	B-1
Q1134	E-2			TP4036	B-1
Q1135	E-2			TP4037	D-4
Q1137	F-2			TP4038	B-5
Q1138	D-2			TP4039	B-5
Q1139	E-3			TP4040	B-5
Q1140	F-2			TP4041	C-4
Q1141	F-2			TP4064	B-1
				TP4065	B-1
				TP4066	B-2

TH-50PV600AZ DG-BOARD TNPA3756DA
TH-50PV600H DG-BOARD TNPA3756CR
TH-50PV600M/MT DG-BOARD TNPA3756CU

DG-BOARD (COMPONENT SIDE)
TNPA3756CR (TH-50PV600H)
TNPA3756CU (TH-50PV600M/MT)
TNPA3756DA (TH-50PV600AZ)

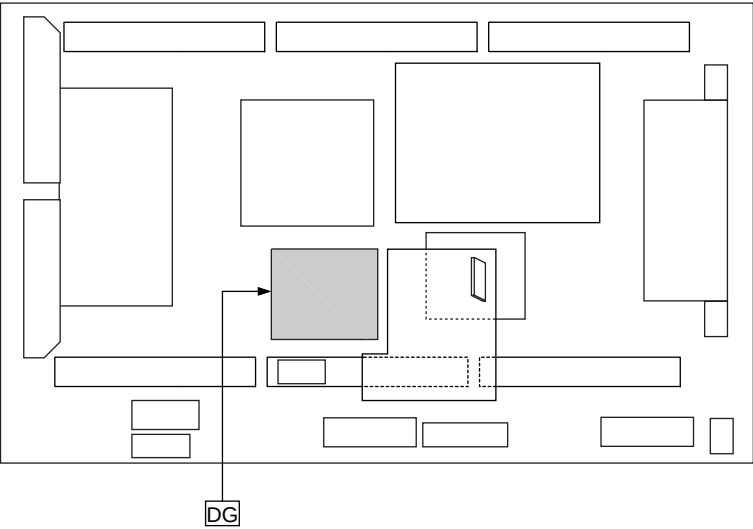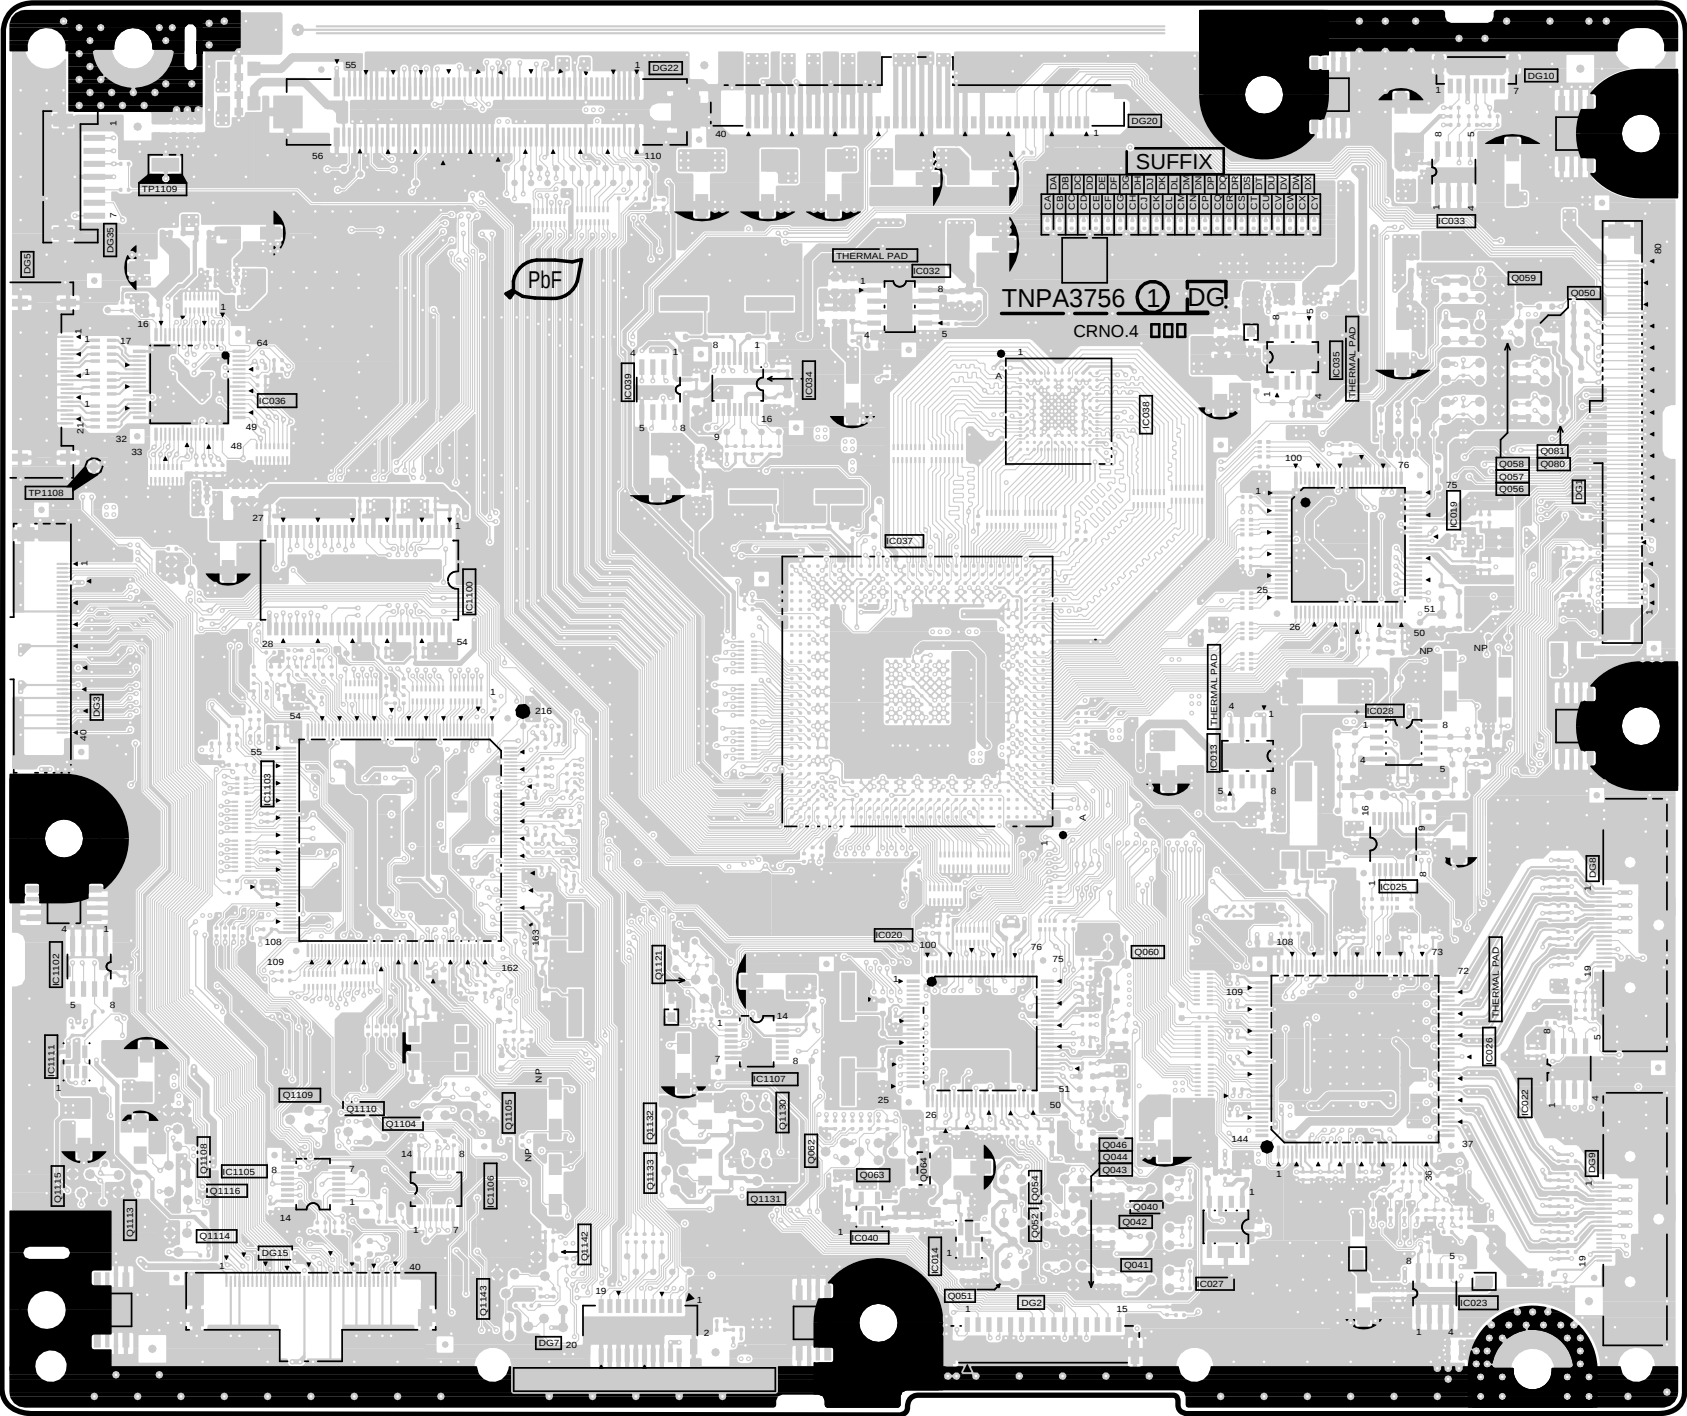


Parts Location



DG-BOARD (COMPONENT SIDE)					
IC		TRANSISTOR			
IC1100	C-4	Q1104	B-2	Q4056	F-4
IC1102	A-2	Q1105	C-2	Q4057	F-4
IC1103	B-3	Q1108	B-2	Q4058	F-4
IC1105	B-2	Q1109	B-2	Q4059	F-5
IC1106	C-2	Q1110	B-2	Q4060	E-2
IC1107	D-2	Q1113	A-2	Q4062	D-2
IC1111	A-2	Q1114	B-2	Q4063	D-2
IC4013	E-3	Q1115	A-2	Q4064	D-2
IC4014	D-1	Q1116	B-2	Q4080	F-4
IC4019	F-4	Q1121	C-2	Q4081	F-4
IC4020	D-3	Q1130	D-2	TP	
IC4022	F-2	Q1131	D-2	TP1108	A-4
IC4023	F-1	Q1132	C-2	TP1109	A-5
IC4025	F-3	Q1133	C-2		
IC4026	F-2	Q1142	C-1		
IC4027	E-1	Q1143	C-1		
IC4028	F-3	Q4040	E-2		
IC4032	D-5	Q4041	E-1		
IC4033	F-5	Q4042	E-2		
IC4034	D-4	Q4043	E-2		
IC4035	E-4	Q4044	E-2		
IC4036	B-4	Q4046	E-2		
IC4037	D-4	Q4050	F-5		
IC4038	E-4	Q4051	D-1		
IC4039	C-4	Q4052	D-2		
IC4040	D-2	Q4054	D-2		

TH-50PV600AZ DG-BOARD TNPA3756DA
TH-50PV600H DG-BOARD TNPA3756CR
TH-50PV600M/MT DG-BOARD TNPA3756CU

TH-50PV600AZ DG-BOARD TNPA3756DA
TH-50PV600H DG-BOARD TNPA3756CR
TH-50PV600M/MT DG-BOARD TNPA3756CU

13.7. D-Board

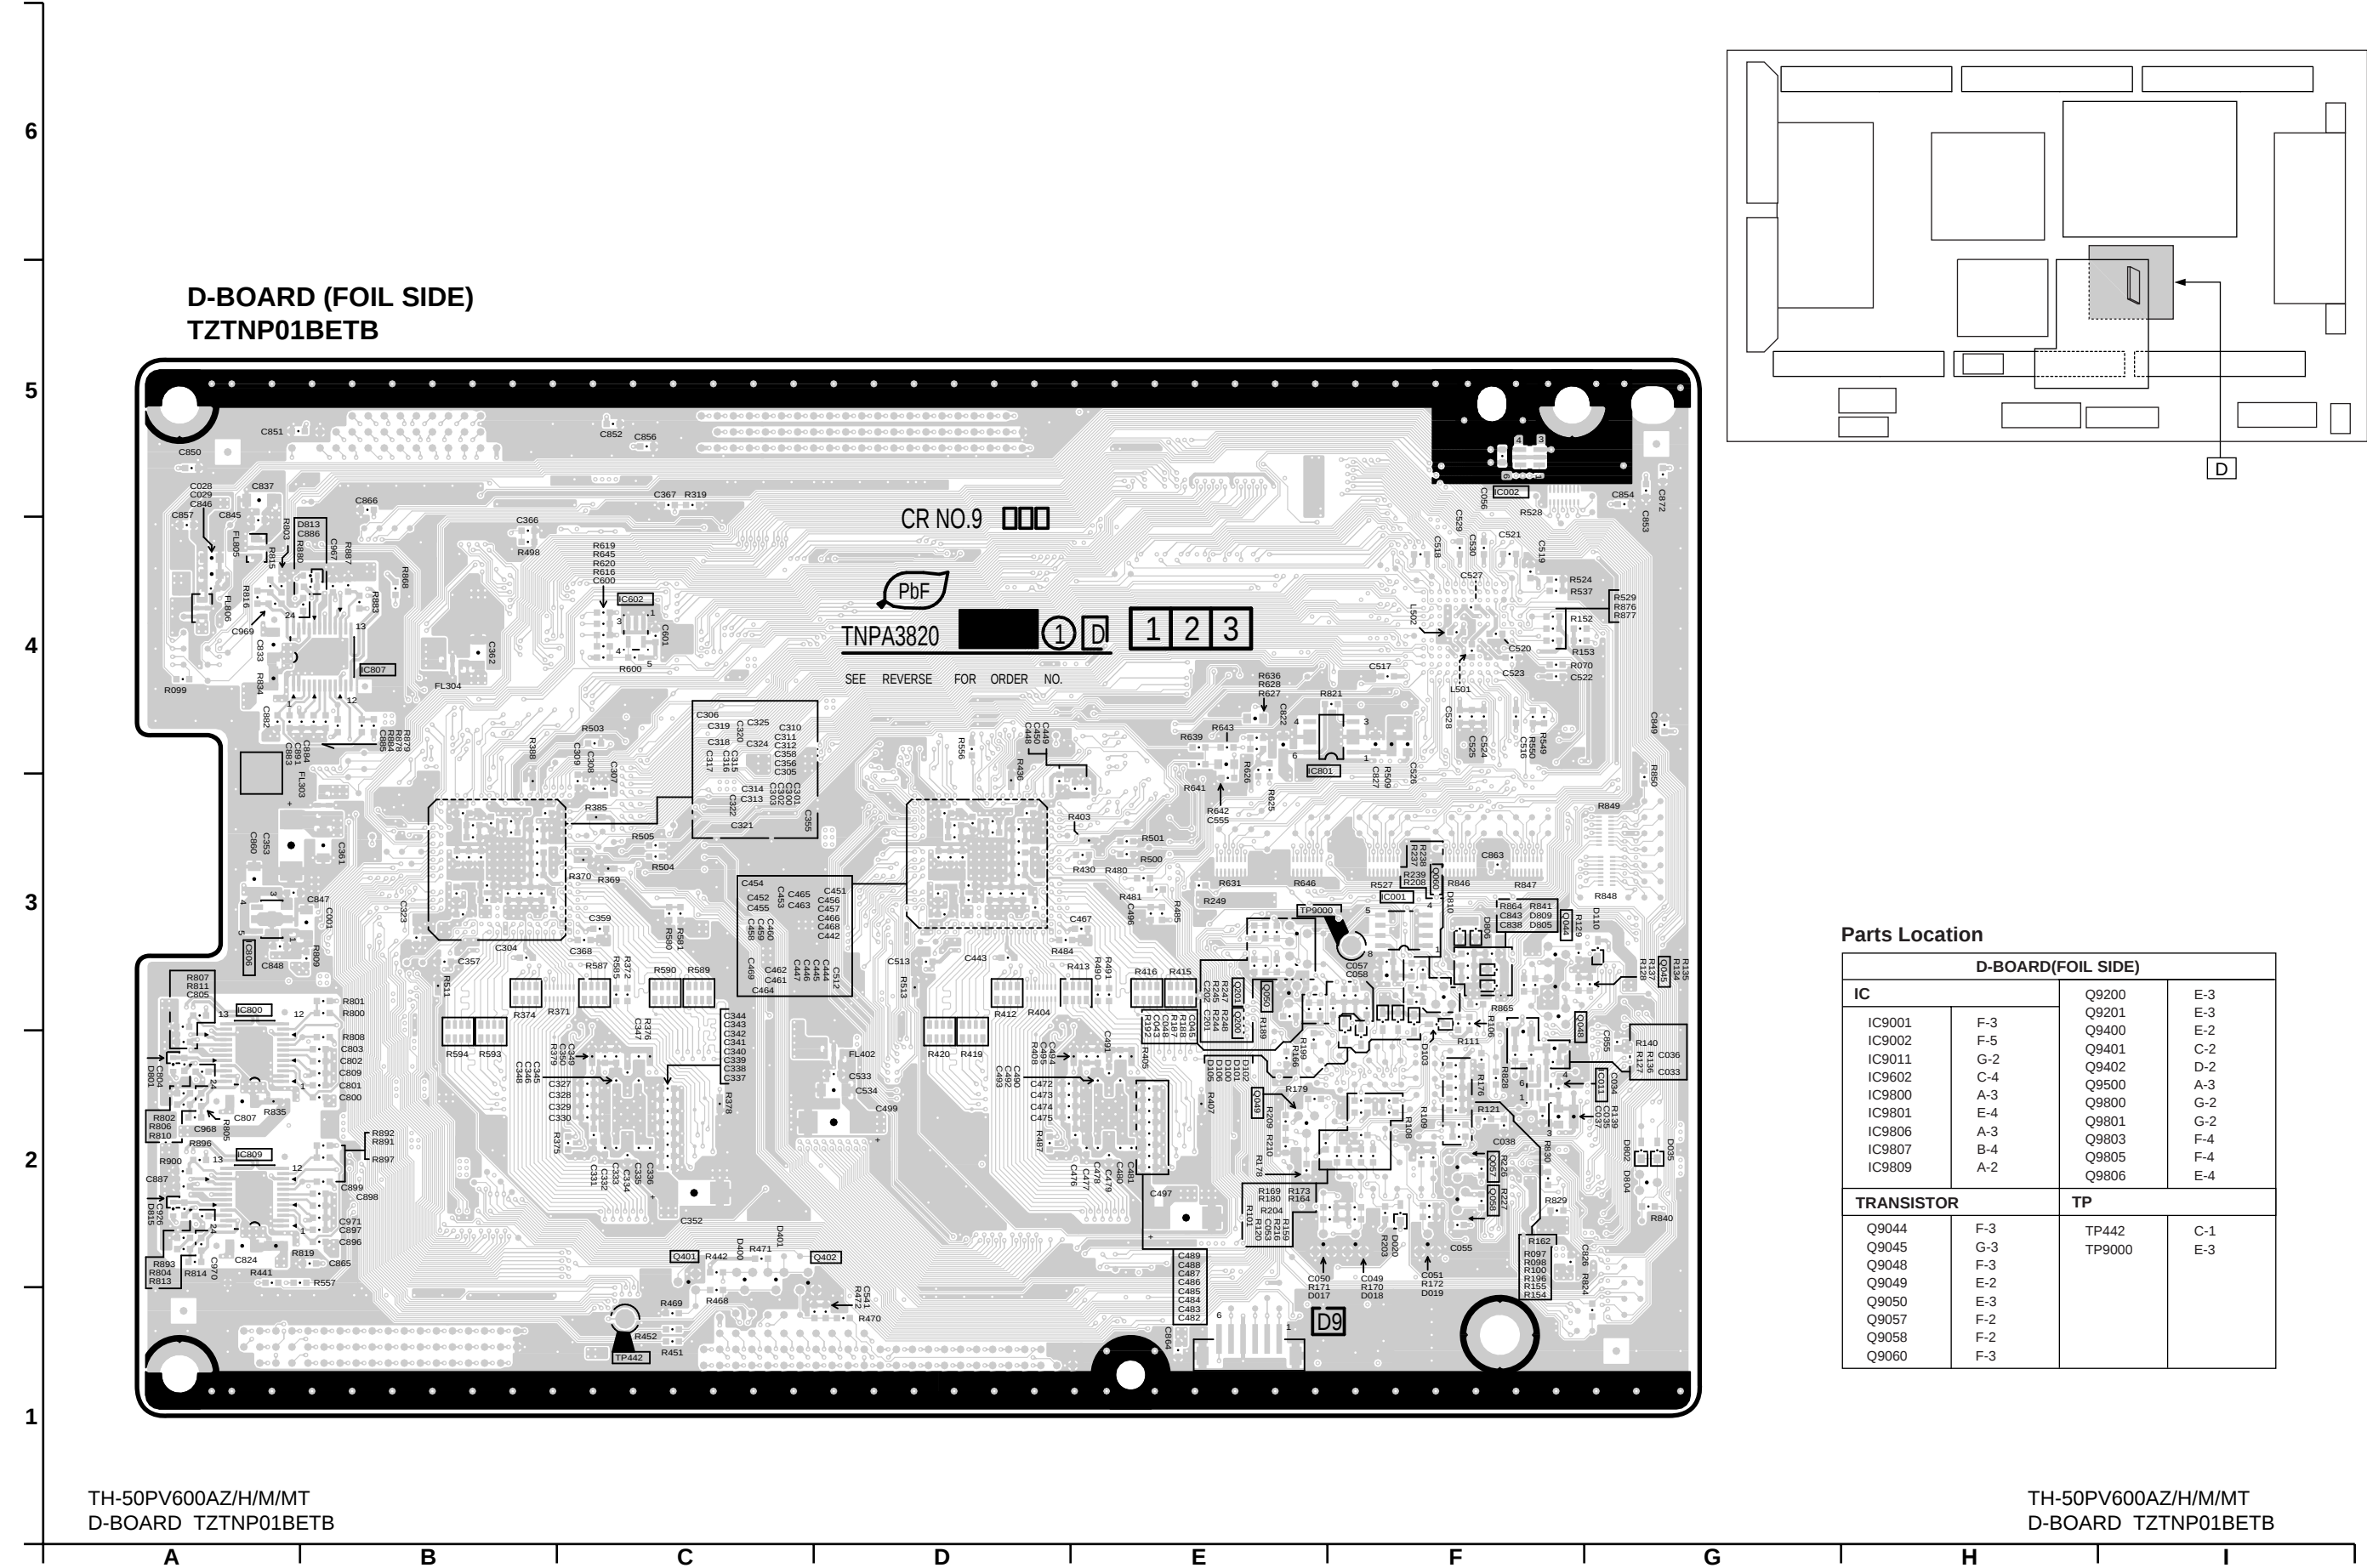

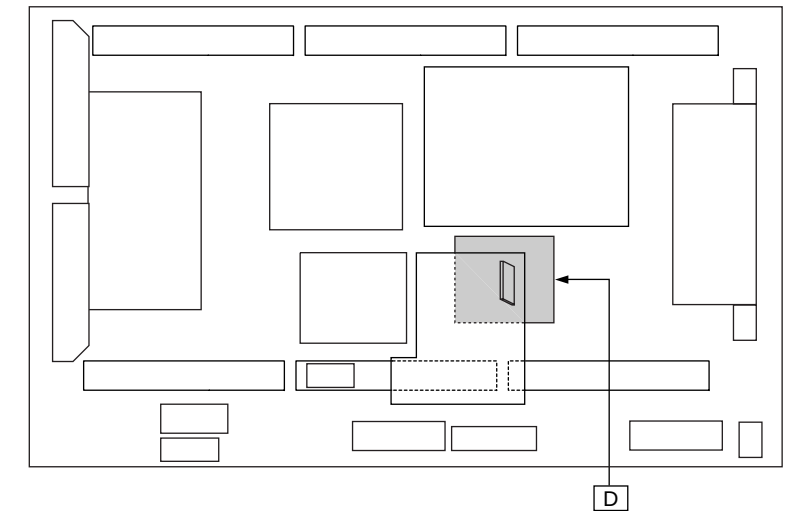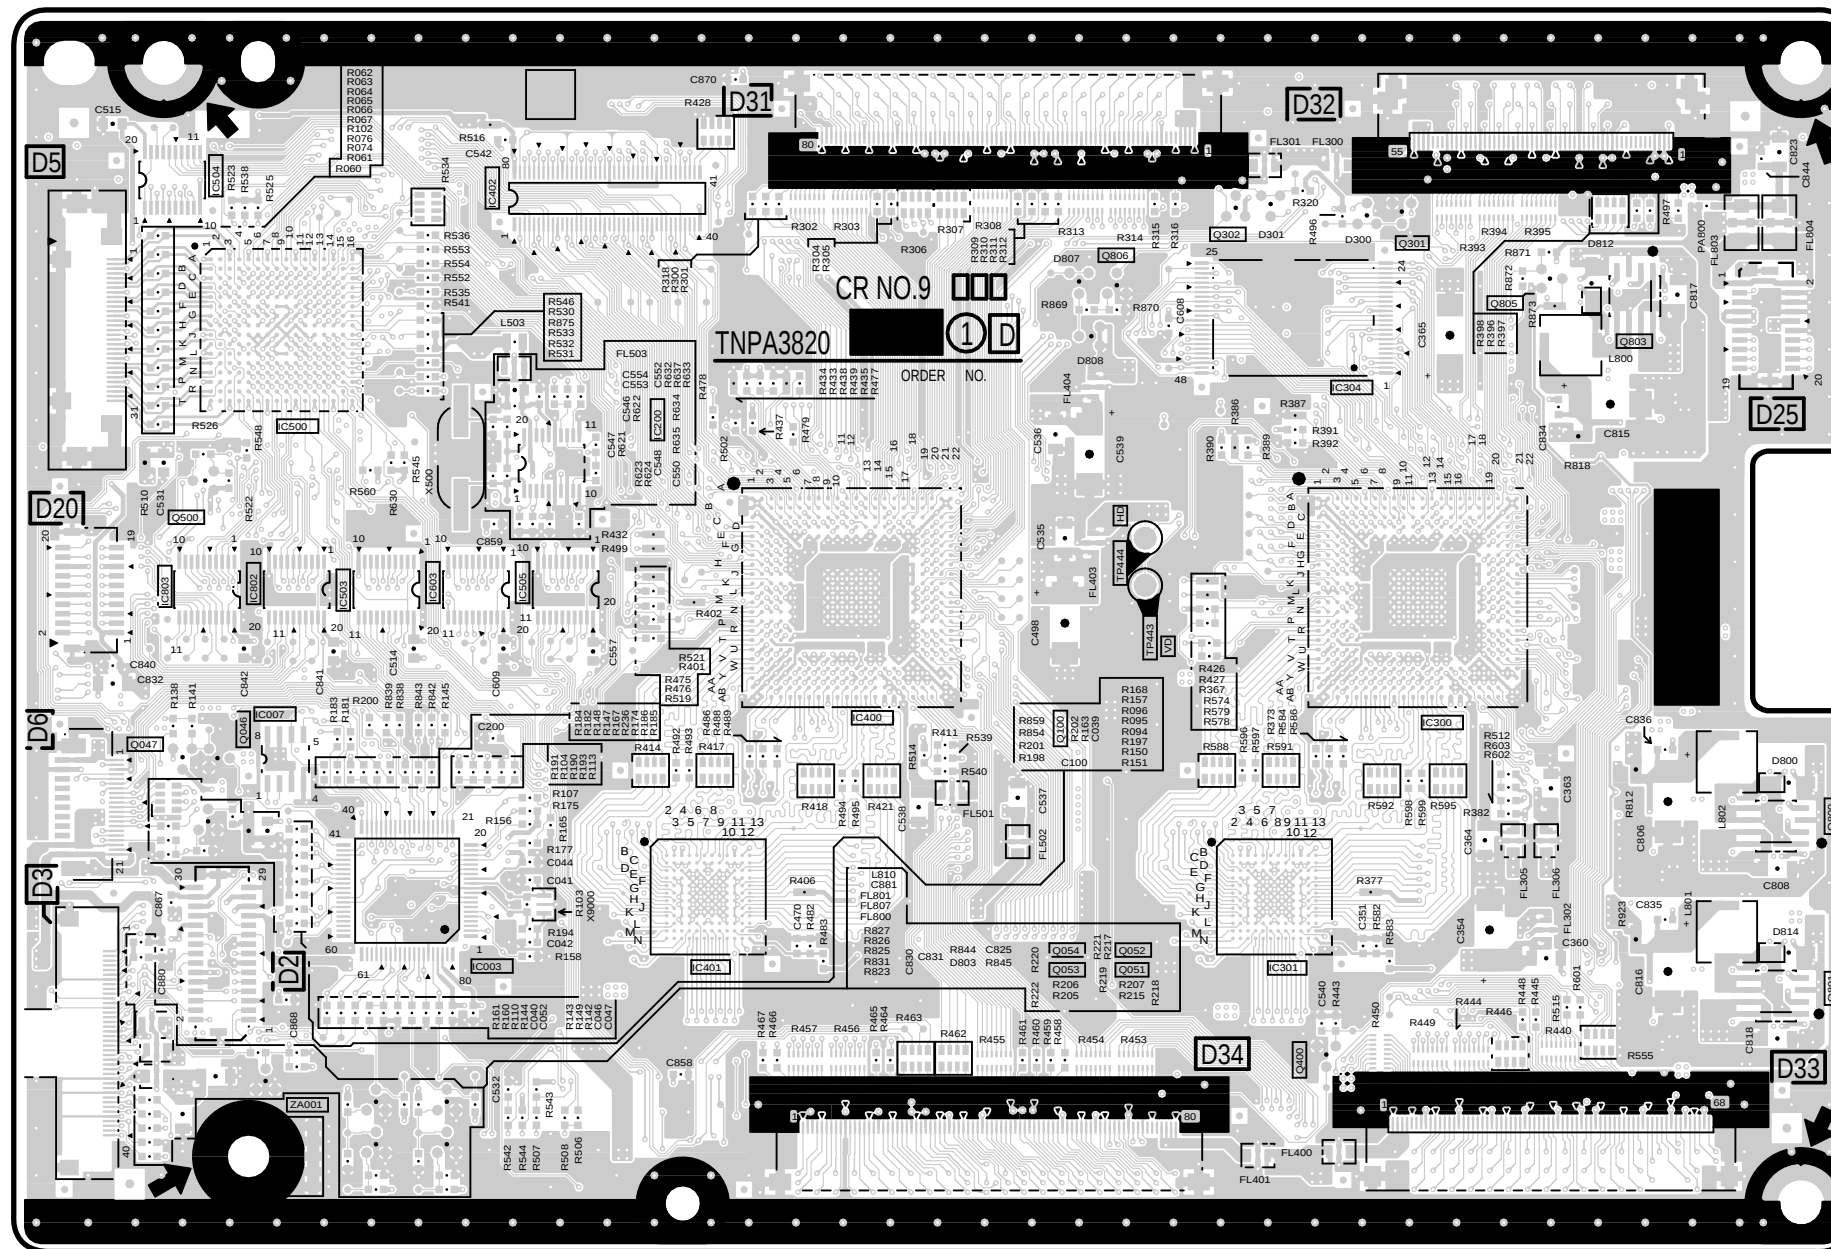


Parts Location


D-BOARD (COMPONENT SIDE)			
IC		TRANSISTOR	
IC9003	B-2	Q9046	B-3
IC9007	B-3	Q9047	A-3
IC9200	C-4	Q9051	E-2
IC9300	F-3	Q9052	E-2
IC9301	E-2	Q9053	D-2
IC9304	E-4	Q9054	D-2
IC9400	D-3	Q9100	D-3
IC9401	C-2	Q9301	E-4
IC9402	B-4	Q9302	E-4
IC9500	B-4	TP	
IC9503	B-3		
IC9504	B-5	TP443	E-3
IC9505	C-3	TP444	E-3
IC9603	B-3		
IC9802	B-3		
IC9803	A-3		




13.9. C2-Board

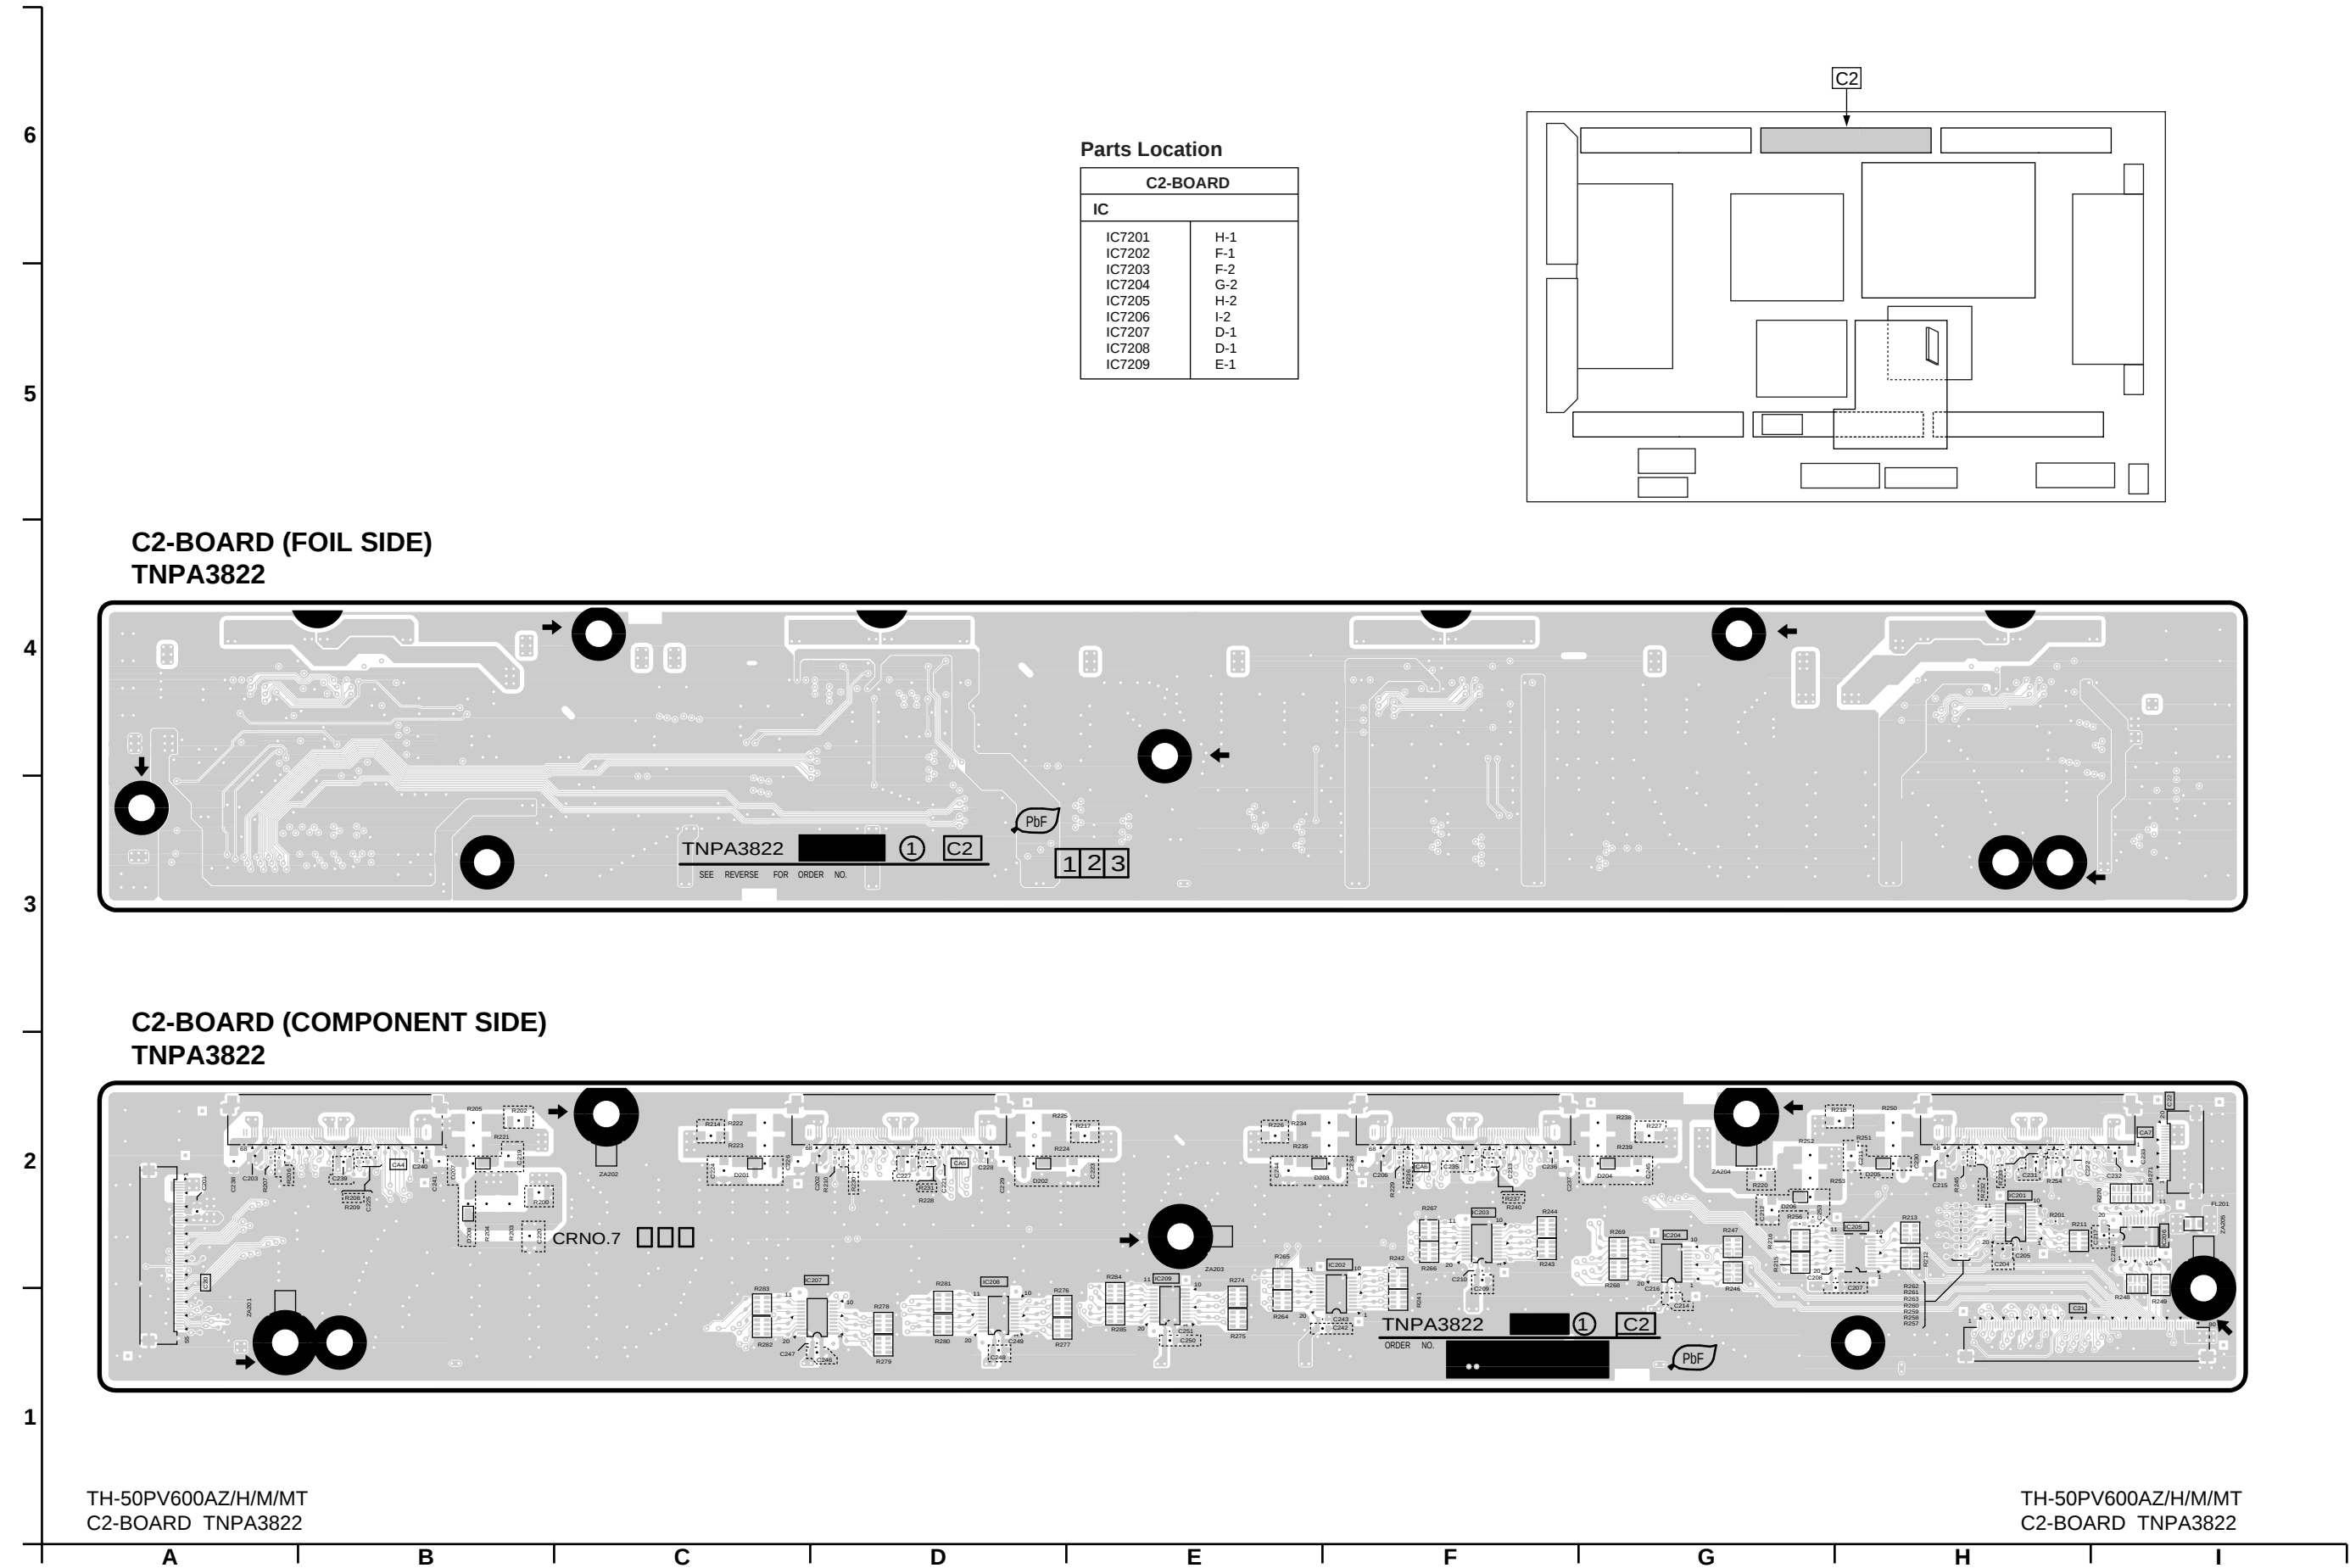


13.10. C3-Board

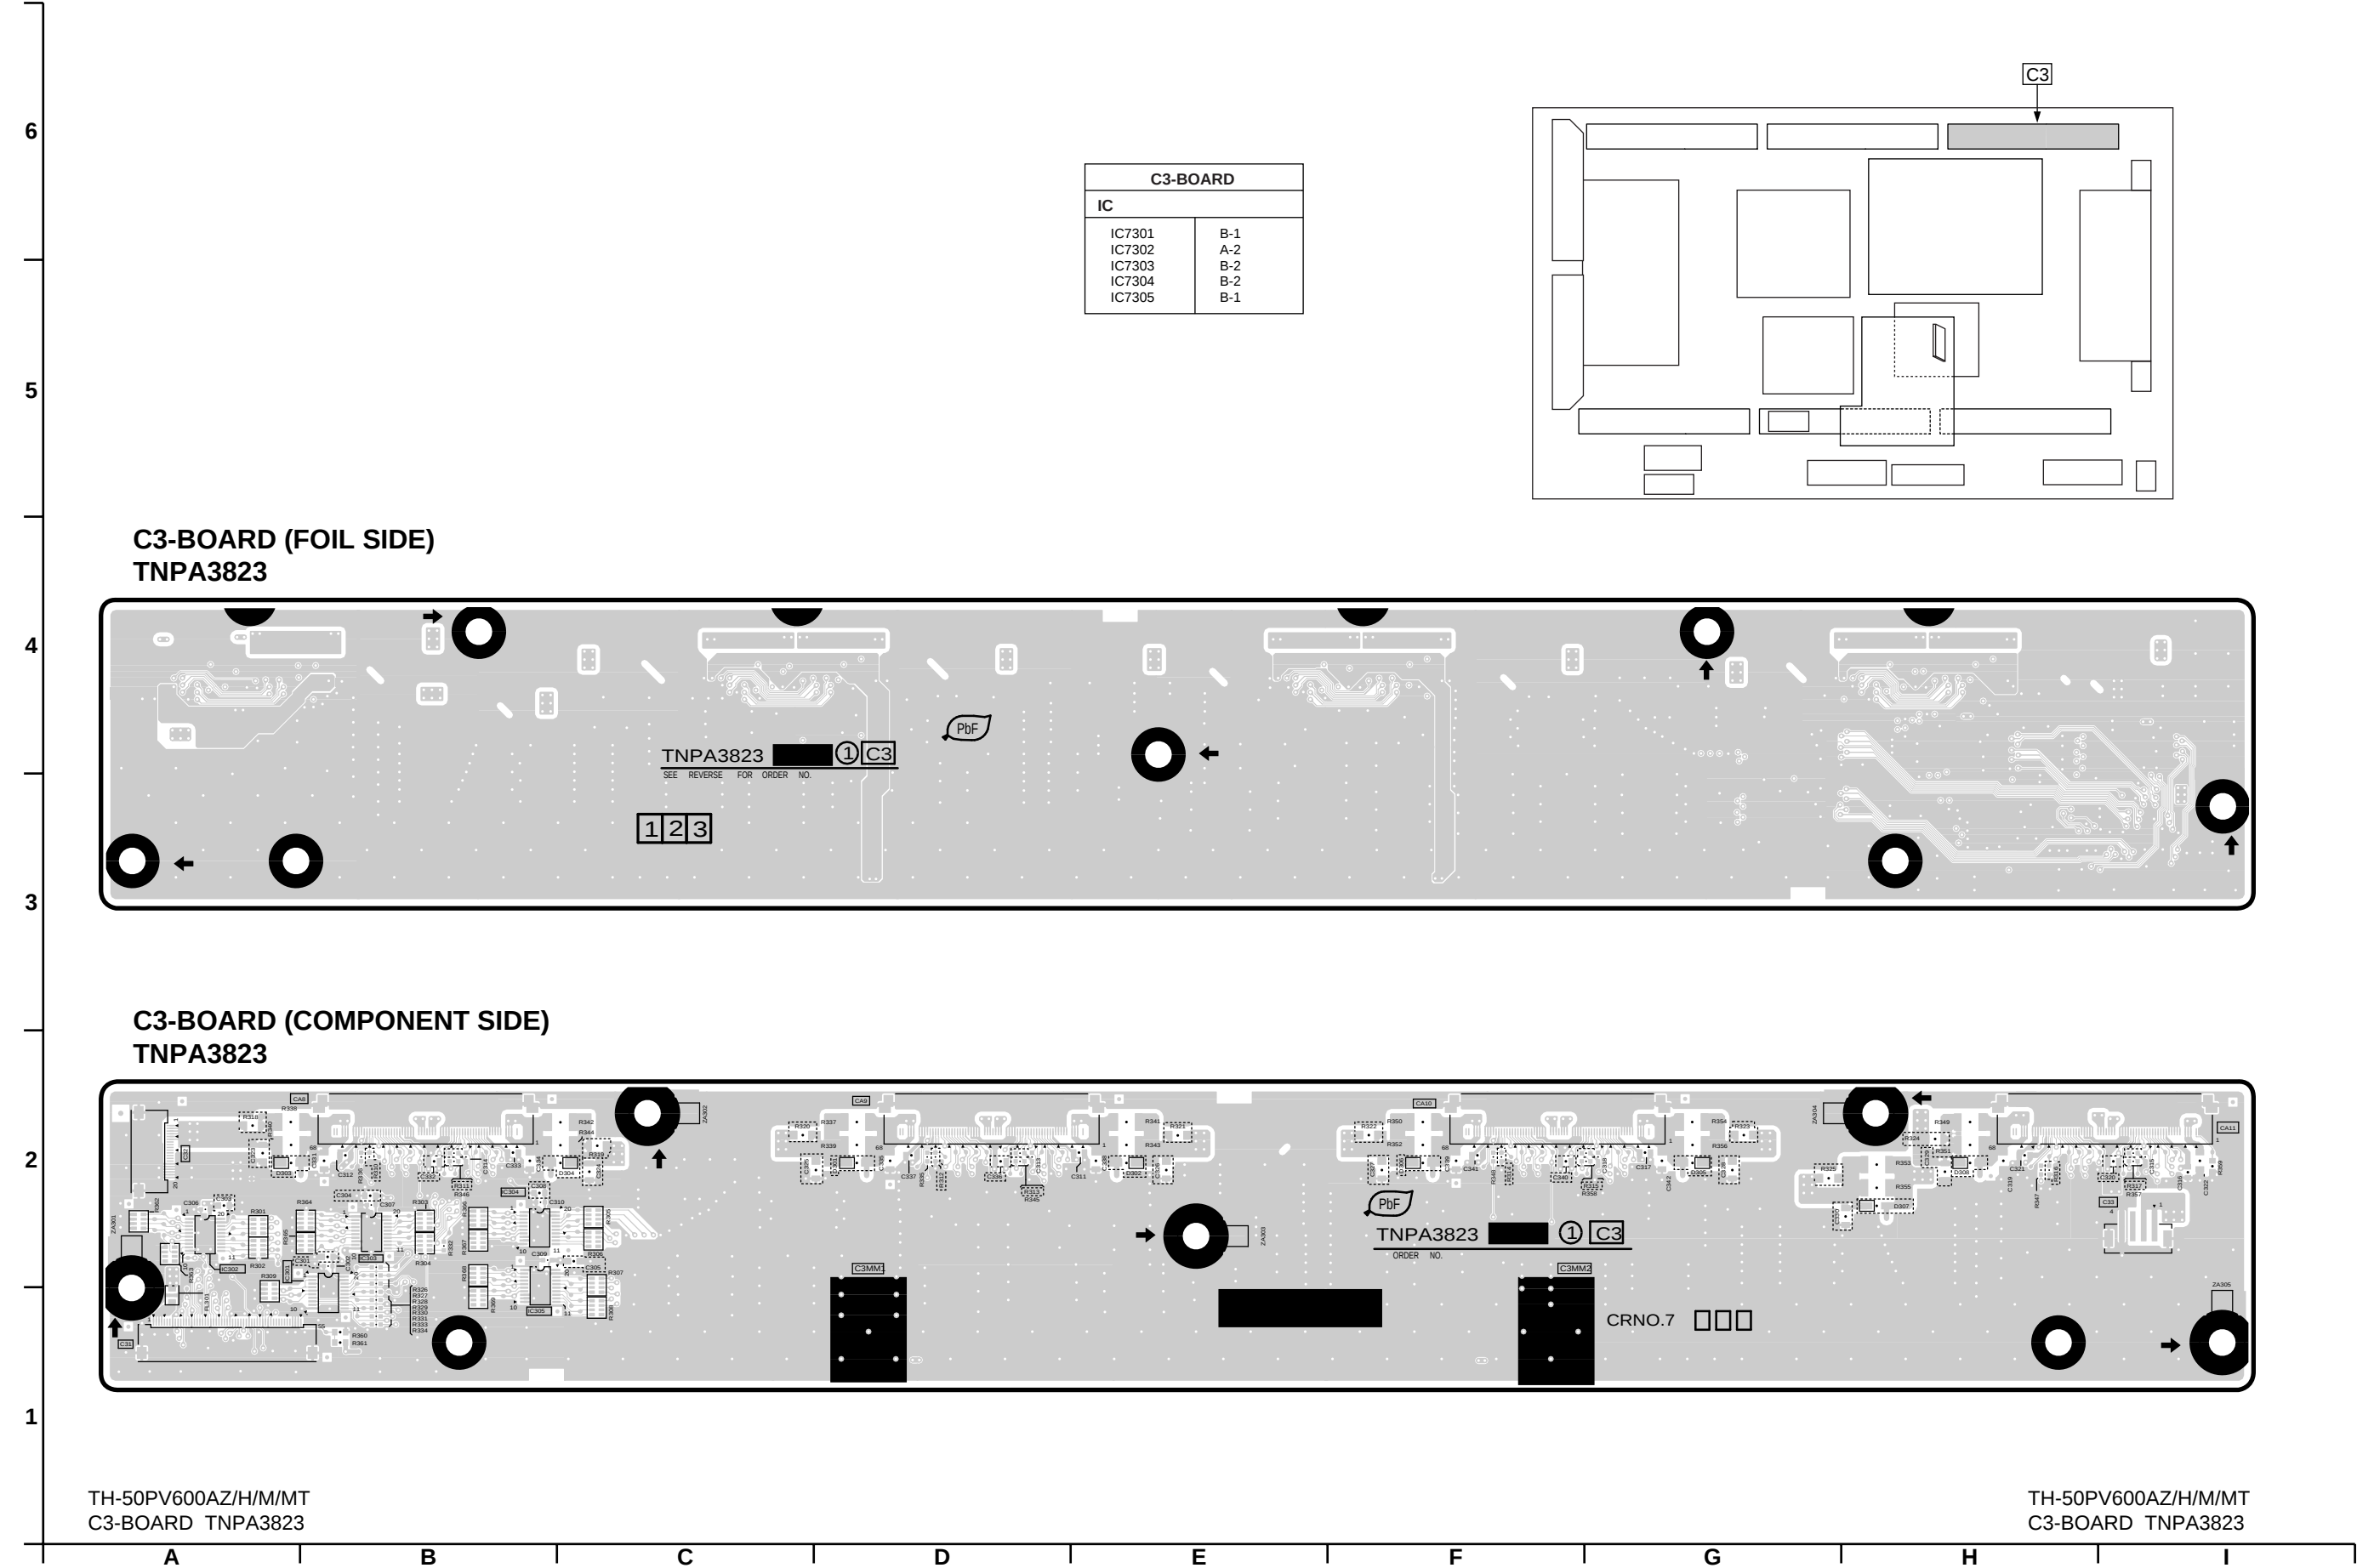


13.11. C4-Board

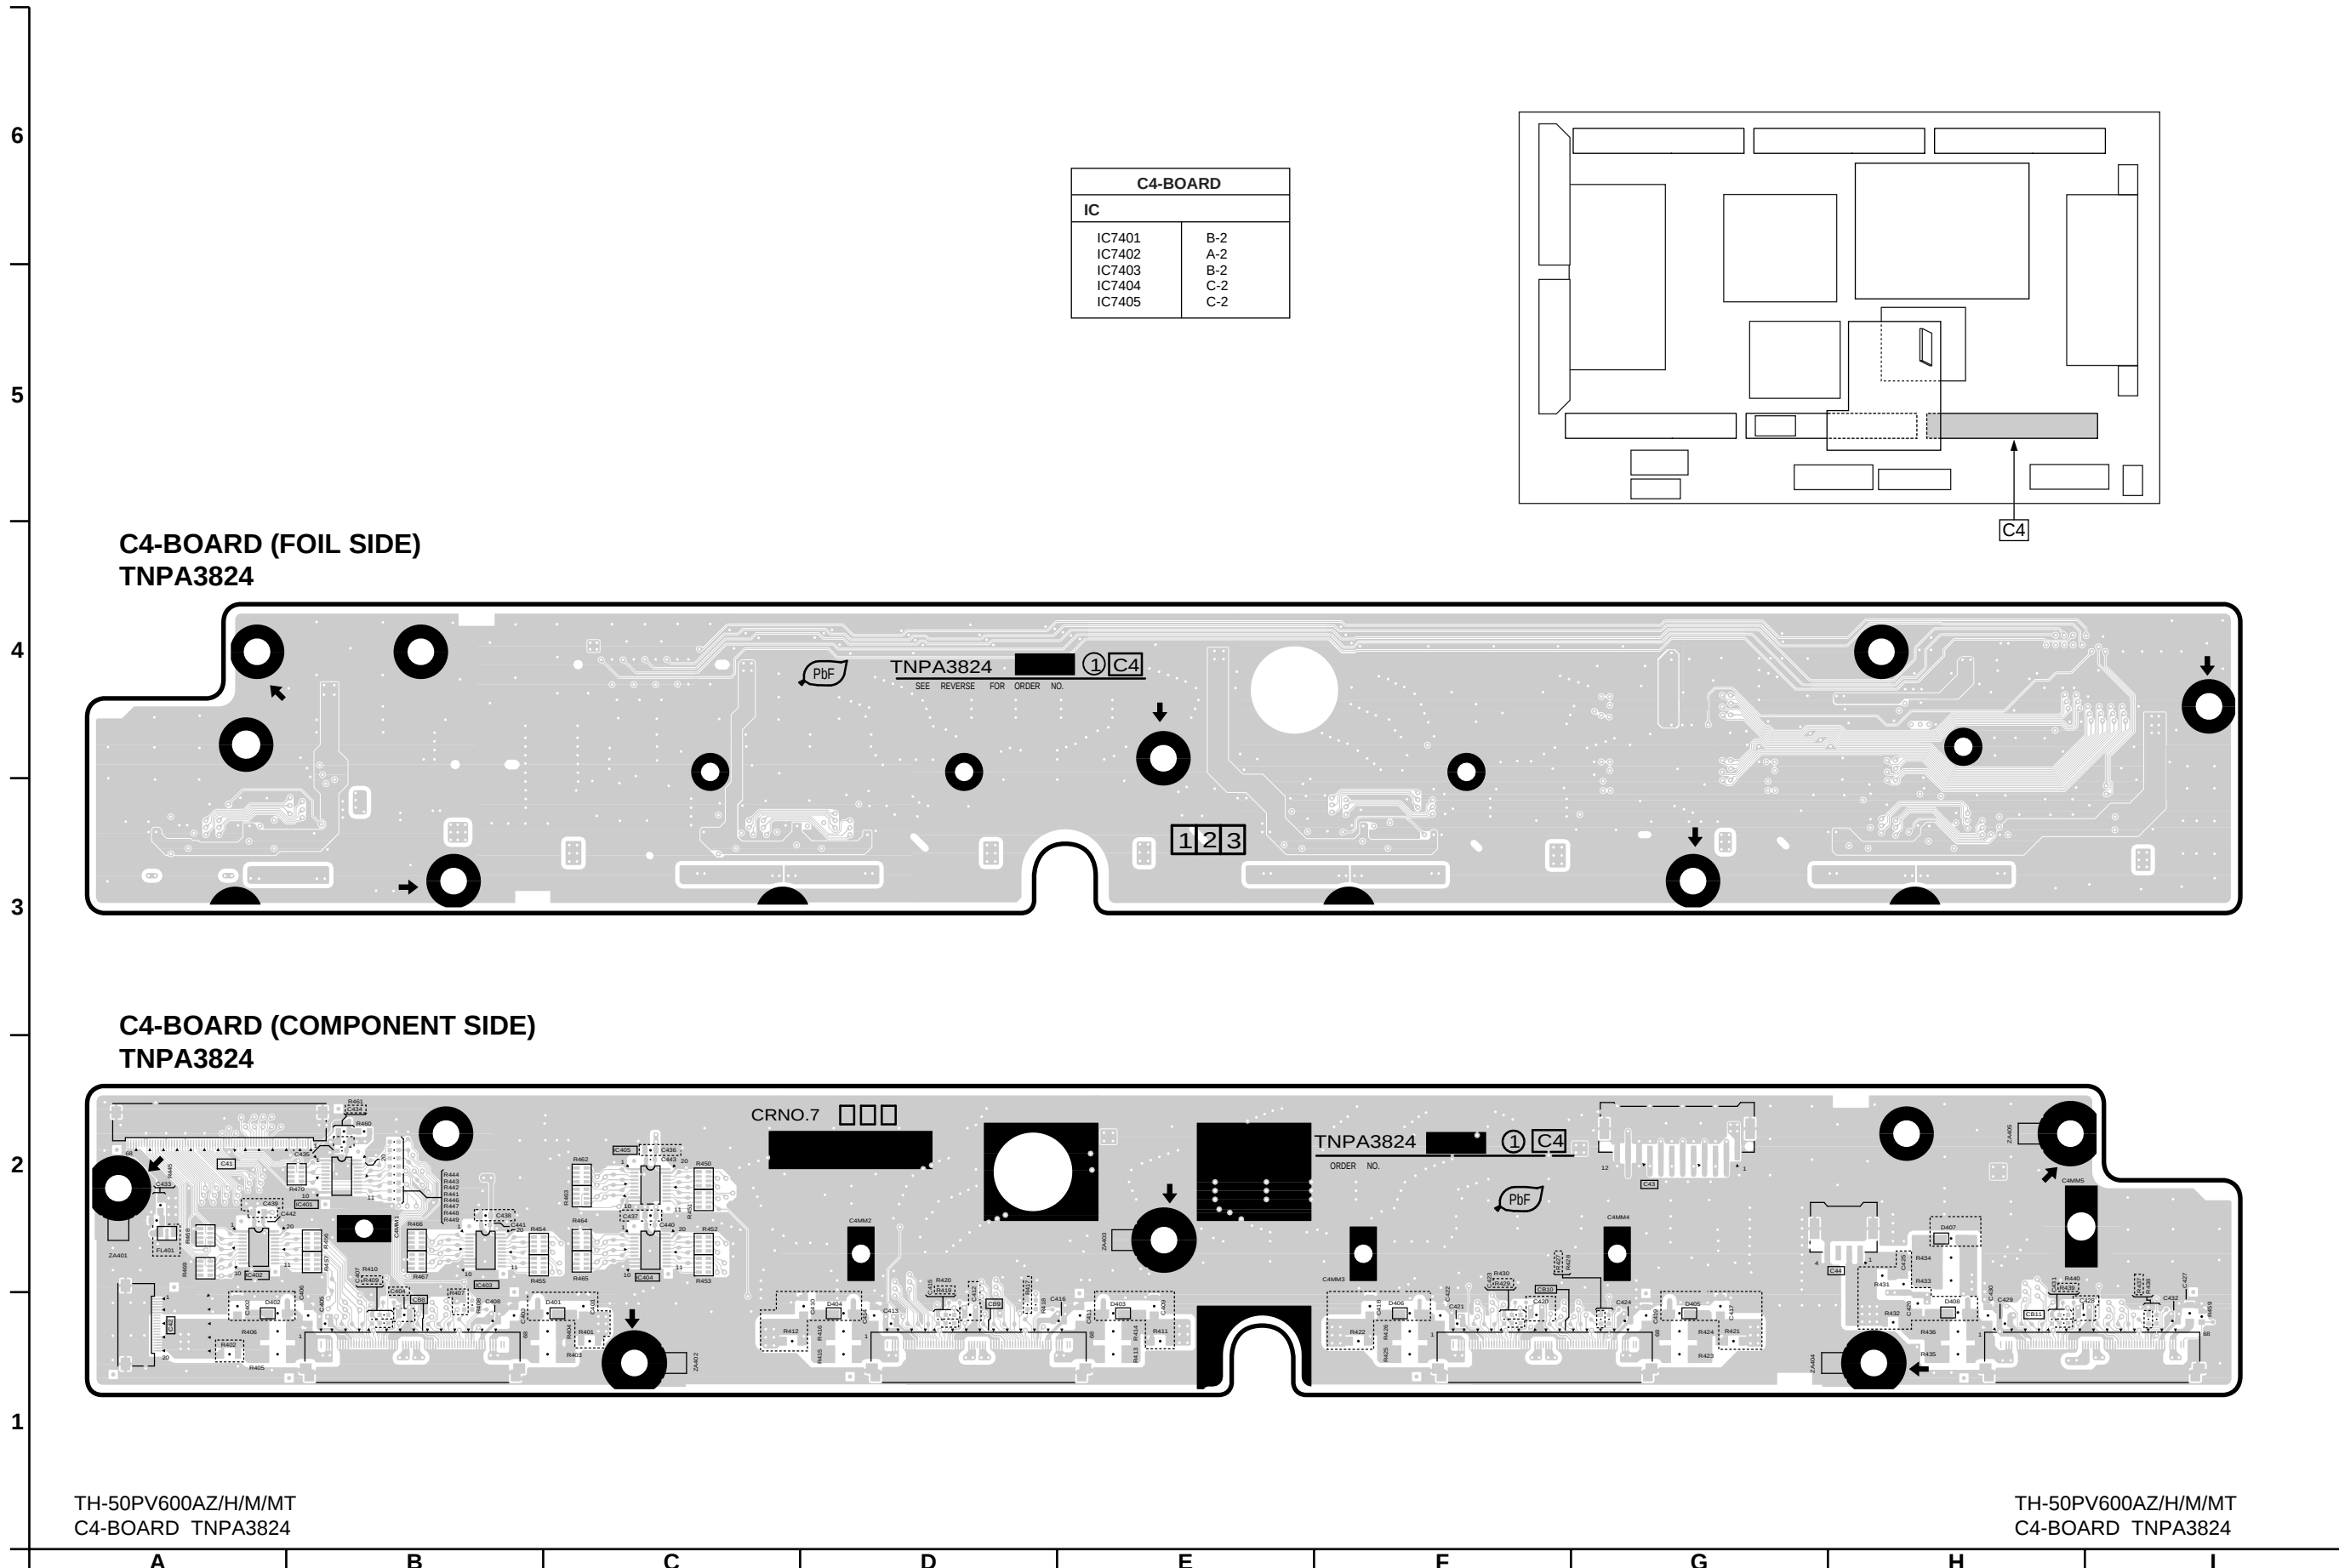


13.13. C6-Board

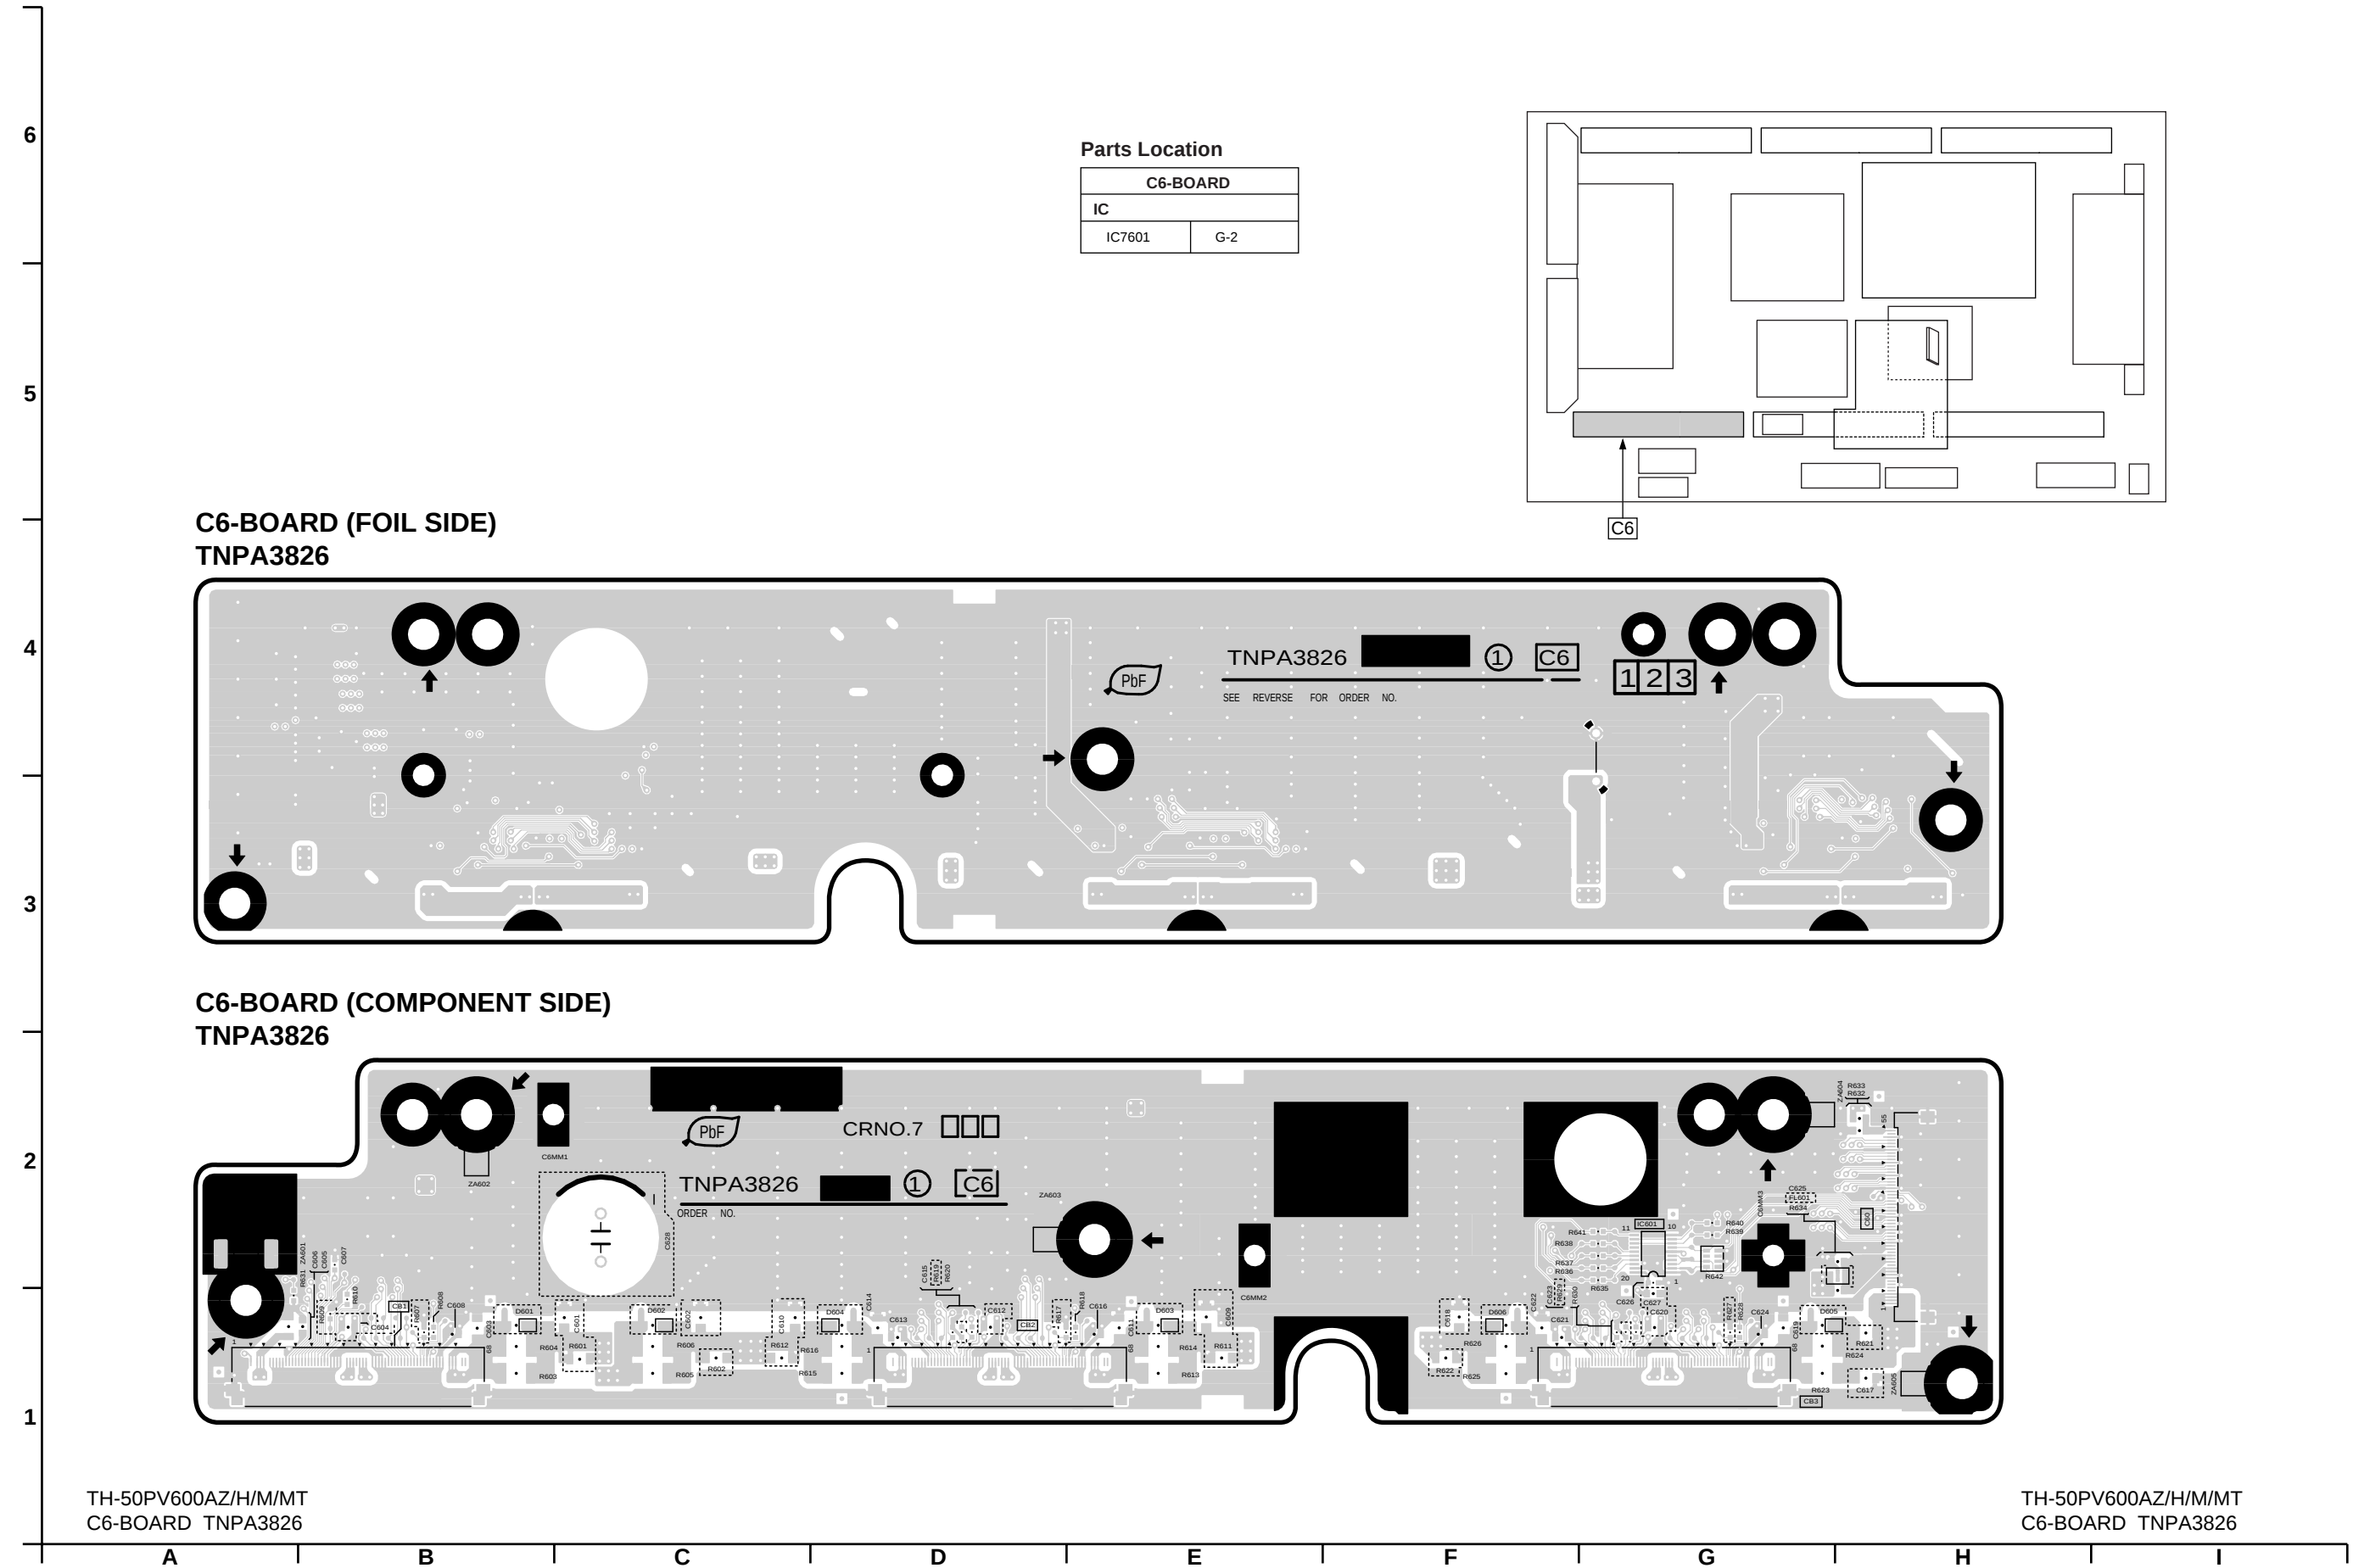

13.14. SC-Board

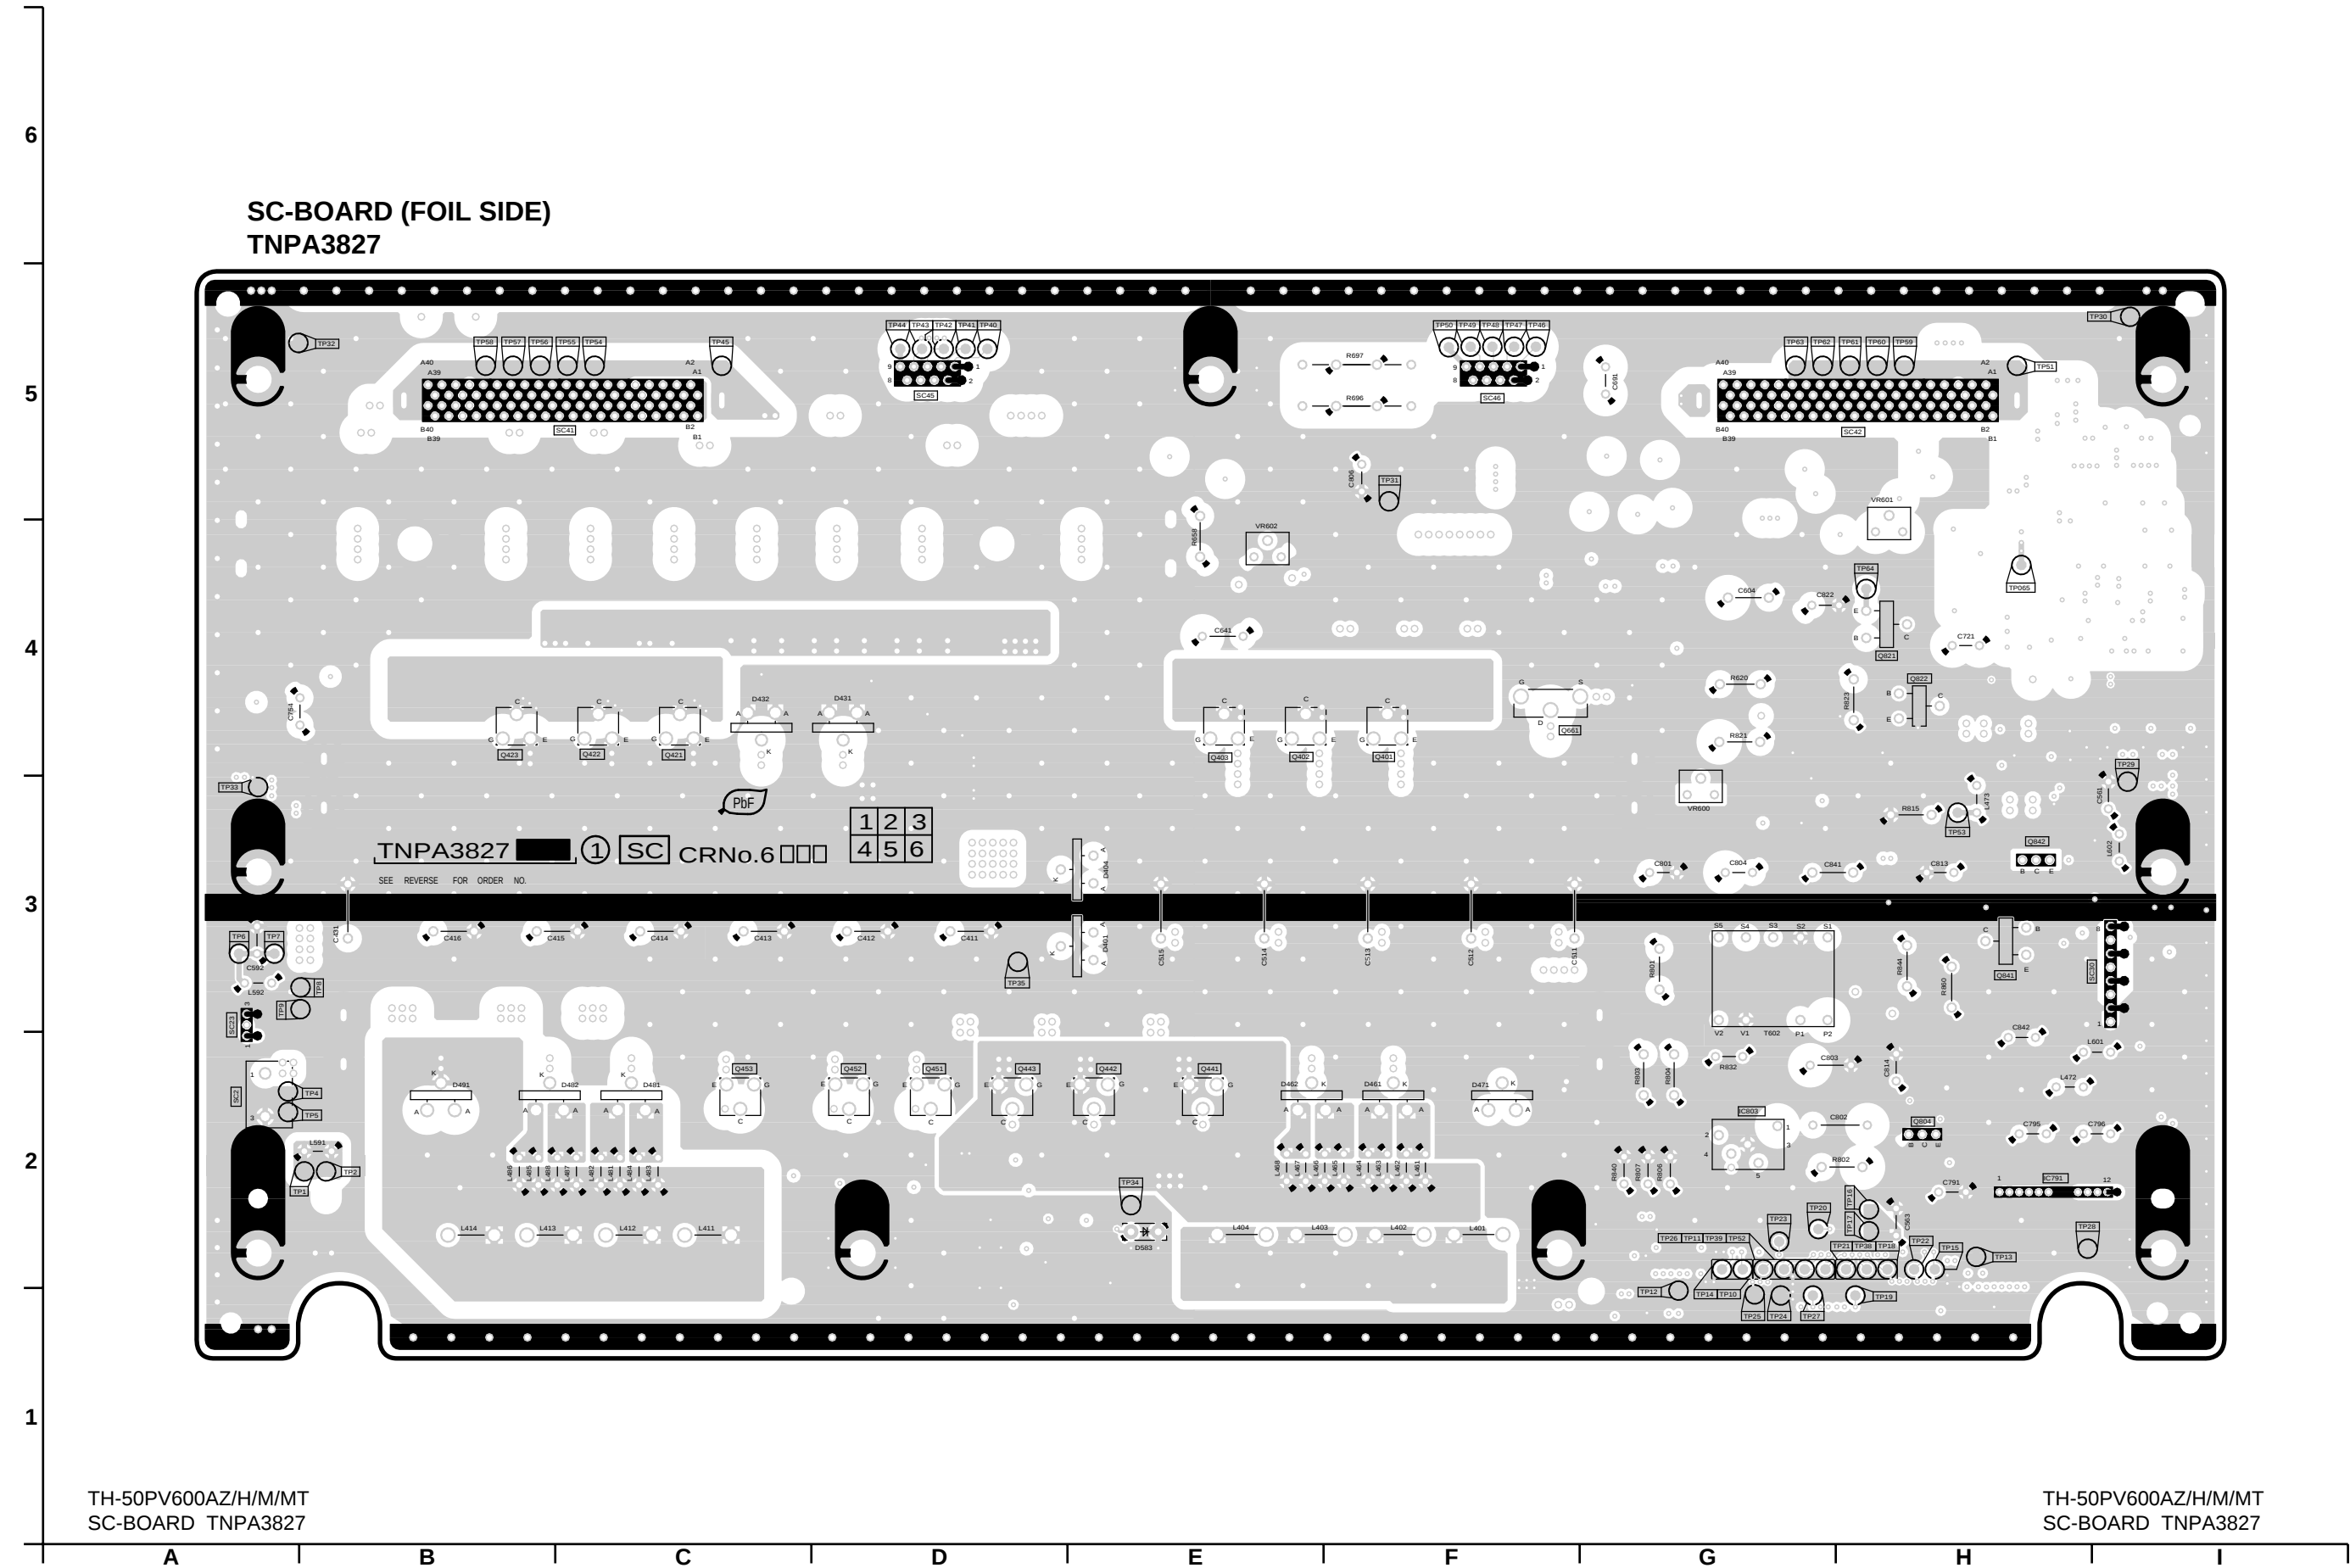

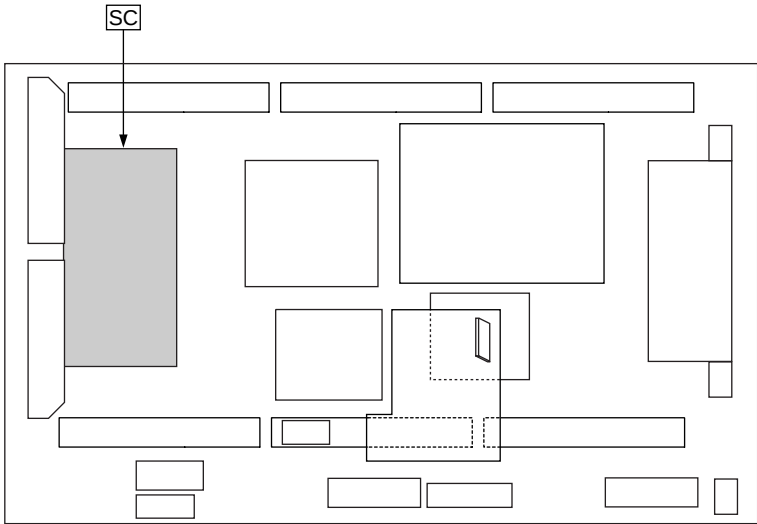

Parts Location

SC-BOARD (FOIL SIDE)					
IC		TP		TP41	D-5
IC6791	H-2	TP1	B-2		
IC6803	G-2	TP2	B-2	TP42	D-5
TRANSISTOR		TP4	A-2	TP43	D-5
		TP5	A-2	TP44	D-5
Q6401	F-4	TP6	A-3	TP45	C-5
Q6402	E-4	TP7	A-3	TP46	F-5
Q6403	E-4	TP8	B-3	TP47	F-5
Q6421	C-4	TP9	A-3	TP48	F-5
Q6422	C-4	TP10	G-1	TP49	F-5
Q6423	B-4	TP11	G-2	TP50	F-5
Q6441	E-2	TP12	G-1	TP51	H-5
Q6442	E-2	TP13	H-2	TP52	G-2
Q6443	D-2	TP14	G-1	TP53	H-3
Q6451	D-2	TP15	H-2	TP54	C-5
Q6452	D-2	TP16	H-2	TP55	C-5
Q6453	C-2	TP17	H-2	TP56	B-5
Q6804	H-2	TP18	H-2	TP59	H-5
Q6821	H-4	TP19	H-1	TP60	H-5
Q6822	H-4	TP20	G-2	TP61	H-5
Q6841	H-3	TP21	H-2	TP62	G-5
Q6842	H-3	TP22	H-2	TP63	G-5
		TP23	G-2	TP64	H-4
		TP24	G-1	TP65	H-4
		TP25	G-1	TP67	B-5
		TP26	G-2	TP68	B-5
		TP27	G-1	VOLUME	
		TP28	H-2	VR6600	G-3
		TP29	I-4	VR6601	H-5
		TP30	I-5	VR6602	E-4
		TP31	F-5		
		TP32	B-5		
		TP33	A-3		
		TP34	E-2		
		TP35	D-3		
		TP38	H-2		
		TP39	G-2		
		TP40	D-5		


TH-50PV600AZ/H/M/MT
SC-BOARD PARTS LOCATION

Parts Location

SC-BOARD (COMPONENT SIDE)							
IC		PHOTO COUPLER		Q6601	C-5	TP	
IC6471	B-5	PC6480	B-4			TP15V	I-3
IC6472	B-3	PC6701	A-4	Q6602	C-4	TPSC1	D-5
IC6501	F-4	PC6702	A-4	Q6621	B-4	TPSOS6	B-2
IC6521	F-2	PC6703	A-4	Q6641	F-5	TPSOS7	B-3
IC6561	B-1	PC6704	I-4	Q6642	F-5	TPVAD	B-2
IC6562	C-1	PC6705	C-4	Q6643	G-5	TPVSCN	B-3
IC6581	F-2	PC6760	I-4	Q6644	G-5	TPVSET	C-4
IC6601	B-5	PC6861	B-4	Q6645	G-5	TPVSET2	B-3
IC6602	A-4	PC6871	A-2	Q6646	H-5	TPVSUS	H-2
IC6610	B-4	TRANSISTOR		Q6647	H-5	VOLUME	
IC6671	D-4			Q6648	H-5	VR6600	C-3
IC6681	C-4	Q6401	D-4	Q6661	D-4	VR6601	B-4
IC6682	A-4	Q6402	E-4	Q6662	E-5	VR6602	E-4
IC6721	A-4	Q6403	E-4	Q6663	E-4		
IC6722	A-4	Q6421	G-4	Q6671	D-4		
IC6724	B-5	Q6422	H-4	Q6672	D-4		
IC6725	B-5	Q6423	H-4	Q6673	D-4		
IC6751	I-4	Q6441	E-2	Q6680	D-4		
IC6752	H-4	Q6442	F-2	Q6681	D-4		
IC6753	I-4	Q6443	F-2	Q6682	D-5		
IC6771	C-4	Q6451	F-2	Q6691	D-5		
IC6772	E-5	Q6452	F-2	Q6742	A-4		
IC6773	D-4	Q6453	G-2	Q6743	B-5		
IC6774	C-4	Q6471	B-3	Q6744	A-4		
IC6791	B-2	Q6511	F-4	Q6762	H-4		
IC6801	C-3	Q6512	E-4	Q6781	E-5		
IC6802	B-3	Q6516	G-4	Q6782	E-5		
IC6803	C-2	Q6517	G-4	Q6791	A-3		
IC6821	B-4	Q6531	E-2	Q6803	C-3		
IC6841	B-3	Q6532	F-2	Q6804	B-2		
IC6861	B-4	Q6551	F-2	Q6821	G-4		
IC6871	A-3	Q6552	F-2	Q6822	B-4		
		Q6581	E-2	Q6824	C-4		
				Q6841	B-3		
				Q6842	B-3		

TH-50PV600AZ/H/M/MT
SC-BOARD PARTS LOCATION


SC-BOARD (COMPONENT SIDE)
TNPA3827

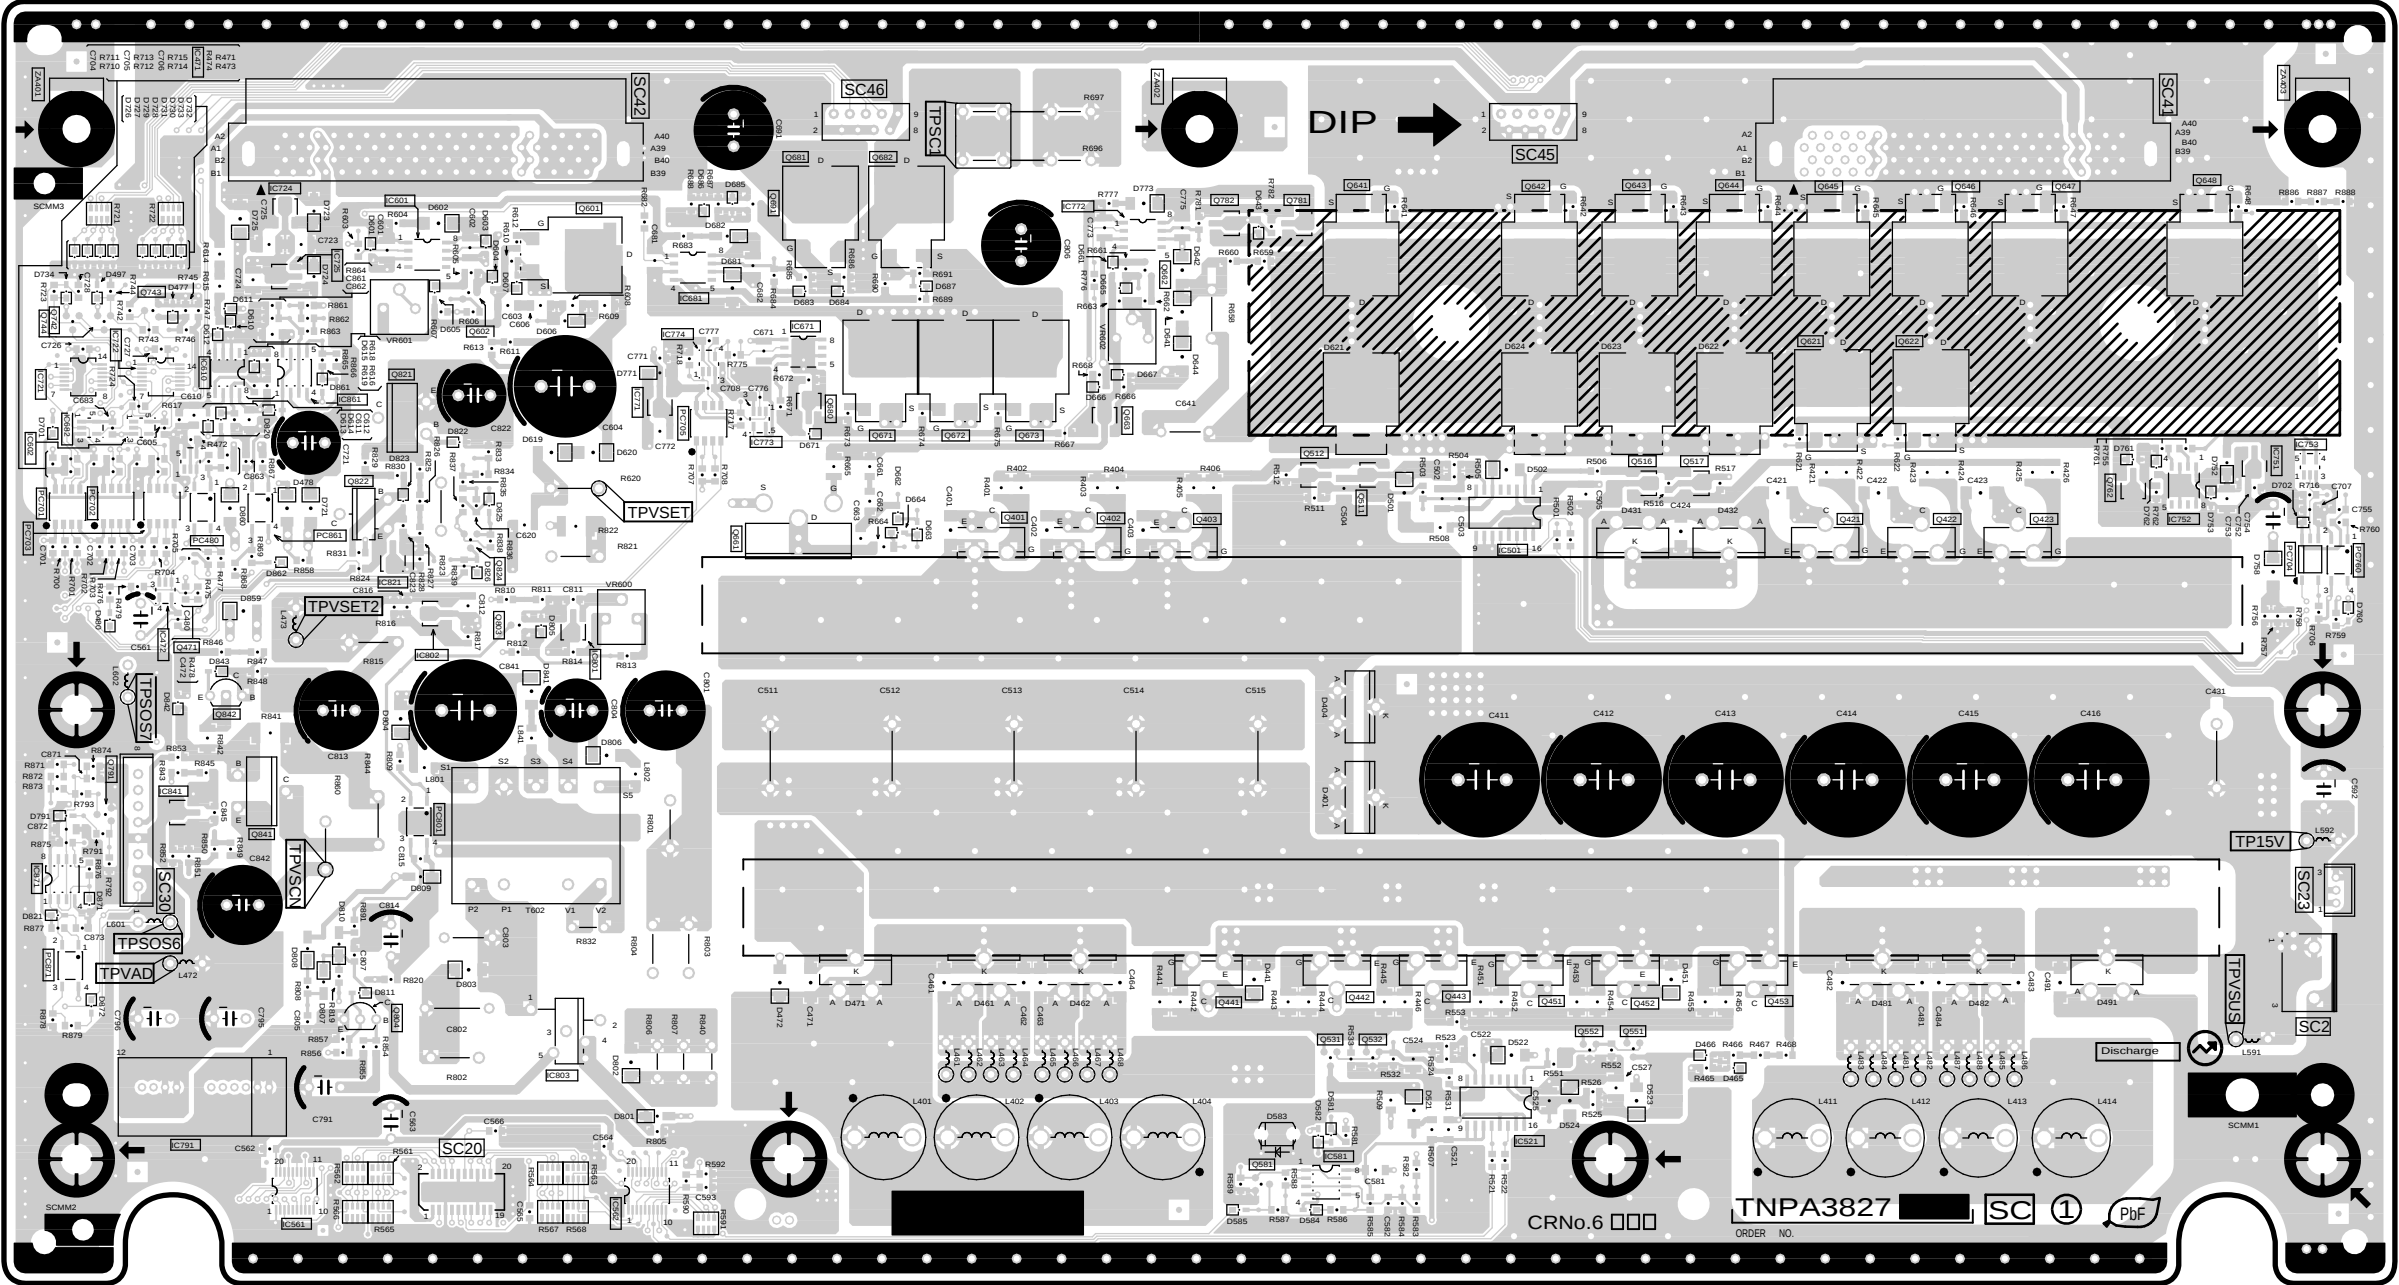


TH-50PV600AZ/H/M/MT
SC-BOARD TNPA3827

TH-50PV600AZ/H/M/MT
SC-BOARD TNPA3827


13.15. SU-Board

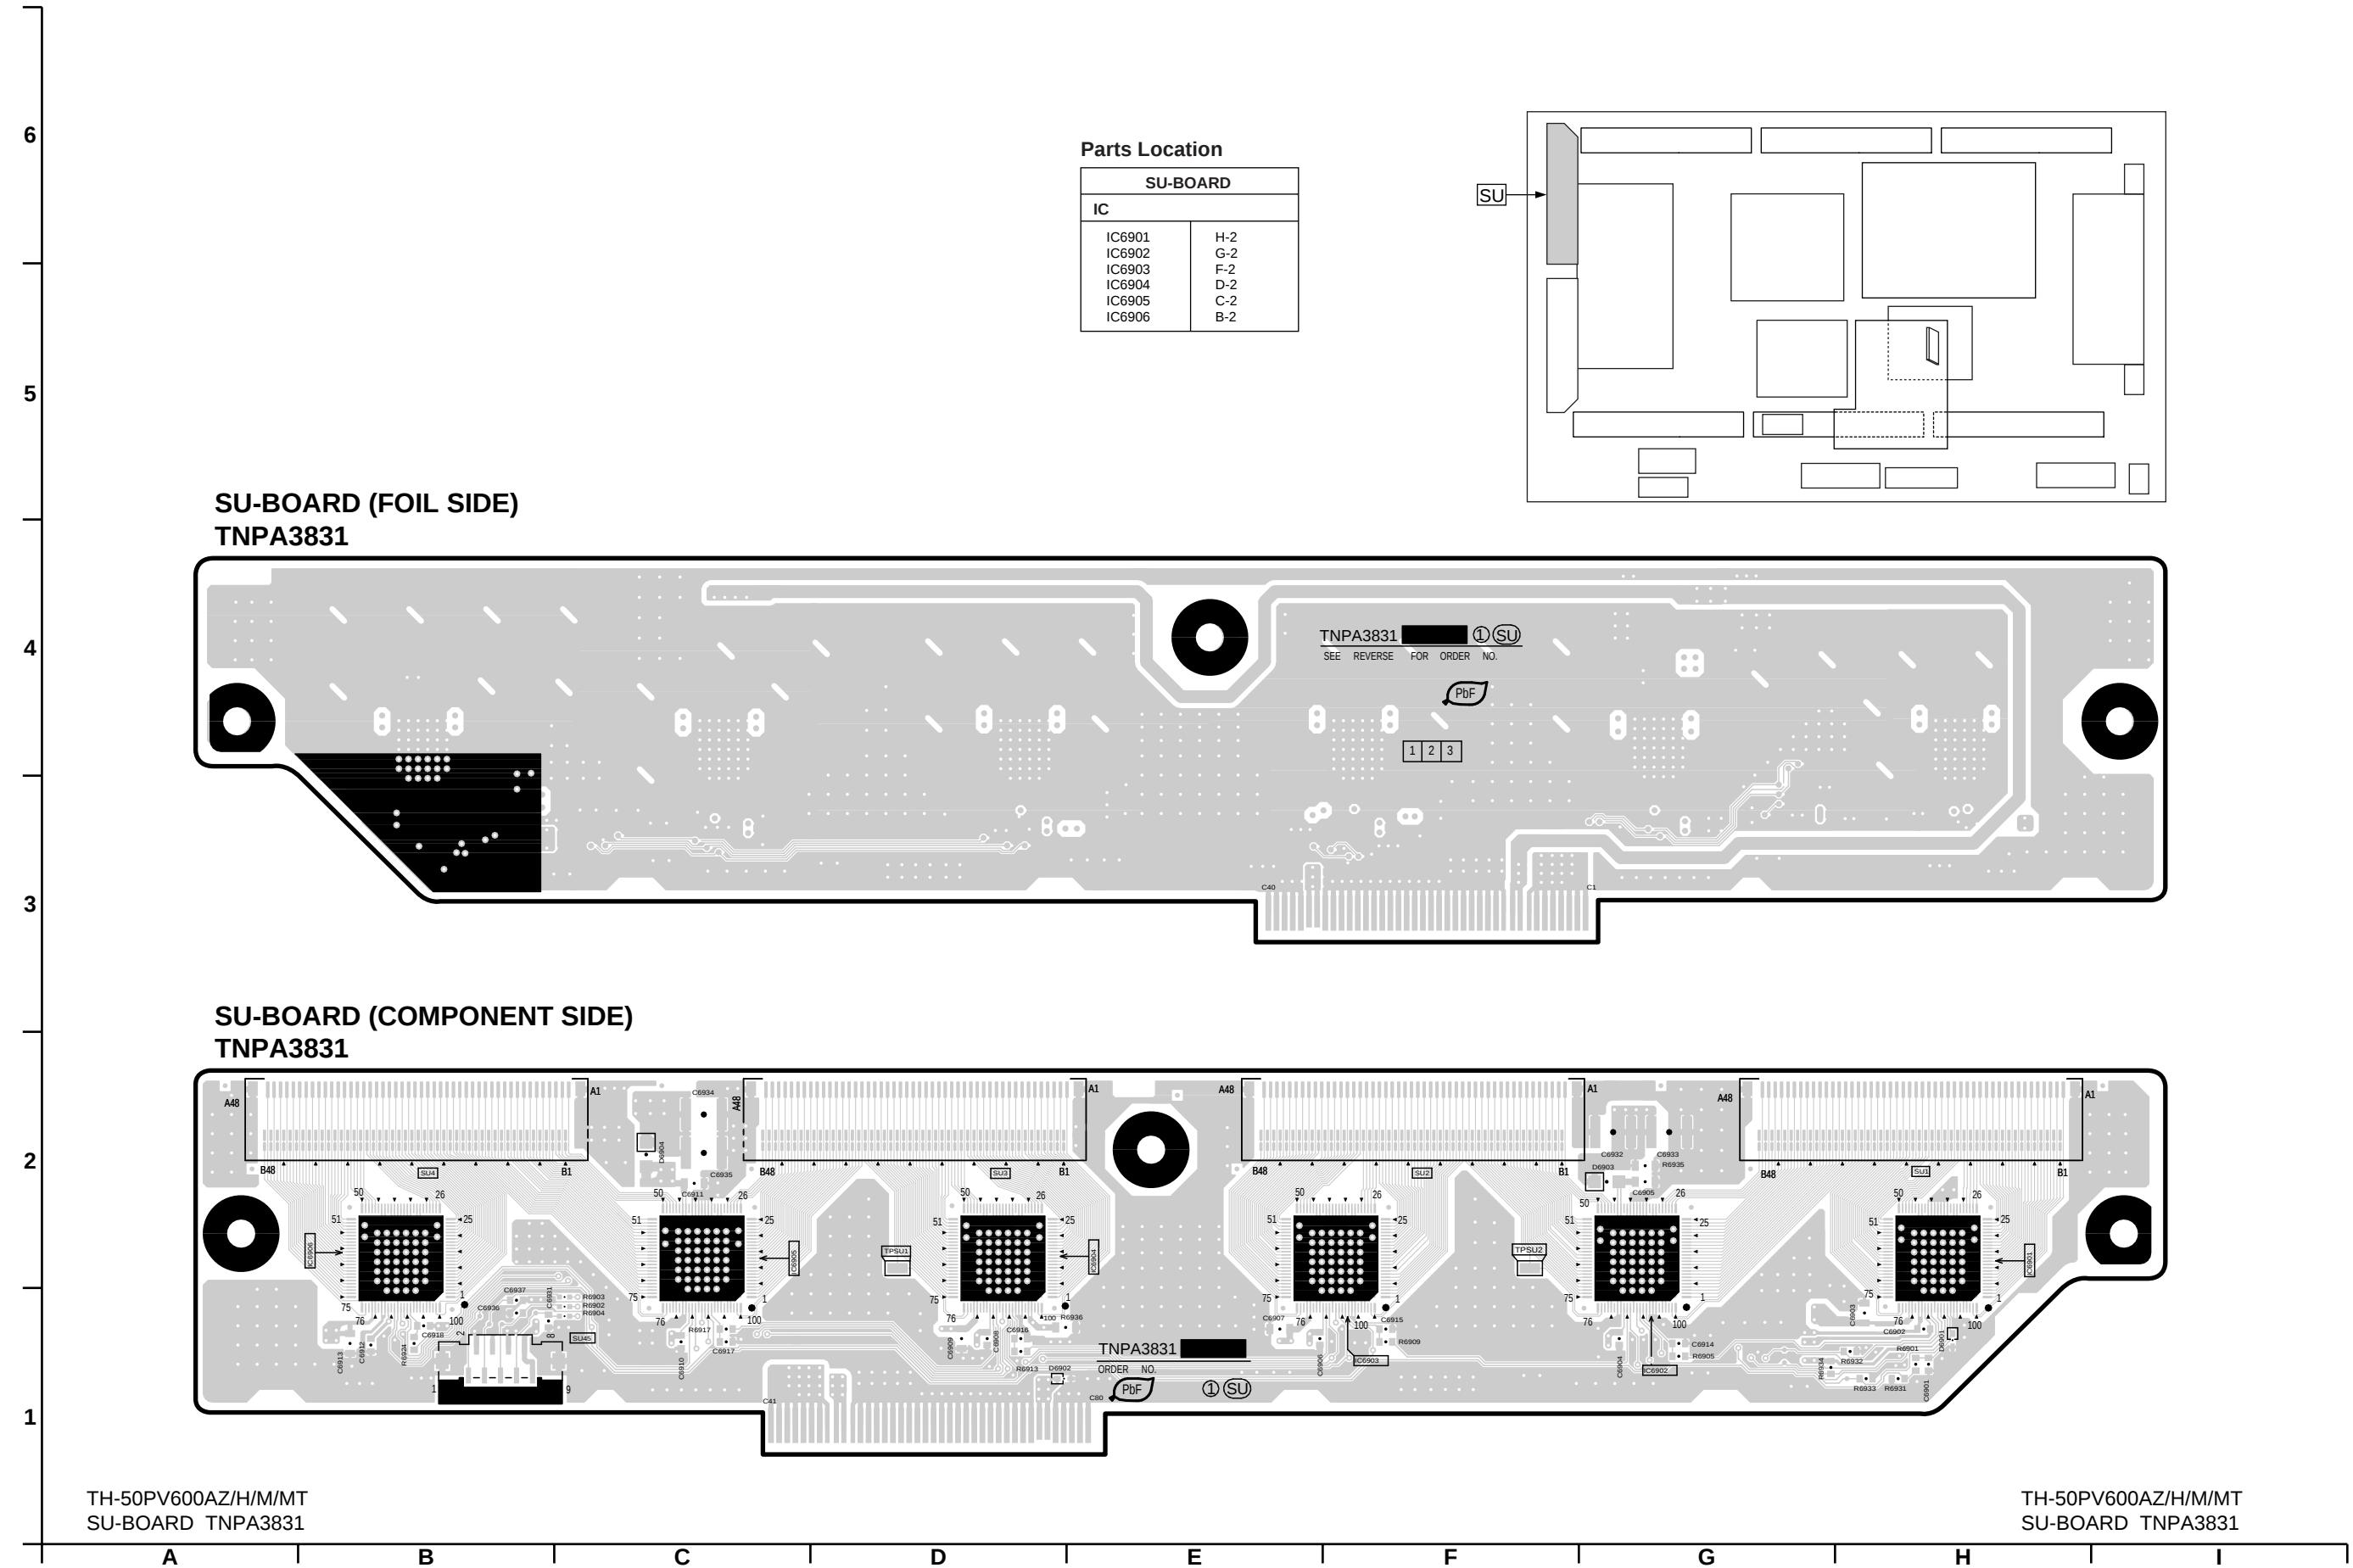

13.16. SD-Board

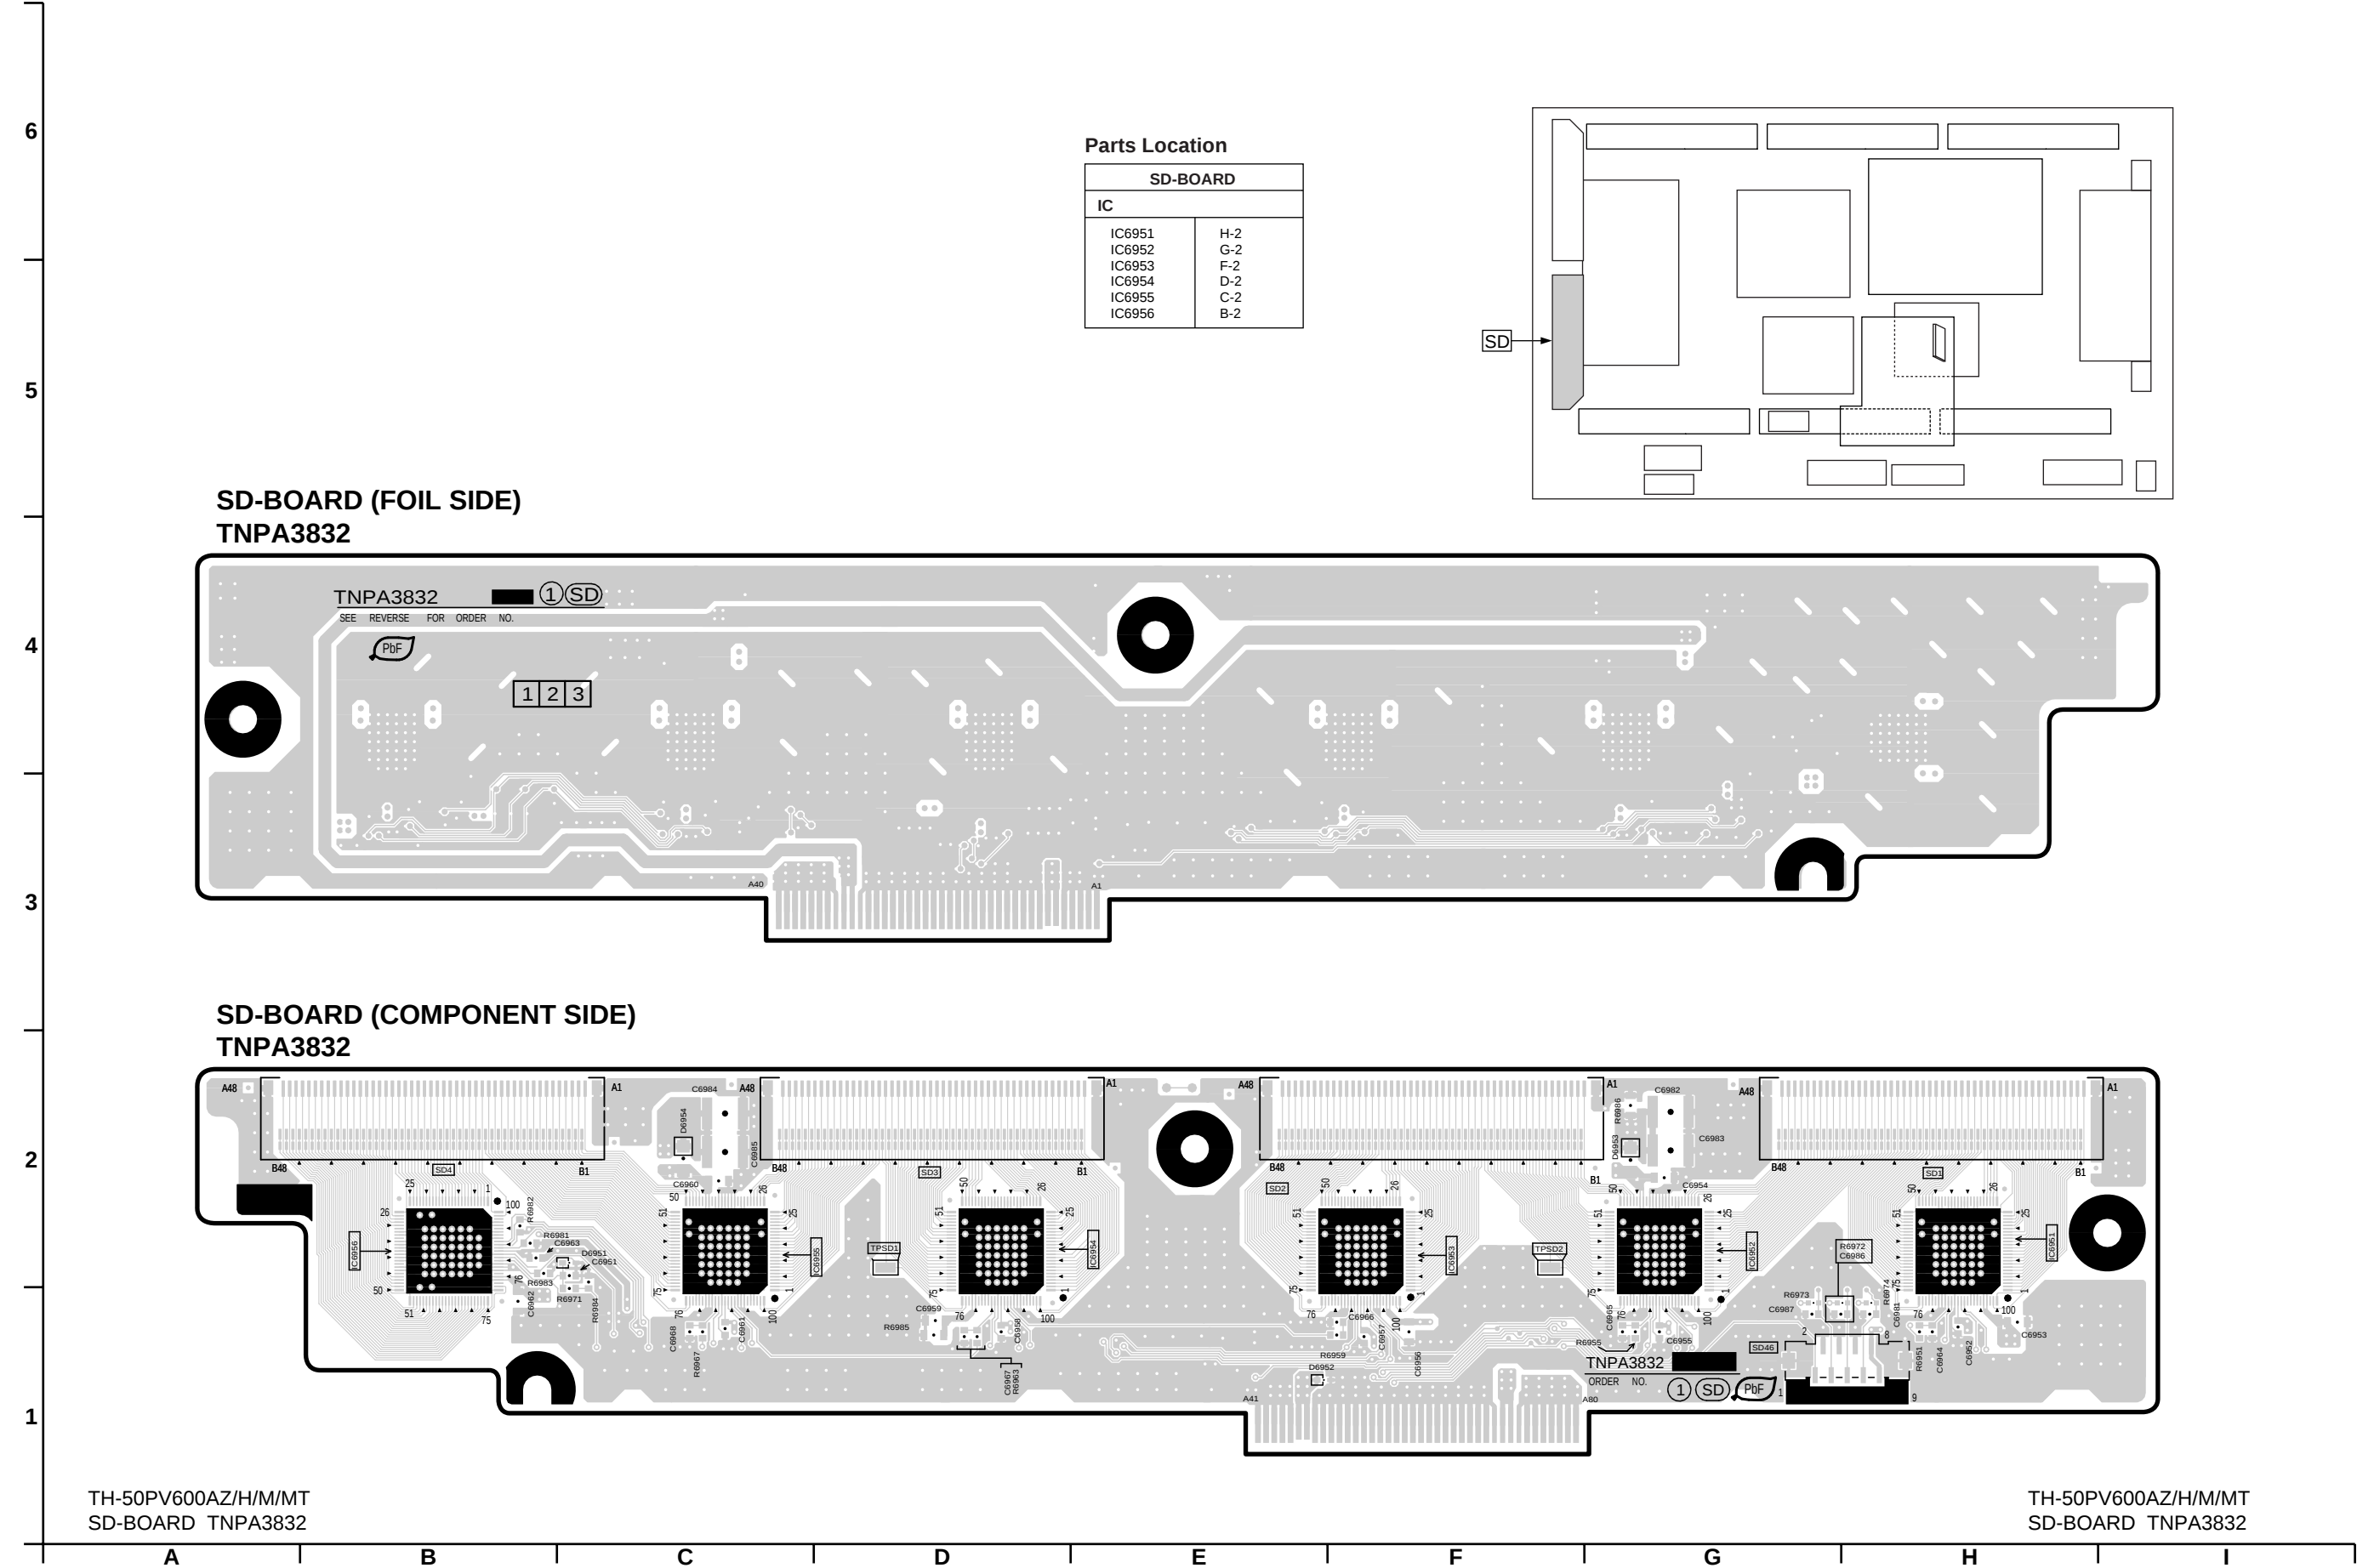


13.17. SS-Board

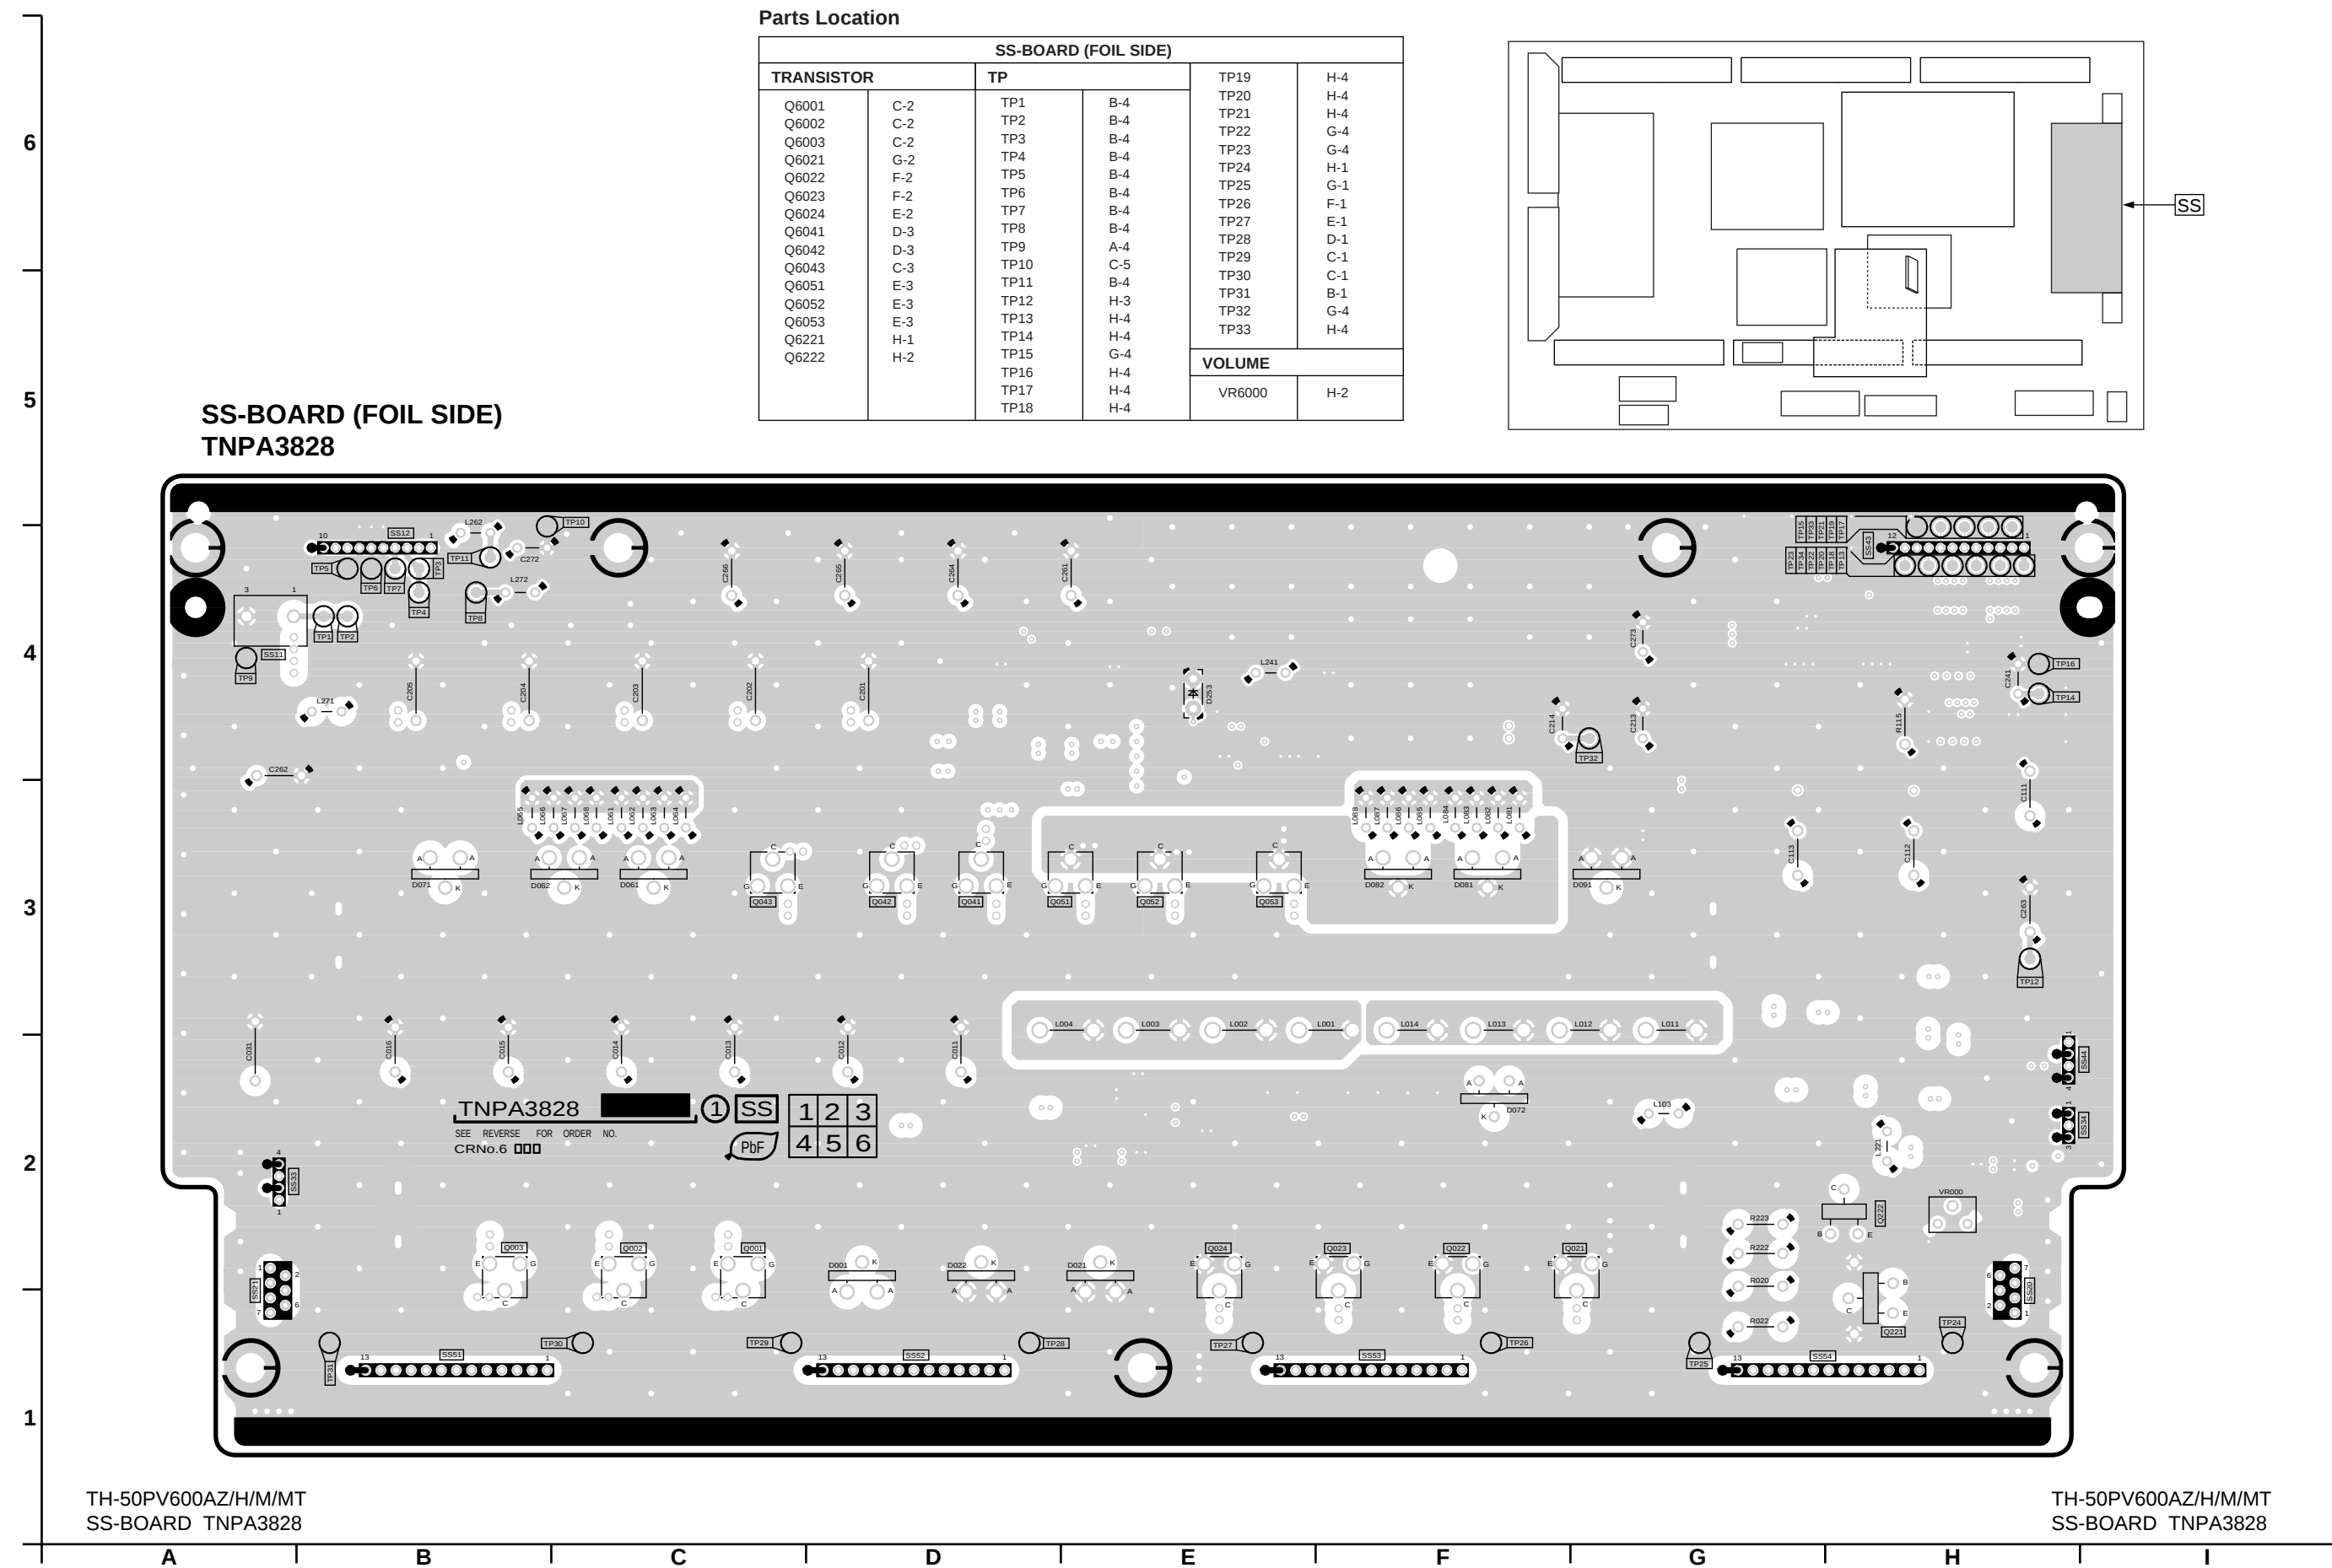


Parts Location

SS-BOARD (COMPONENT SIDE)					
IC		Q6043		Q6221	
IC6131	E-2	Q6051	E-3	Q6222	B-1
IC6151	E-4	Q6052	E-3	Q6222	B-2
IC6191	A-2	Q6053	D-3	Q6251	D-4
IC6211	B-4	Q6101	B-2	TP	
IC6221	A-2	Q6102	B-3	TP15V	G-4
IC6241	B-4	Q6103	B-3	TP34	G-4
IC6251	D-4	Q6104	B-3	TPSOS8	D-4
TRANSISTOR		Q6105	C-2	TPSS1	C-2
Q6001	F-1	Q6106	B-3	TPVDA	H-4
Q6002	G-1	Q6111	C-4	TPVe	B-2
Q6003	G-1	Q6112	B-4	TPVSUS	H-4
Q6021	C-1	Q6114	B-4	VOLUME	
Q6022	C-1	Q6141	E-2	VR6000	B-2
Q6023	D-1	Q6142	F-2		
Q6024	D-1	Q6146	D-2		
Q6041	F-3	Q6147	E-2		
Q6042	F-3	Q6171	F-3		
		Q6182	E-4		

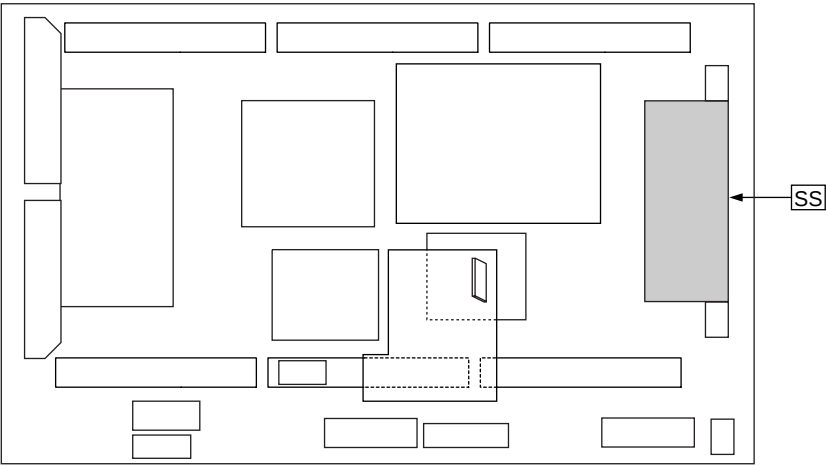


SS-BOARD (COMPONENT SIDE)
TNPA3828

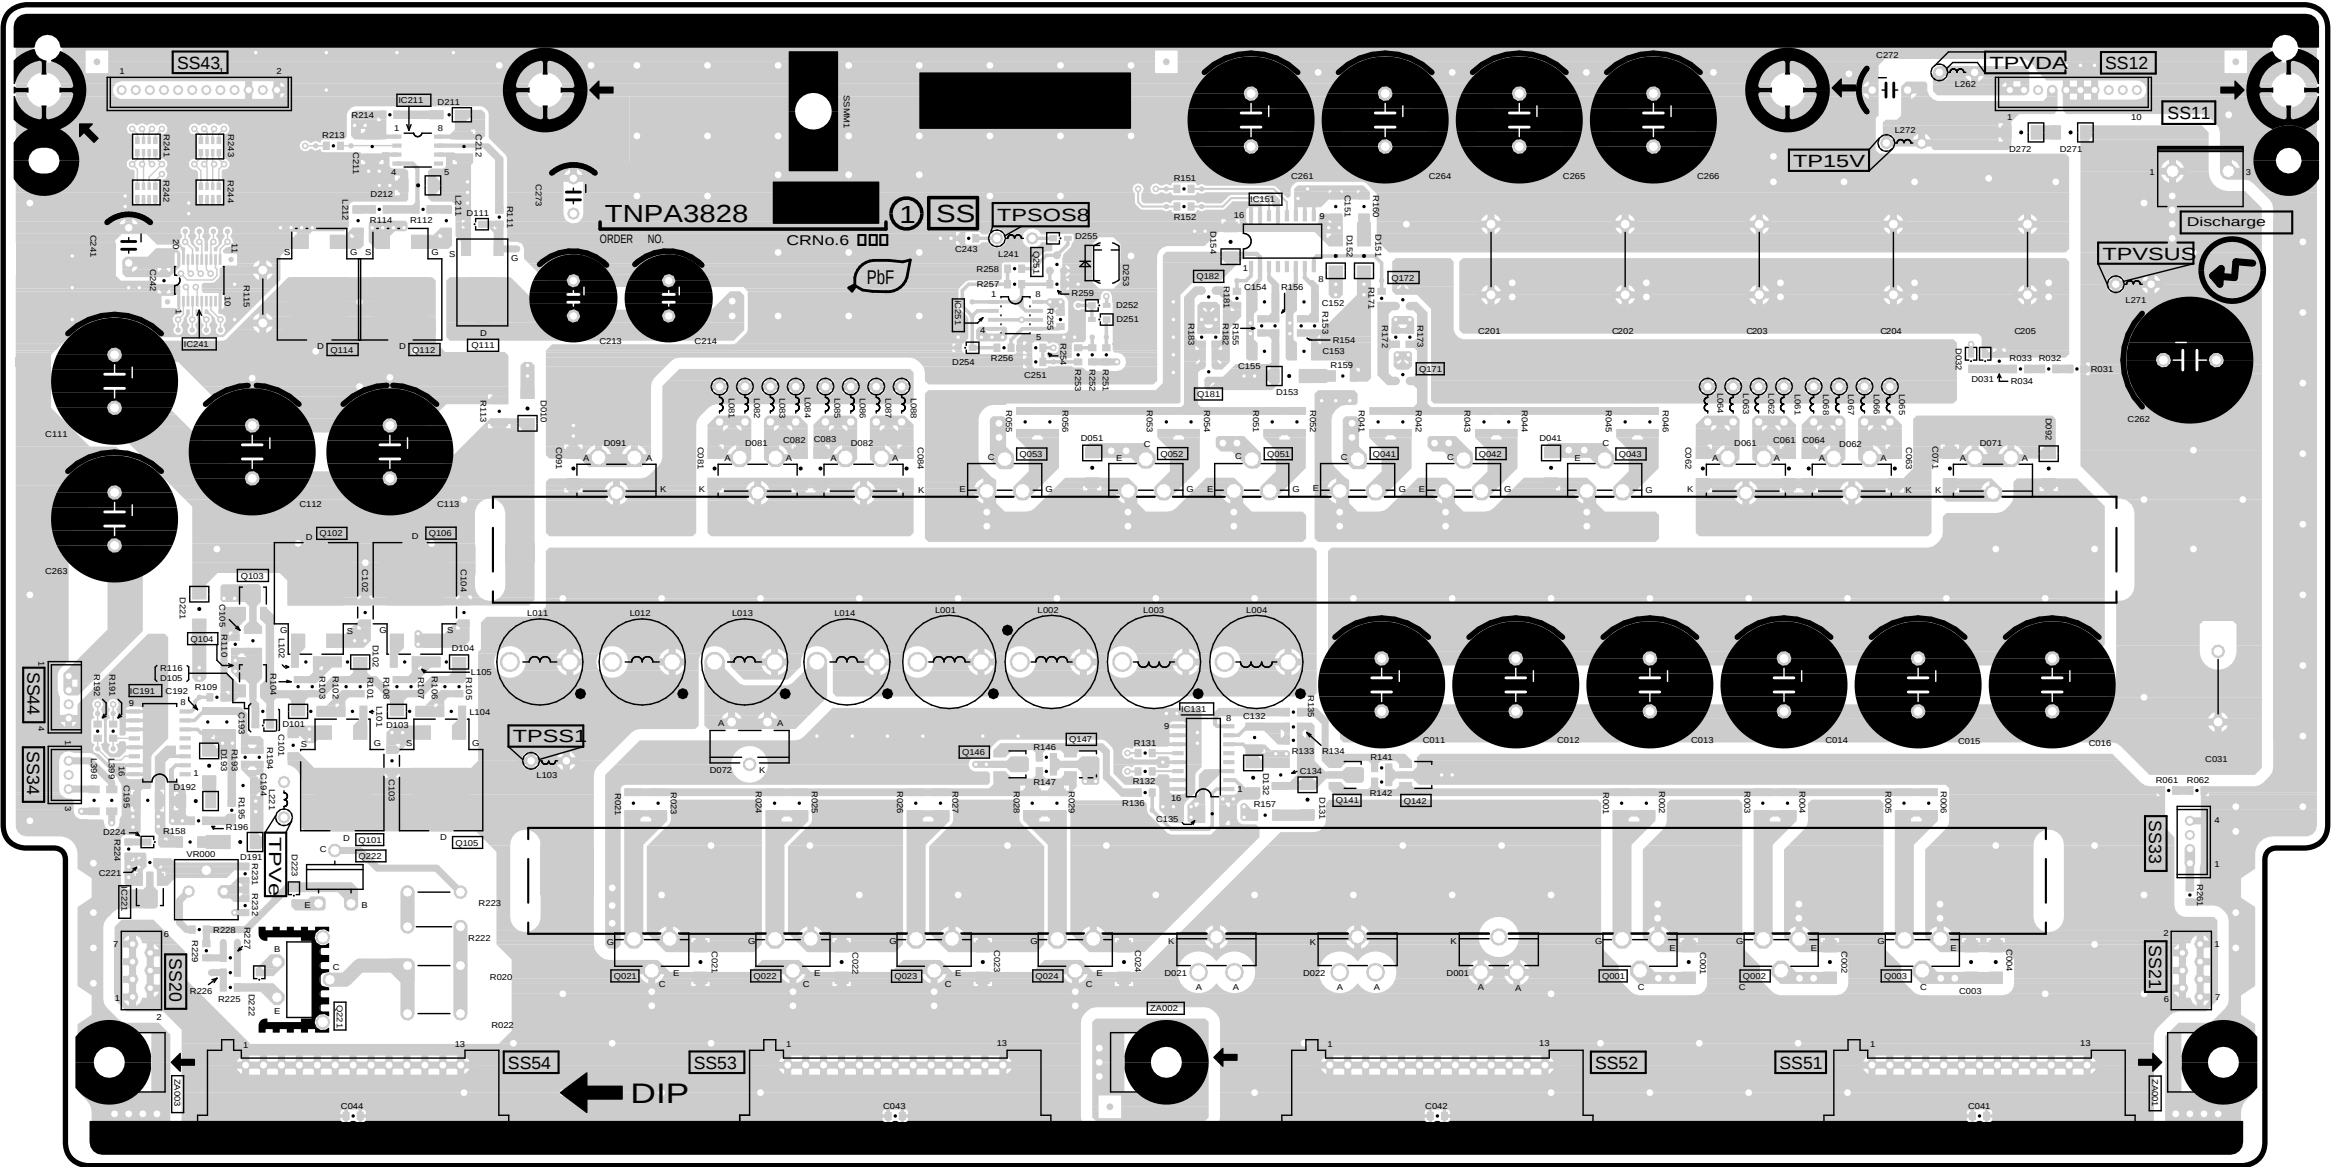



TH-50PV600AZ/H/M/MT
SS-BOARD TNPA3828

TH-50PV600AZ/H/M/MT
SS-BOARD TNPA3828

13.18. SS-Board

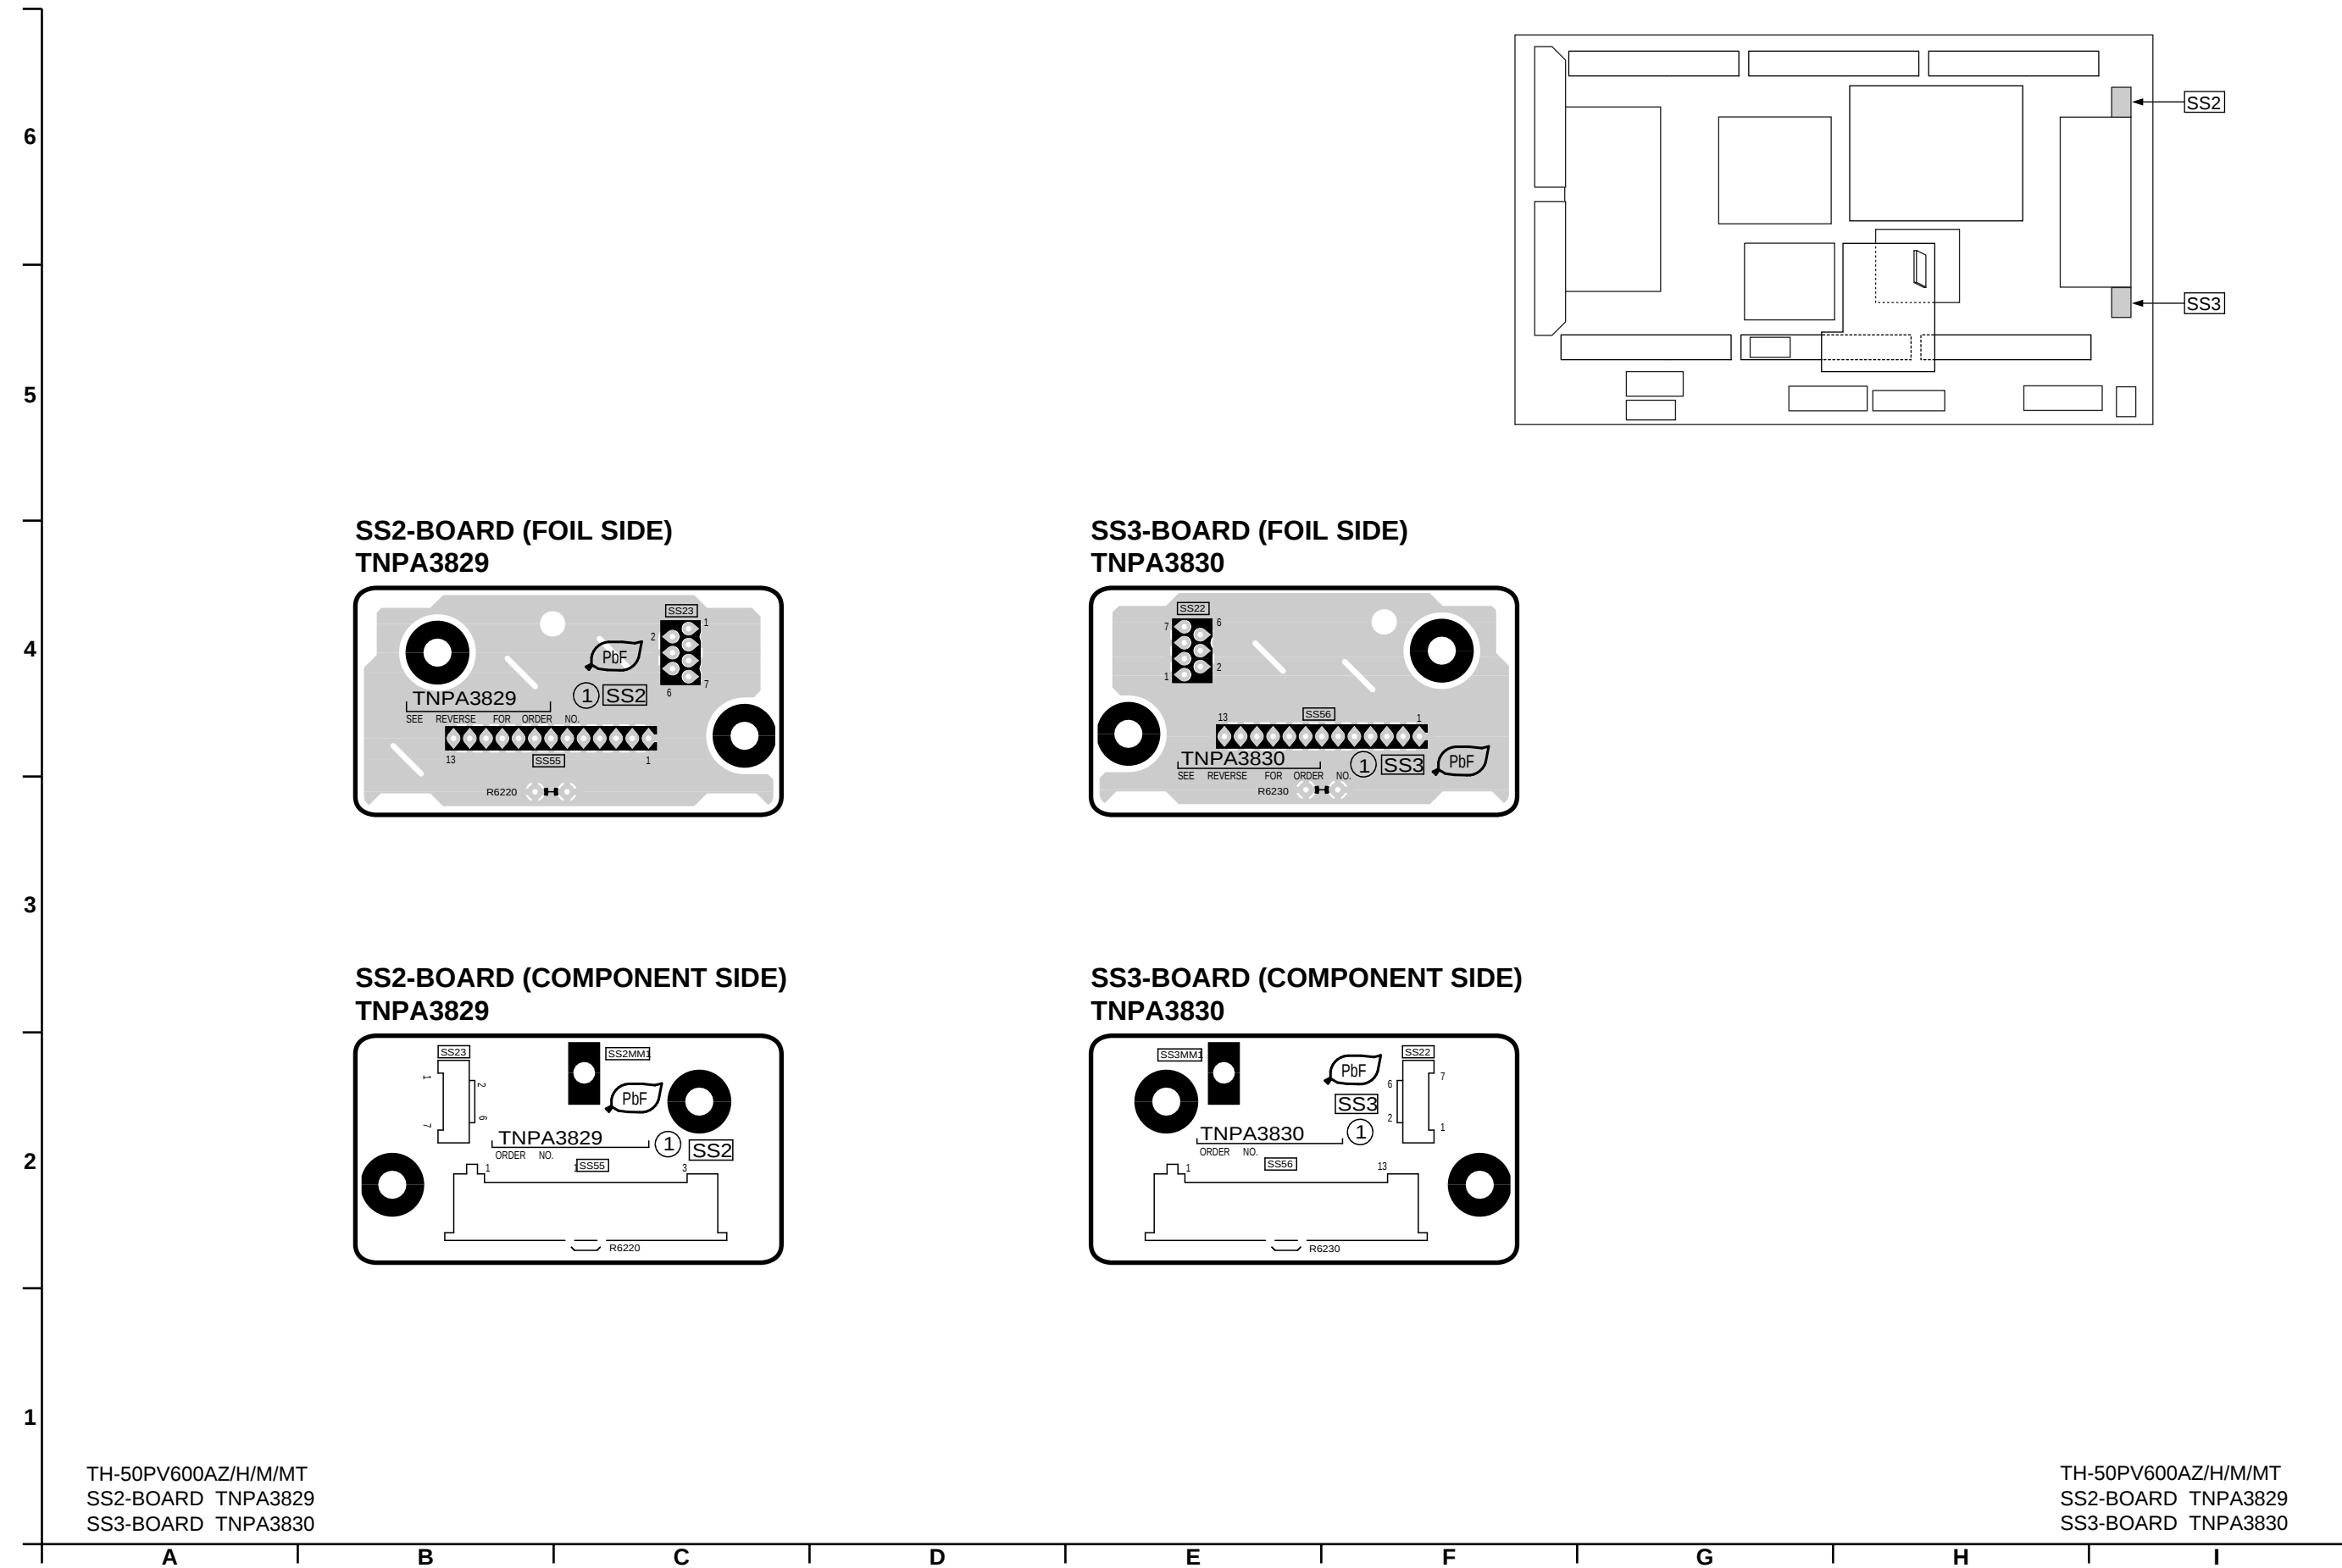

13.19. GS-Board

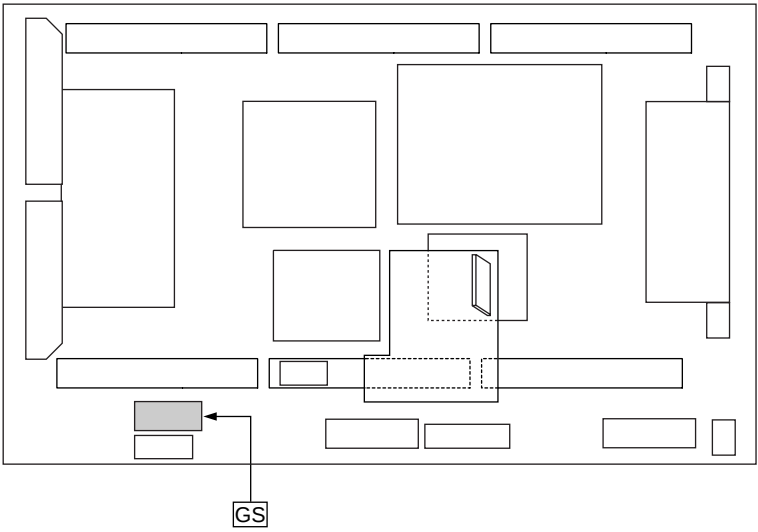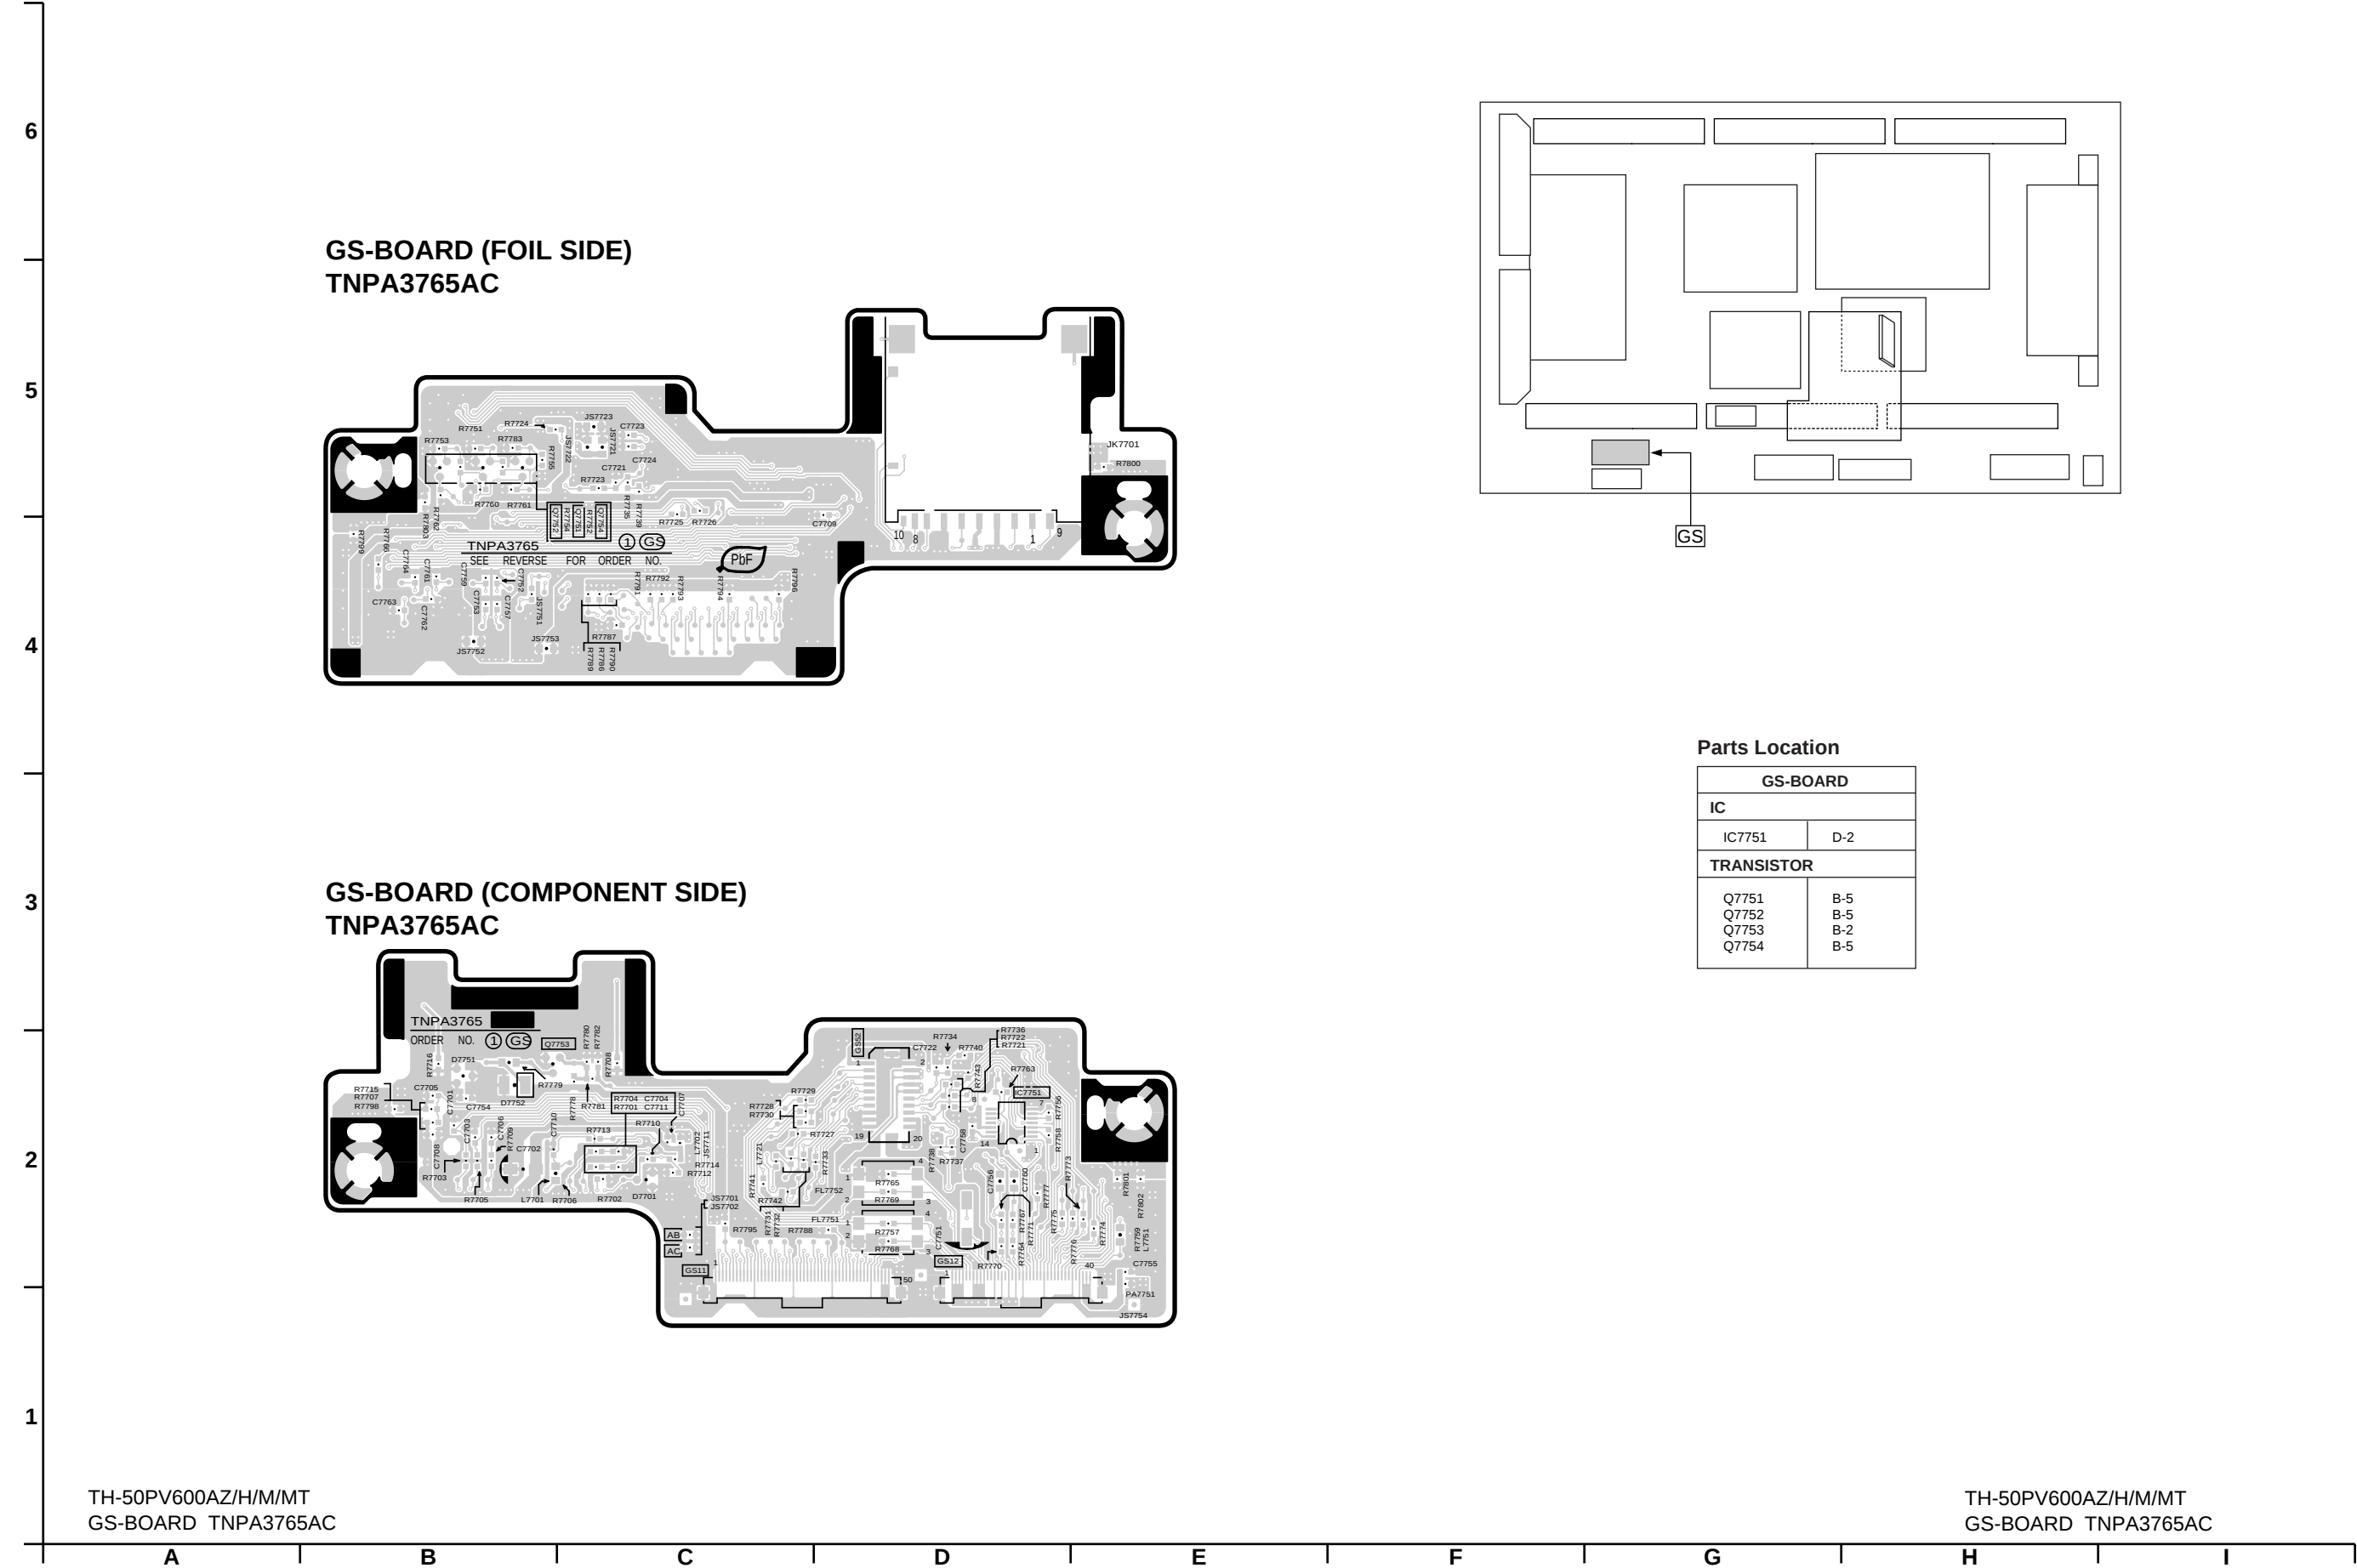

Parts Location

GS-BOARD	
IC	
IC7751	D-2
TRANSISTOR	
Q7751	B-5
Q7752	B-5
Q7753	B-2
Q7754	B-5

14 Block and Schematic Diagram

14.1. Schematic Diagram Note

Important Safety Notice

Components identified by $\triangle$ mark have special characteristics important for safety.
When replacing any of these components, use only manufacture's specified parts.


Notes:

- 1. **Resistor**
Unit of resistance is OHM [Ω] (K=1,000, M=1,000,000).
- 2. **Capacitor**
Unit of capacitance is μ F, unless otherwise noted.
- 3. Coil
Unit of inductance is H, unless otherwise noted.
- 4. Test Point
 : Test Point position
- 5. Earth Symbol
 : Chassis Earth (Cold)  : Line Earth (Hot)
- 6. Voltage Measurement
Voltage is measured by a DC voltmeter.
Conditions of the measurement are the following:
Power Source AC220-240V, 50/60Hz
Receiving Signal Colour Bar signal (RF)
All customer's controls Maximum positions
- 7. When arrow mark () is found, connection is easily found from the direction of arrow.
- 8. Indicates the major signal flow. : Video  Audio 
- 9. This schematic diagram is the latest at the time of printing and subject to change without notice.

Remarks:

- 1. The Power Circuit contains a circuit area which uses a separate power supply to isolate the earth connection.
The circuit is defined by HOT and COLD indications in the schematic diagram. Take the following precautions.
All circuits, except the Power Circuit, are cold.
Precautions
 - a. Do not touch the hot part or the hot and cold parts at the same time or you may be shocked.
 - b. Do not short- circuit the hot and cold circuits or a fuse may blow and parts may break.
 - c. Do not connect an instrument, such as an oscilloscope, to the hot and cold circuits simultaneously or a fuse may blow.
Connect the earth of instruments to the earth connection of the circuit being measured.
 - d. Make sure to disconnect the power plug before removing the chassis.


14.2. Main Block Diagram

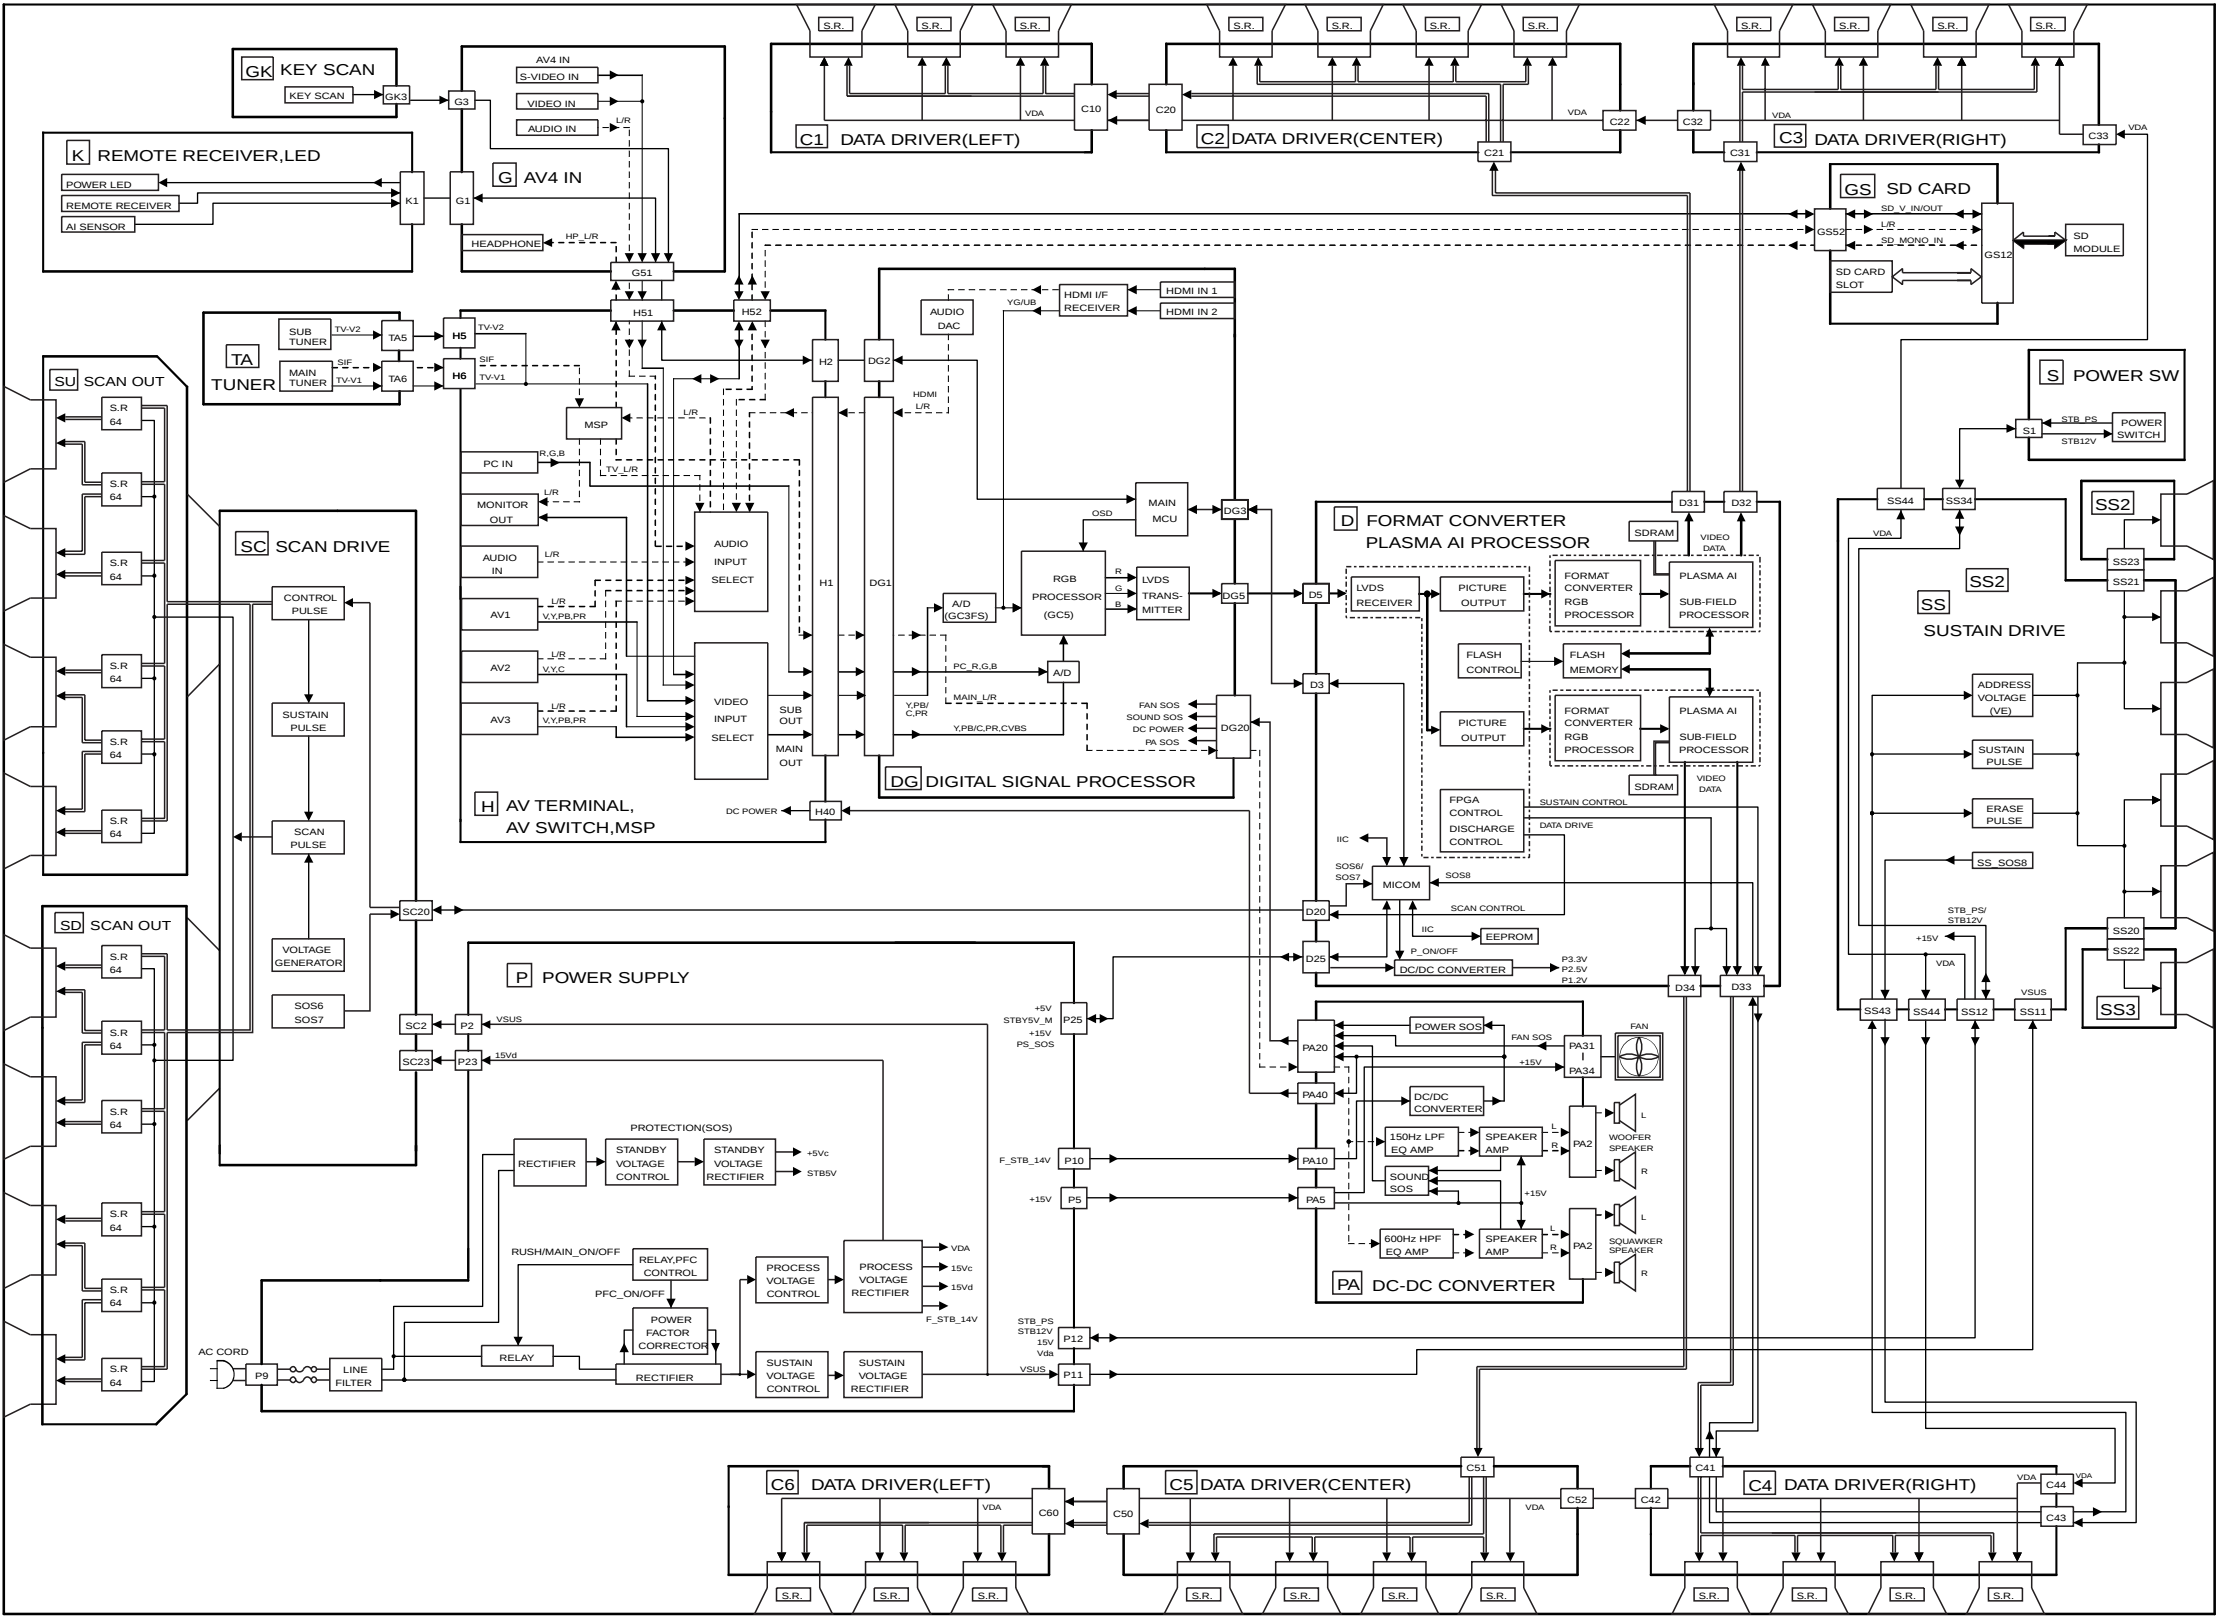


TH-50PV600AZ/H/M/MT
Main Block Diagram

TH-50PV600AZ/H/M/MT
Main Block Diagram

14.3. P-Board Block Diagram

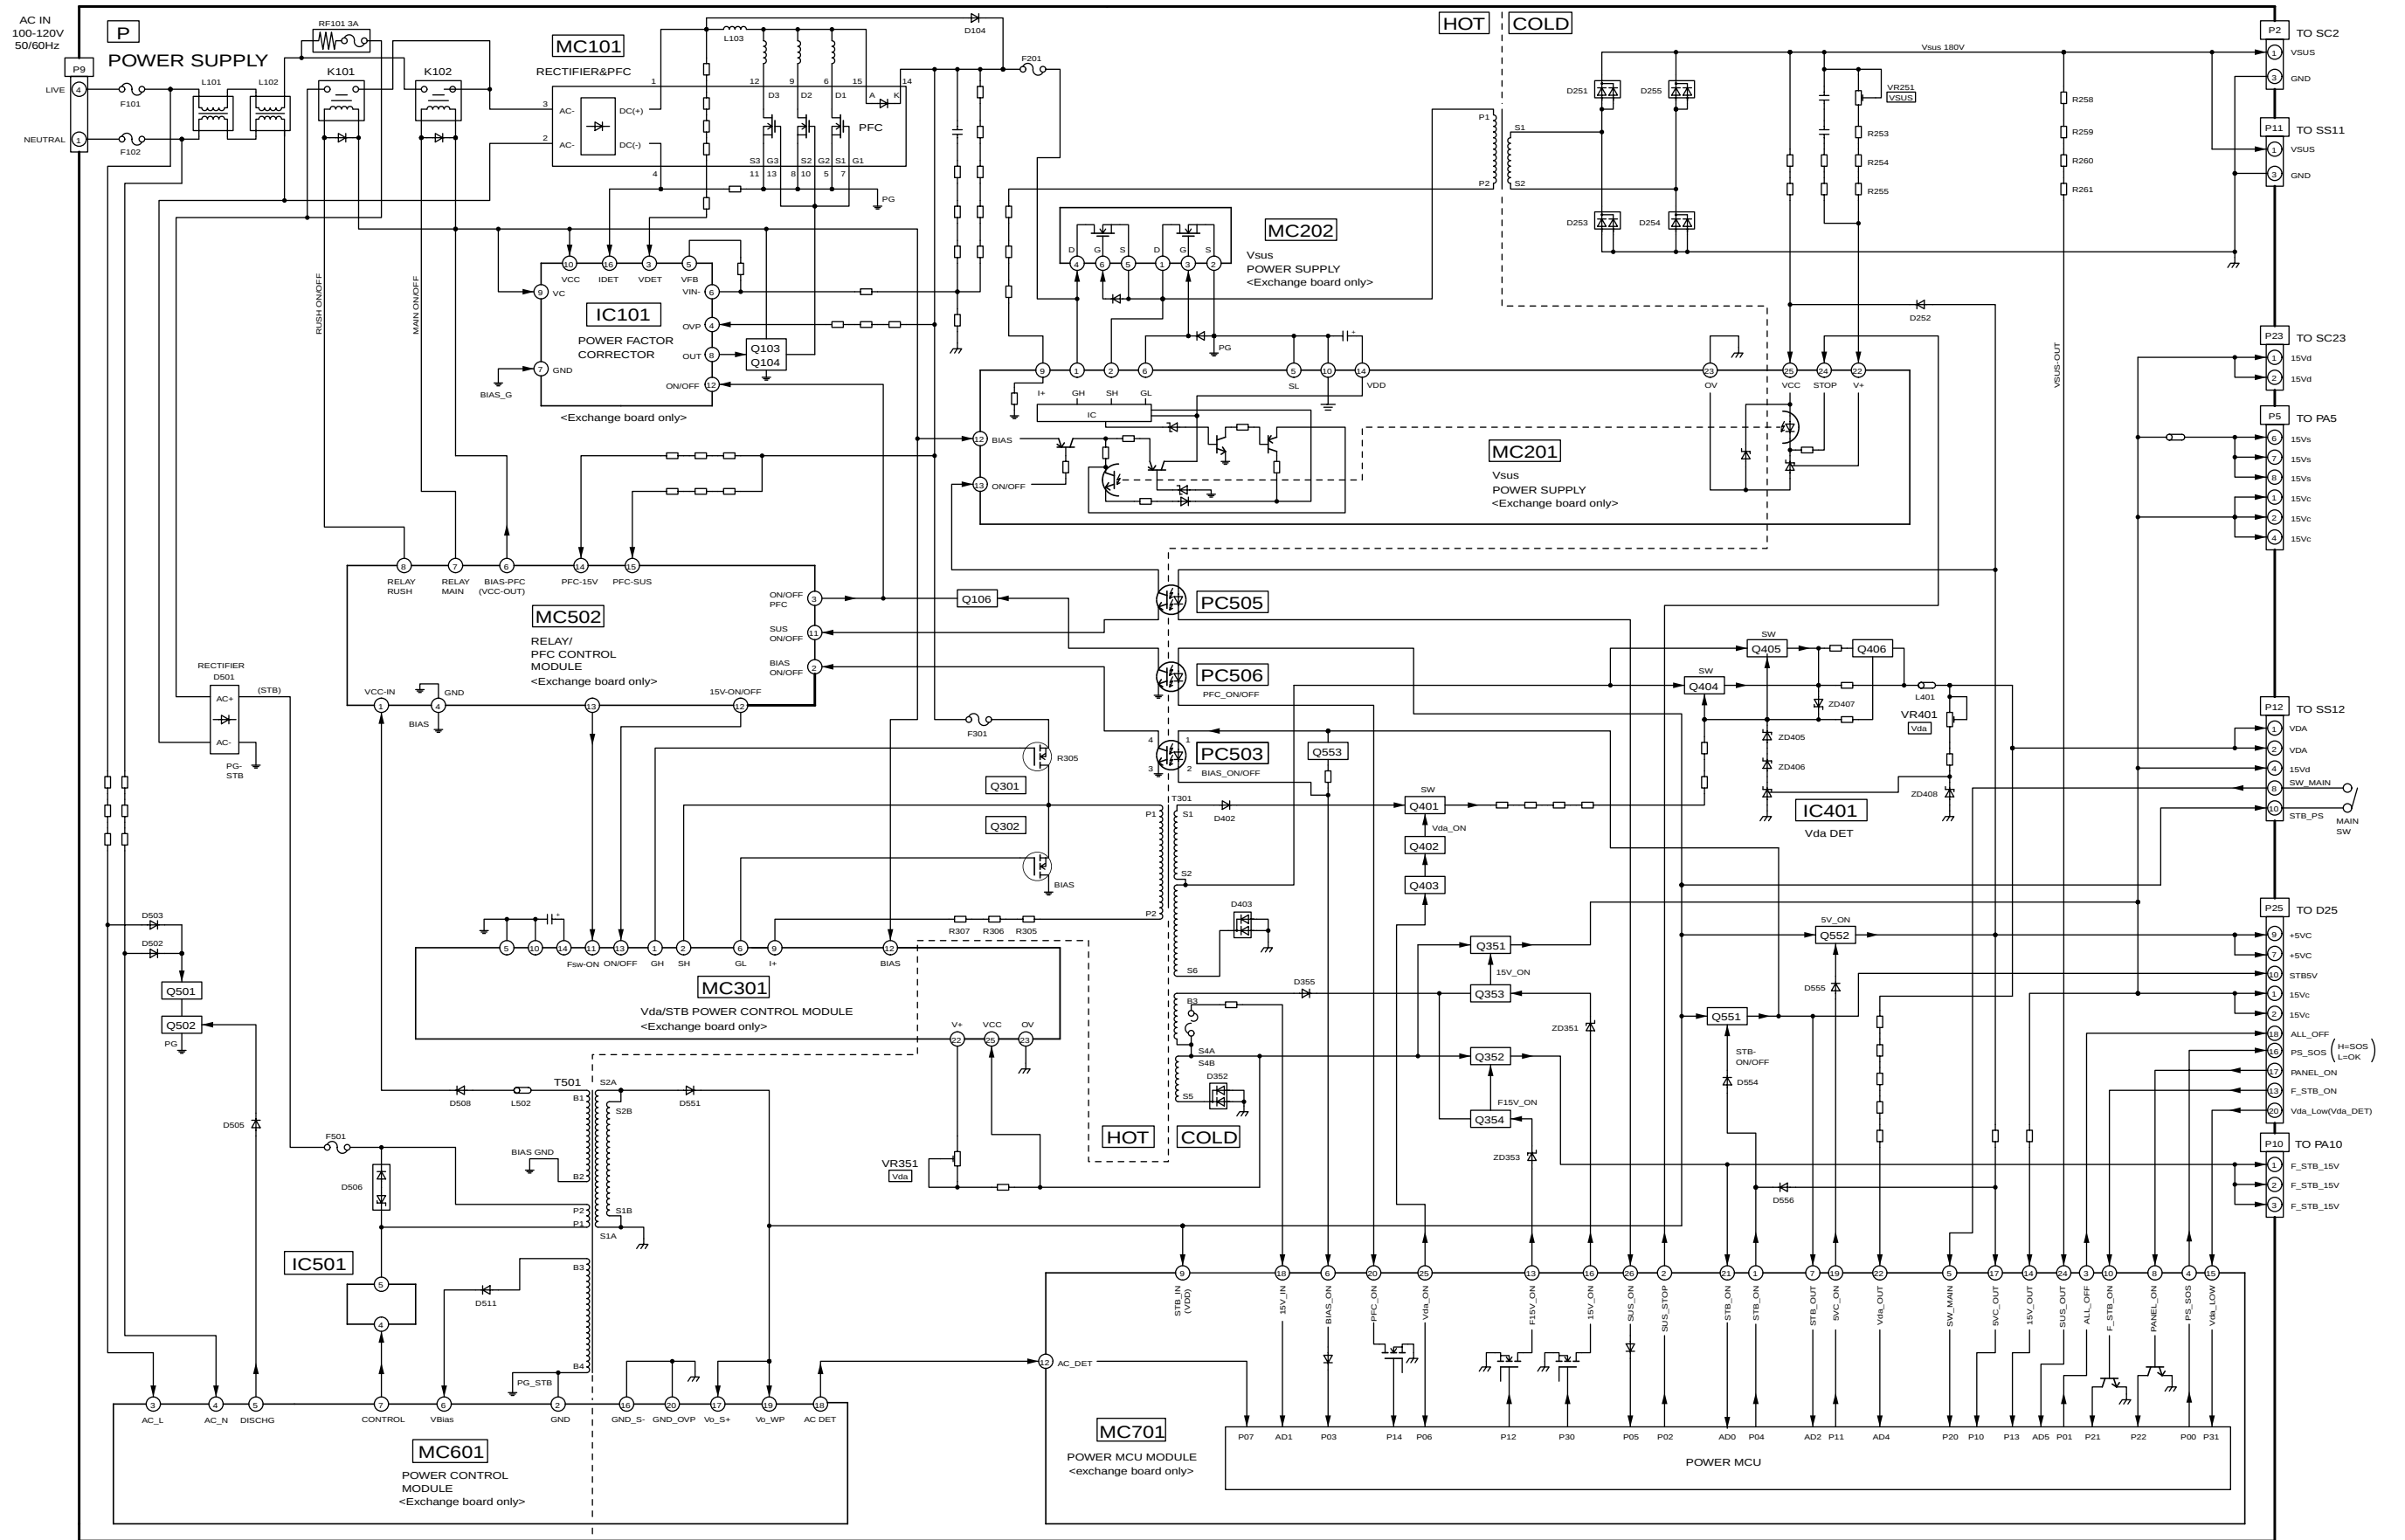TH-50PV600AZ/H/M/MT
P-Board Block DiagramTH-50PV600AZ/H/M/MT
P-Board Block Diagram


14.4. P-Board (1 of 2) Schematic Diagram

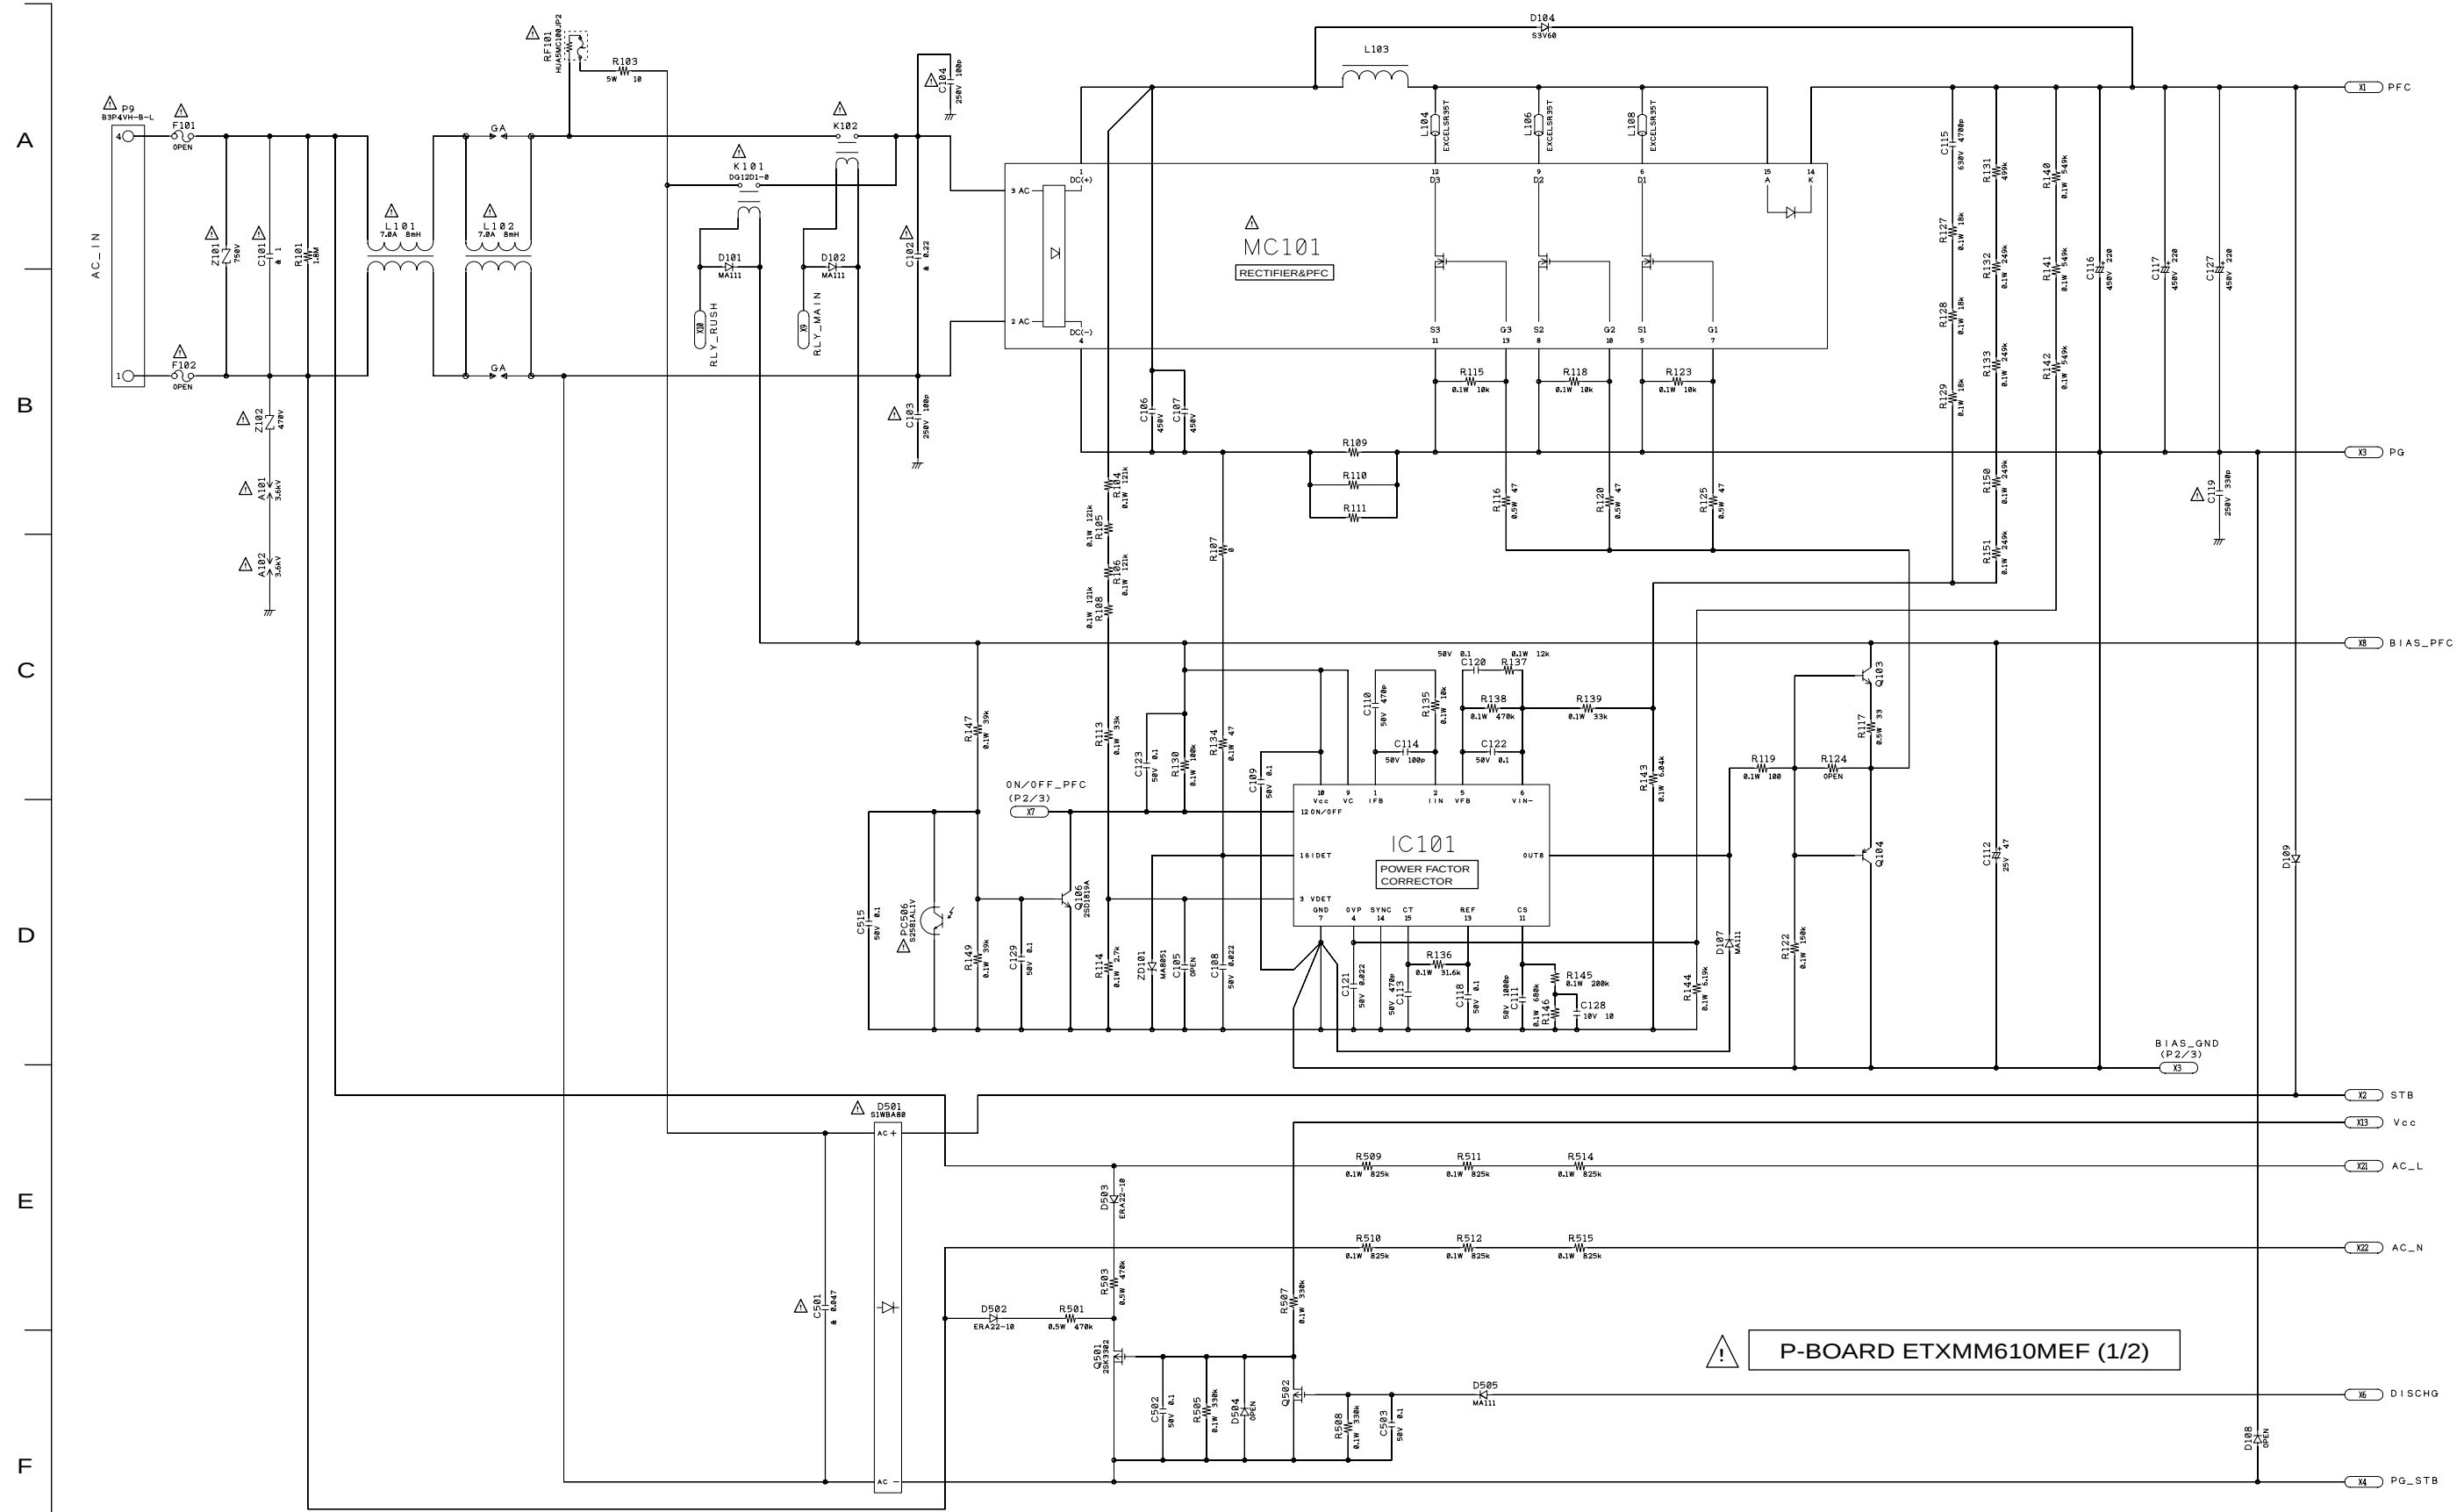

TH-50PV600AZ/H/M/MT P-Board (1 of 2) Schematic Diagram

TH-50PV600AZ/H/M/MT P-Board (1 of 2) Schematic Diagram


14.5. P-Board (2 of 2) Schematic Diagram

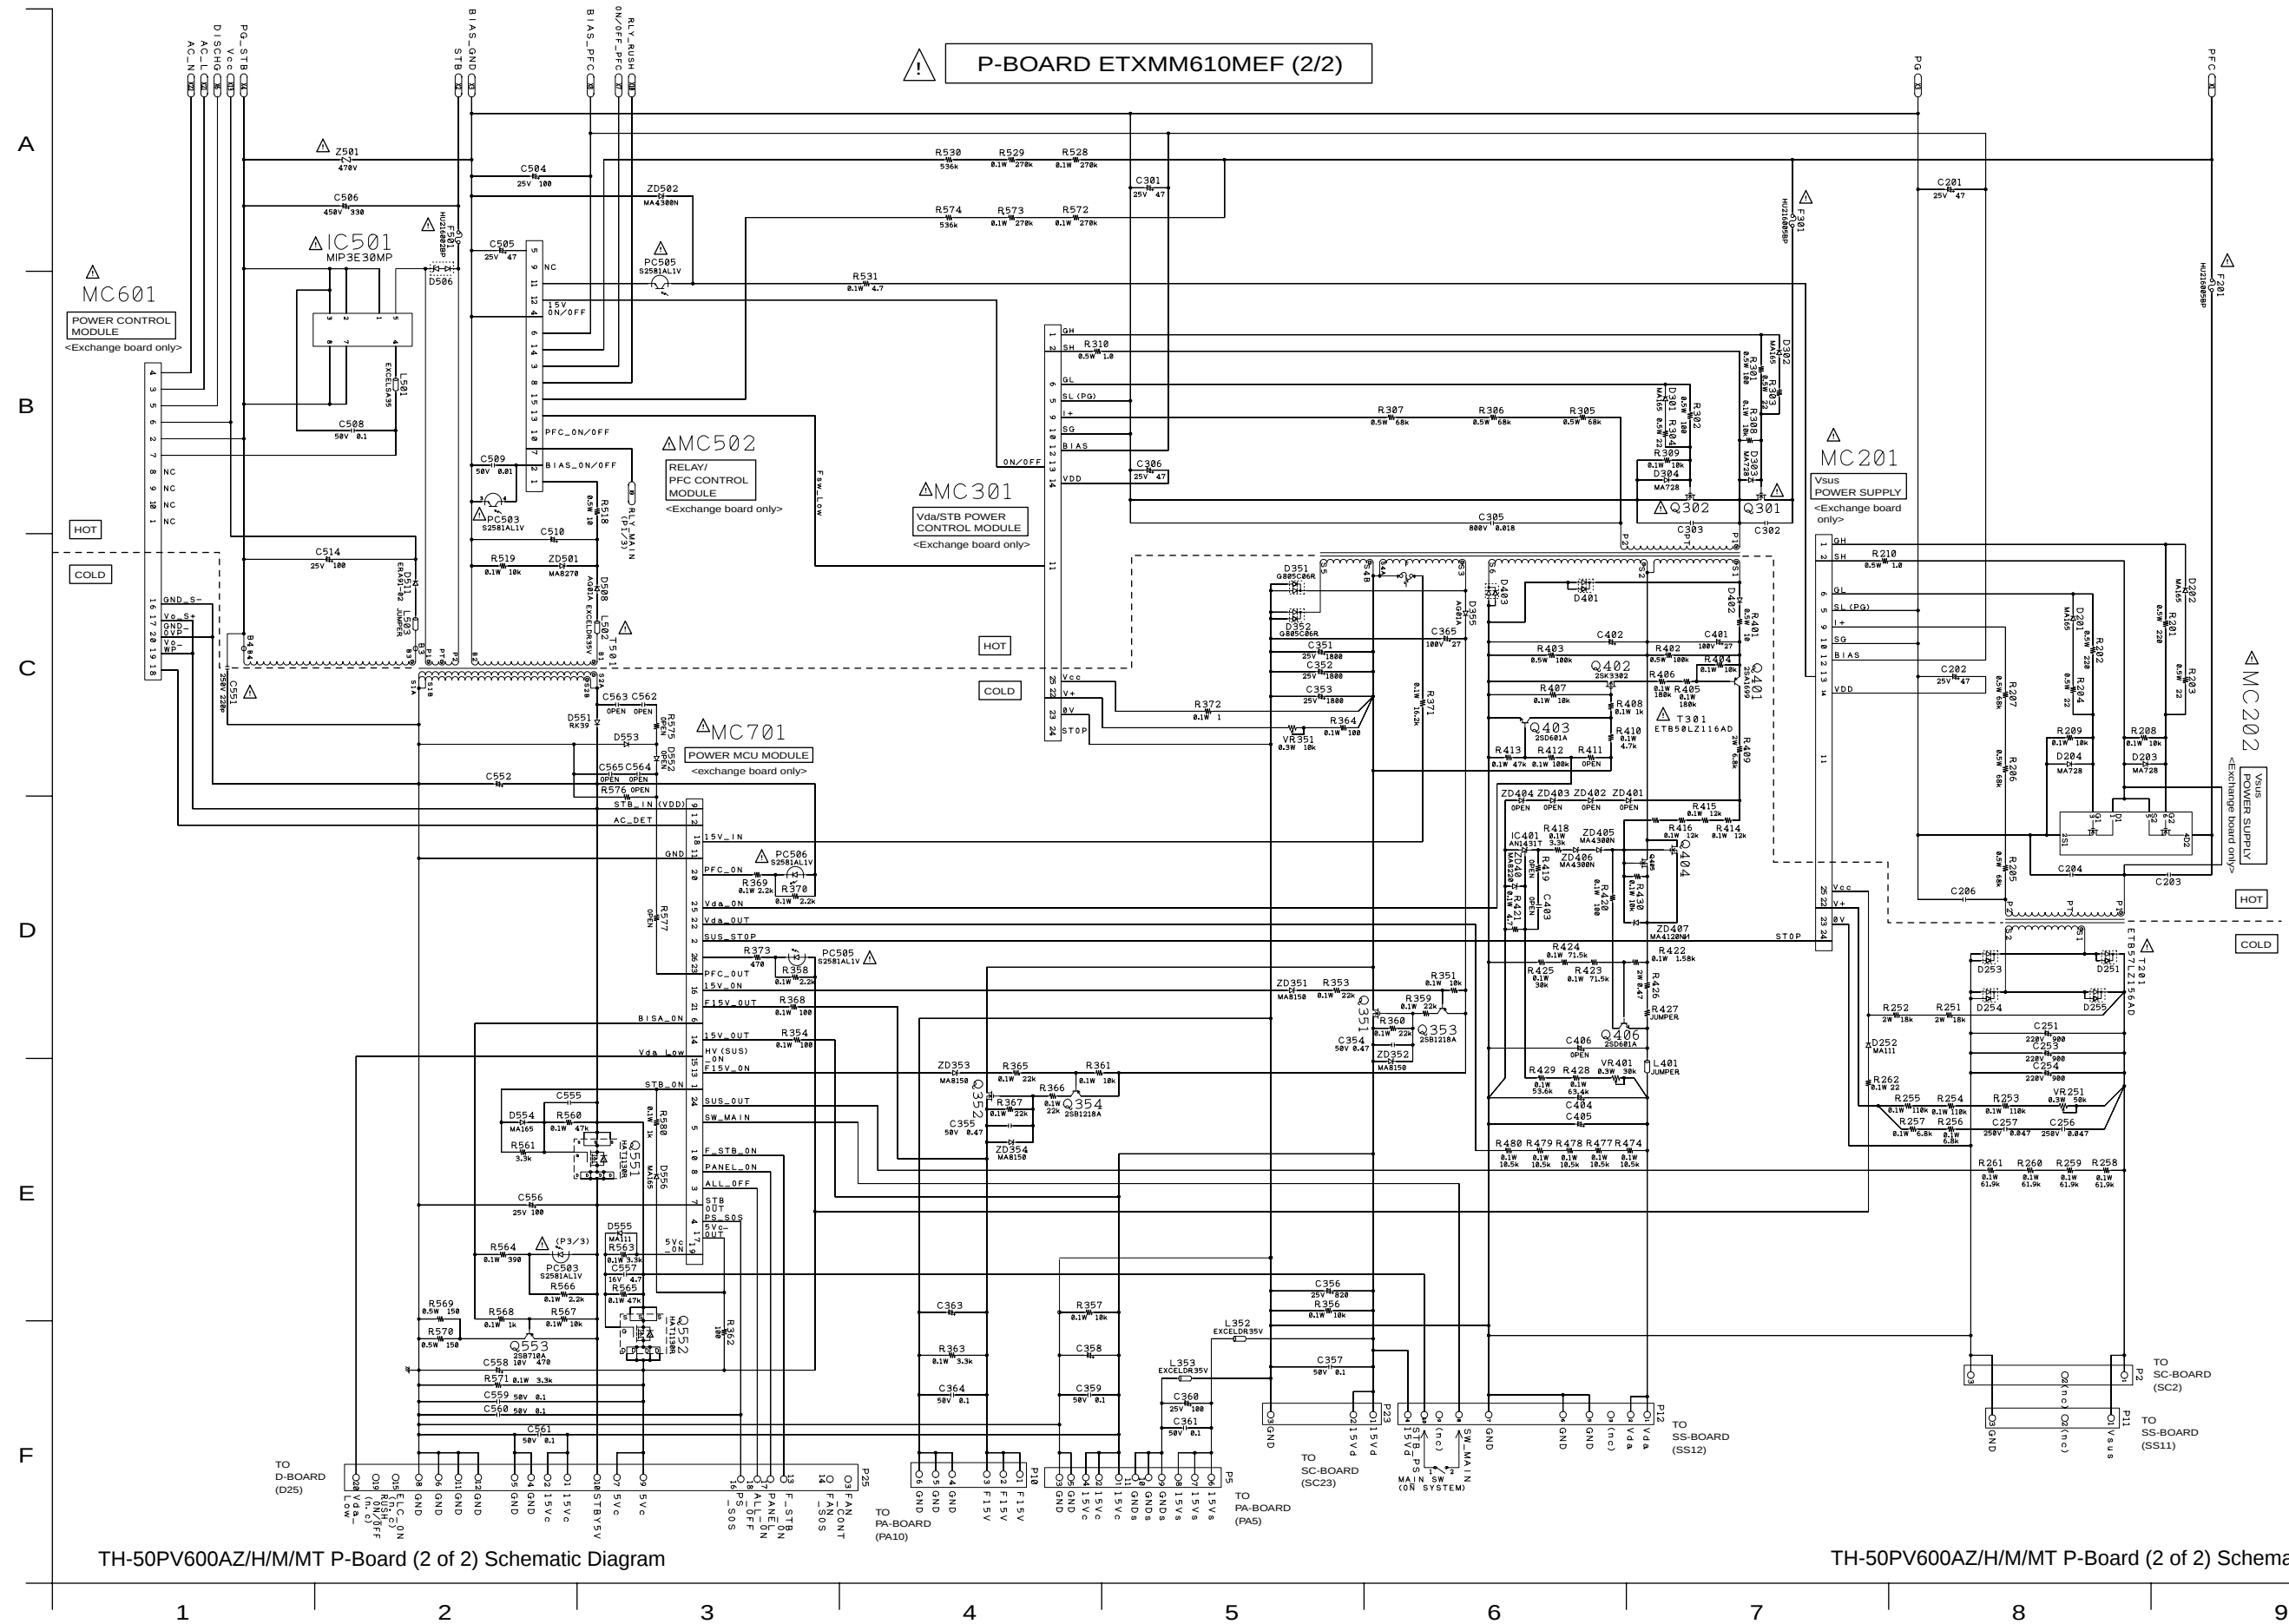


TH-50PV600AZ/H/M/MT P-Board (2 of 2) Schematic Diagram

TH-50PV600AZ/H/M/MT P-Board (2 of 2) Schematic Diagram

14.6. PA-Board Block Diagram

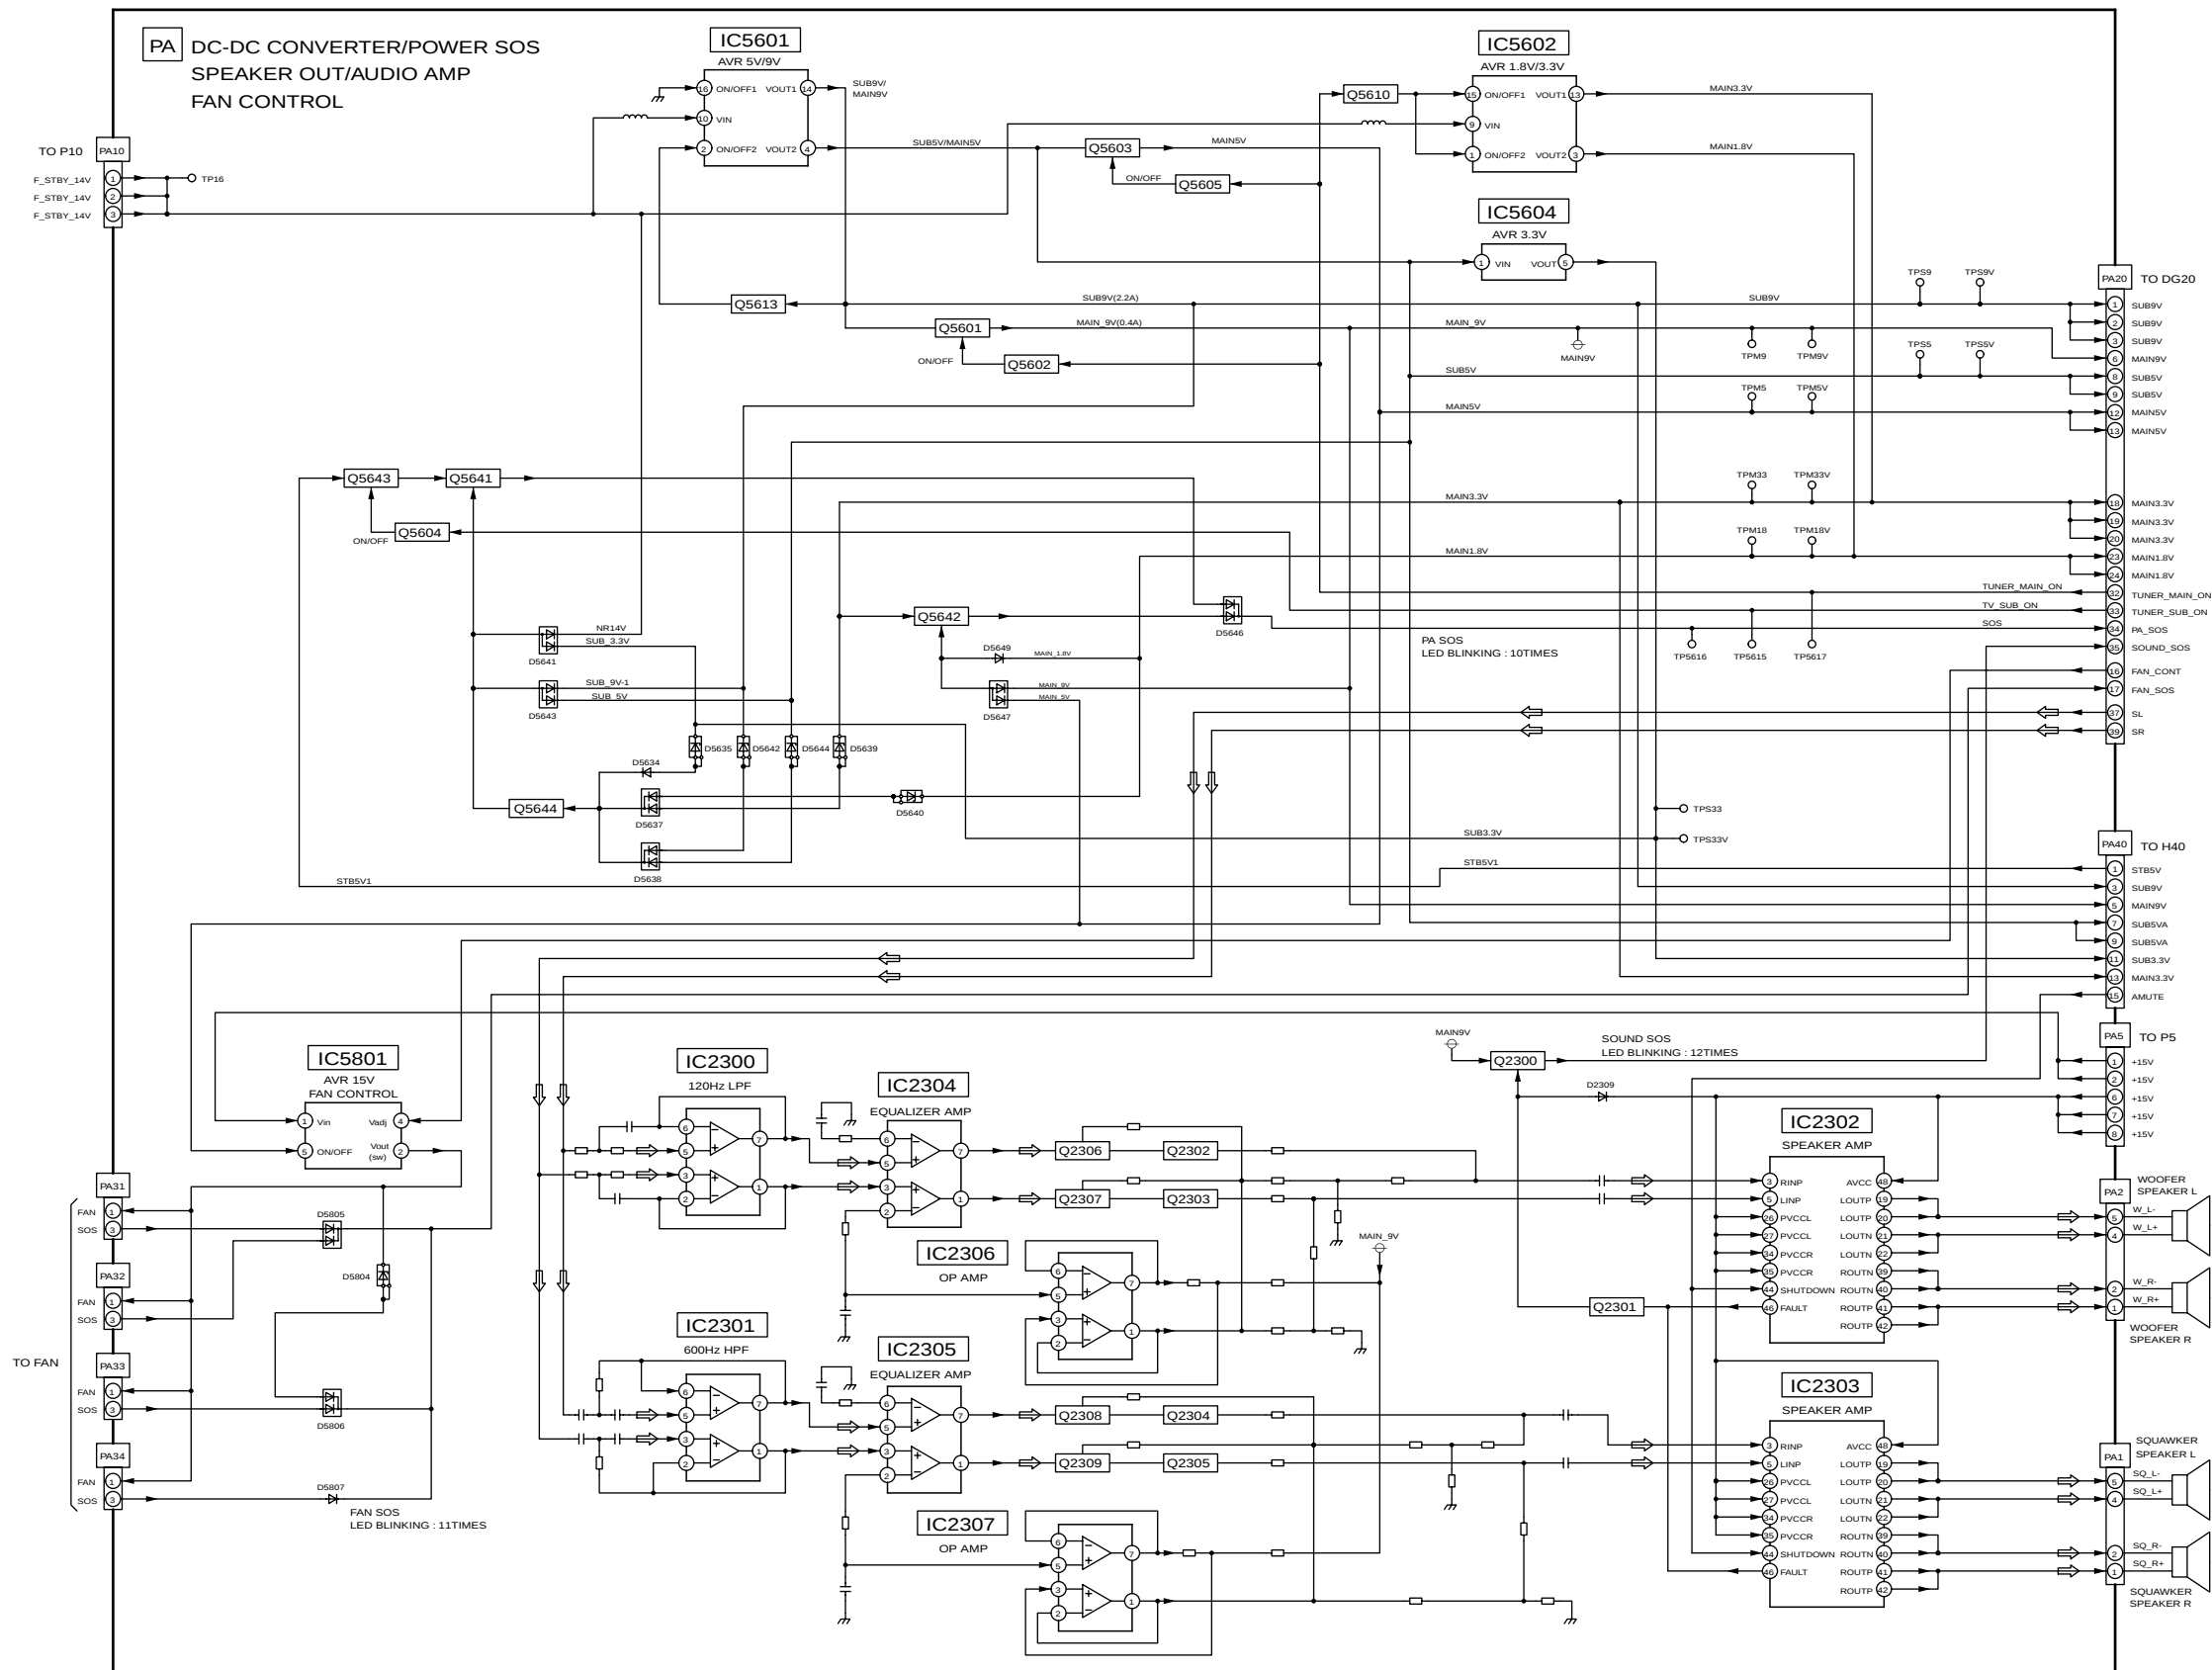


14.7. PA-Board (1 of 3) Schematic Diagram

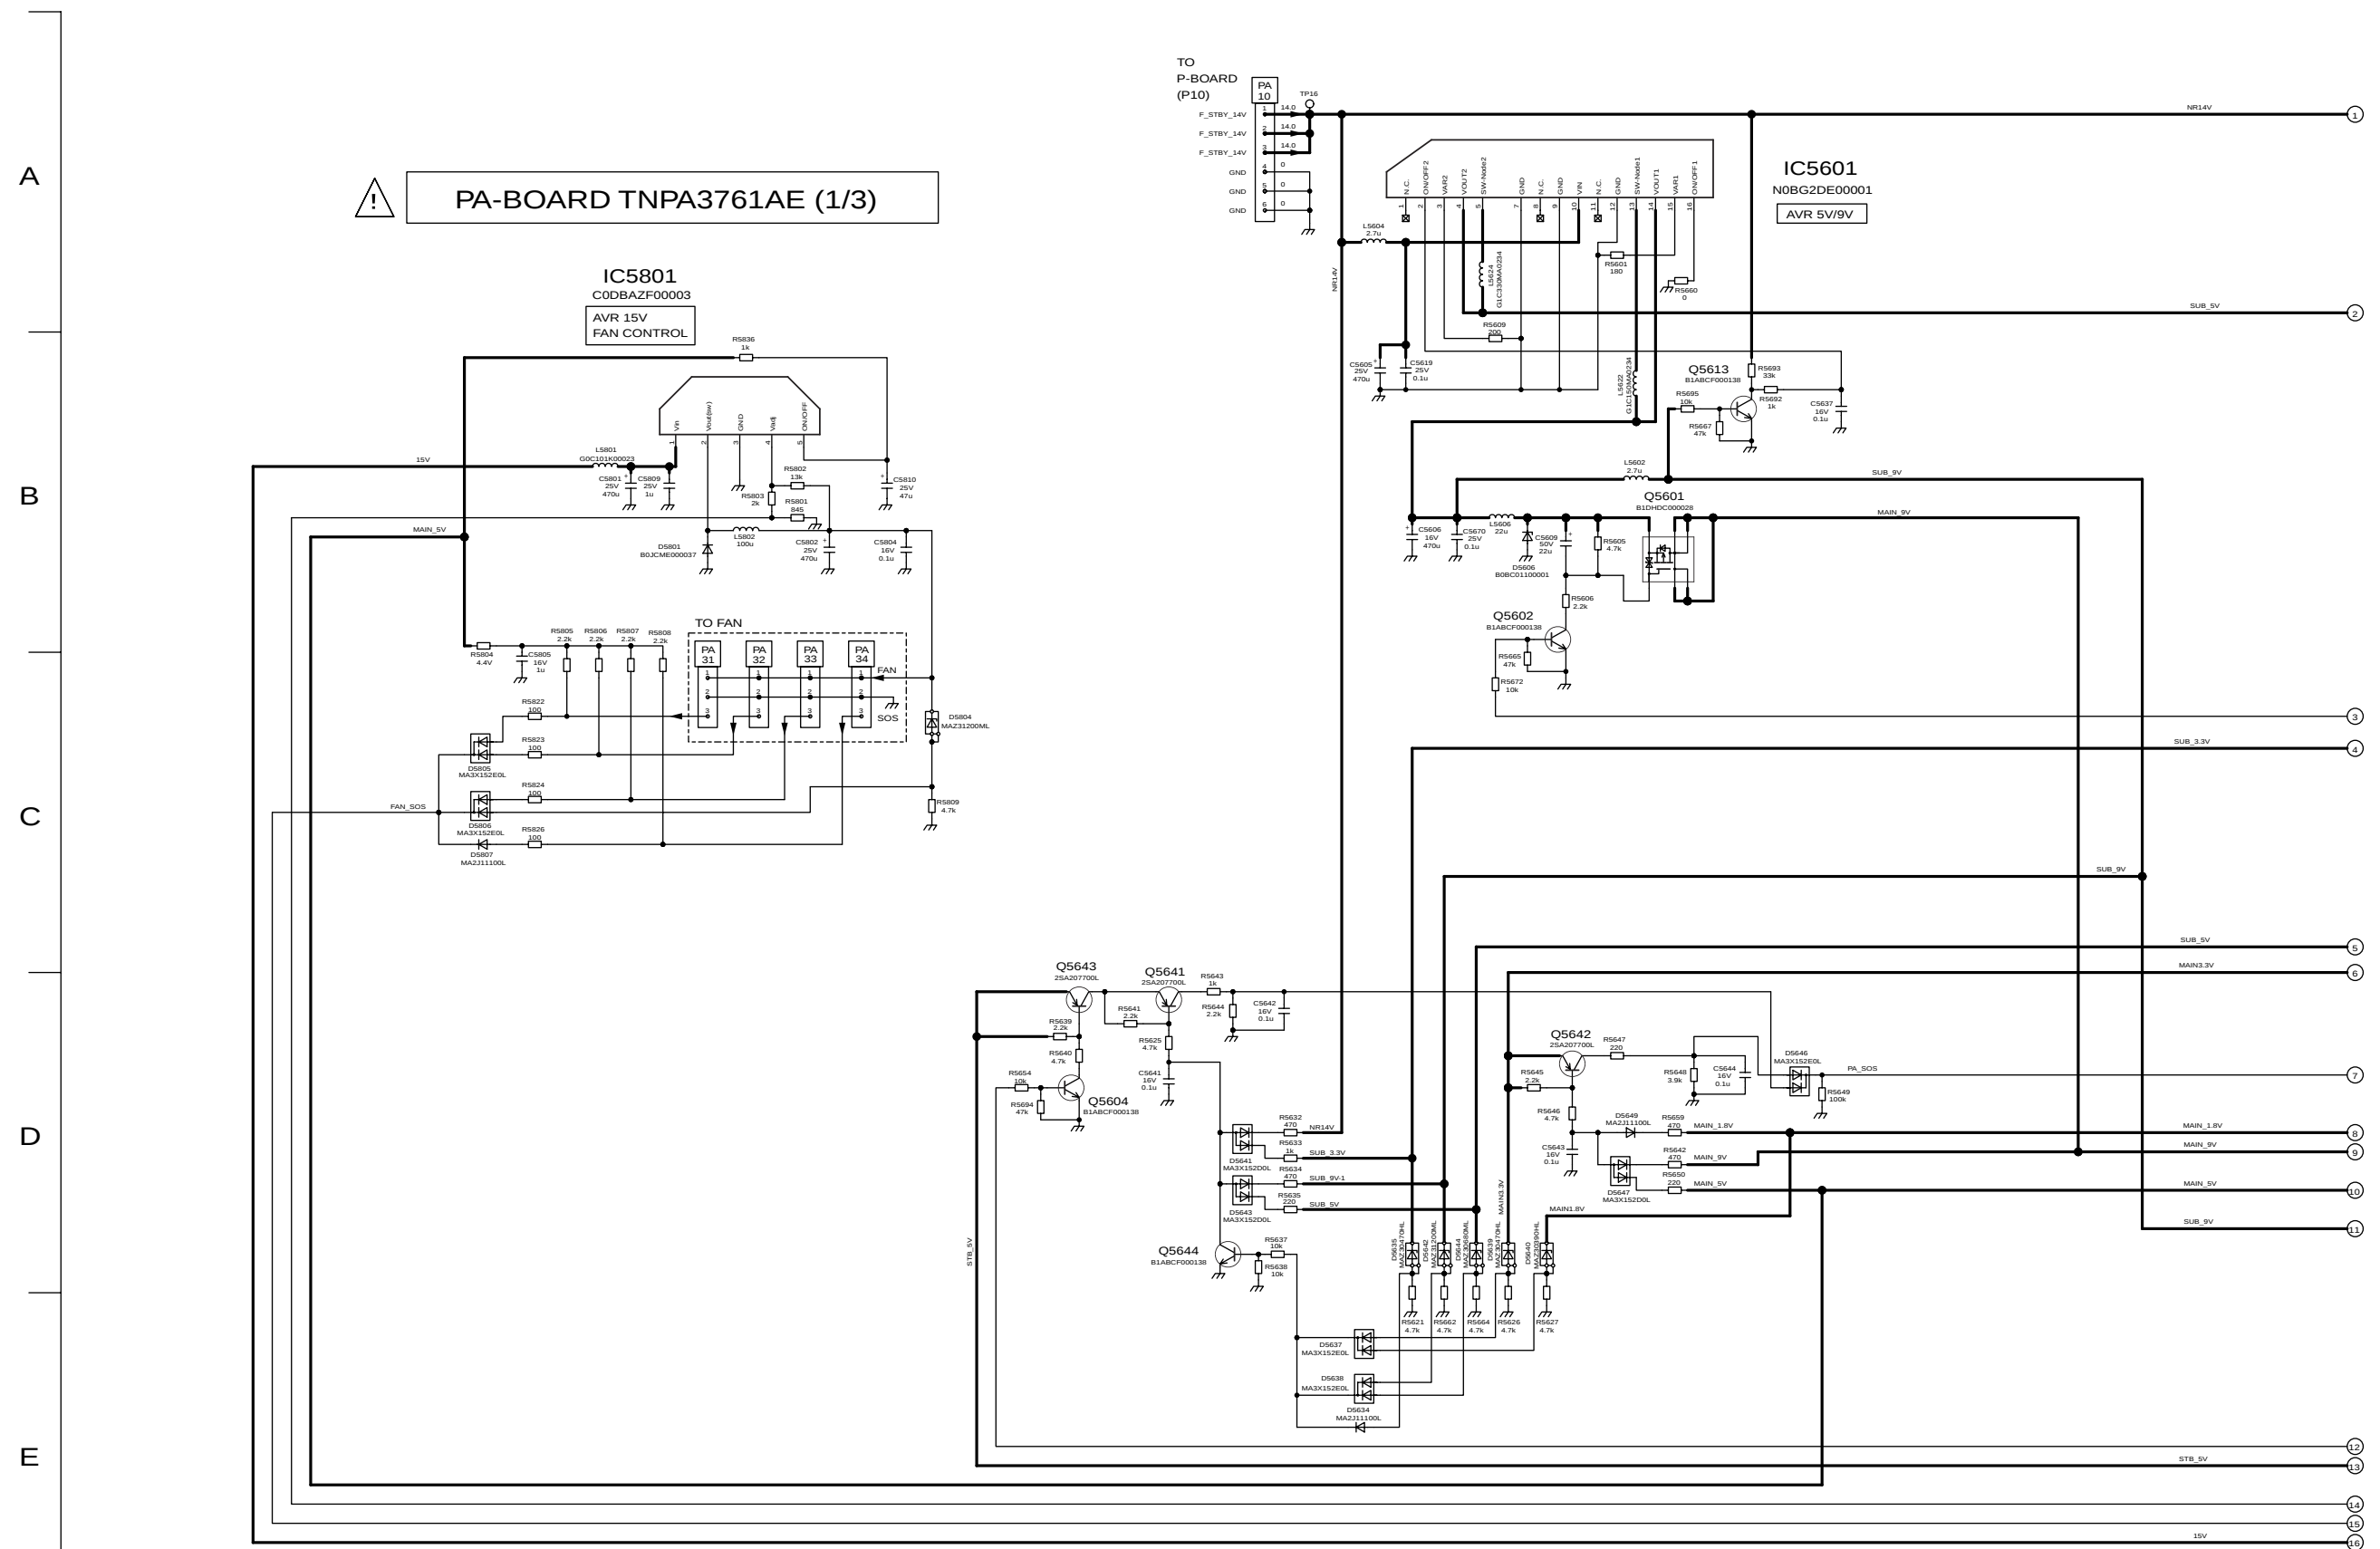


TH-50PV600AZ/H/M/MT
PA-Board (1 of 3) Schematic Diagram

TH-50PV600AZ/H/M/MT
PA-Board (1 of 3) Schematic Diagram

14.9. PA-Board (3 of 3) Schematic Diagram

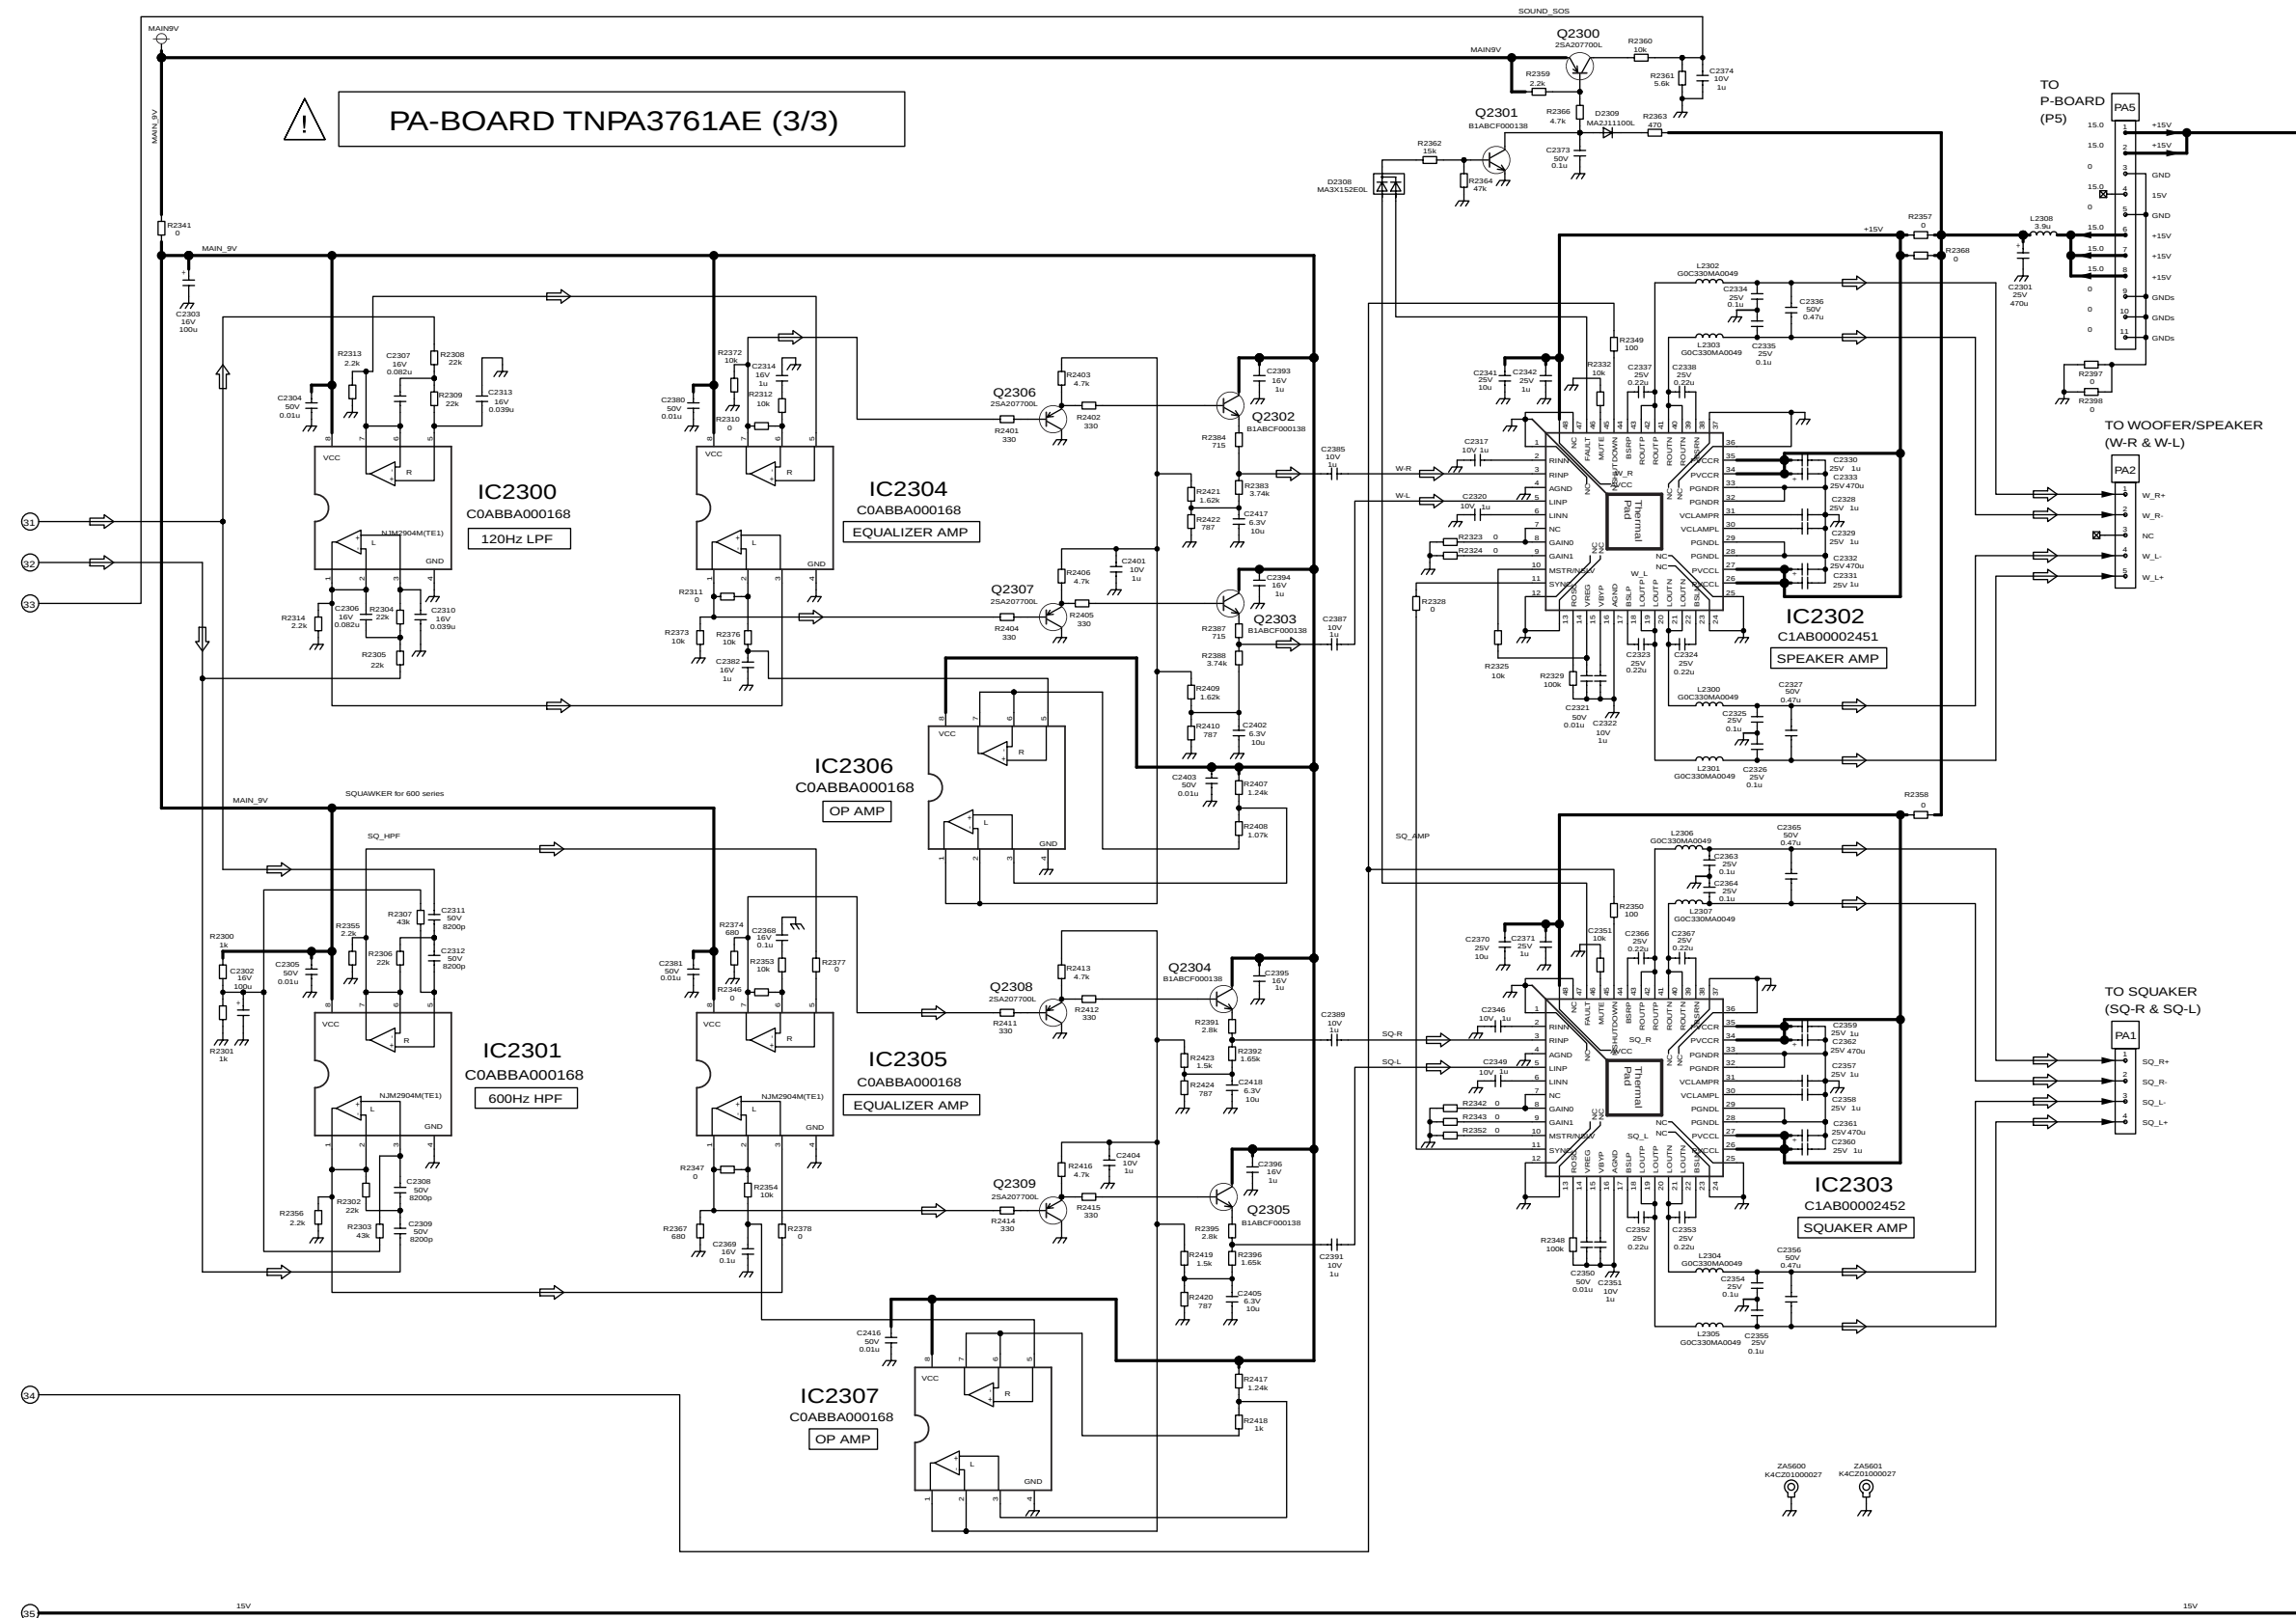TH-50PV600AZ/H/M/MT
PA-Board (3 of 3) Schematic DiagramTH-50PV600AZ/H/M/MT
PA-Board (3 of 3) Schematic Diagram



TH-50PV600AZ/H/M/MT H and TA-Board Block Diagram

14.11. H-Board (1 of 3) Schematic Diagram

A

B


C

D

E

F


! H-BOARD TNPA3760 (1/3)

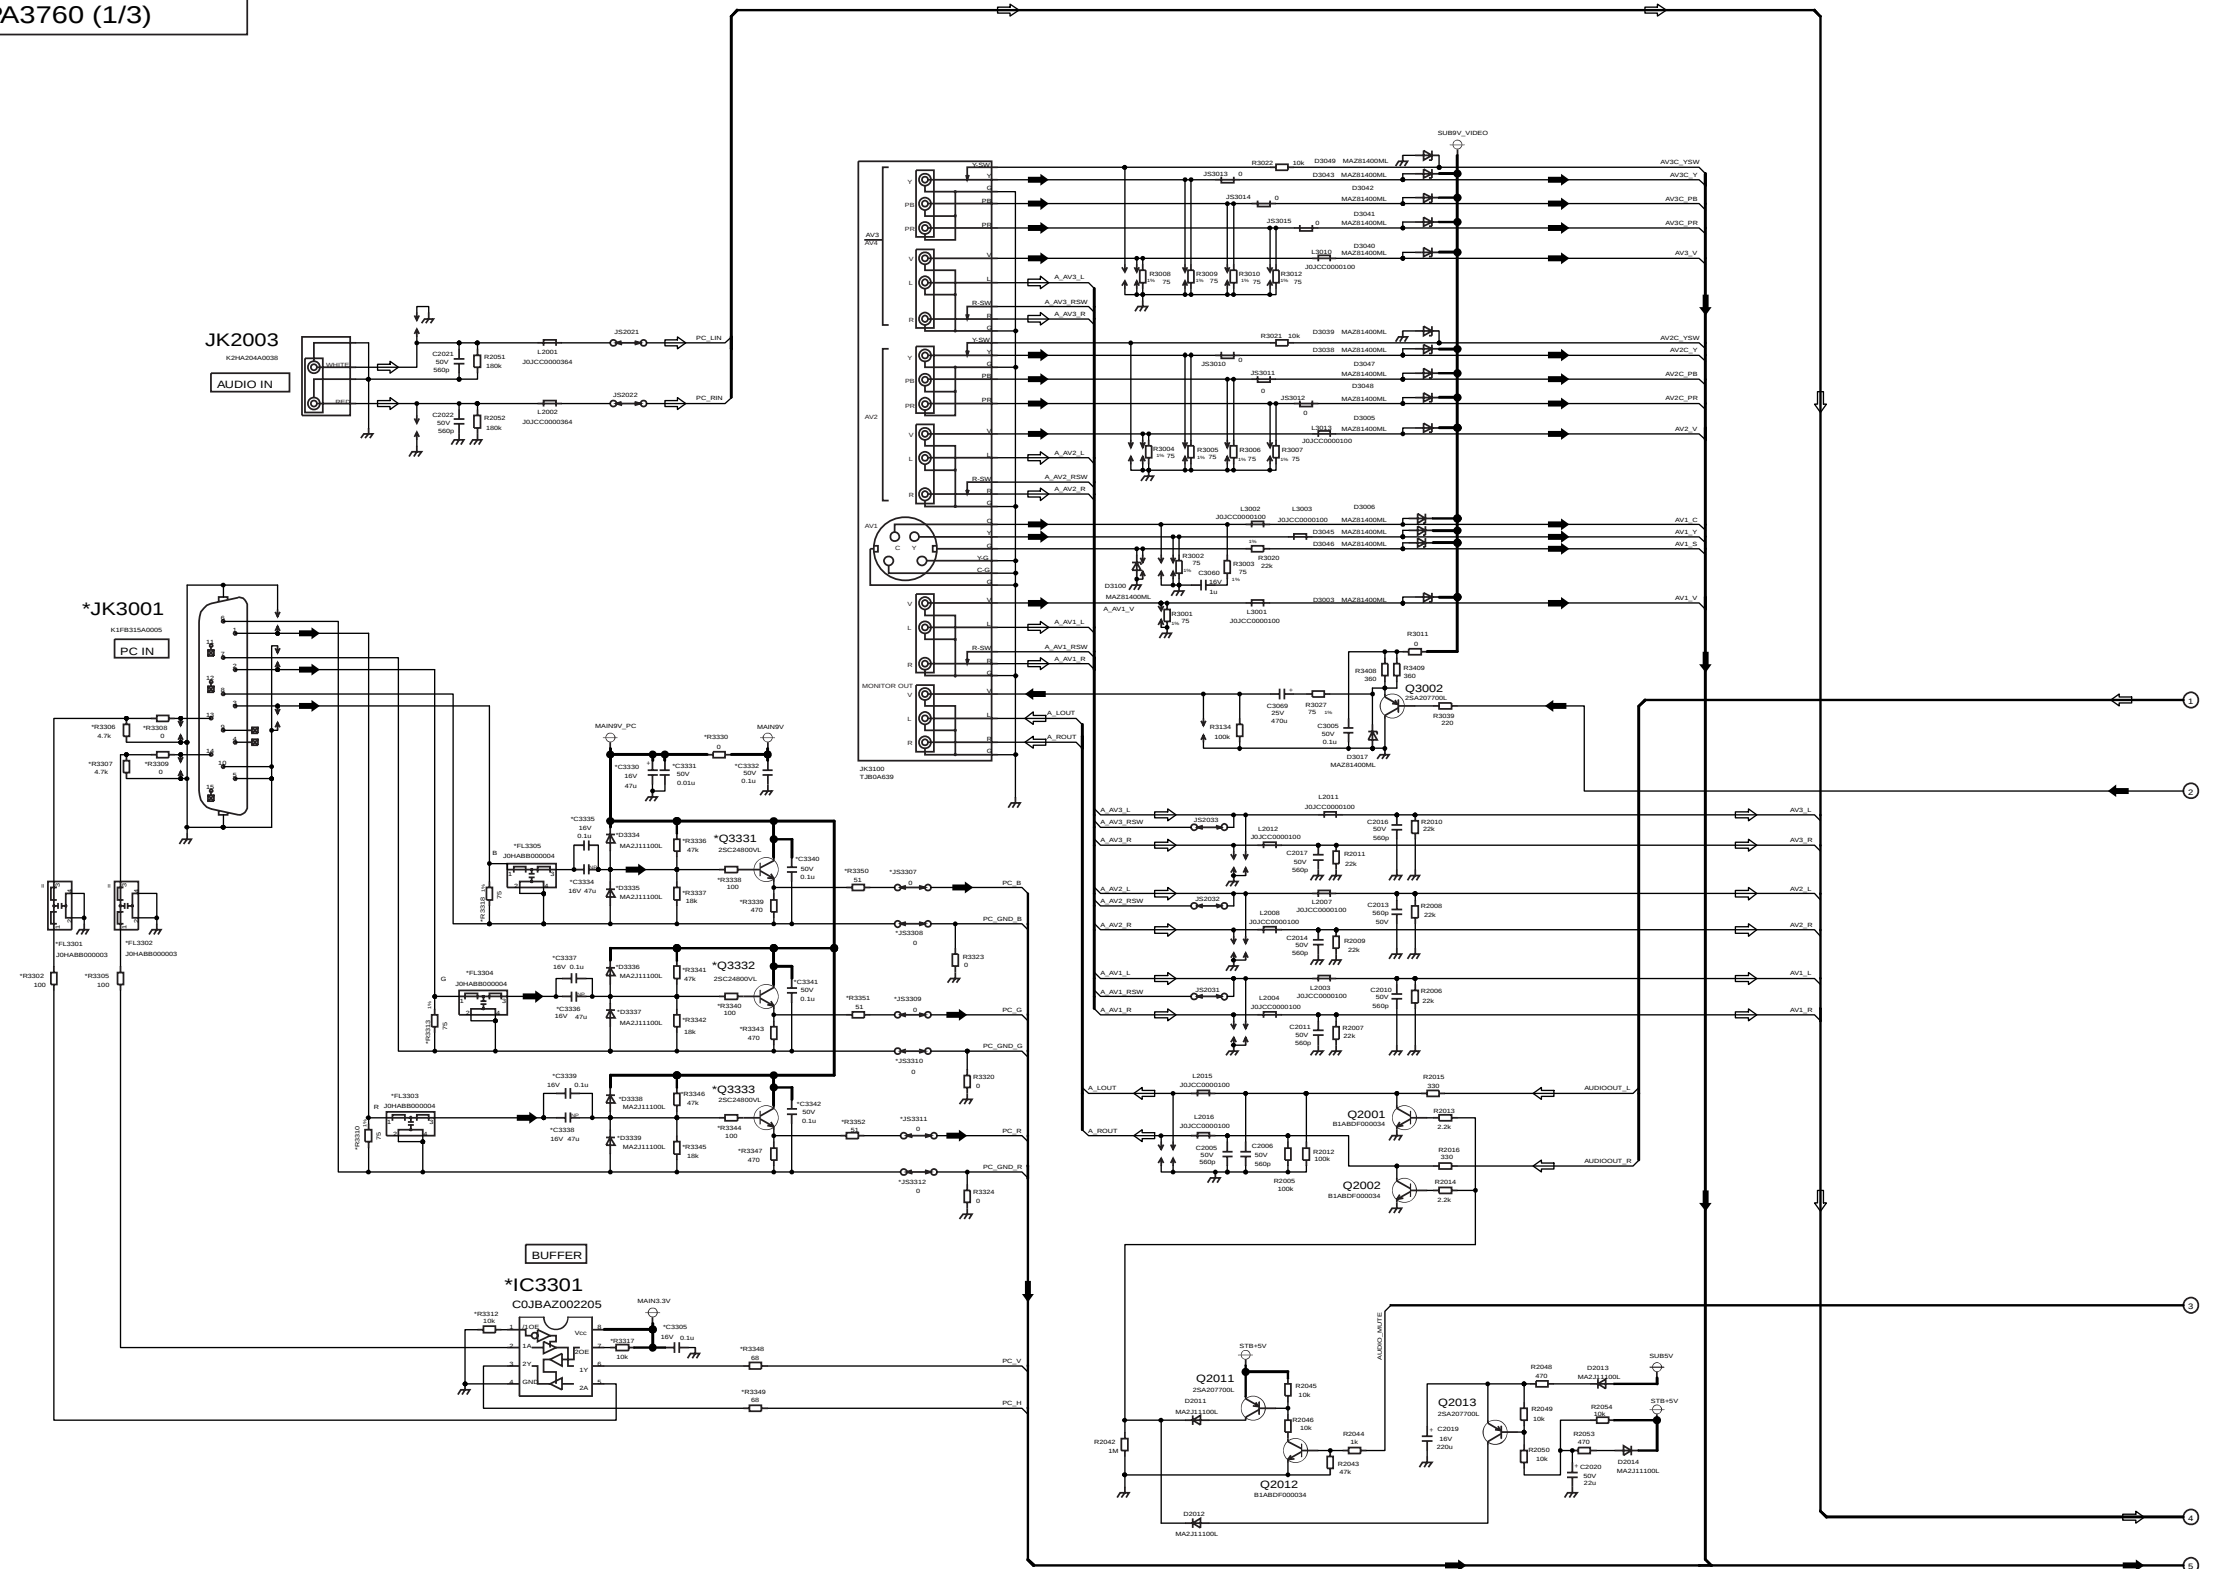


TH-50PV600AZ/H/M/MT H-Board (1 of 3) Schematic Diagram

TH-50PV600AZ/H/M/MT H-Board (1 of 3) Schematic Diagram


14.12. H-Board (2 of 3) Schematic Diagram

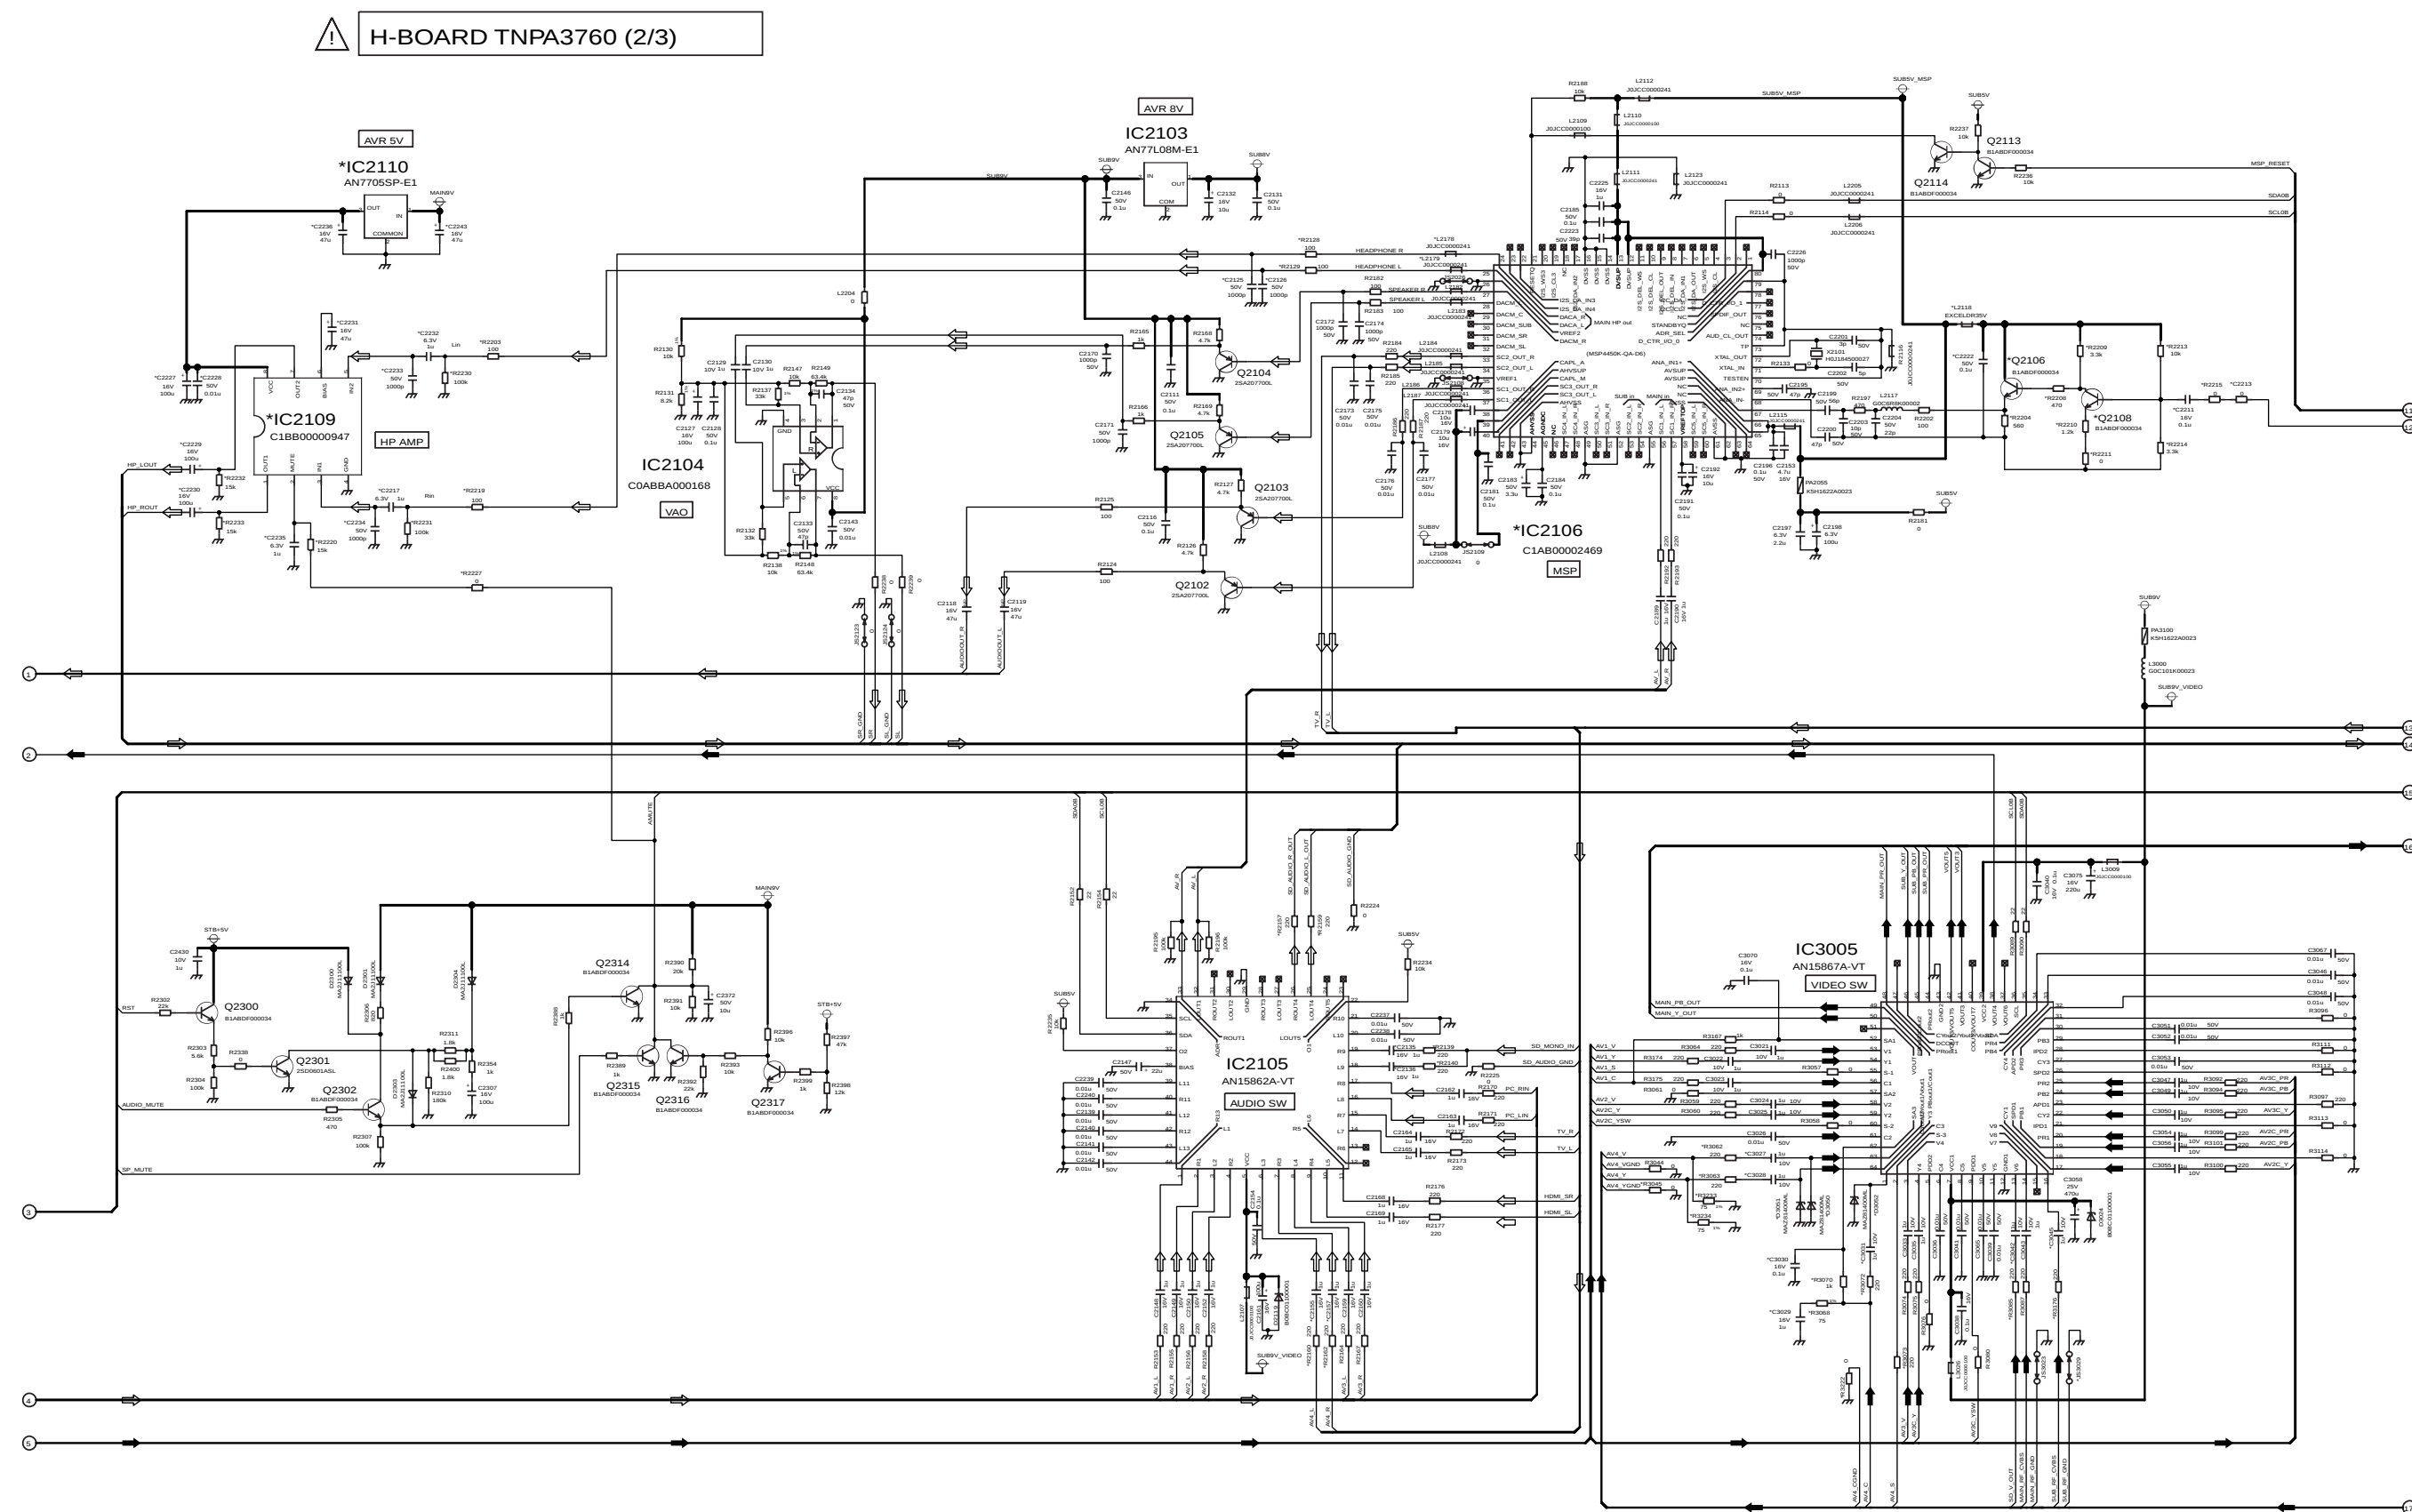


14.13. H-Board (3 of 3) Schematic Diagram

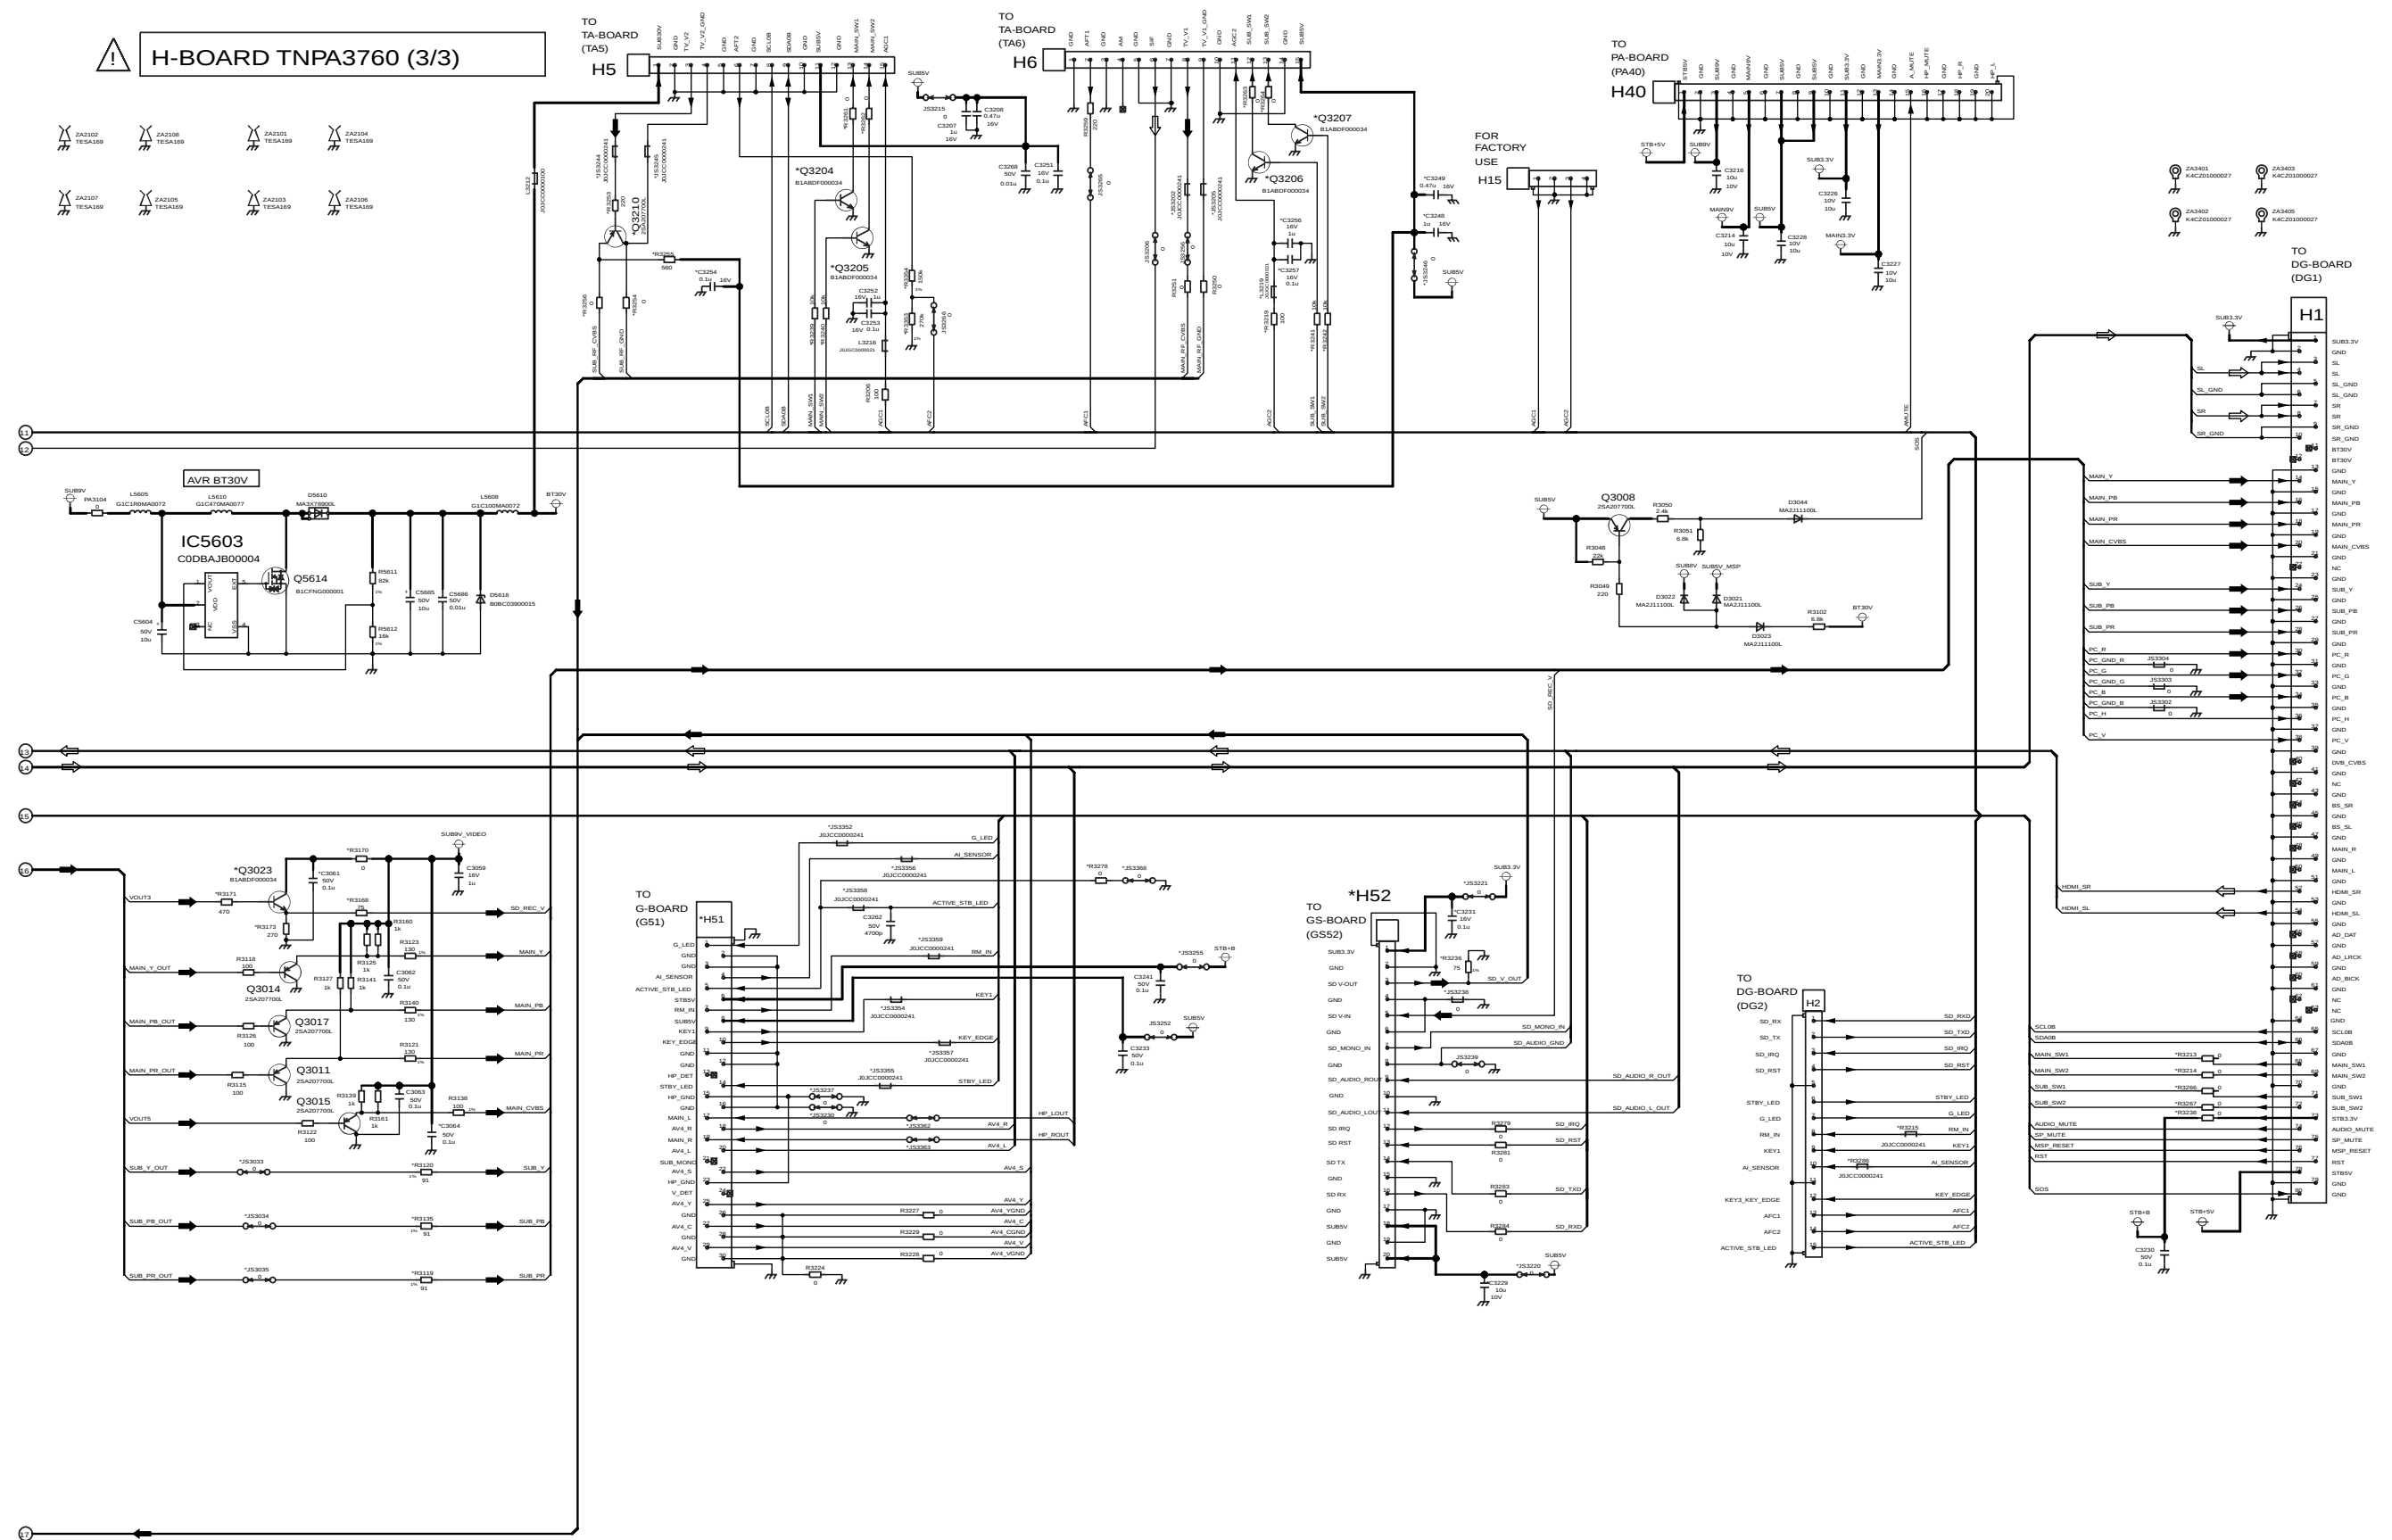

14.14. G, GK, HC and K-Board Block Diagram



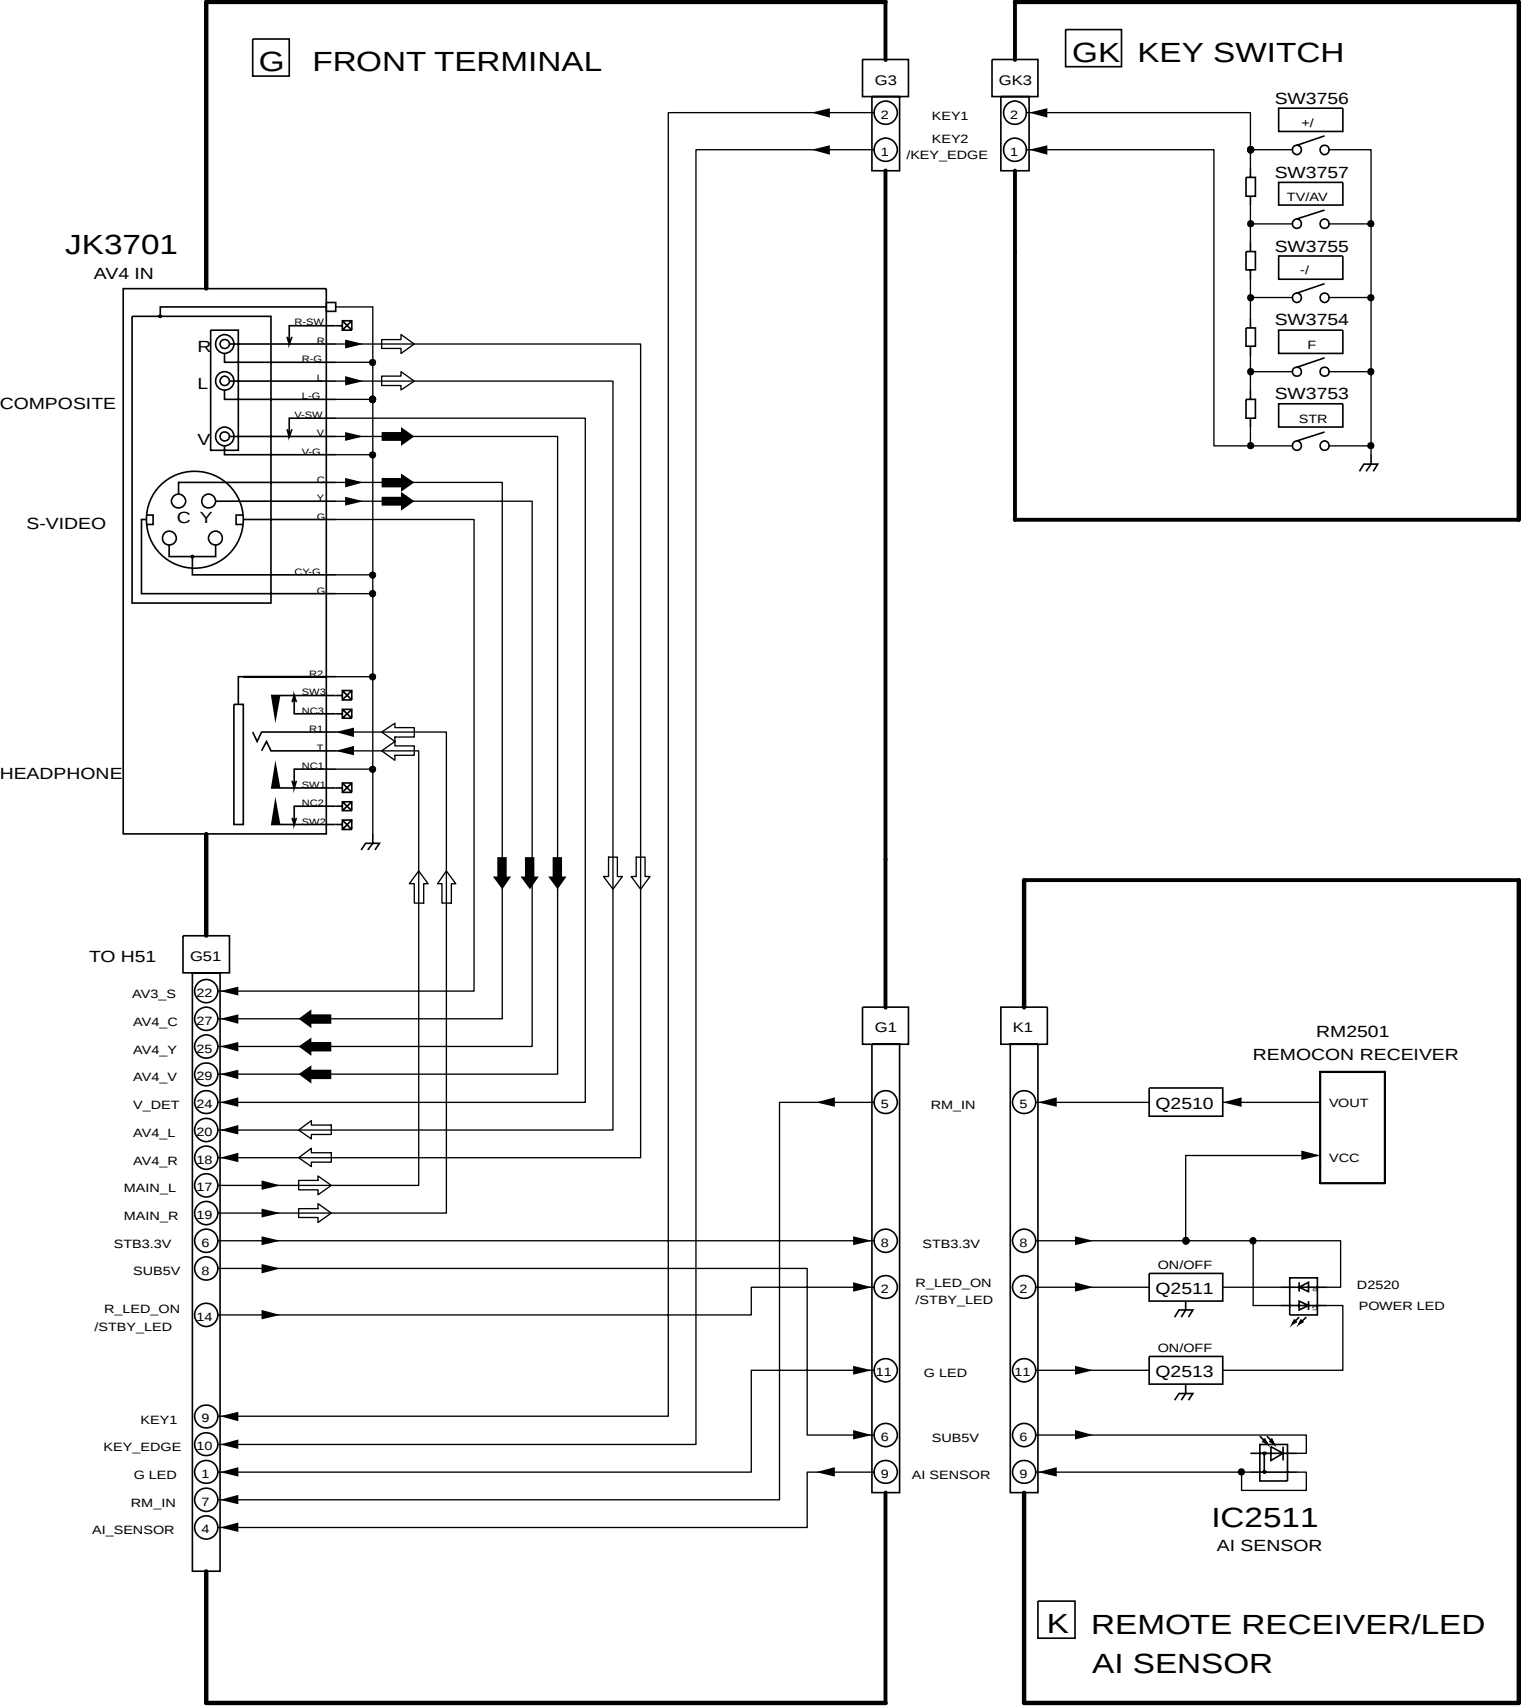


TH-50PV600AZ/H/M/MT
G, GK, K, and HC-Board Block Diagram

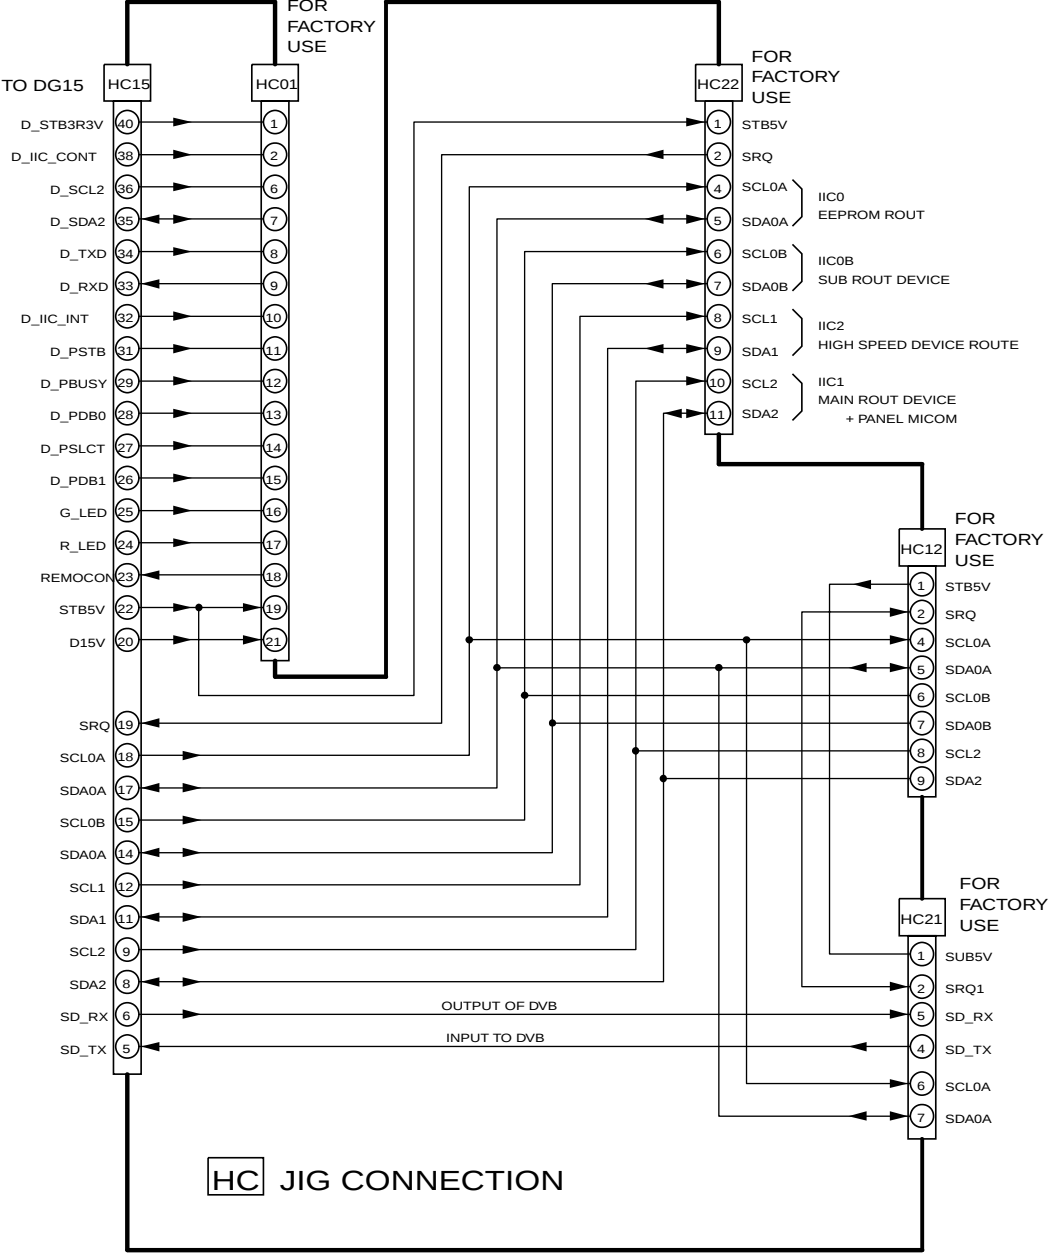


TH-50PV600AZ/H/M/MT
G, GK, K, and HC-Board Block Diagram


14.15. G, GK and K-Board Schematic Diagram

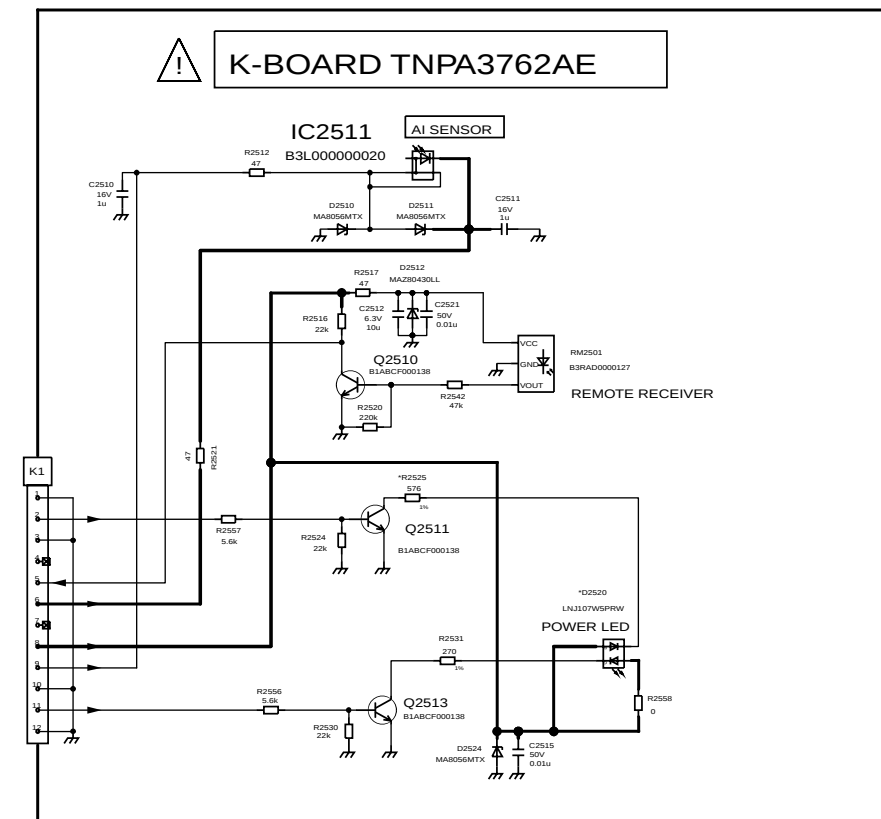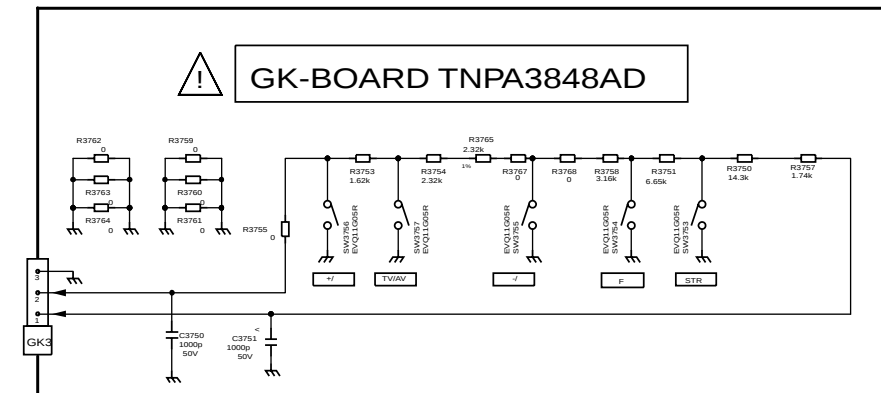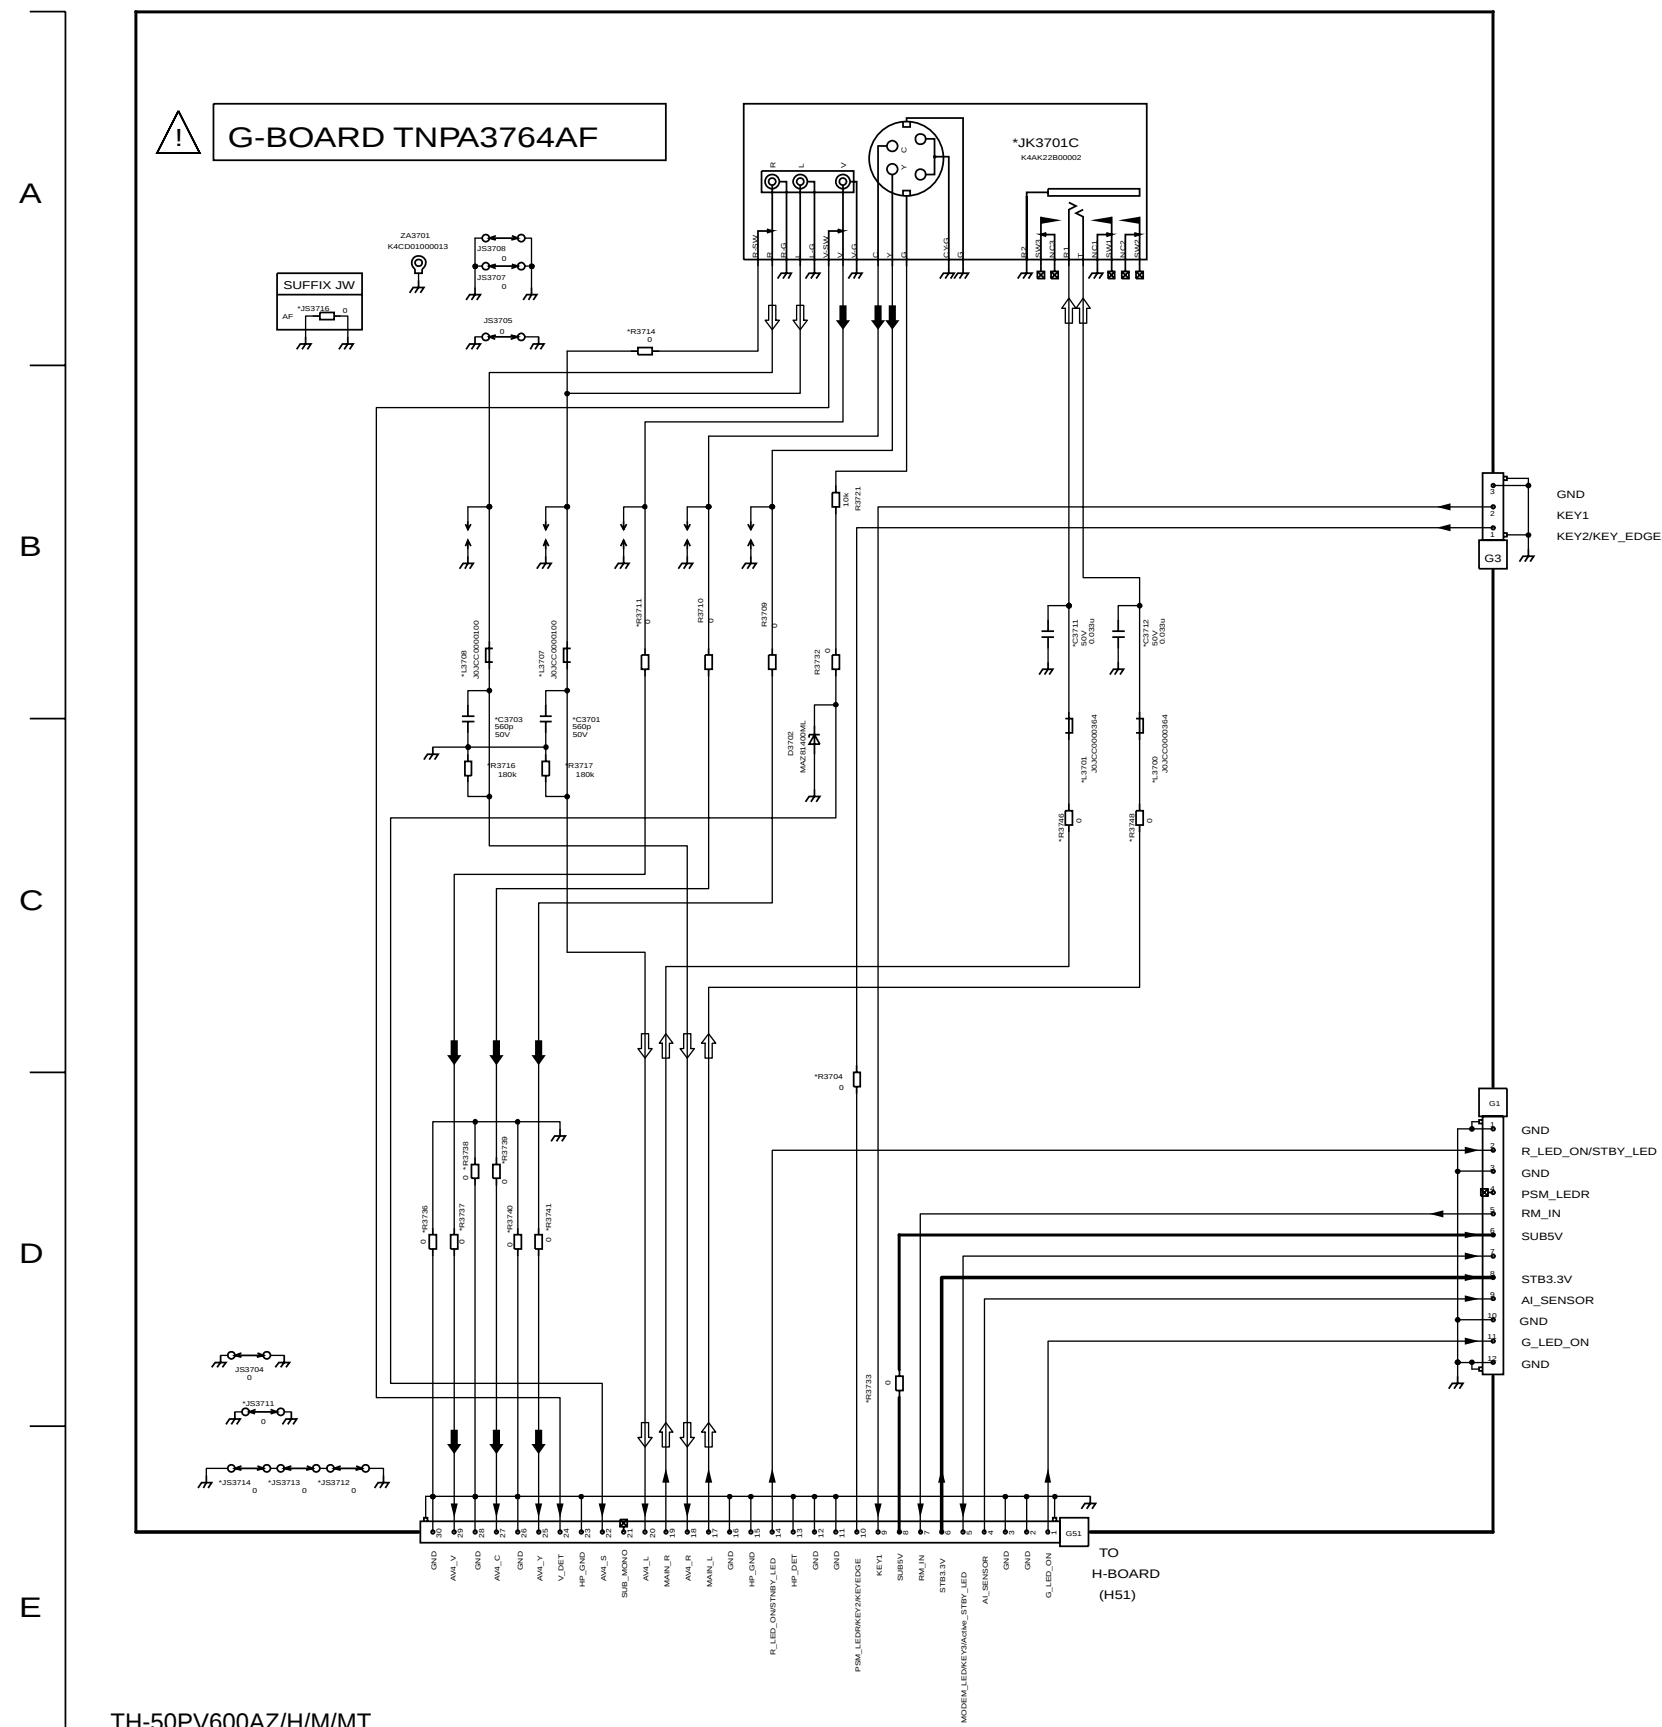


14.16. HC and TA-Board Schematic Diagram

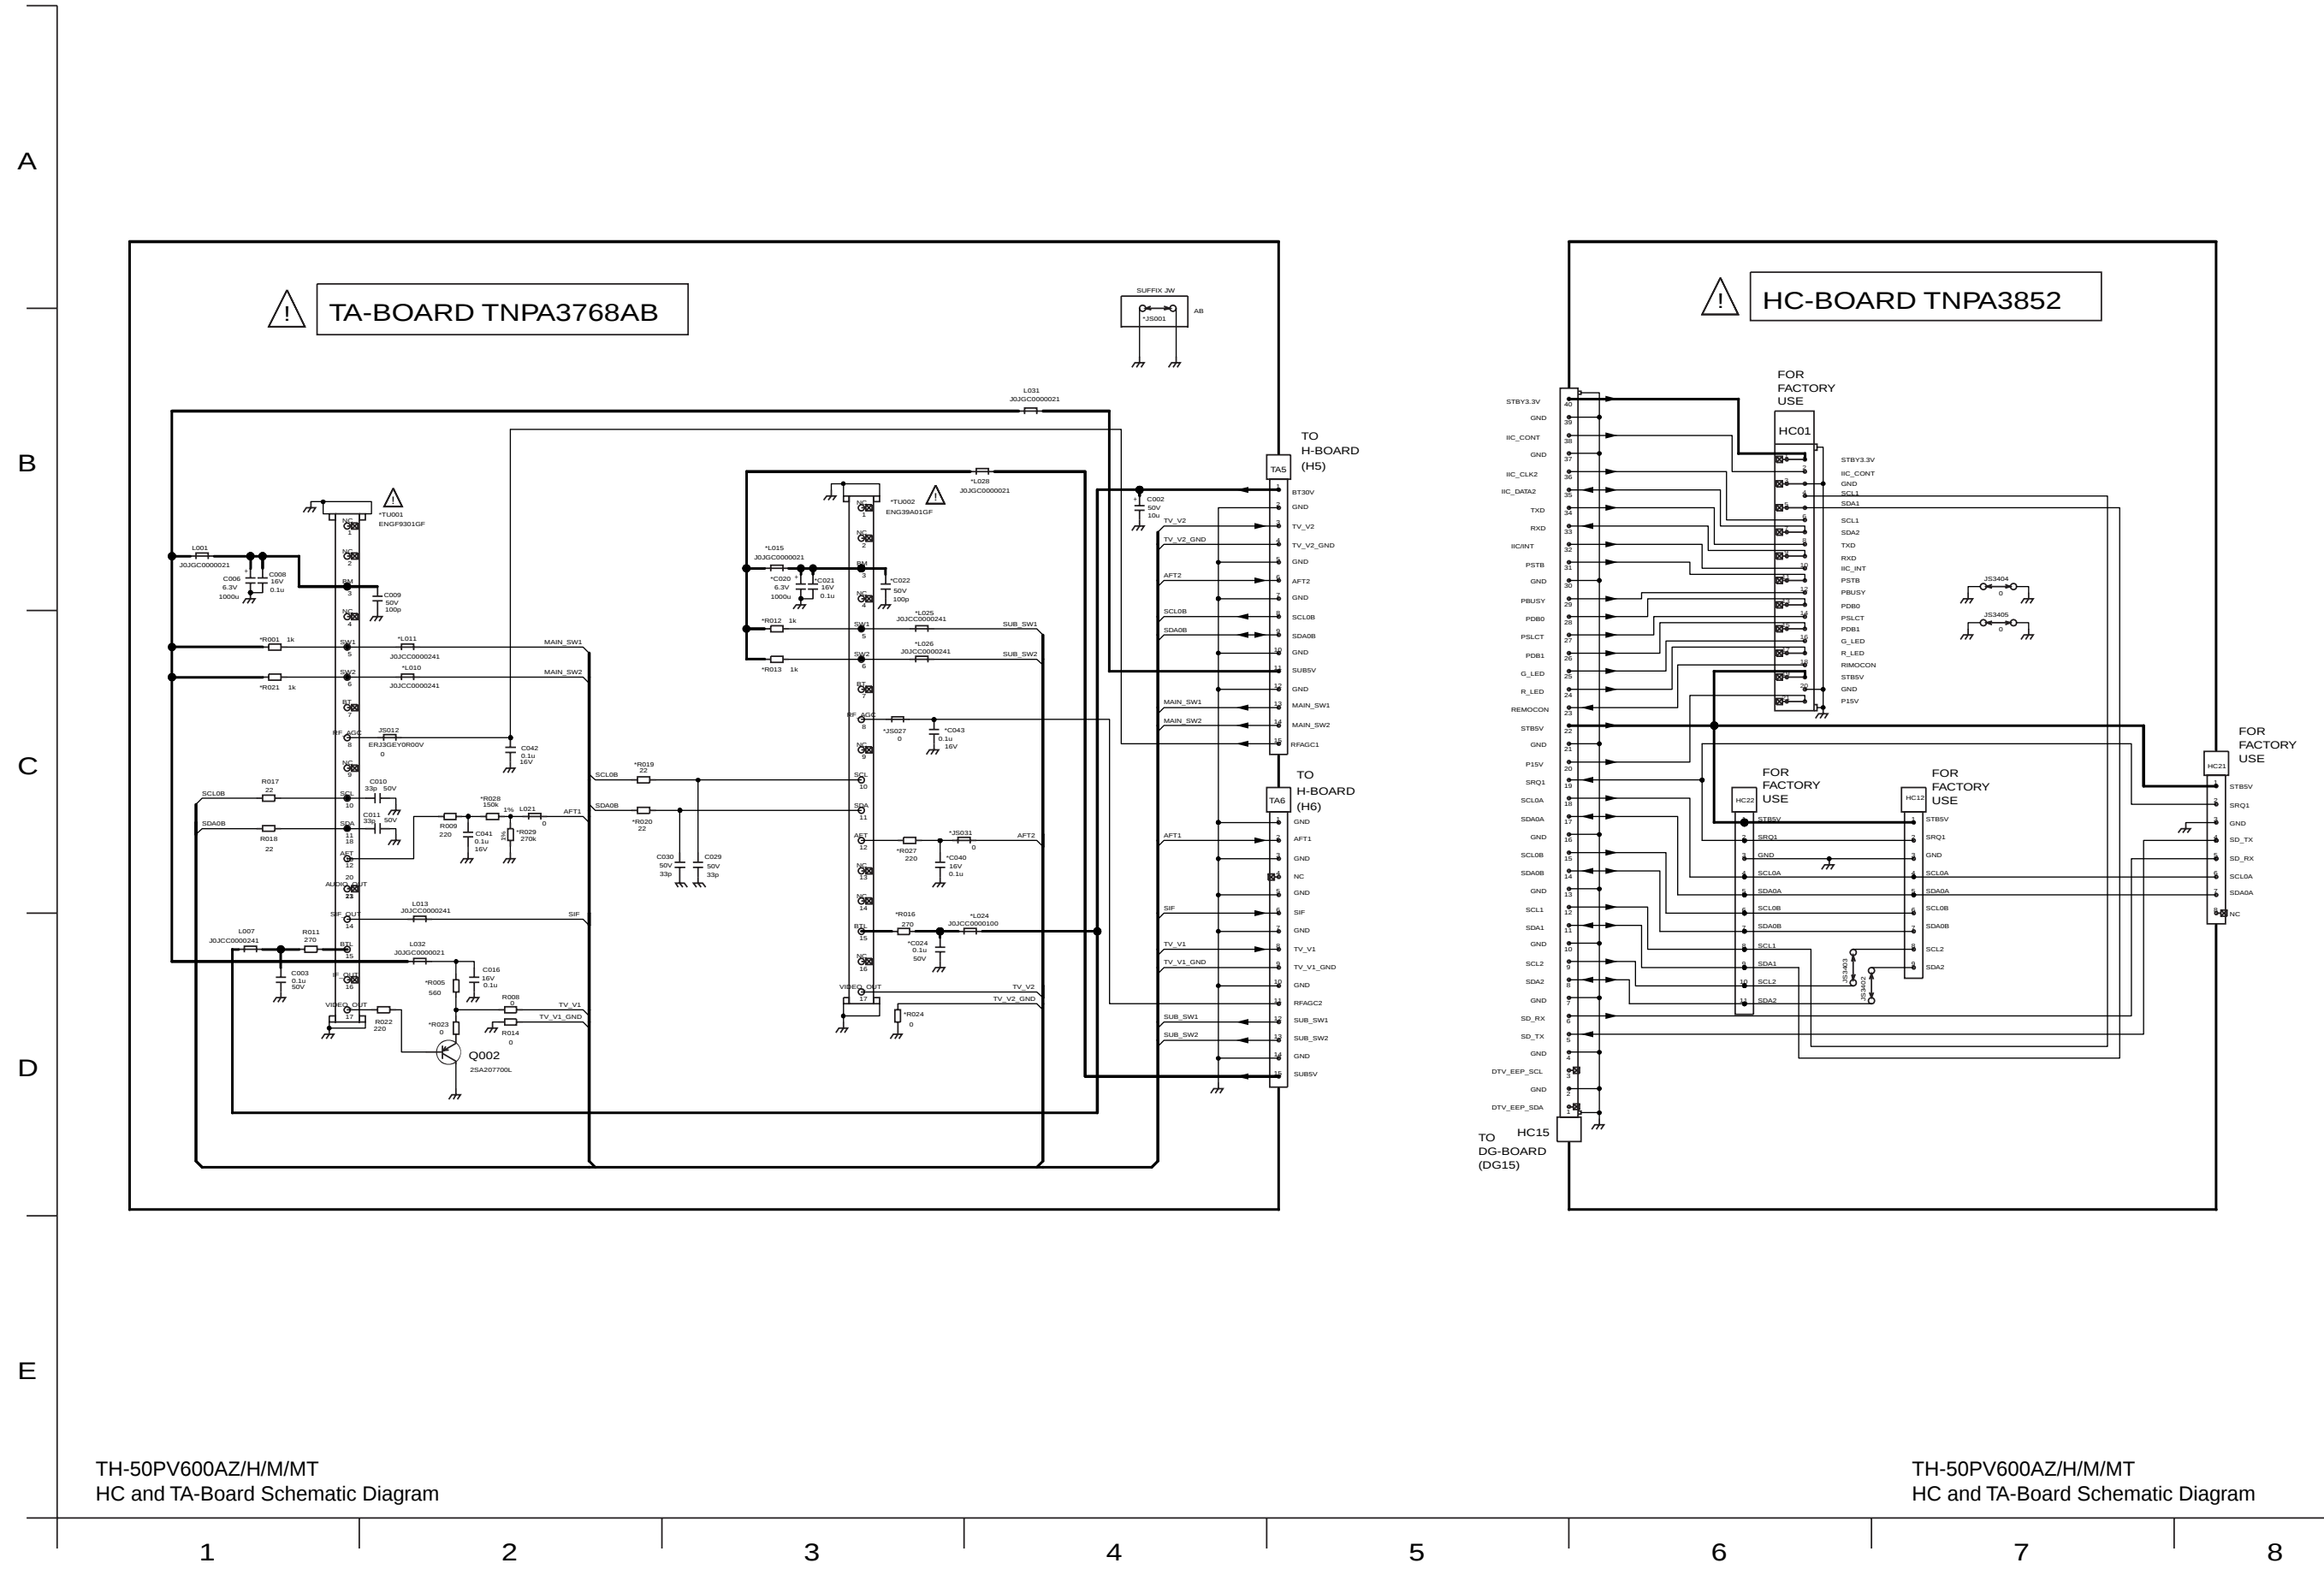


14.17. DG-Board (1 of 3) Block Diagram

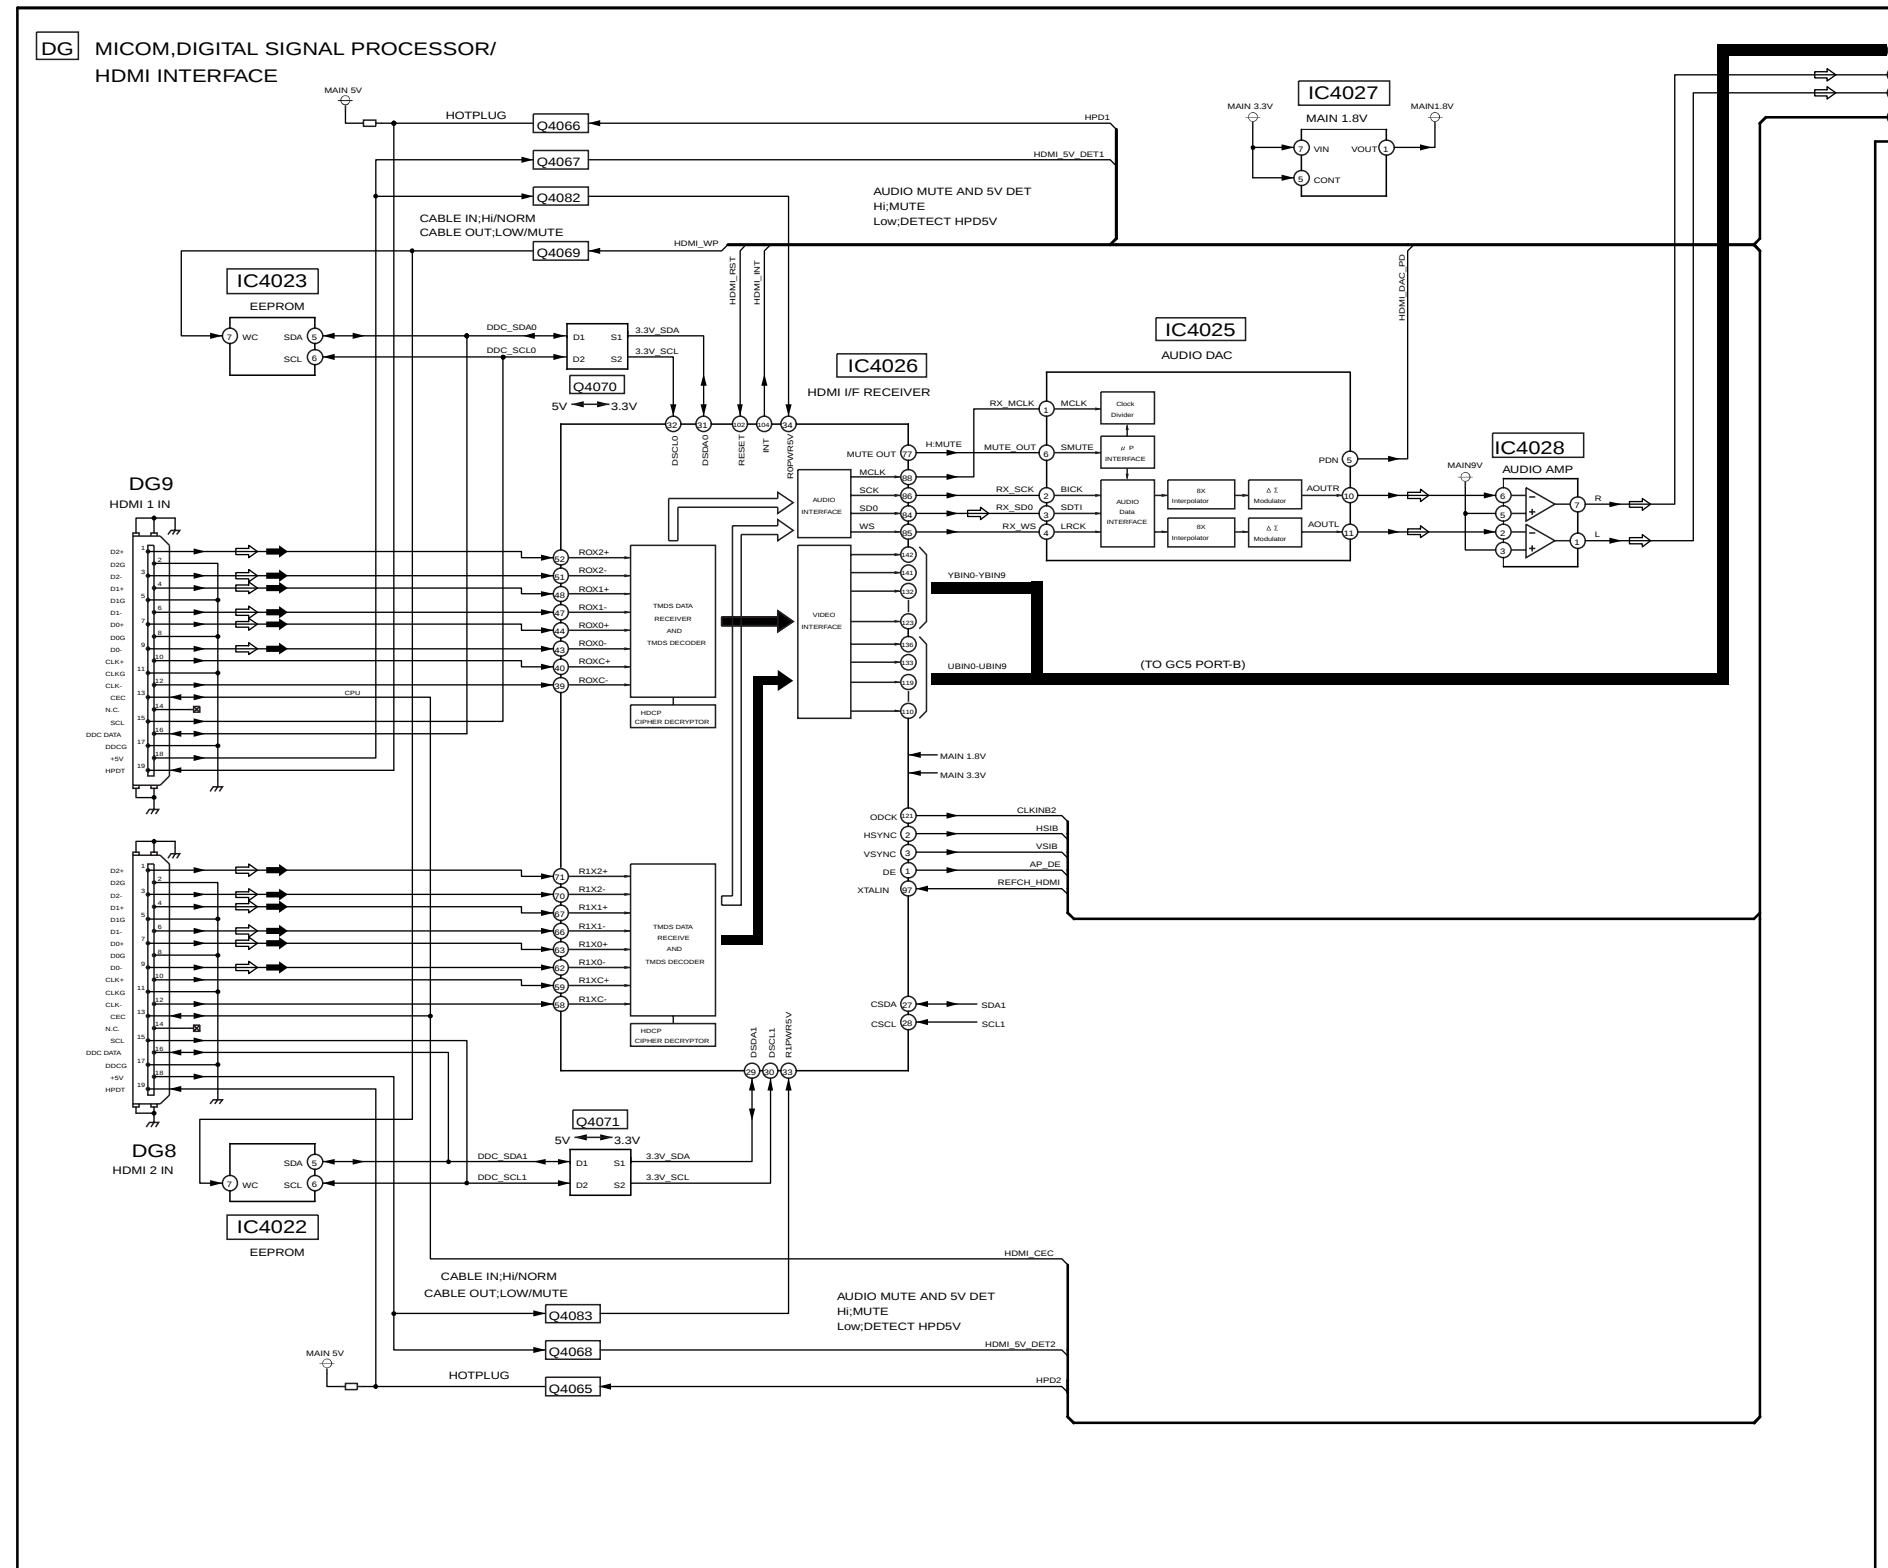



TH-50PV600AZ/H/M/MT
DG-Board (2 of 3) Block Diagram


14.19. DG-Board (3 of 3) Block Diagram

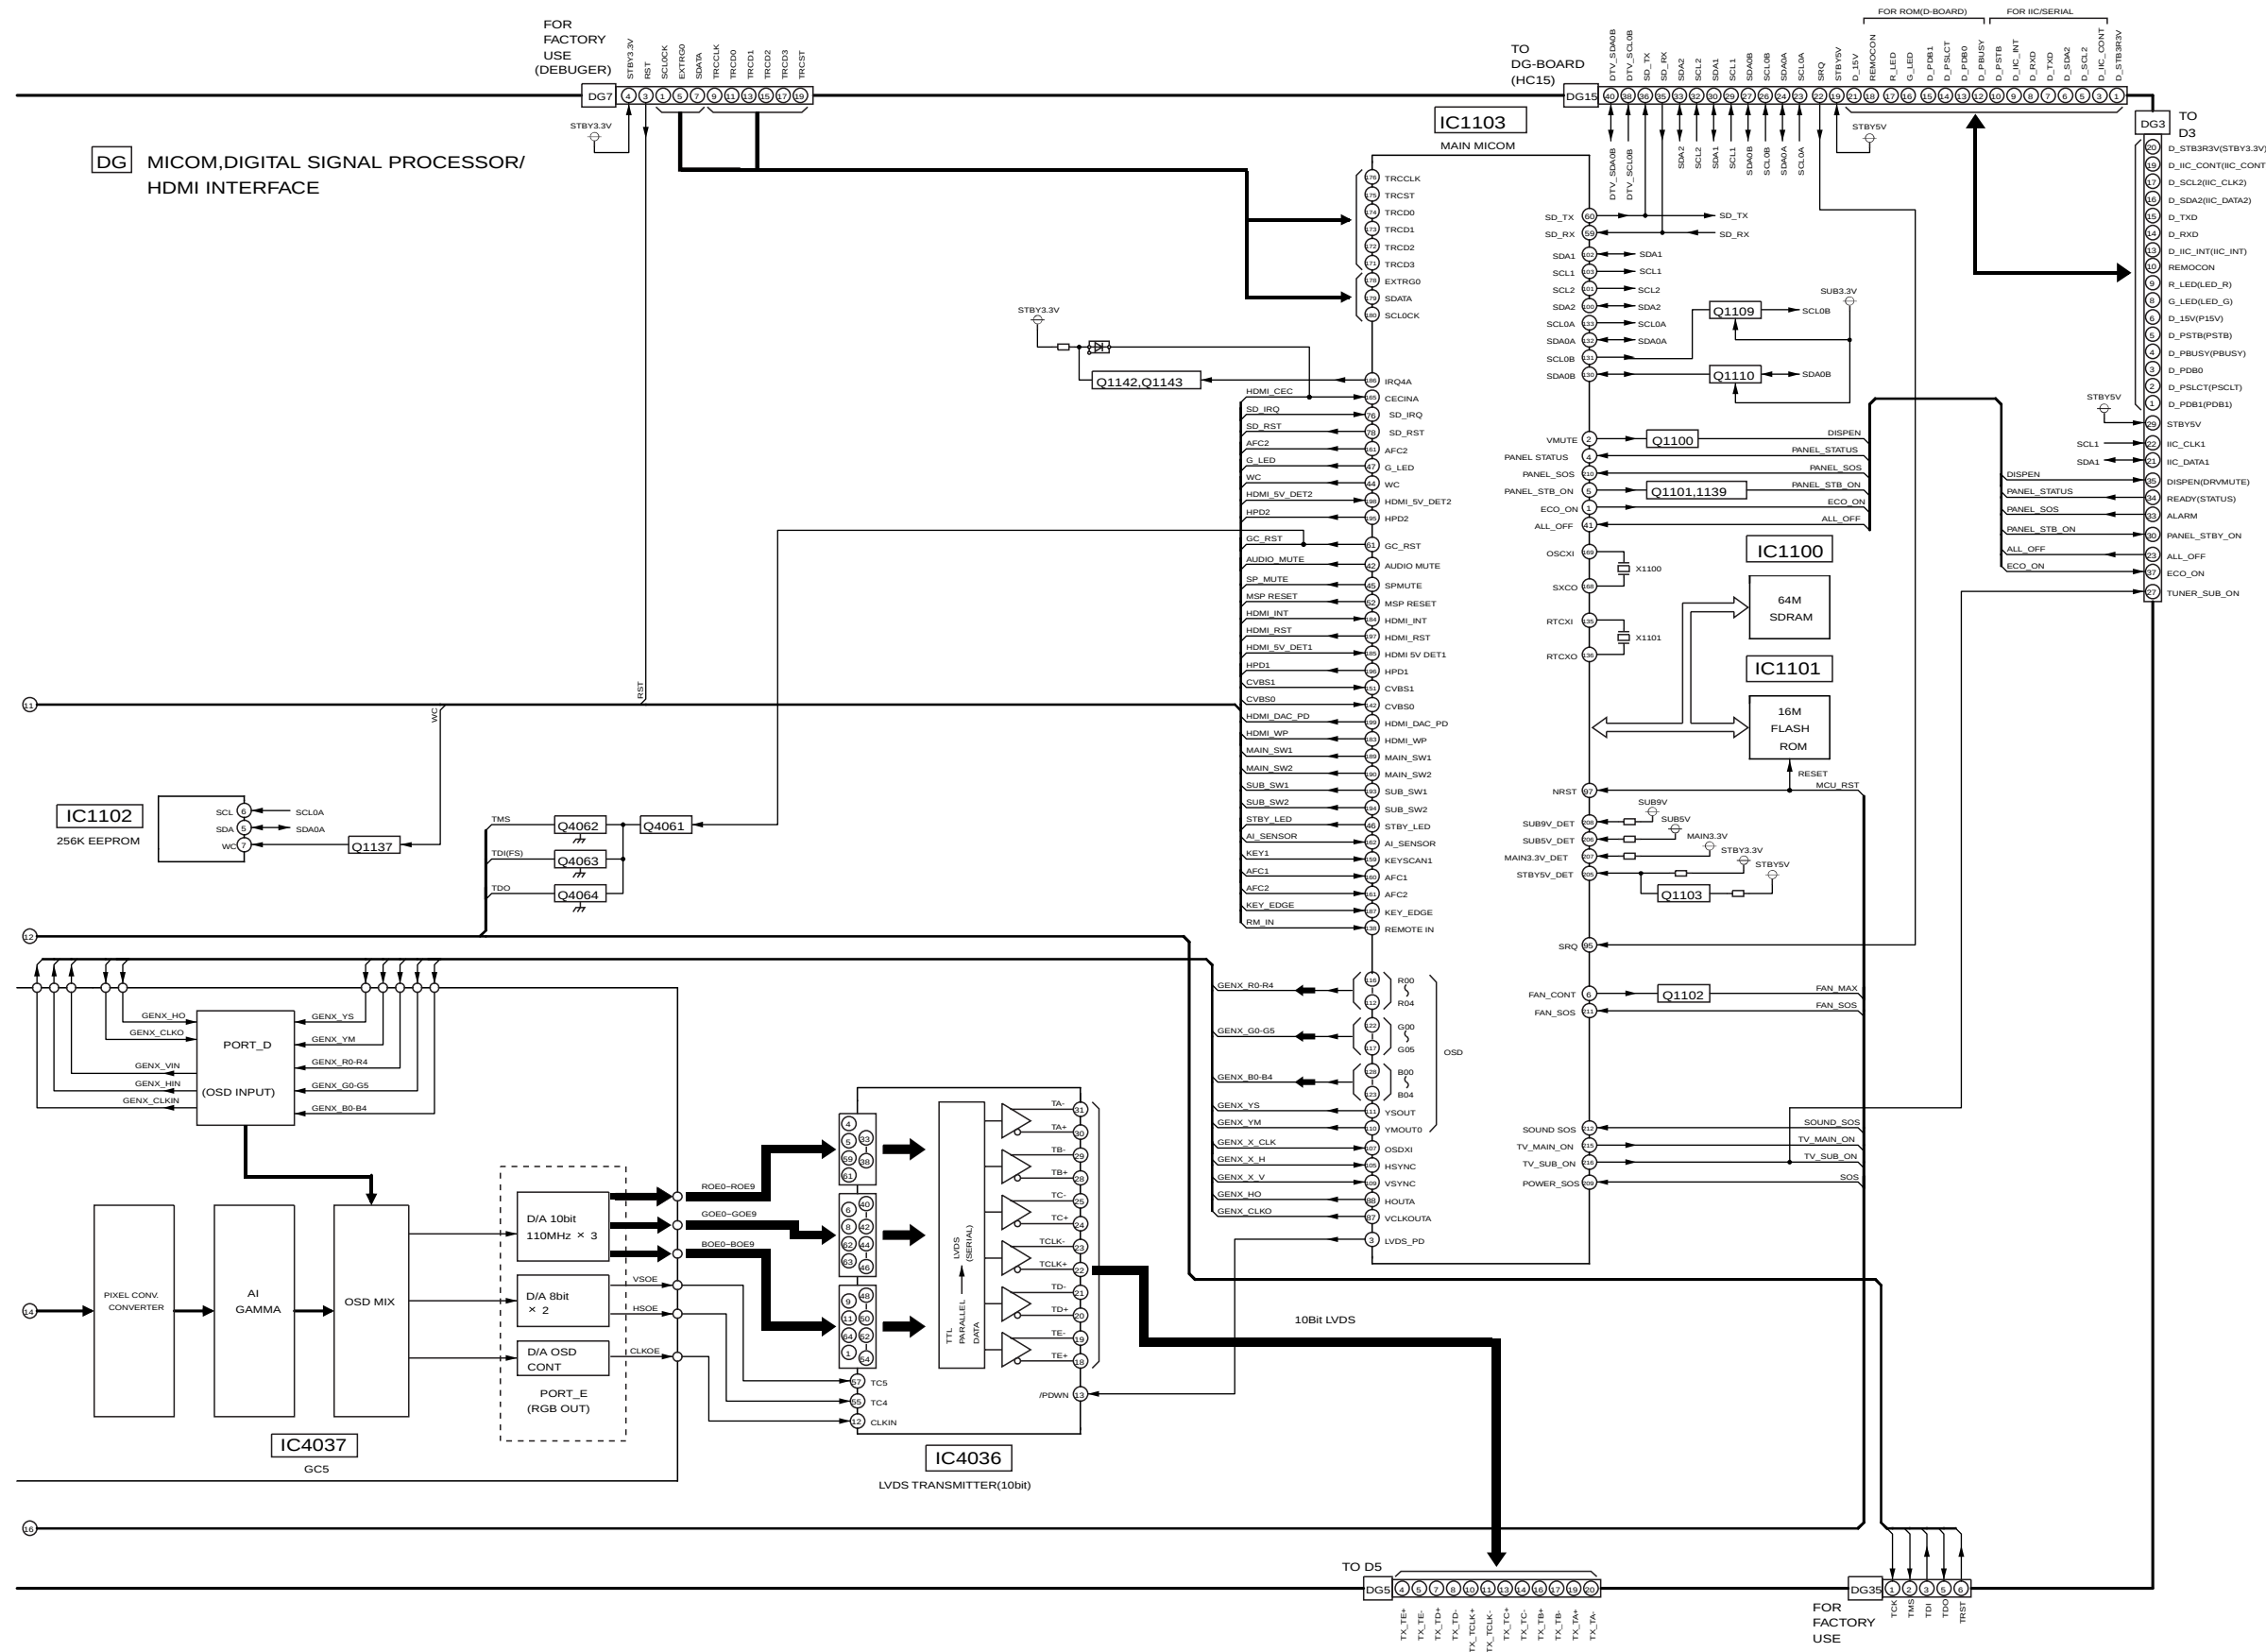

TH-50PV600AZ/H/M/MT
DG-Board (3 of 3) Block Diagram


TH-50PV600AZ/H/M/MT
DG-Board (3 of 3) Block Diagram

14.20. DG-Board (1 of 8) Schematic Diagram

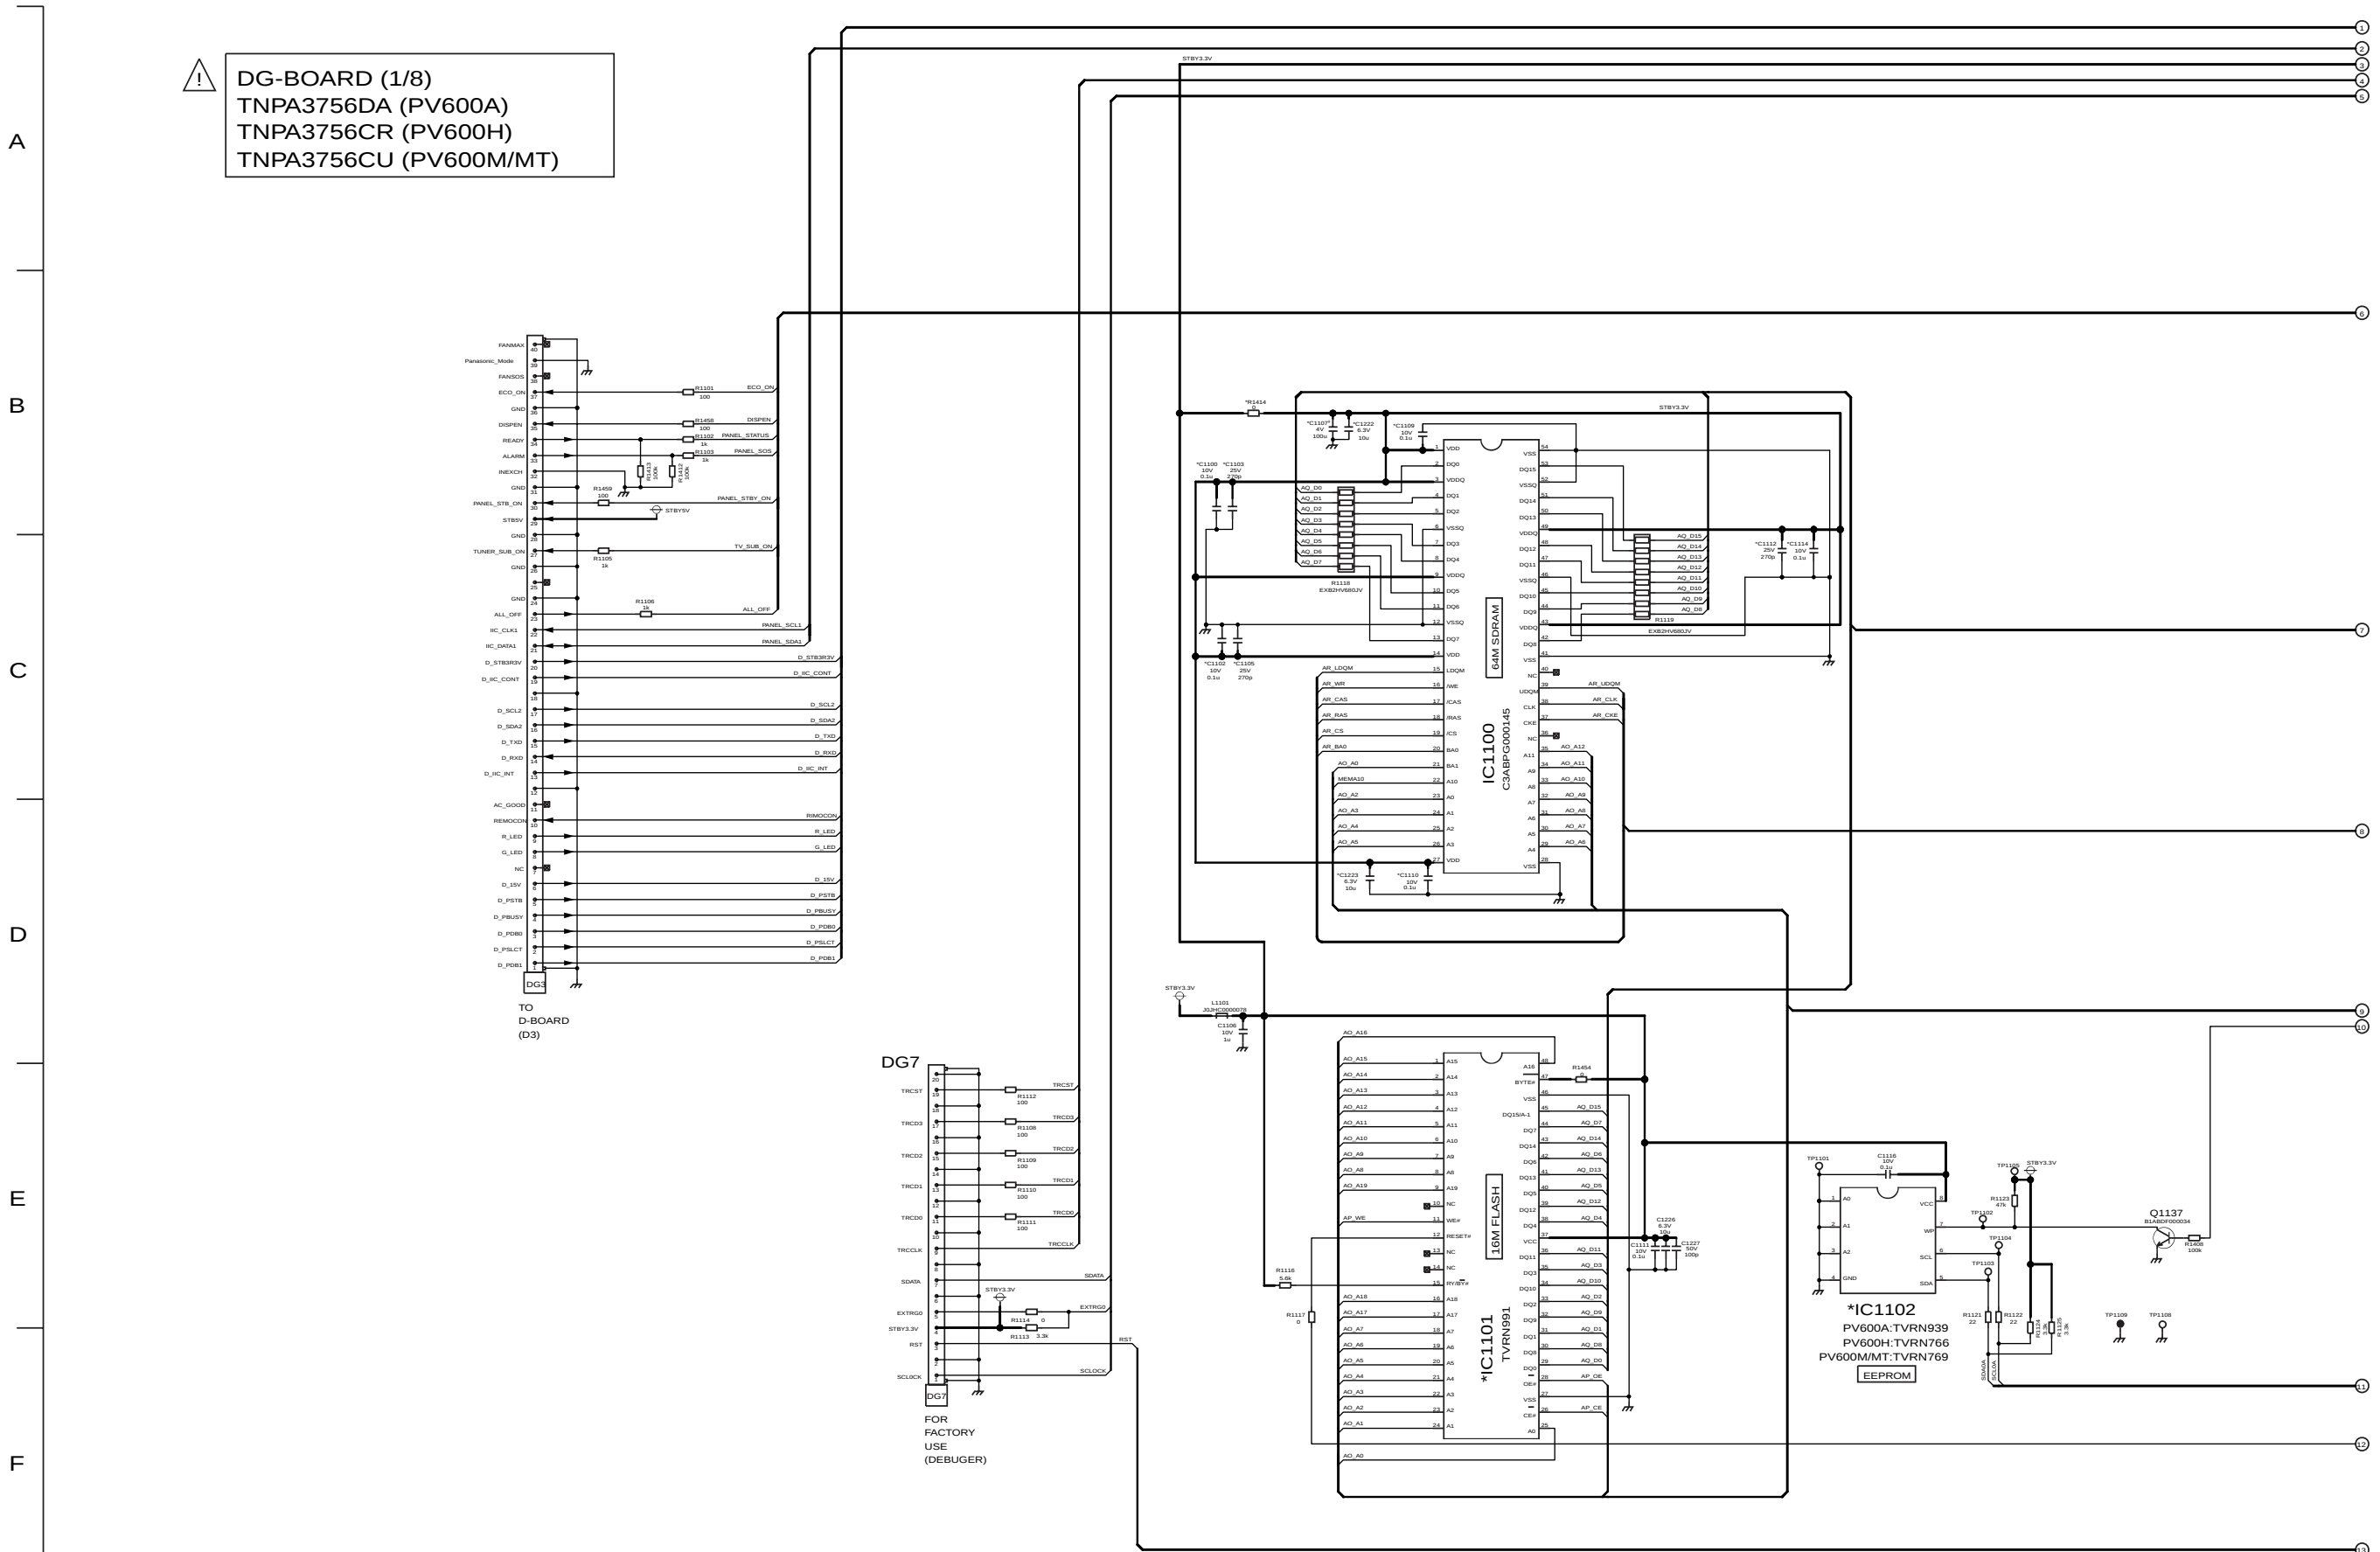


TH-50PV600AZ/H/M/MT DG-Board (1 of 8) Schematic Diagram

TH-50PV600AZ/H/M/MT DG-Board (1 of 8) Schematic Diagram




TH-50PV600AZ/H/M/MT DG-Board (2 of 8) Schematic Diagram






14.24. DG-Board (5 of 8) Schematic Diagram

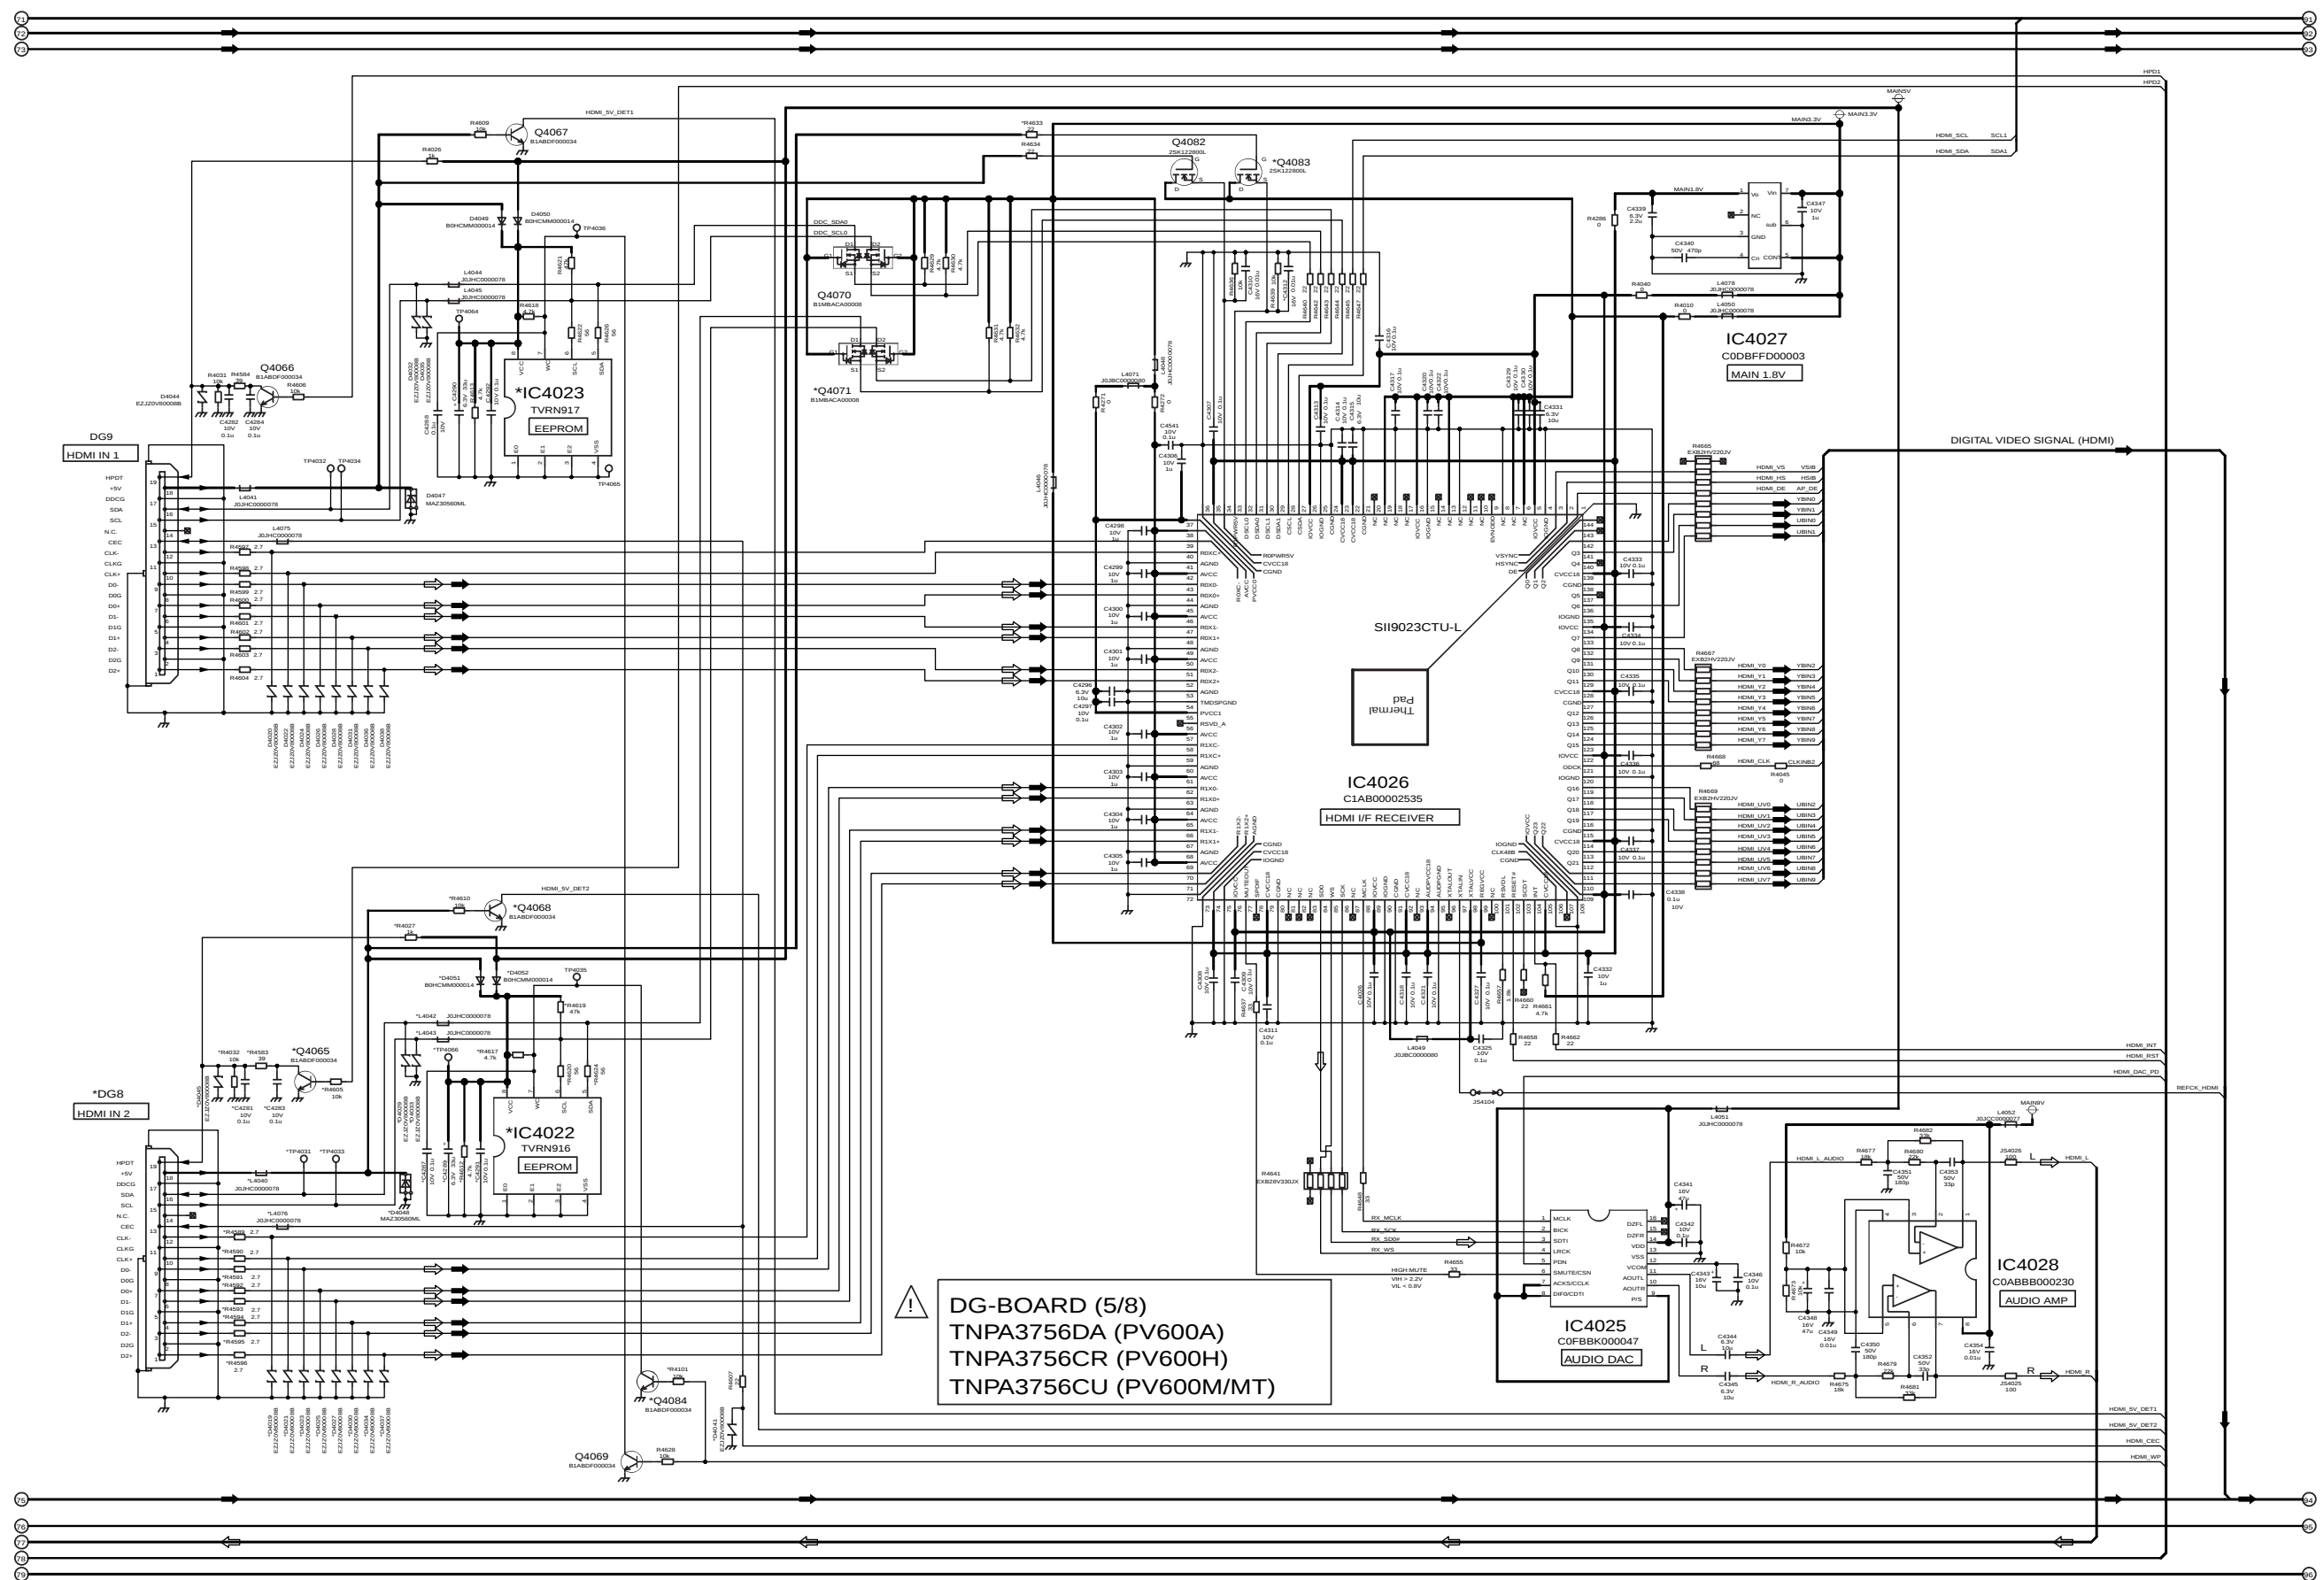

TH-50PV600AZ/H/M/MT DG-Board (5 of 8) Schematic Diagram

TH-50PV600AZ/H/M/MT DG-Board (5 of 8) Schematic Diagram


14.25. DG-Board (6 of 8) Schematic Diagram

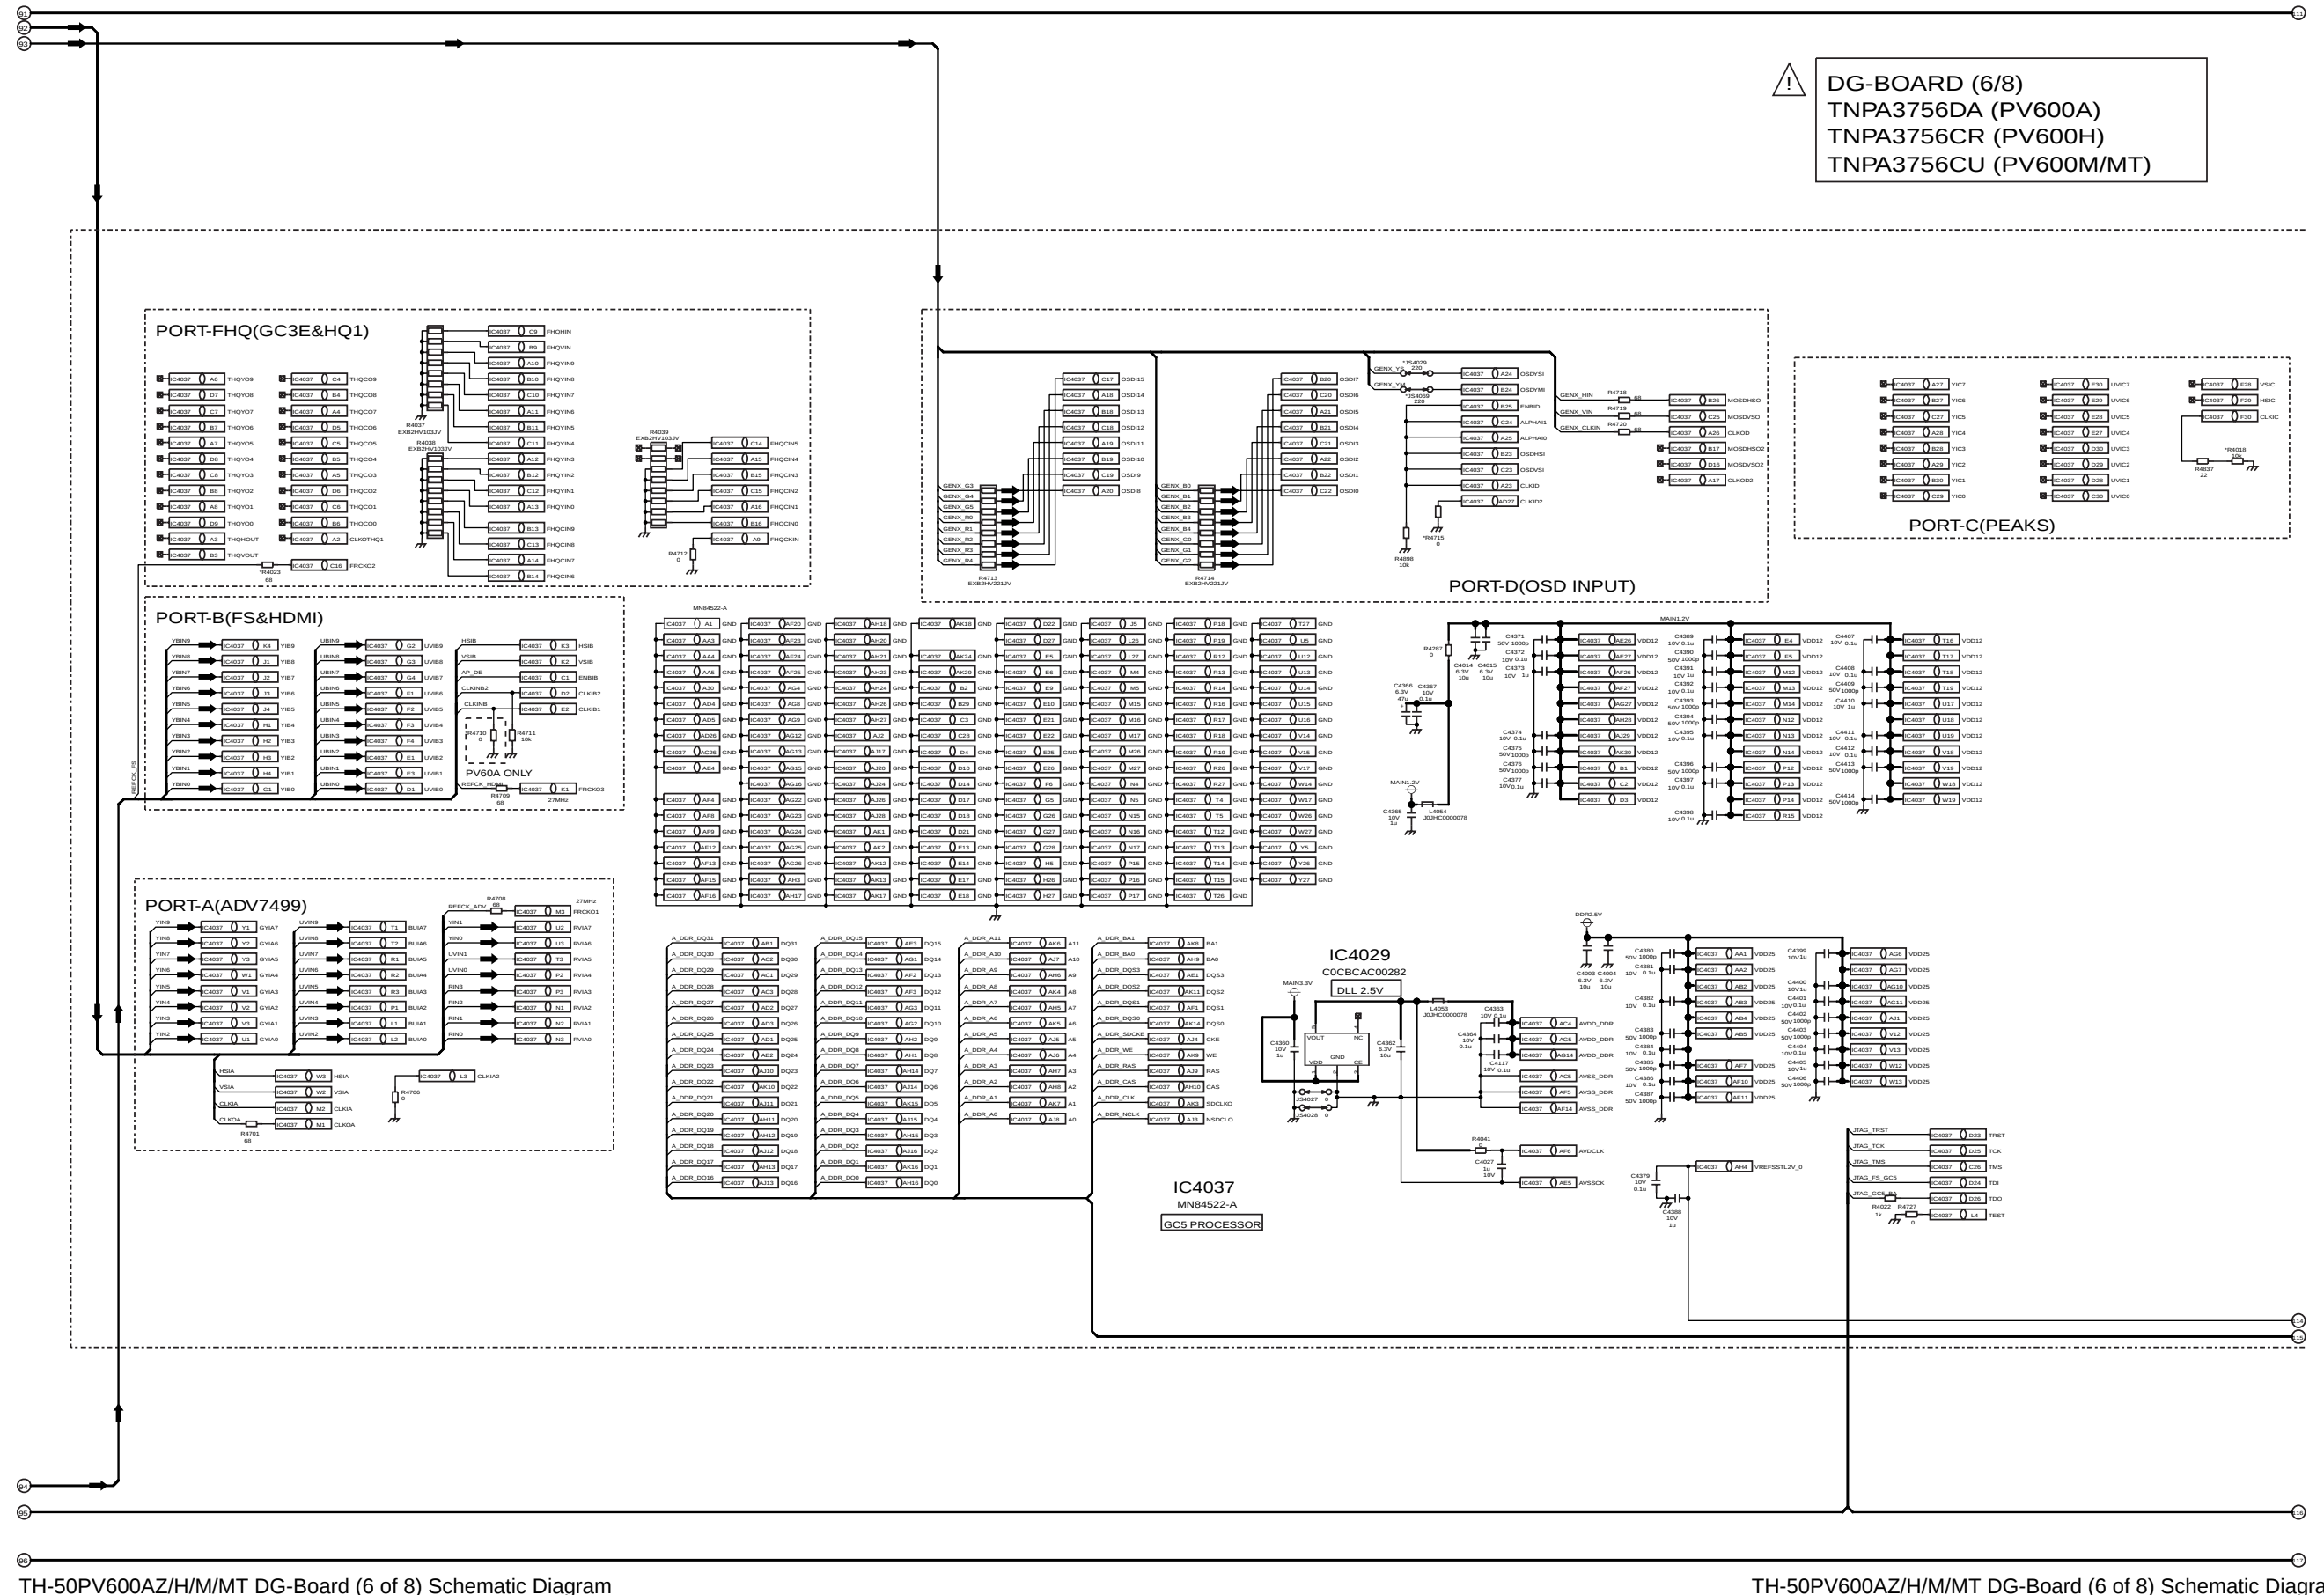






14.28. D-Board (1 of 2) Block Diagram

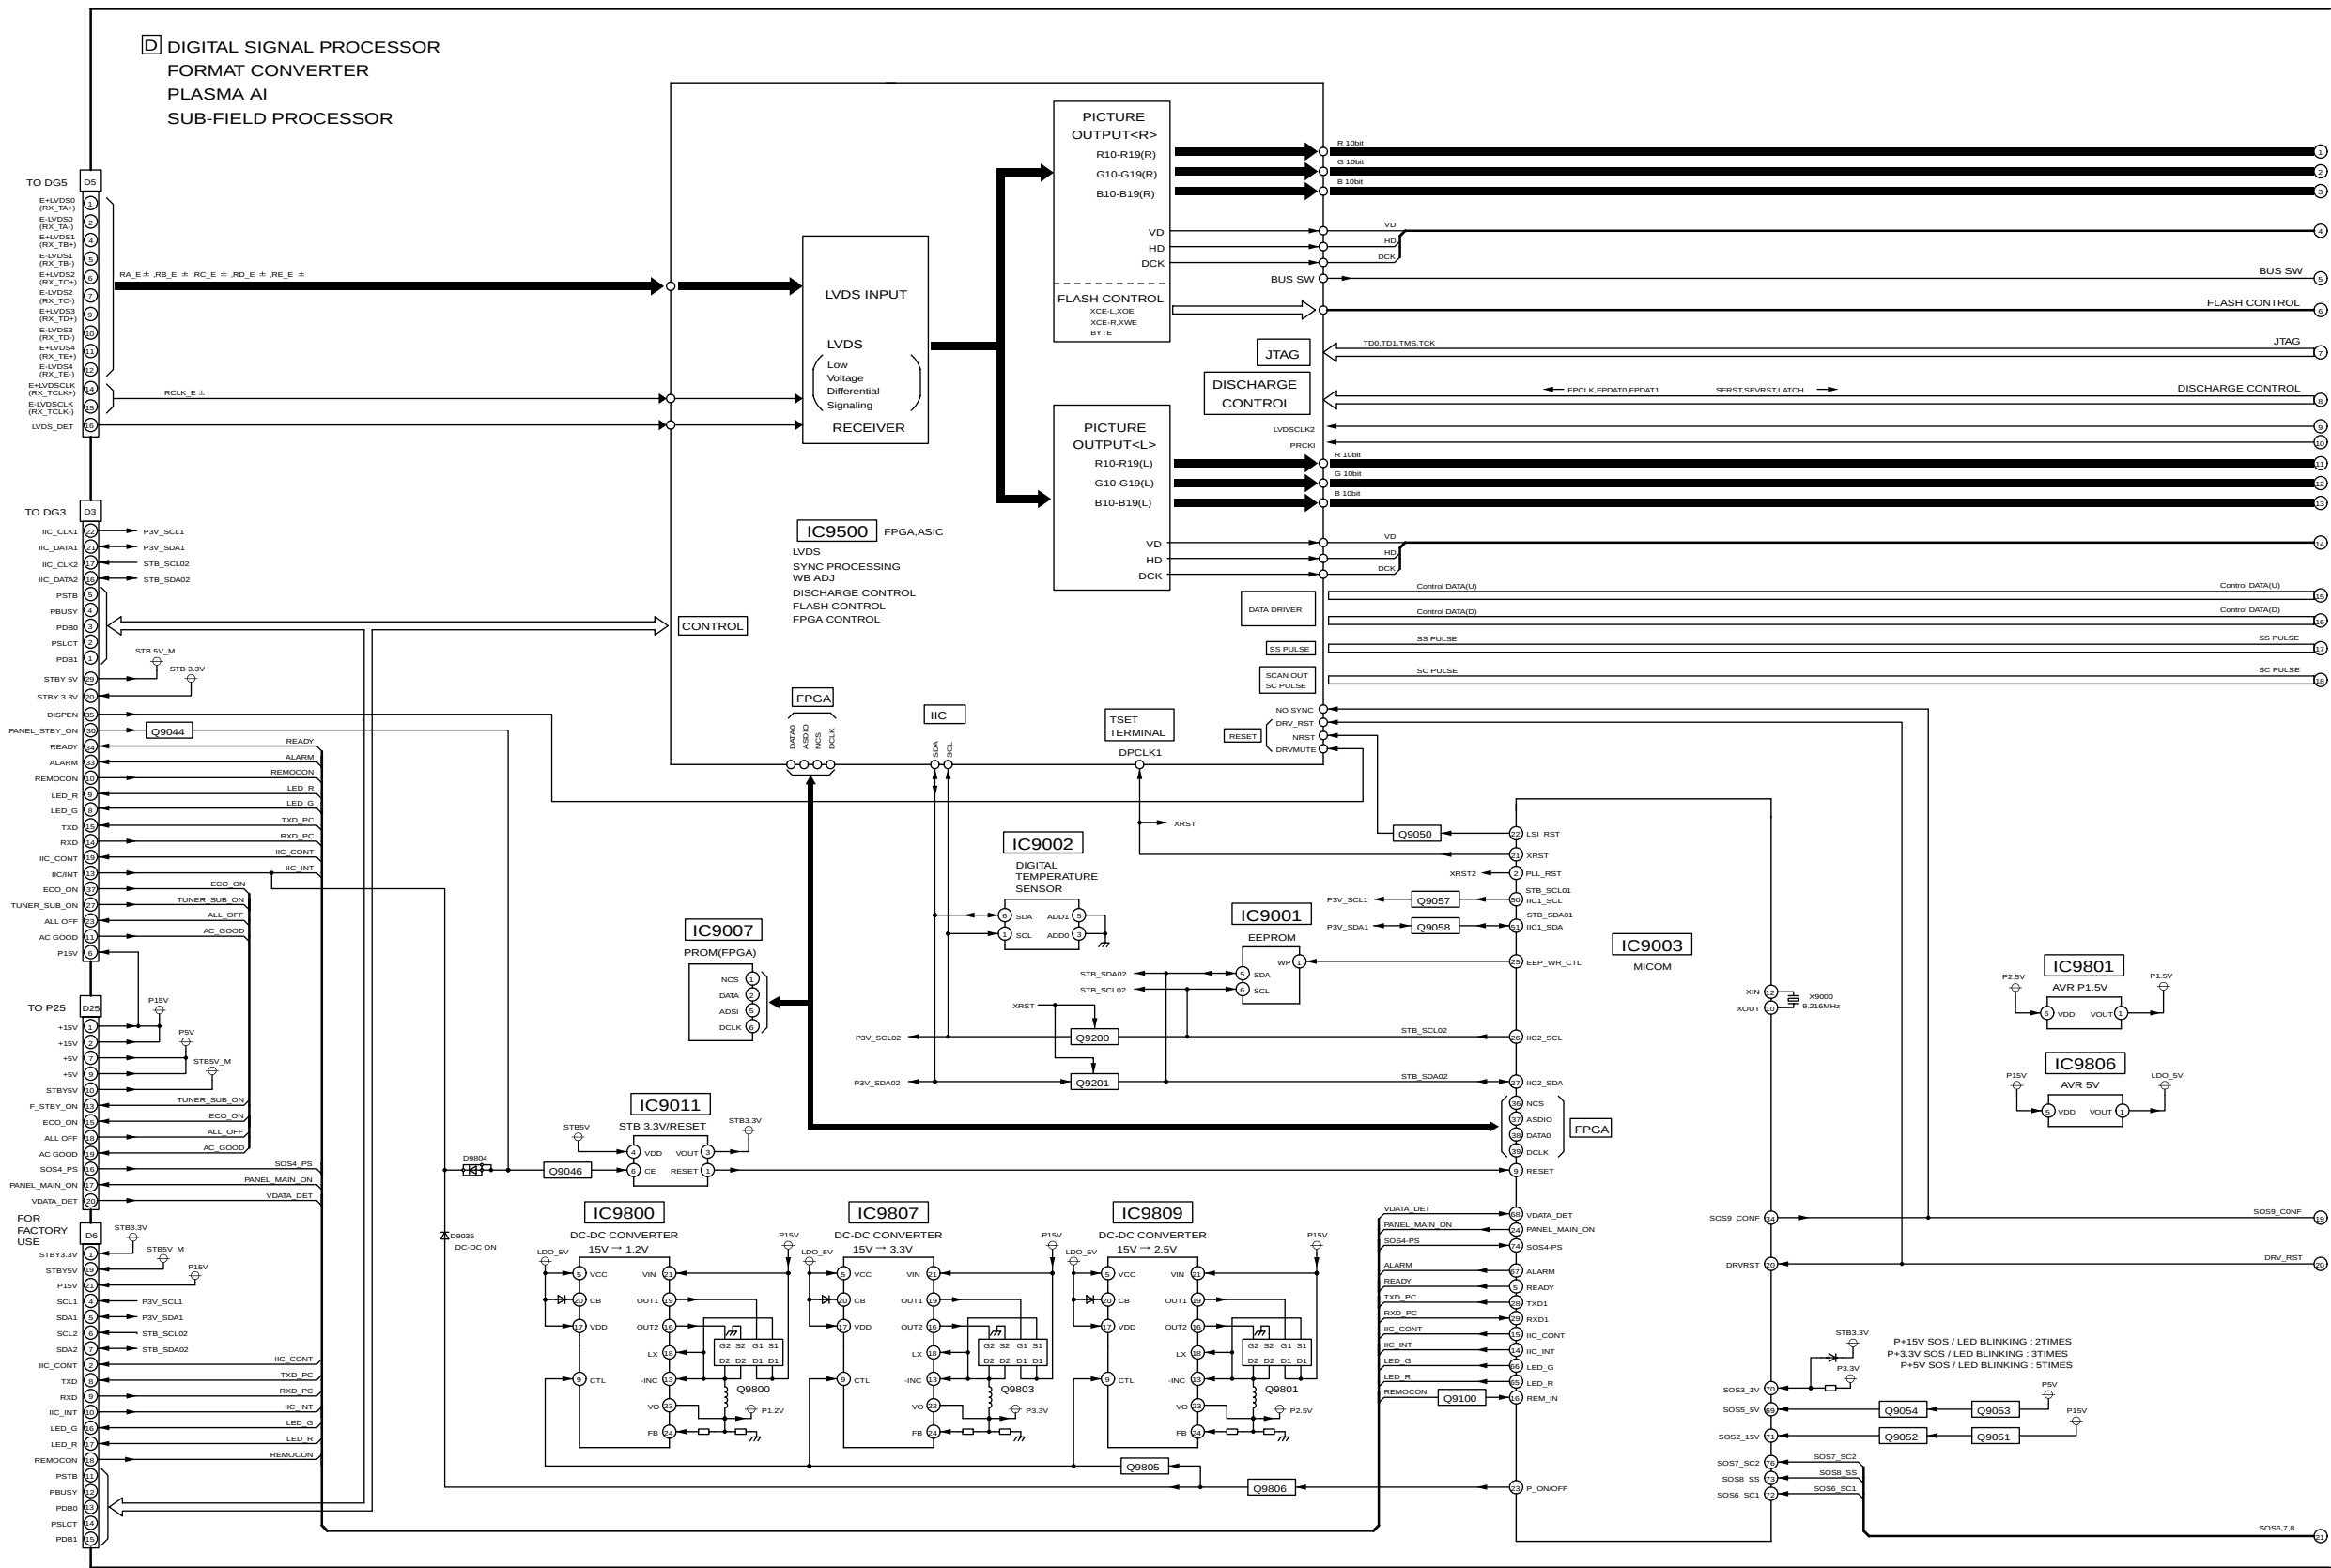


14.29. D-Board (2 of 2) Block Diagram

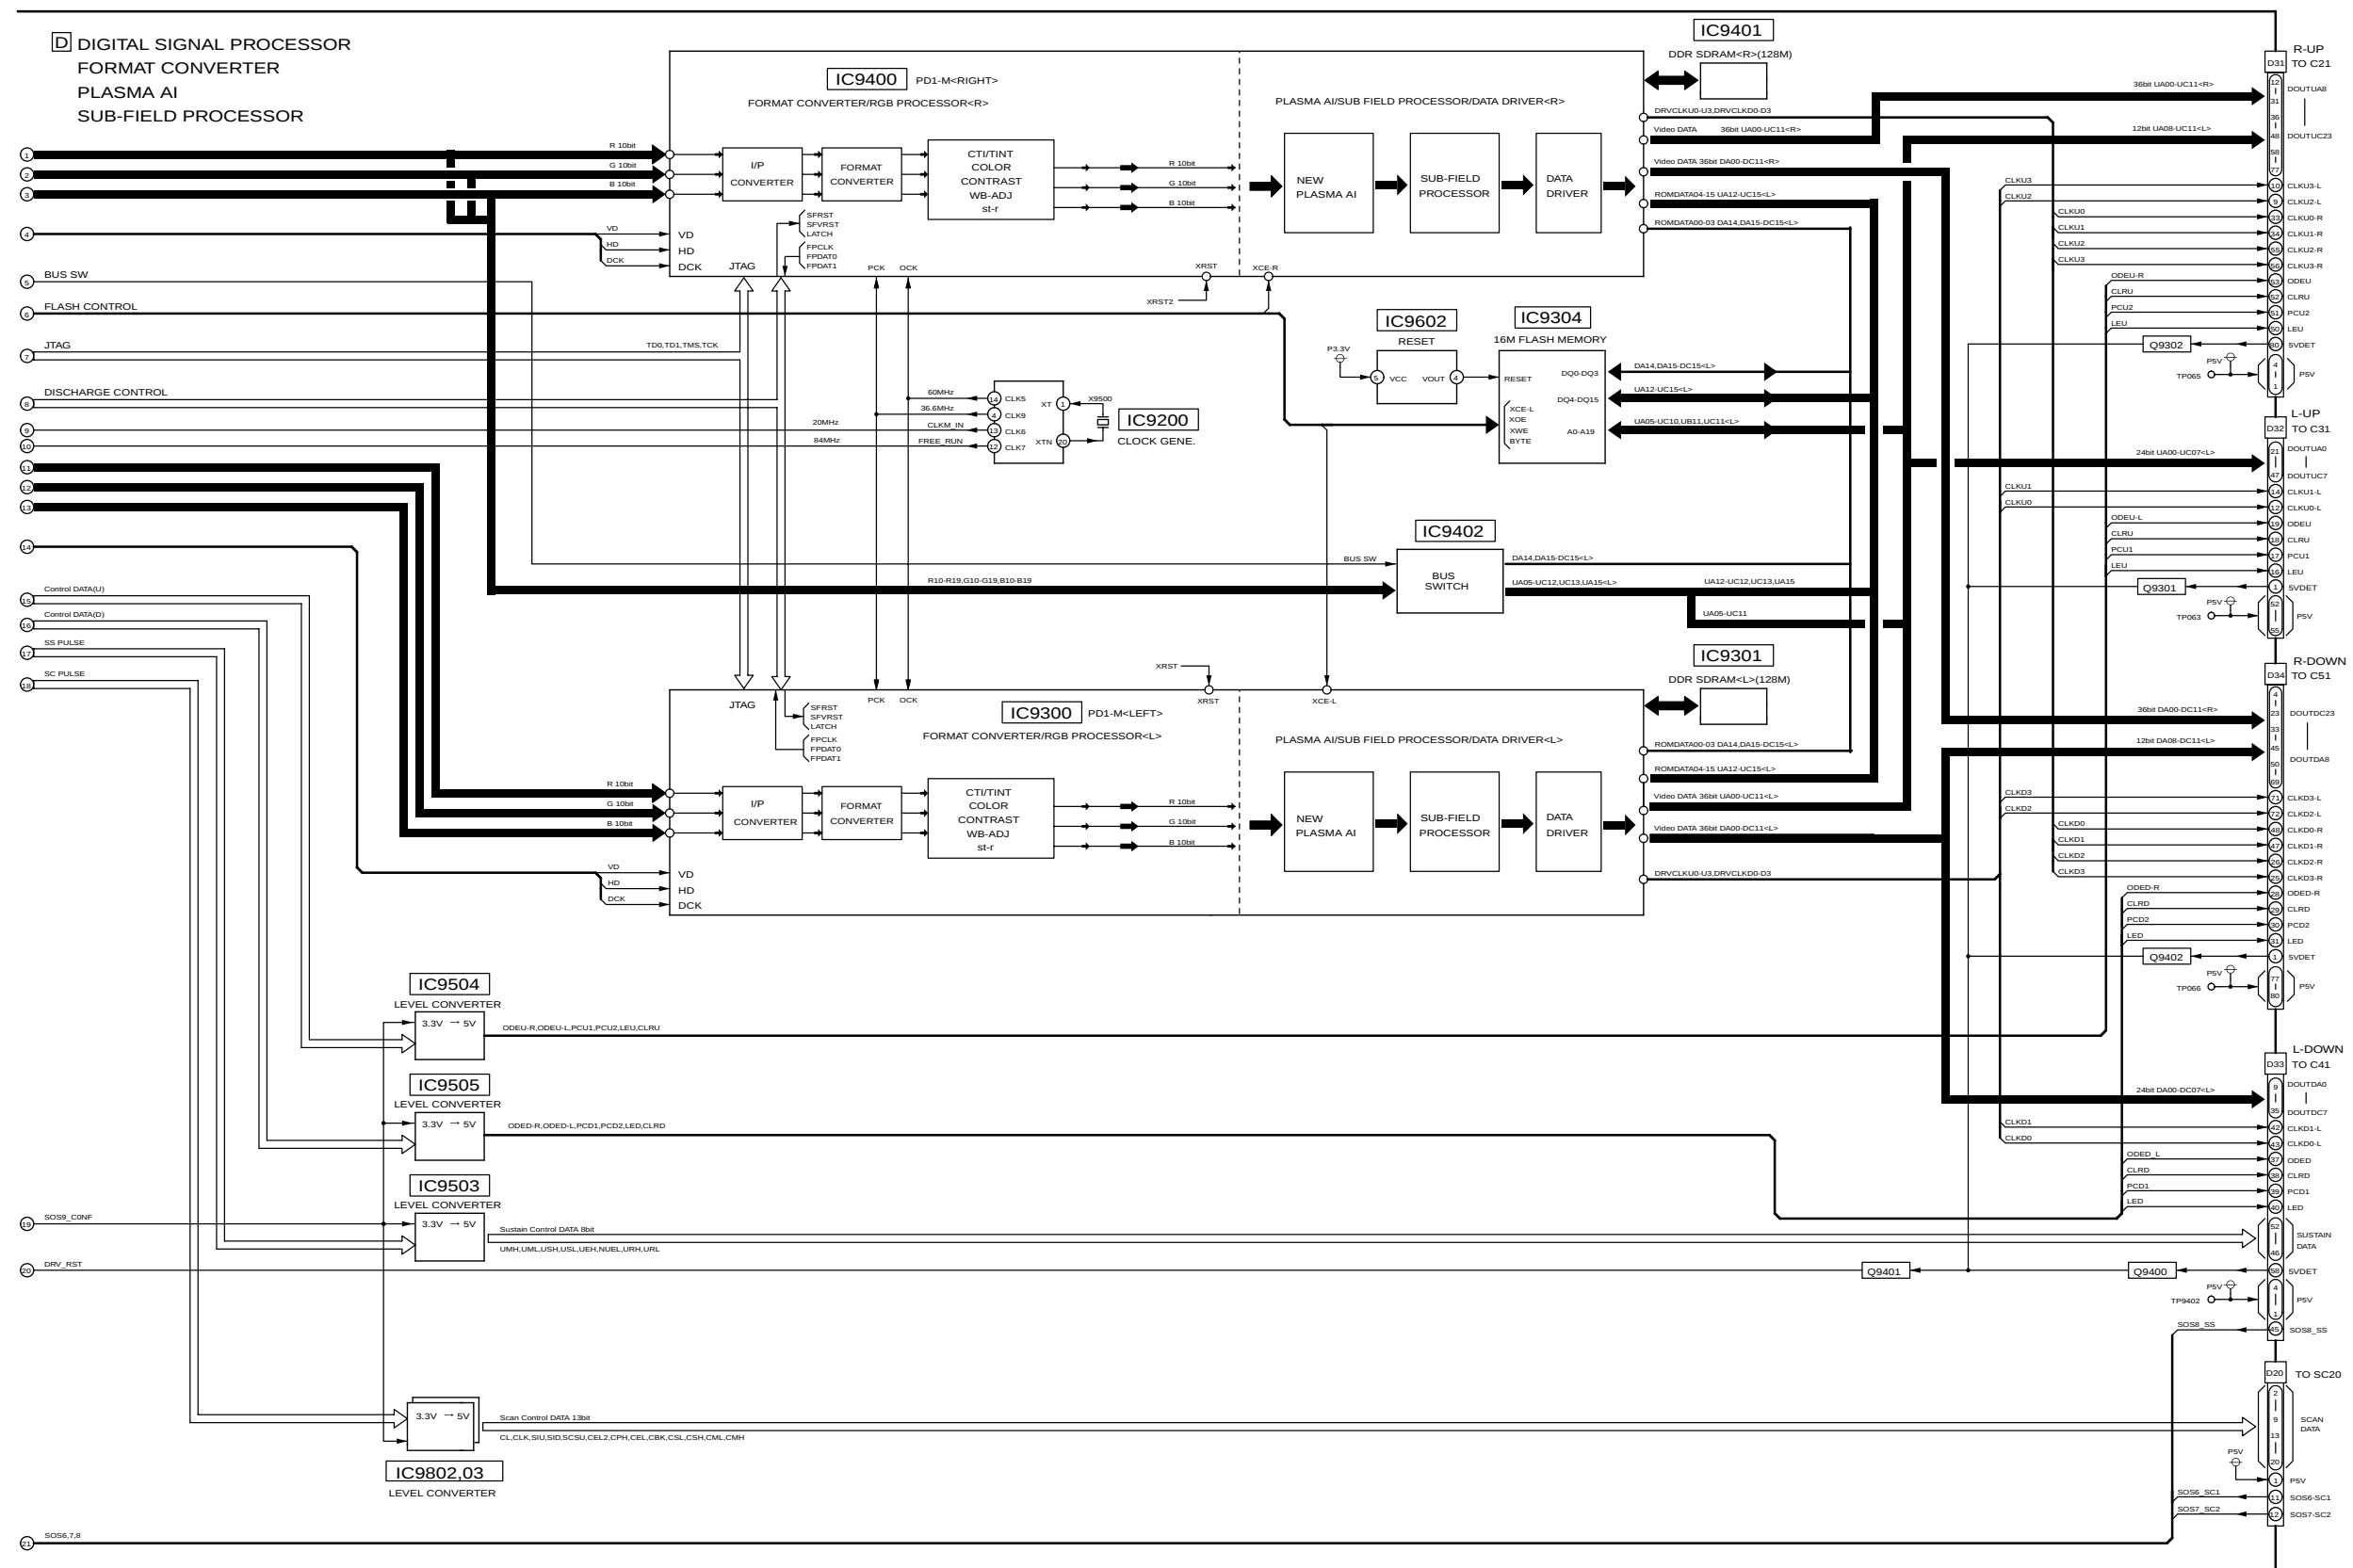

TH-50PV600AZ/H/M/MT
D-Board (2 of 2) Block Diagram

TH-50PV600AZ/H/M/MT
D-Board (2 of 2) Block Diagram


14.30. D-Board (1 of 8) Schematic Diagram

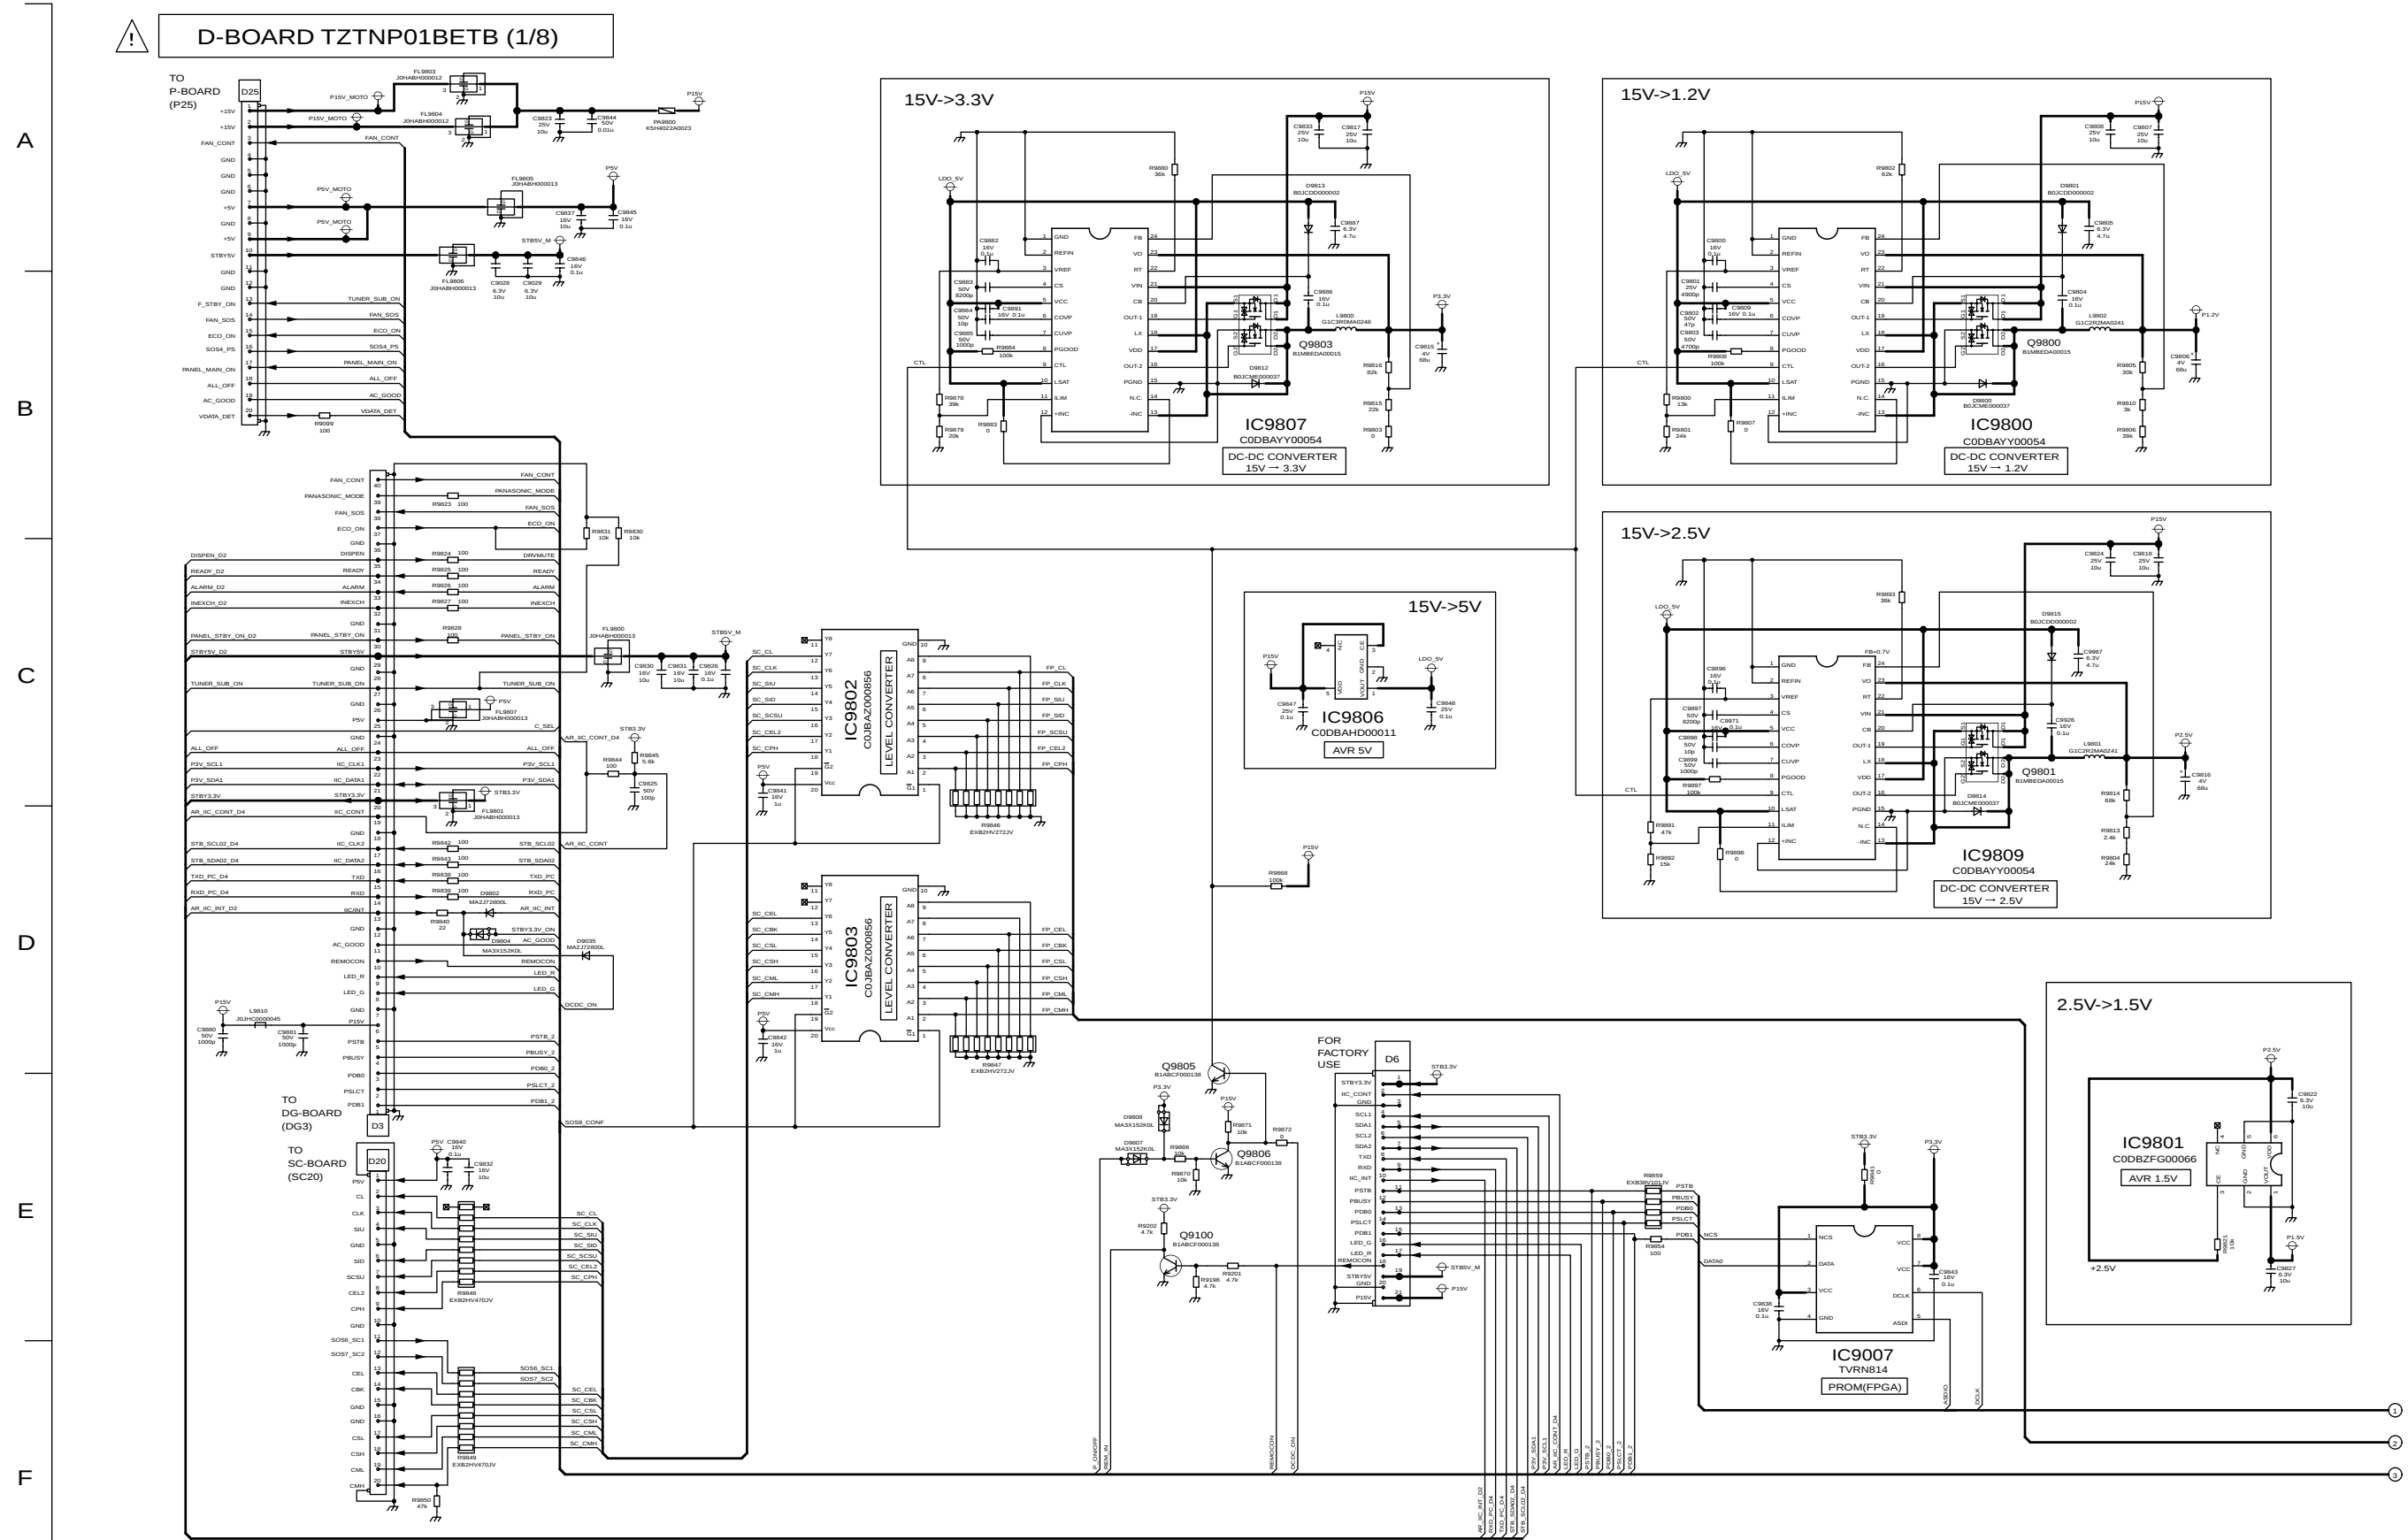

TH-50PV600AZ/H/M/MT
D-Board (1 of 8) Schematic Diagram


TH-50PV600AZ/H/M/MT
D-Board (1 of 8) Schematic Diagram

14.31. D-Board (2 of 8) Schematic Diagram

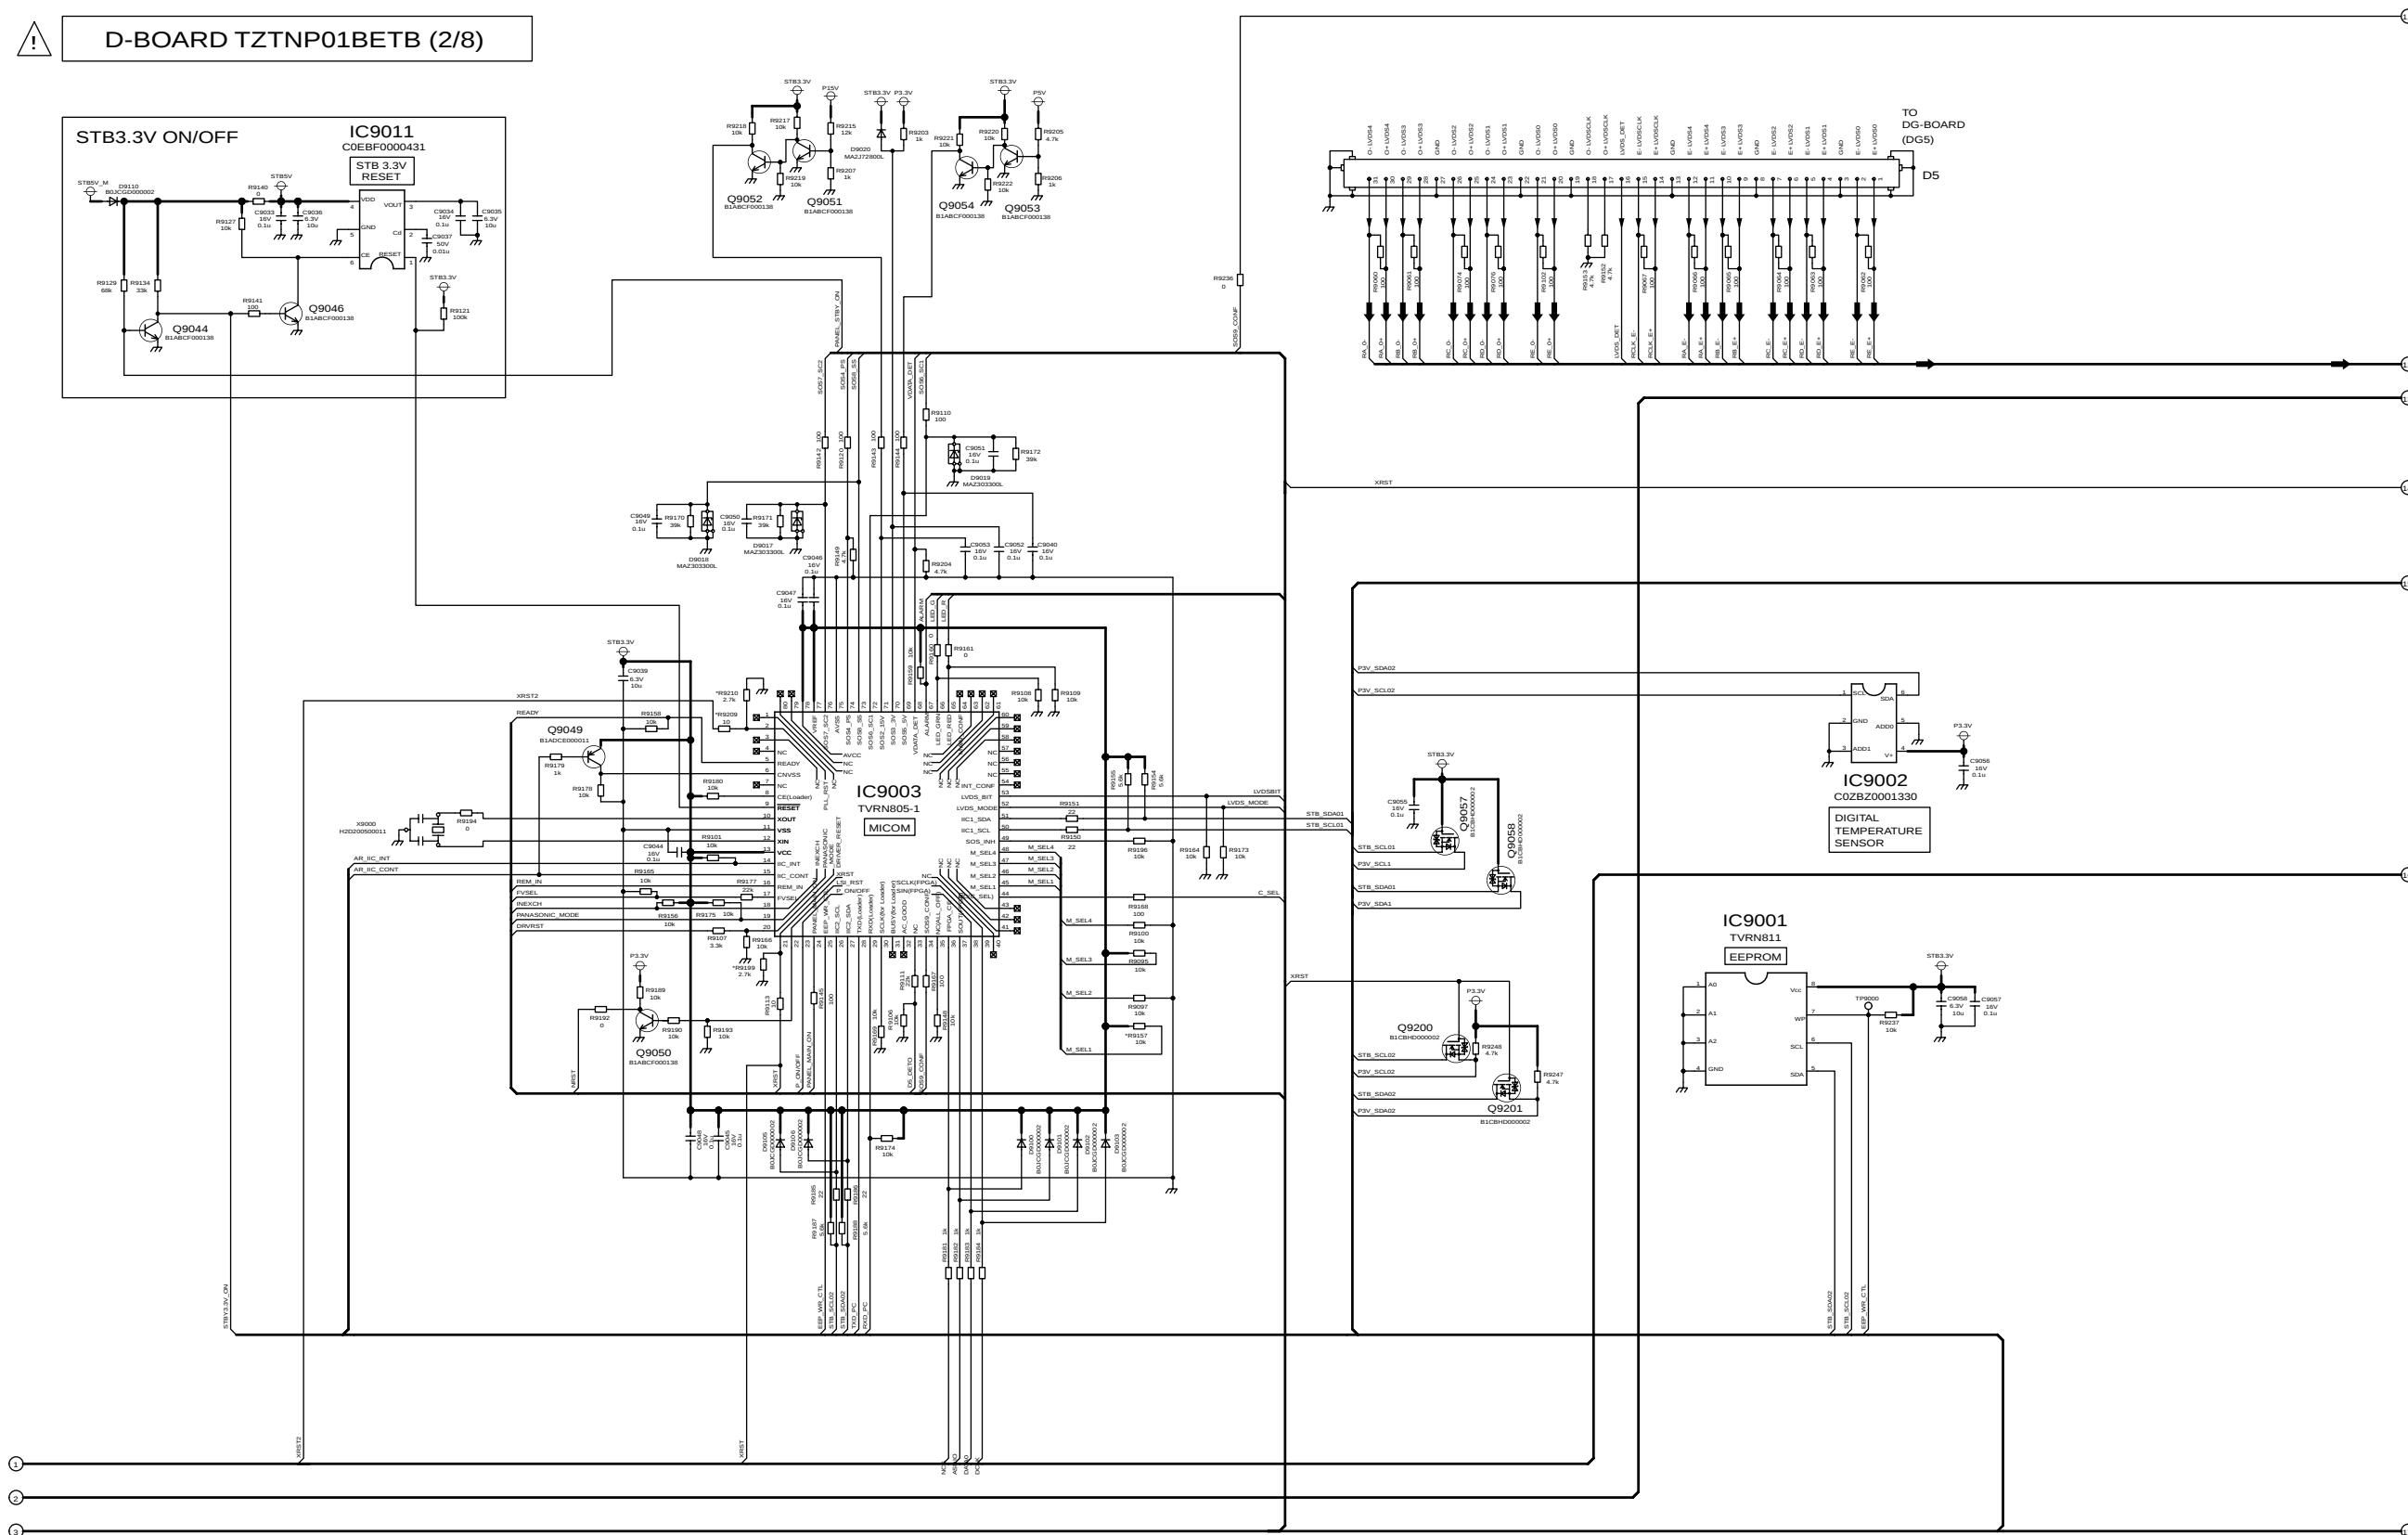




14.33. D-Board (4 of 8) Schematic Diagram

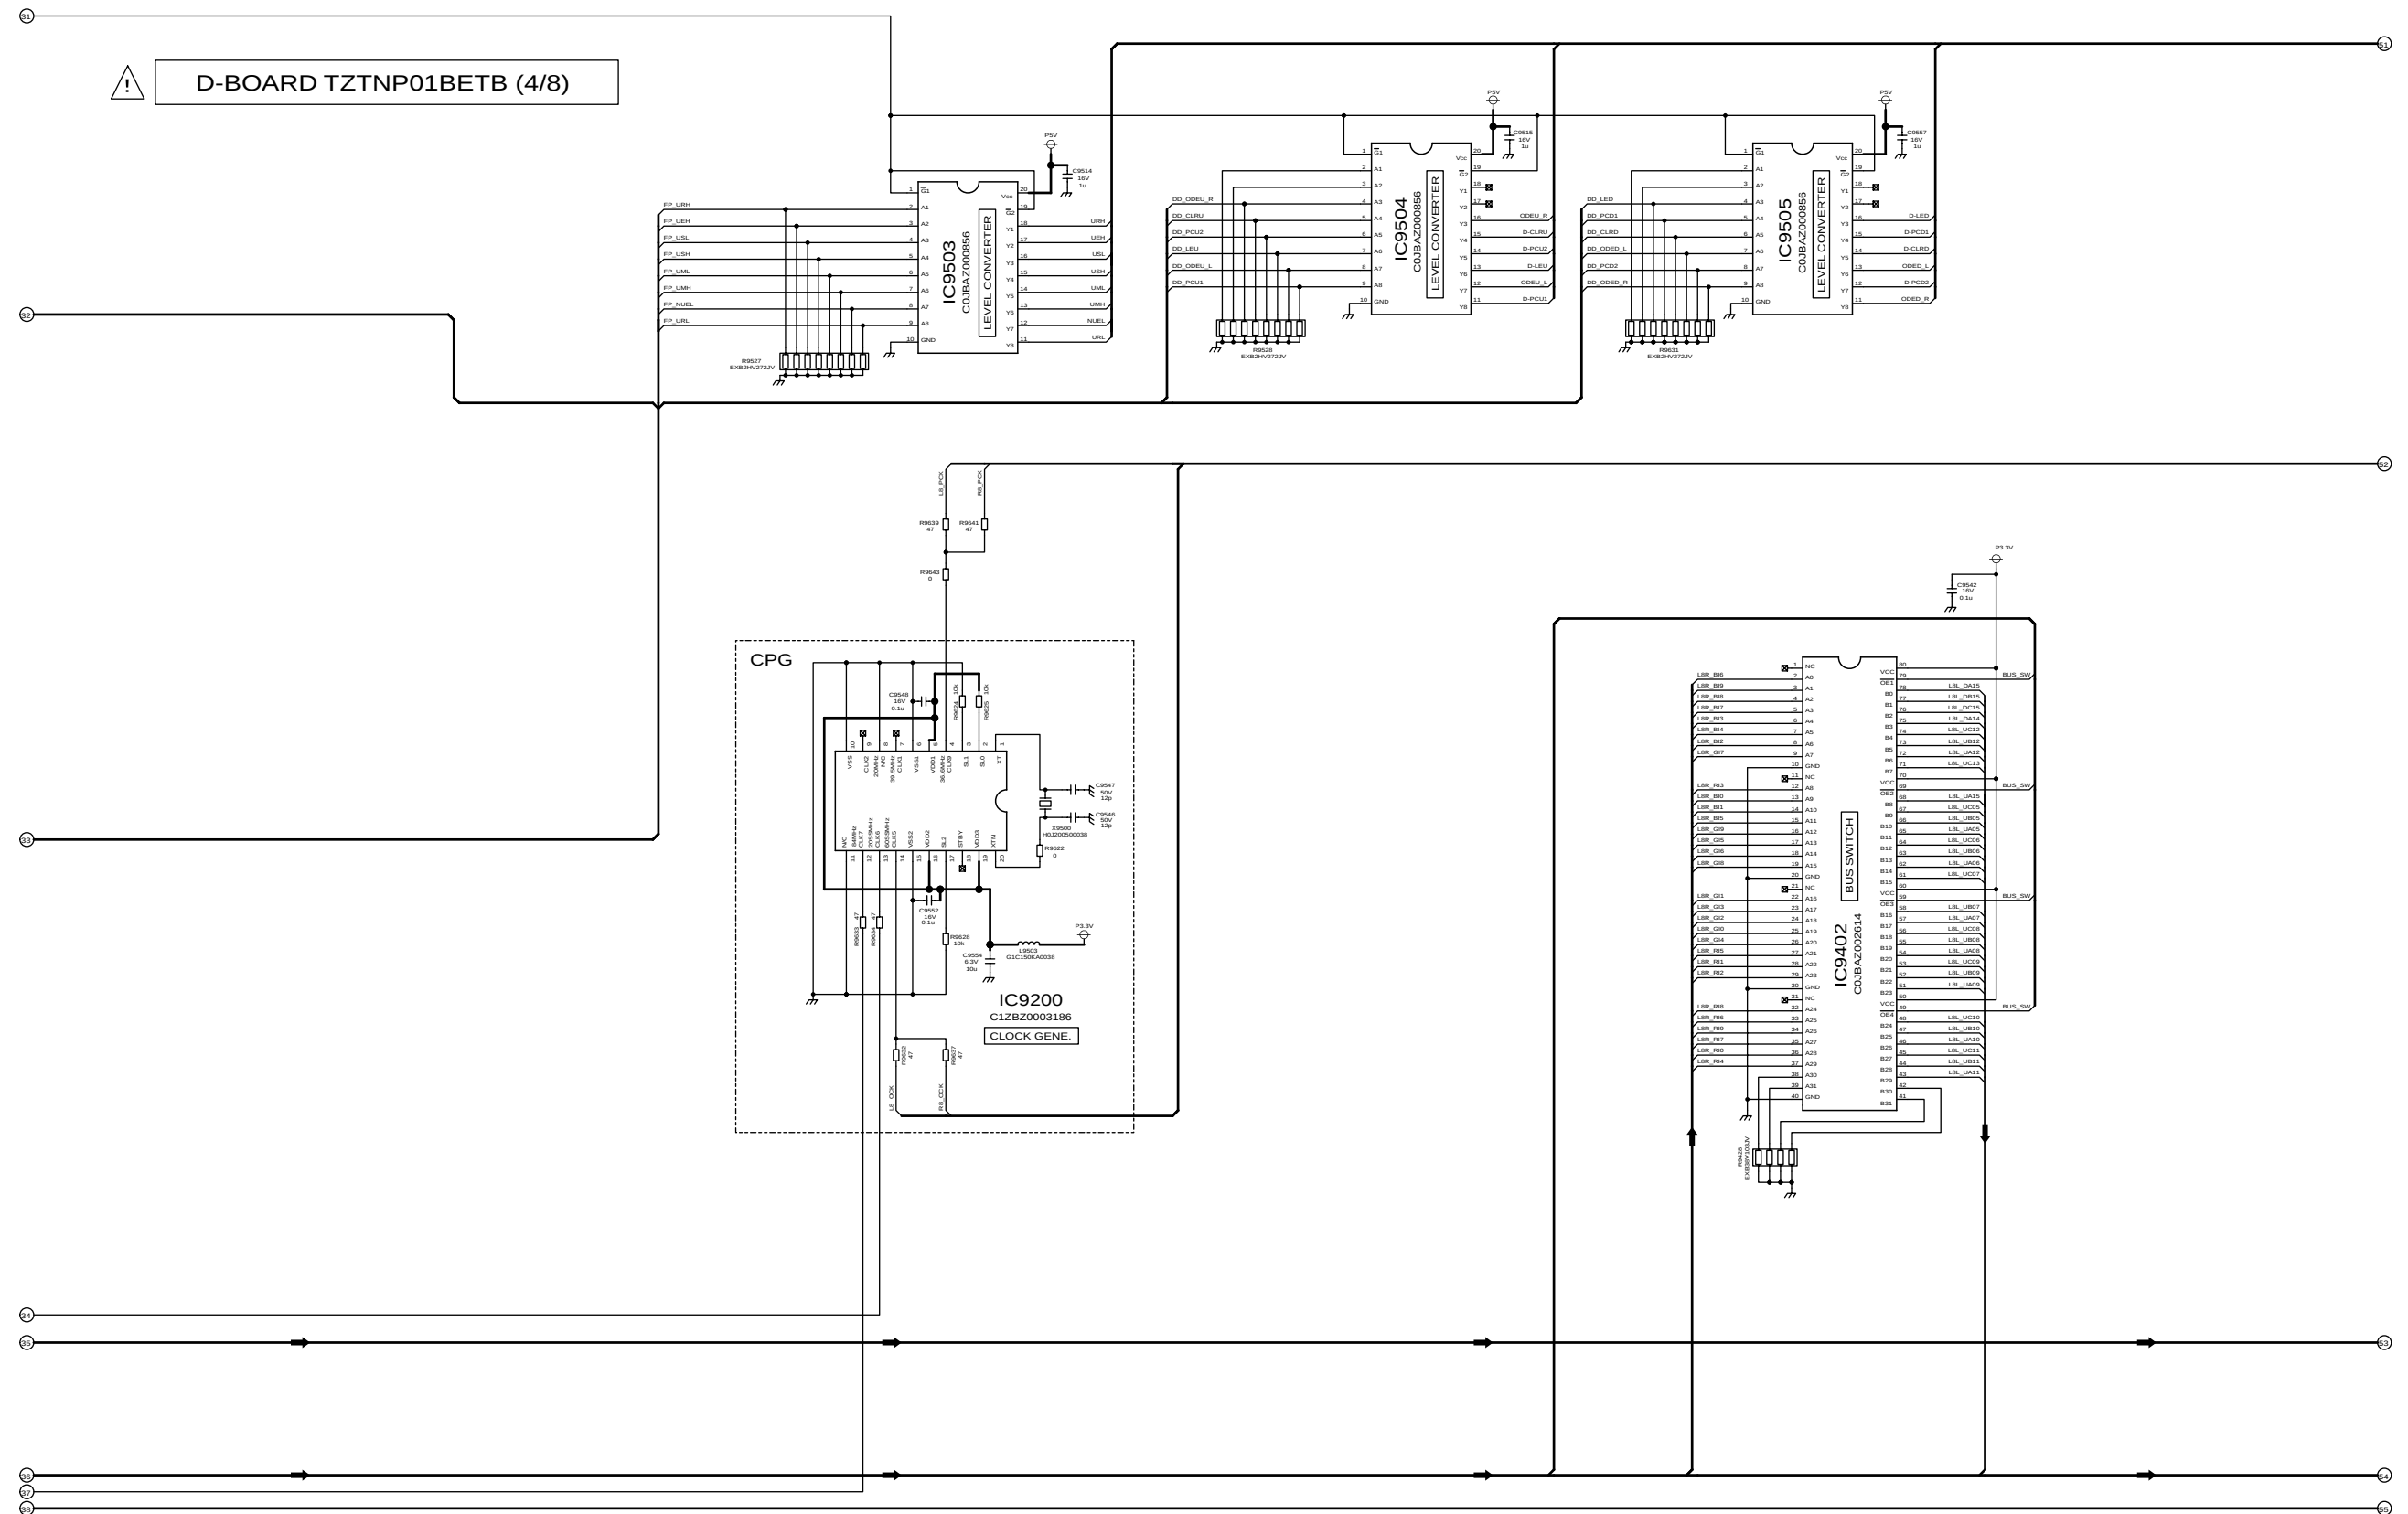


TH-50PV600AZ/H/M/MT
D-Board (4 of 8) Schematic Diagram

TH-50PV600AZ/H/M/MT
D-Board (4 of 8) Schematic Diagram


14.34. D-Board (5 of 8) Schematic Diagram

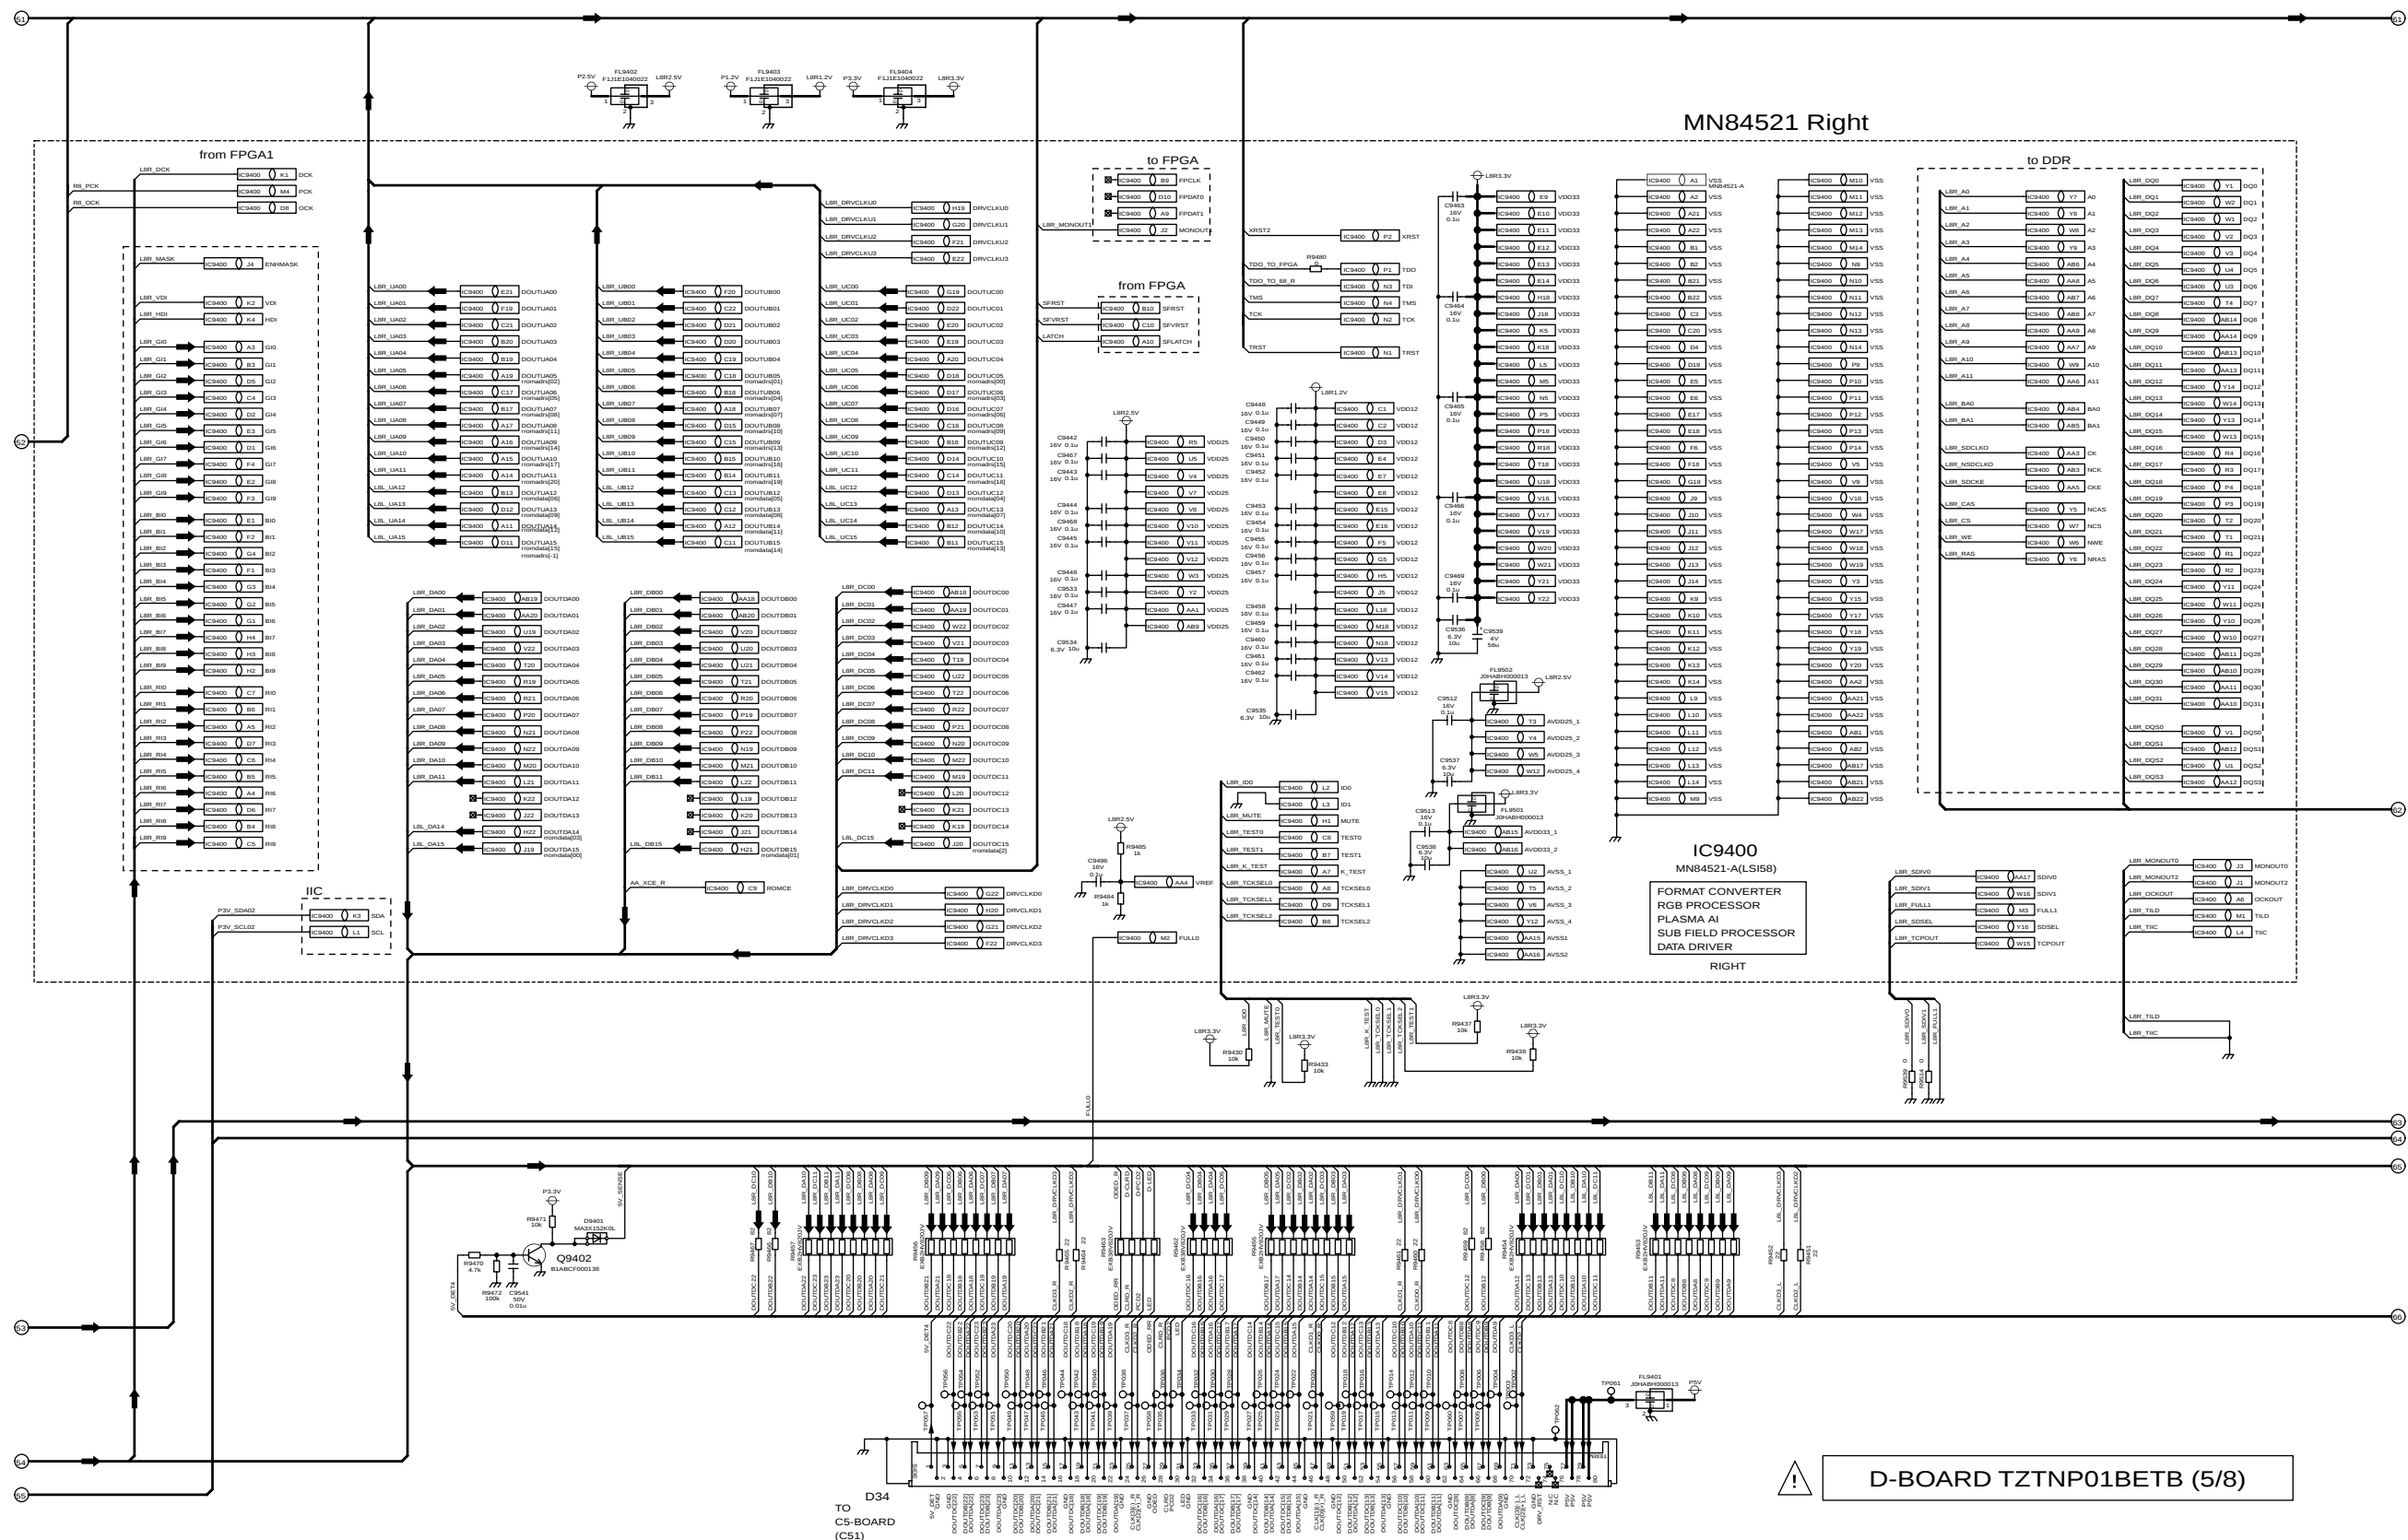


14.35. D-Board (6 of 8) Schematic Diagram

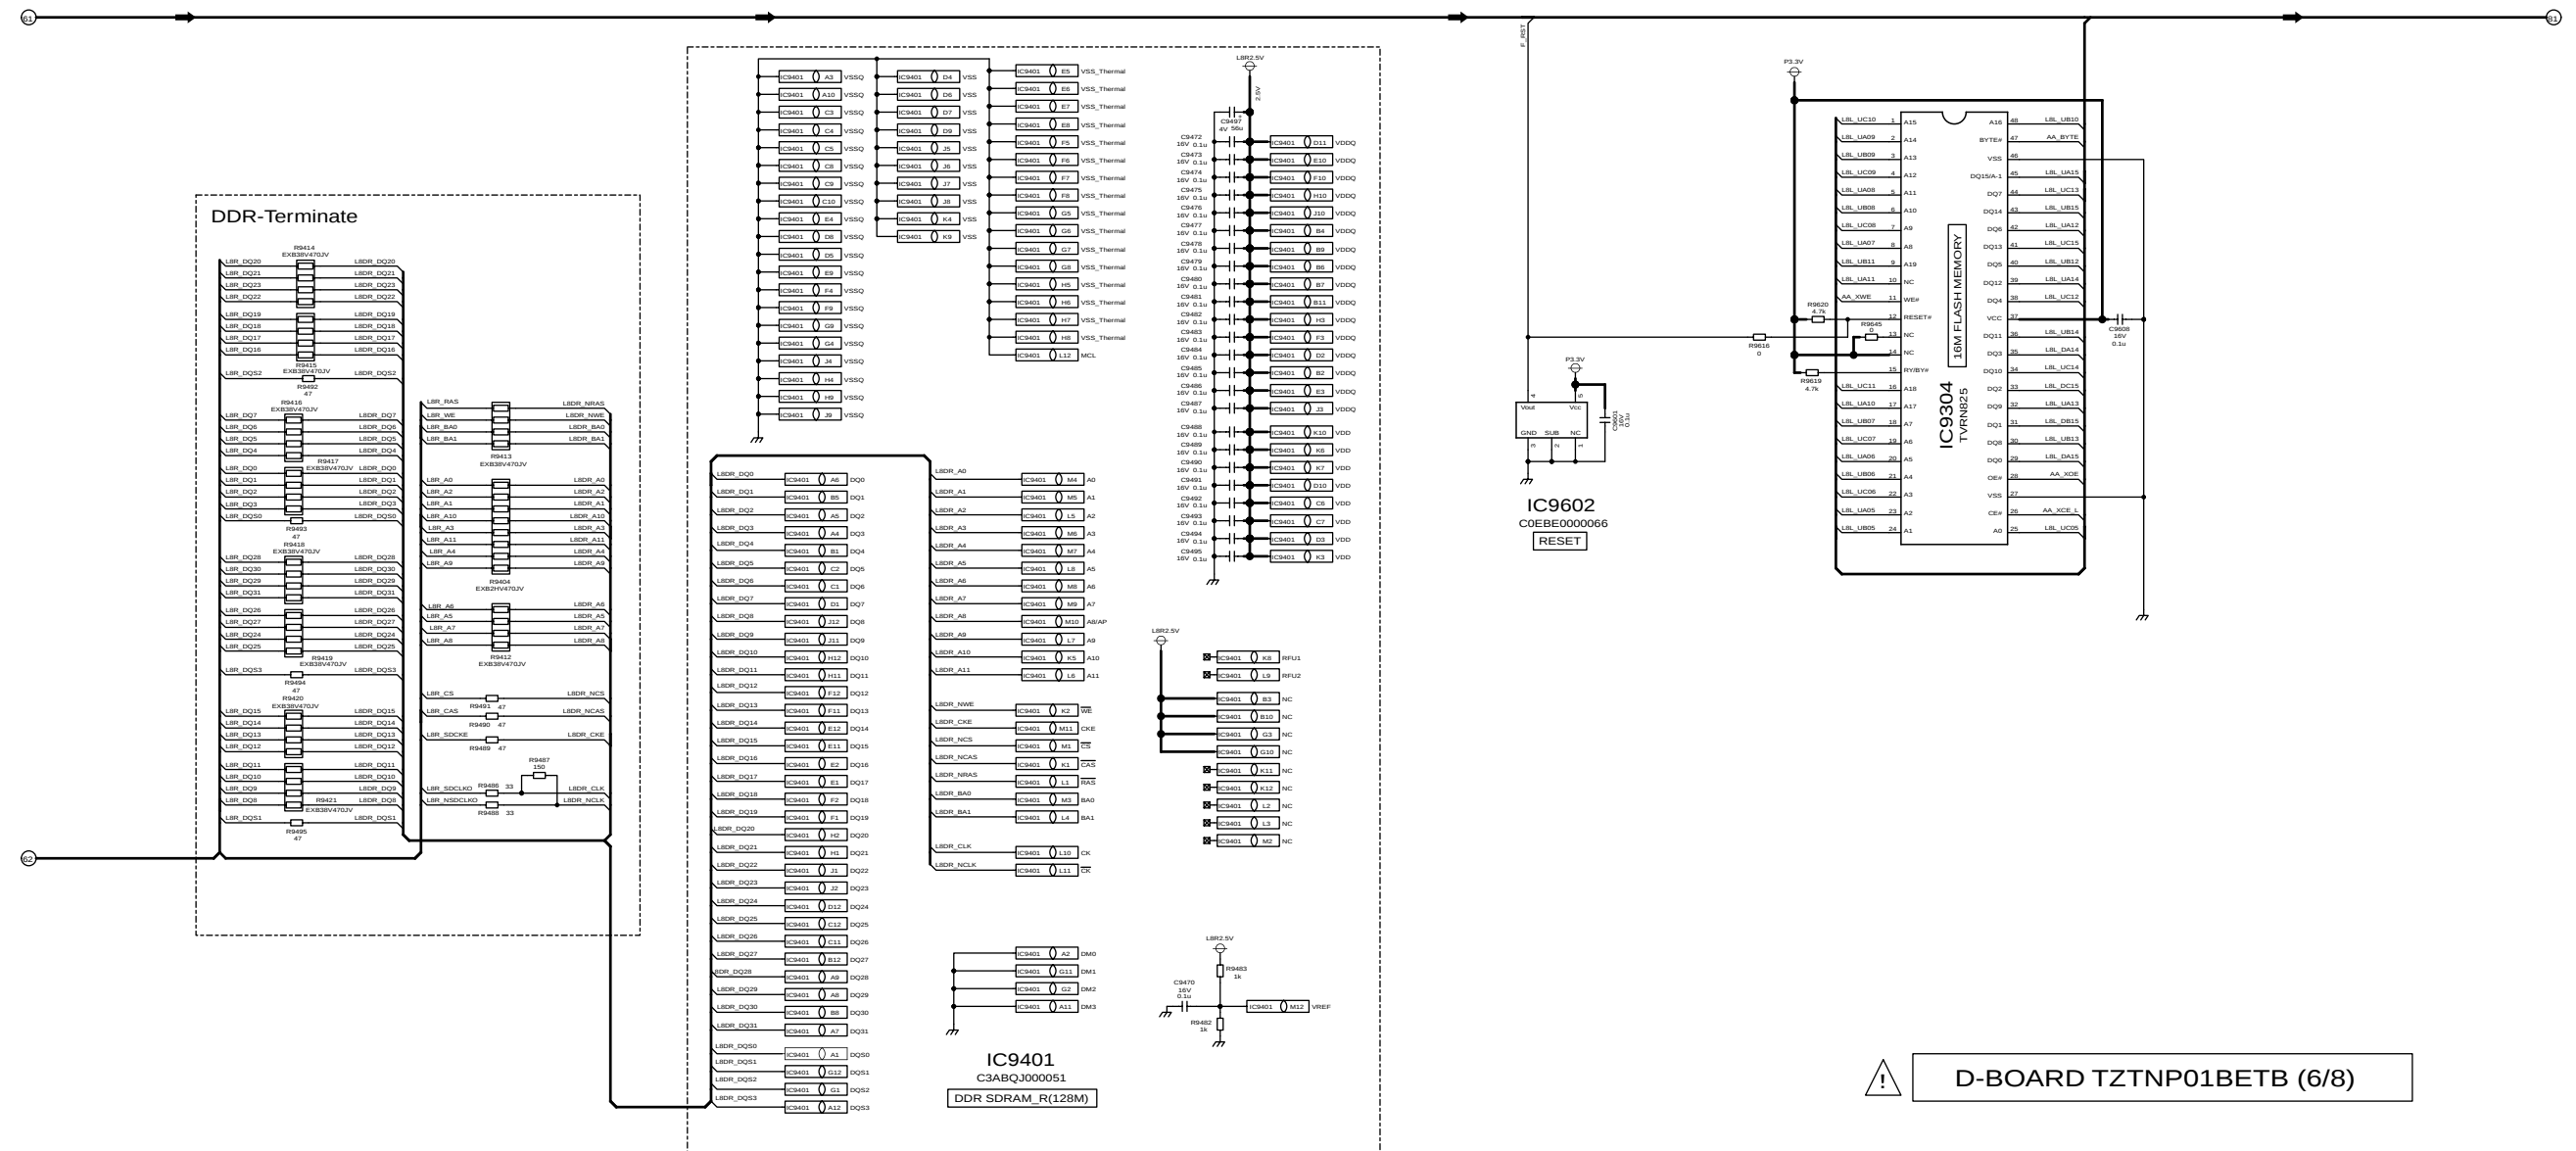TH-50PV600AZ/H/M/MT
D-Board (6 of 8) Schematic DiagramTH-50PV600AZ/H/M/MT
D-Board (6 of 8) Schematic Diagram


14.36. D-Board (7 of 8) Schematic Diagram

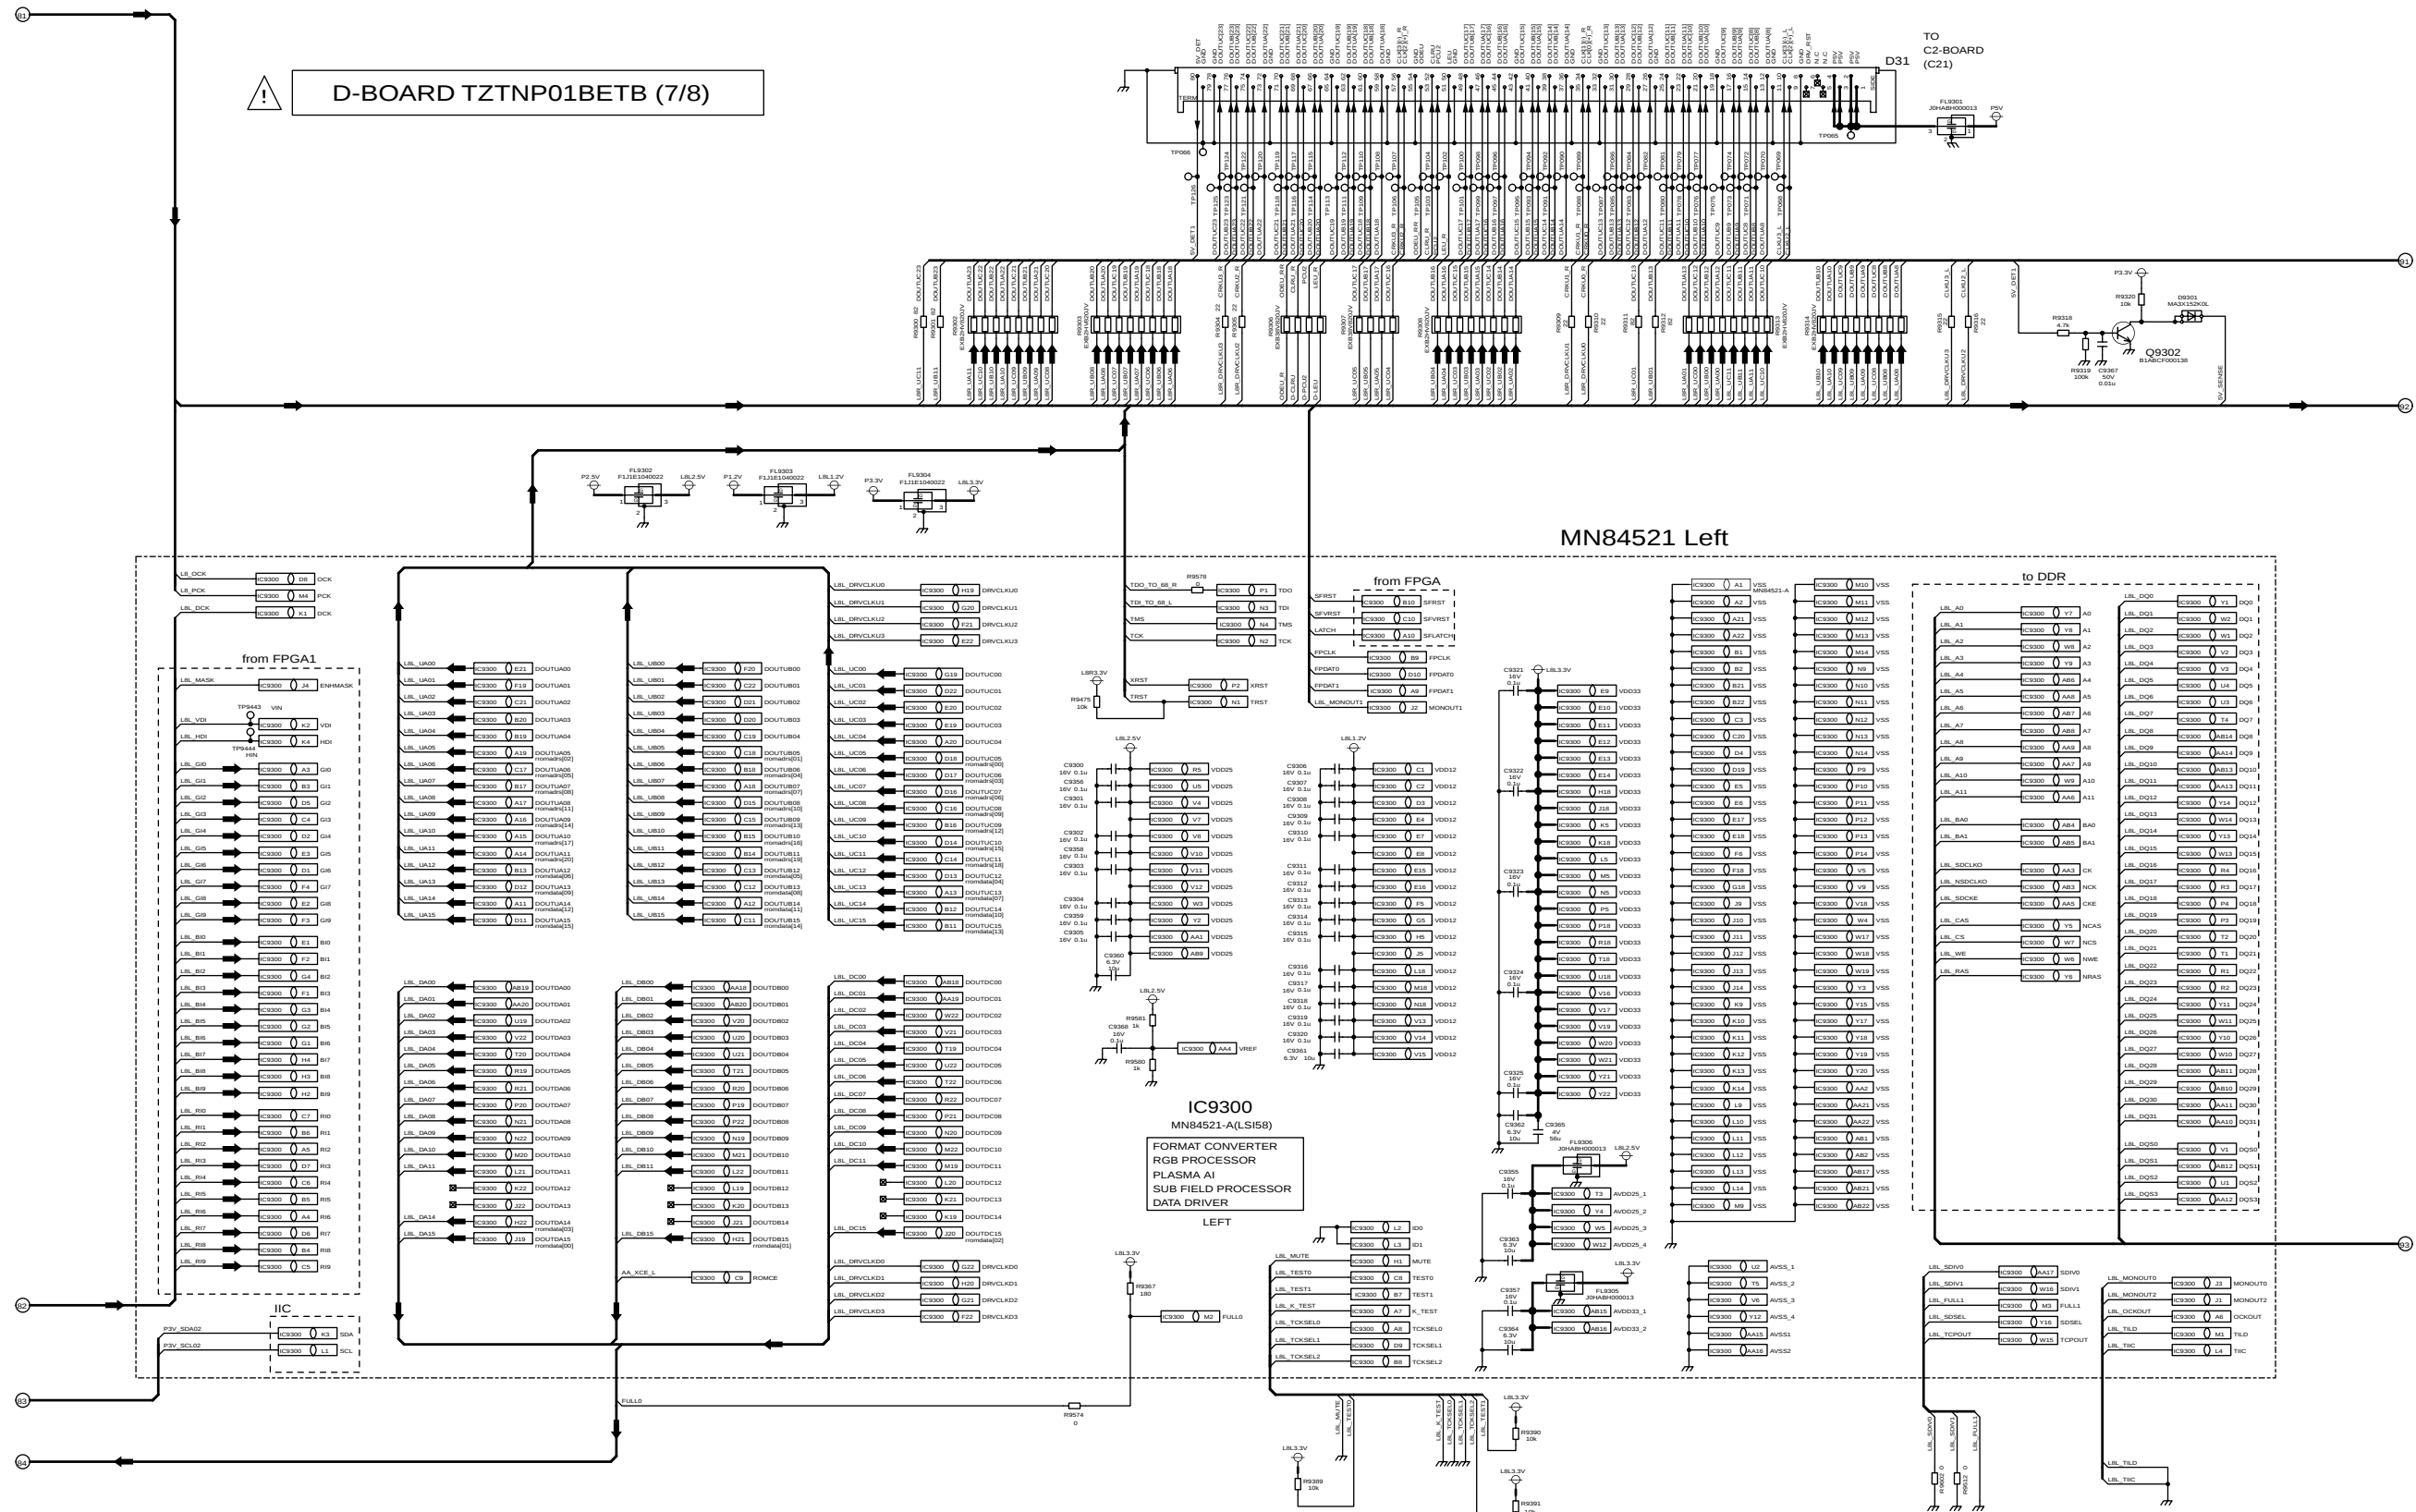


14.37. D-Board (8 of 8) Schematic Diagram

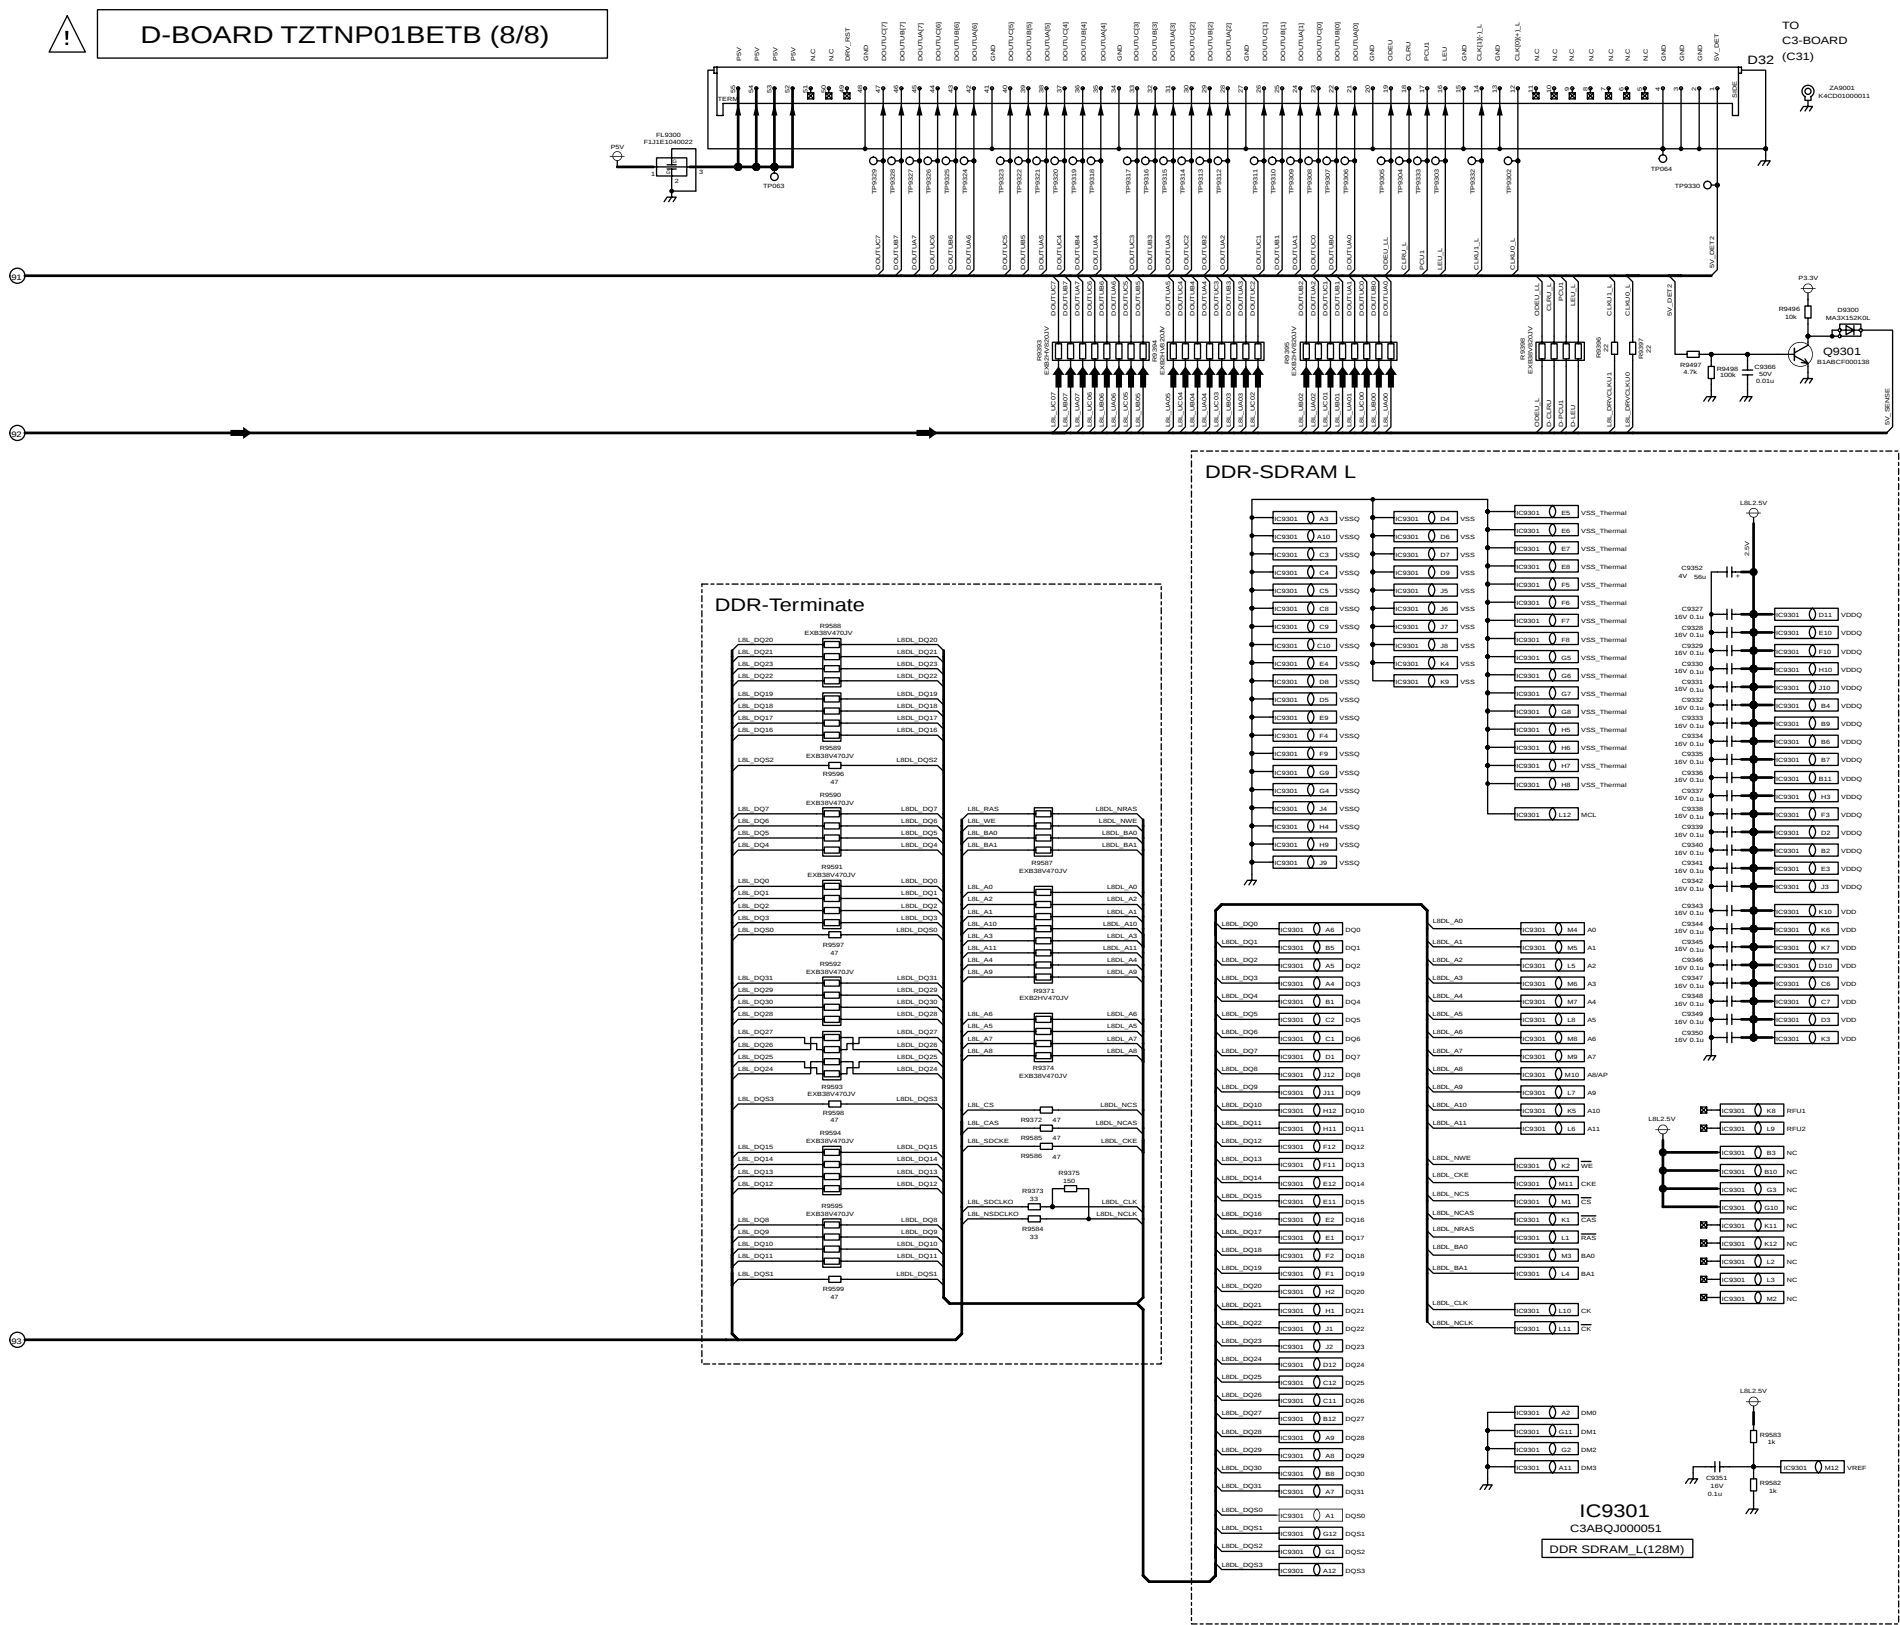


14.38. C1, C2, C5 and C6-Block Diagram

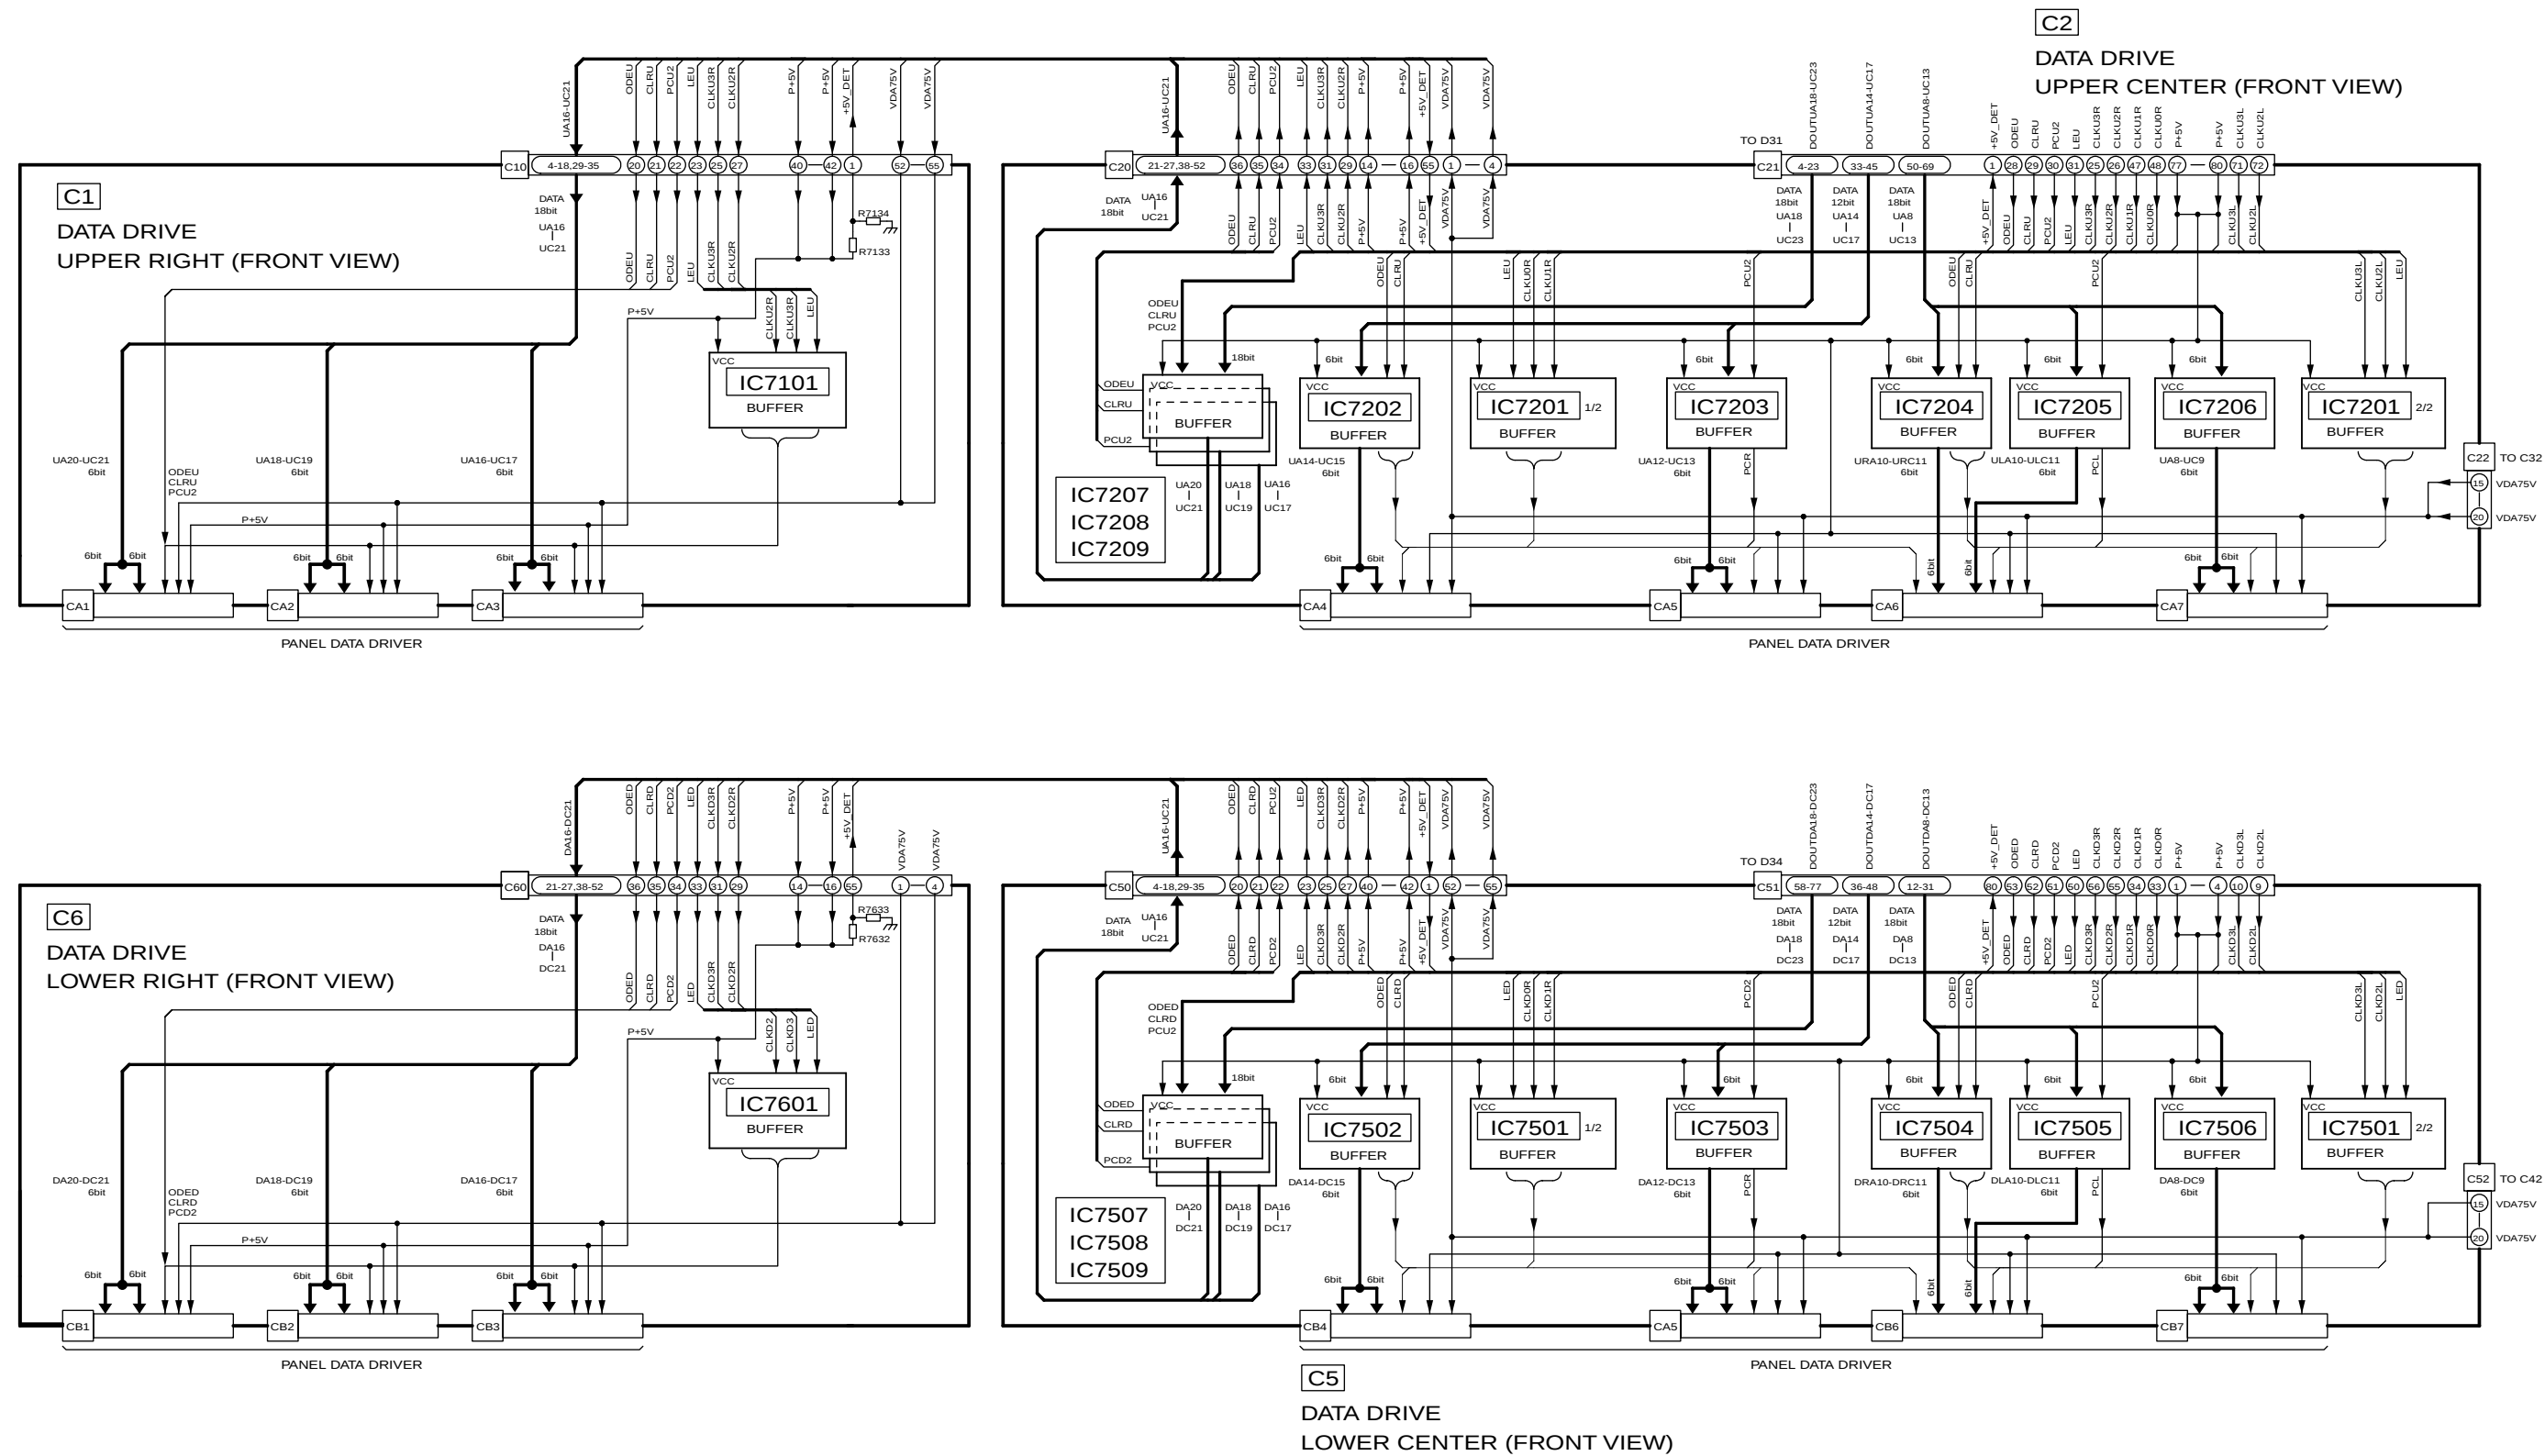


14.39. C3, C4, SS, SS2 and SS3-Board Block Diagram

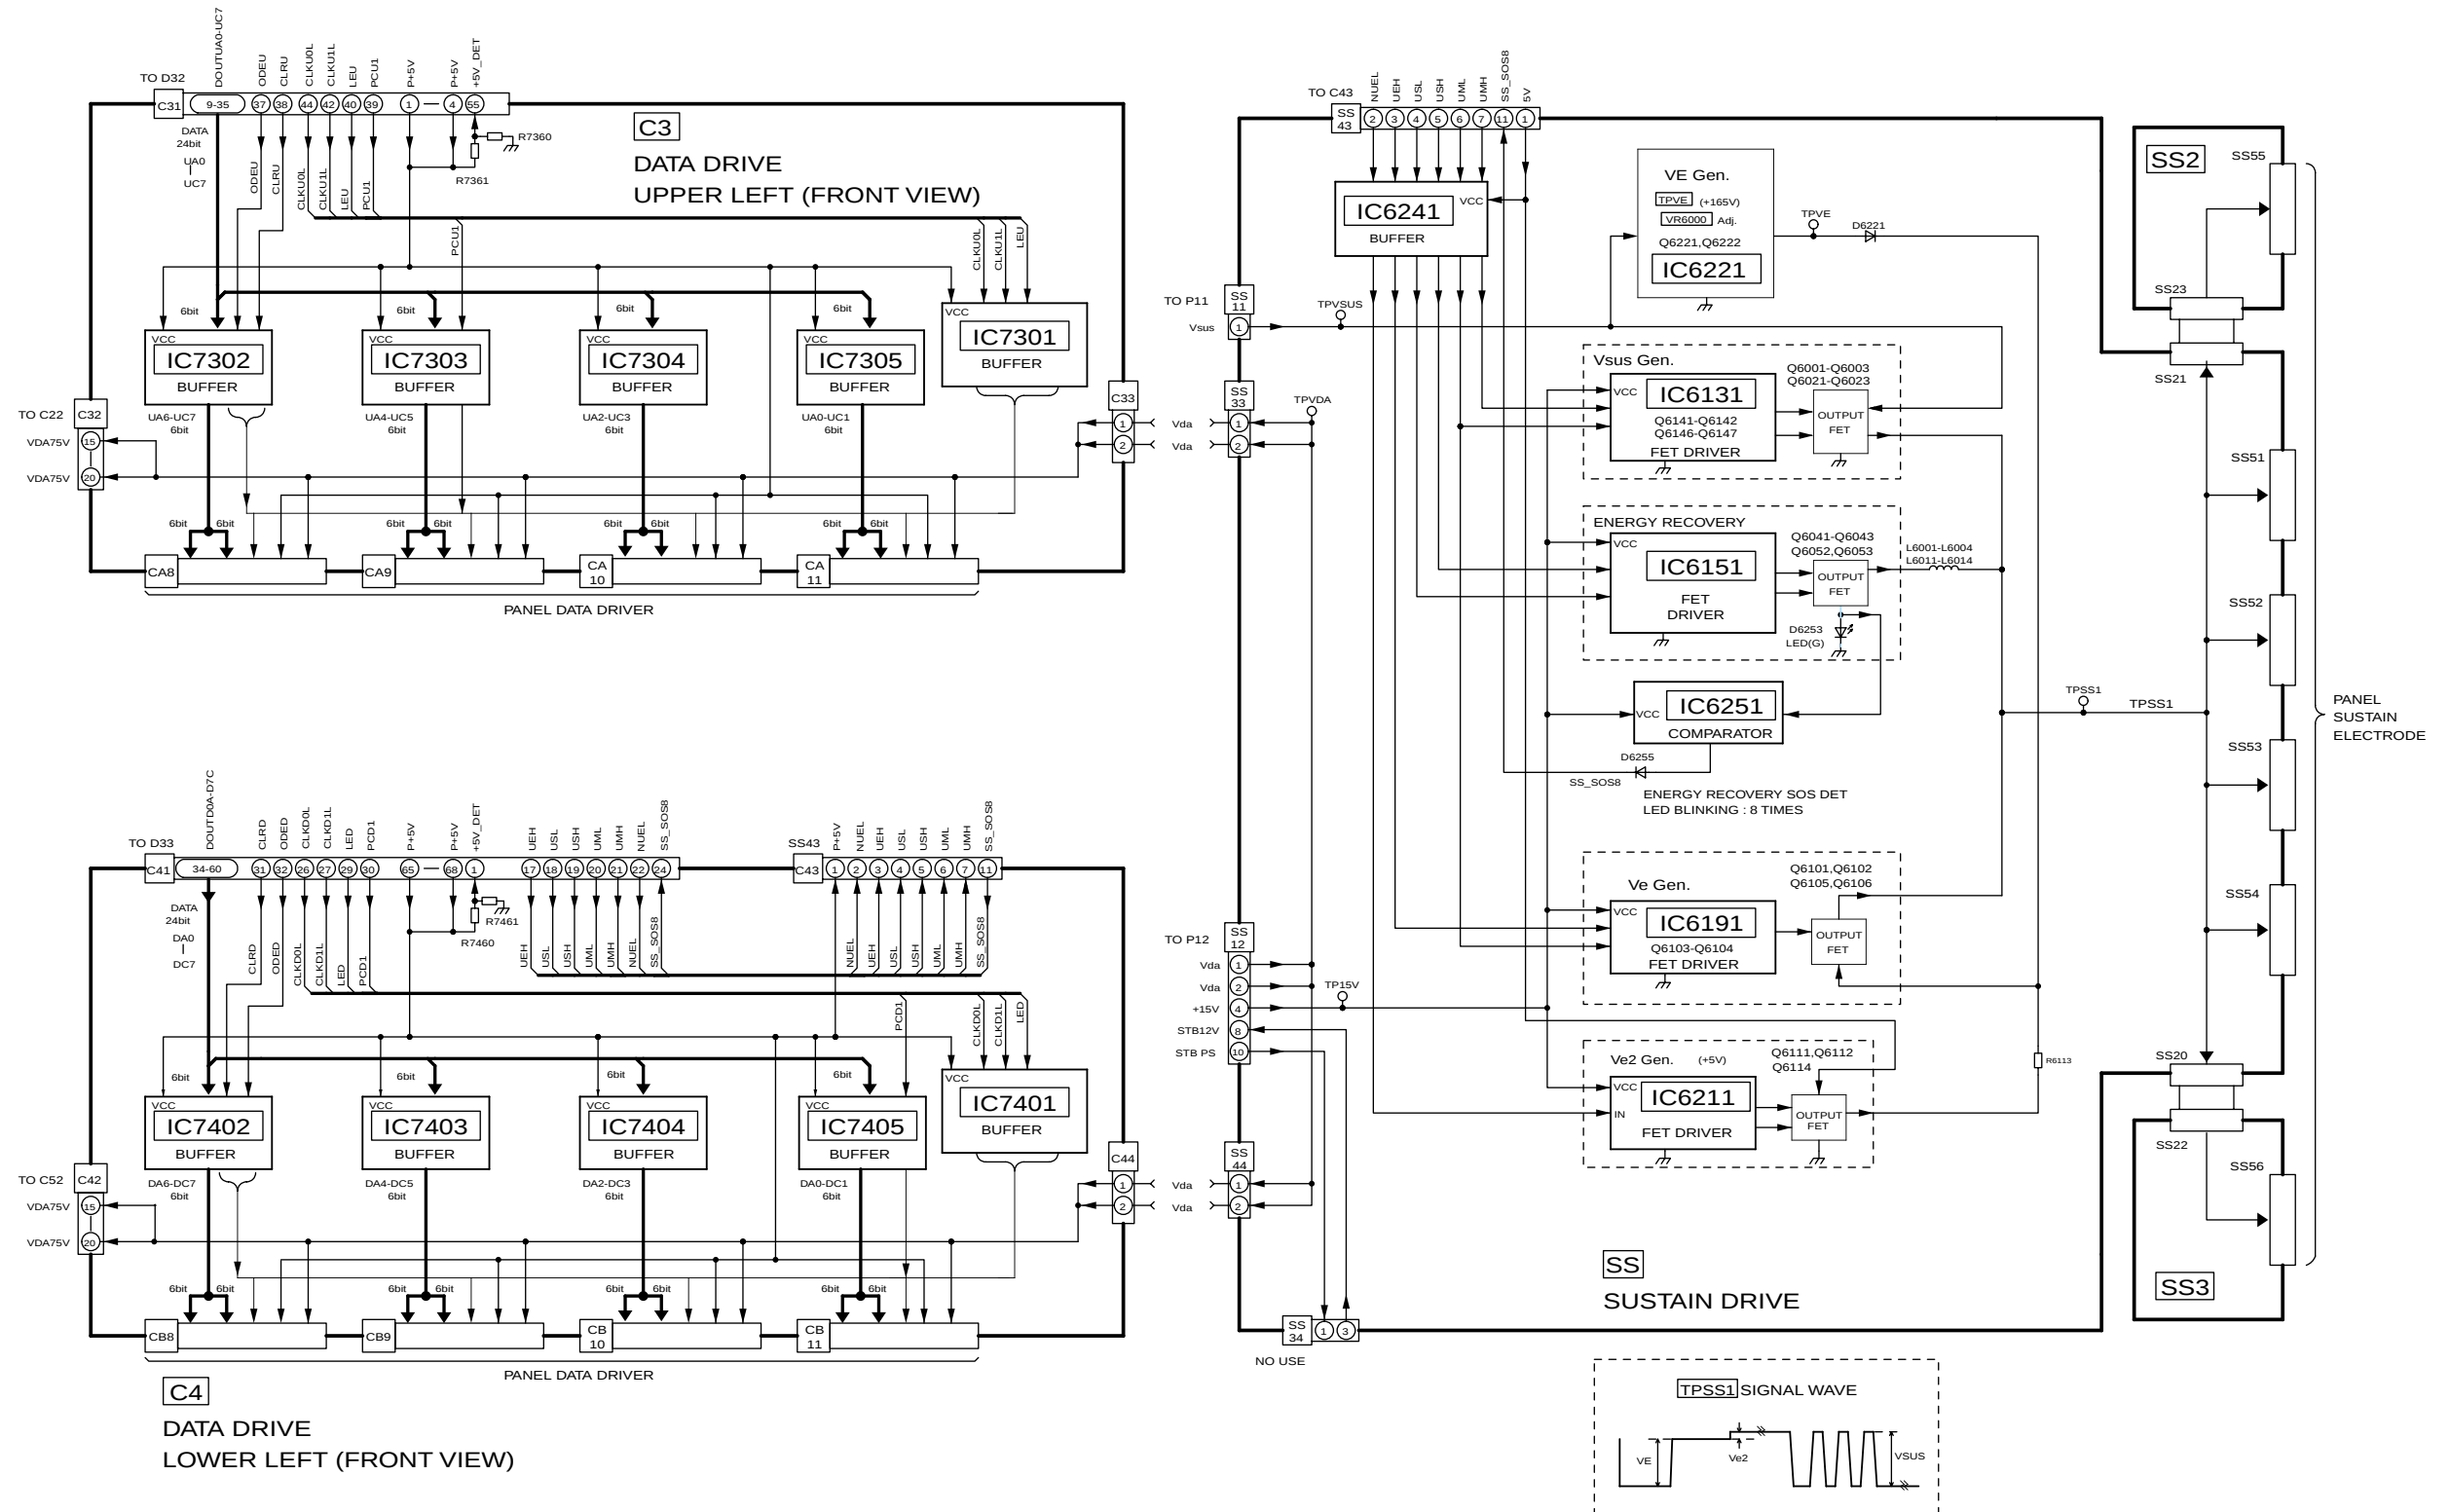


14.40. C1-Board (1 of 2) Schematic Diagram

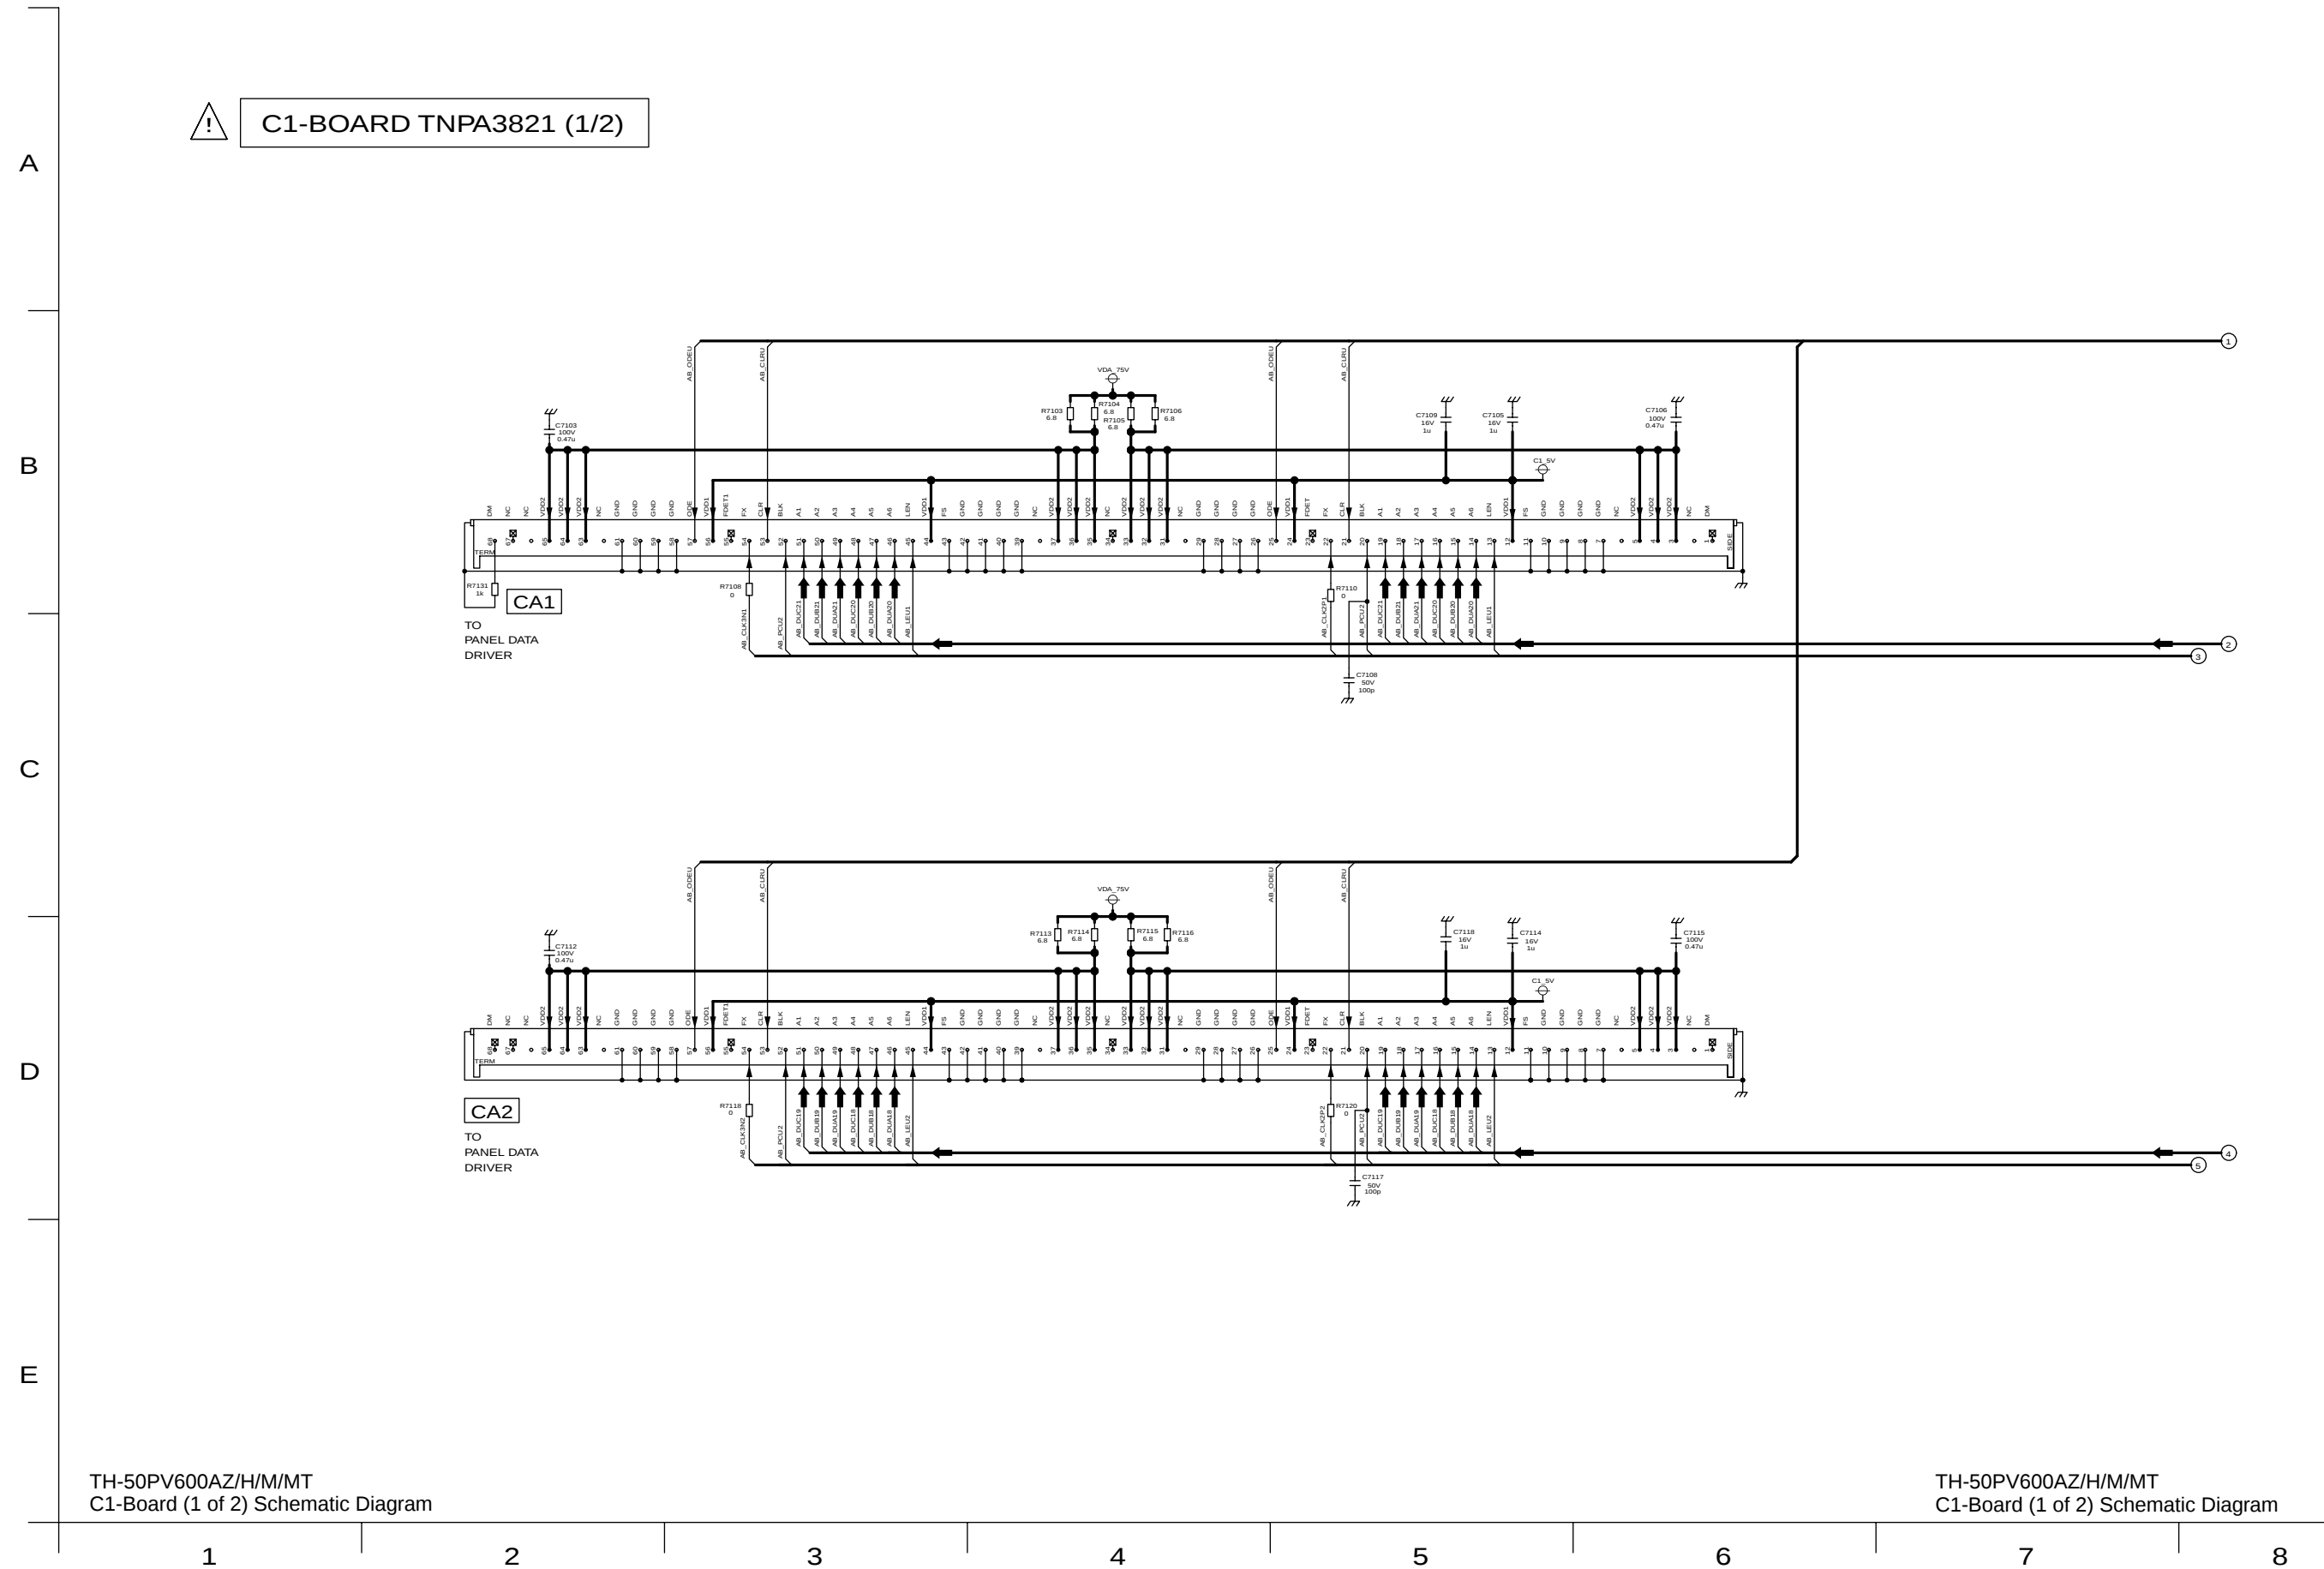




14.43. C2-Board (2 of 3) Schematic Diagram

 C2-BOARD TNPA3822 (2/3)

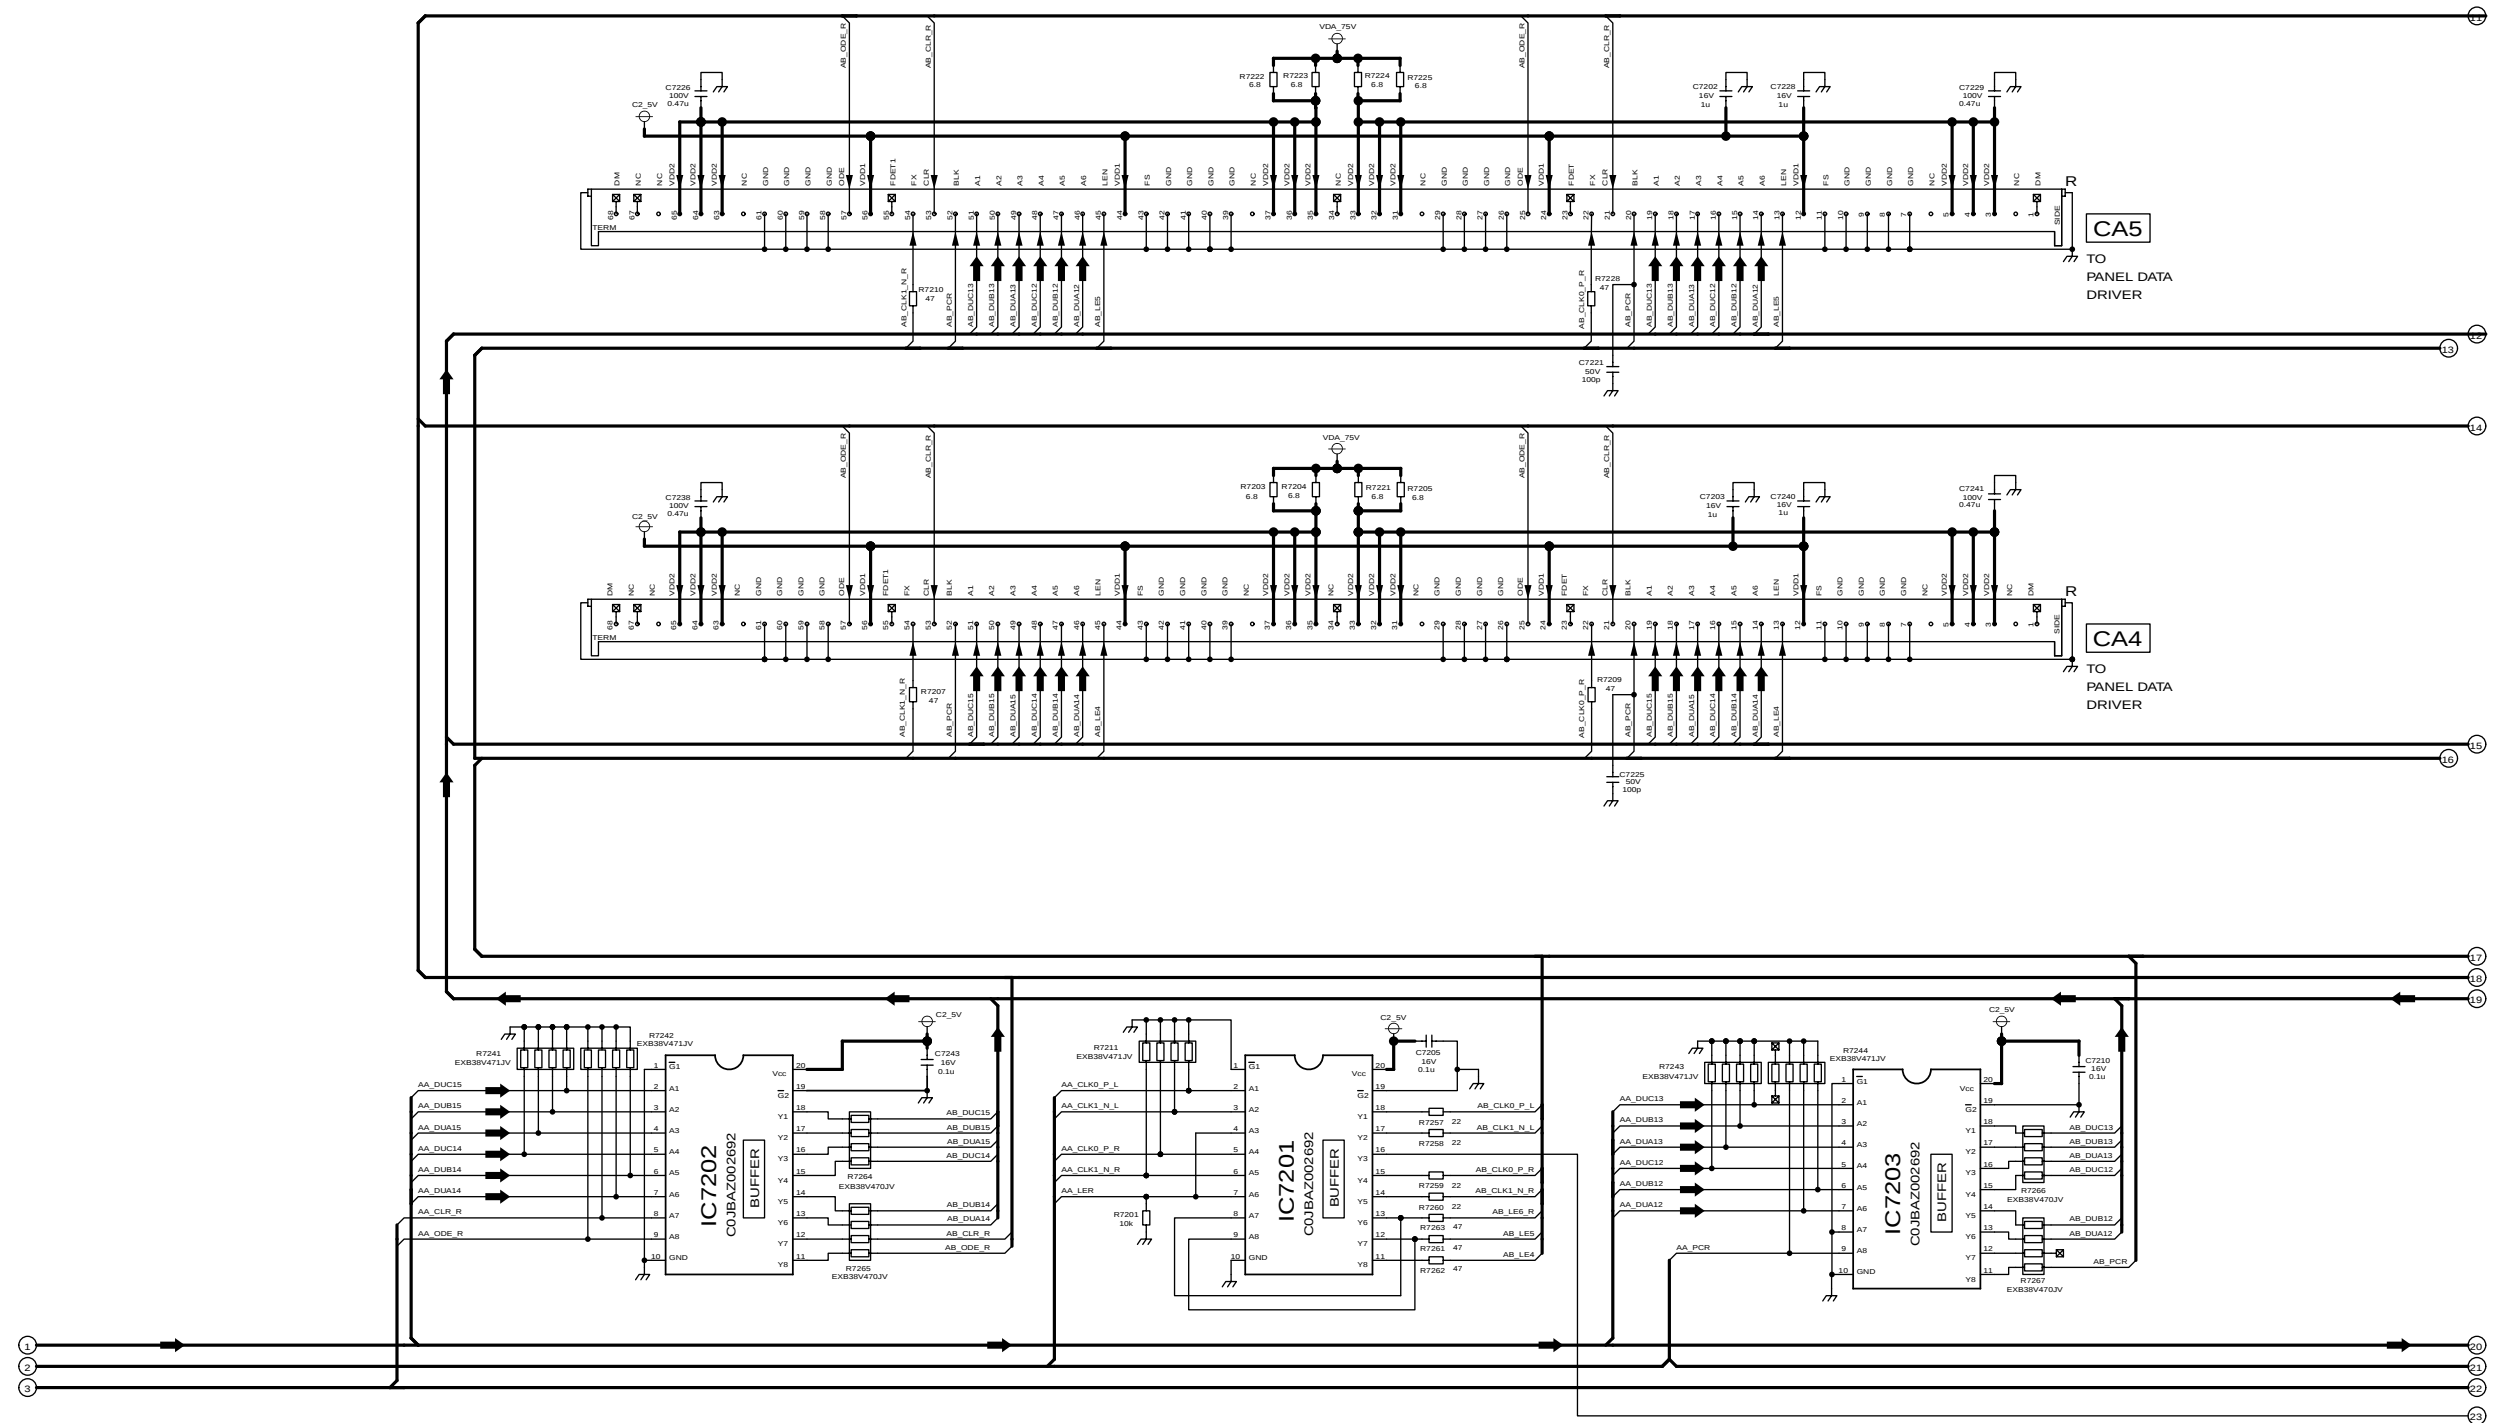


TH-50PV600AZ/H/M/MT
C2-Board (2 of 3) Schematic Diagram


TH-50PV600AZ/H/M/MT
C2-Board (2 of 3) Schematic Diagram




14.45. C3-Board (1 of 2) Schematic Diagram

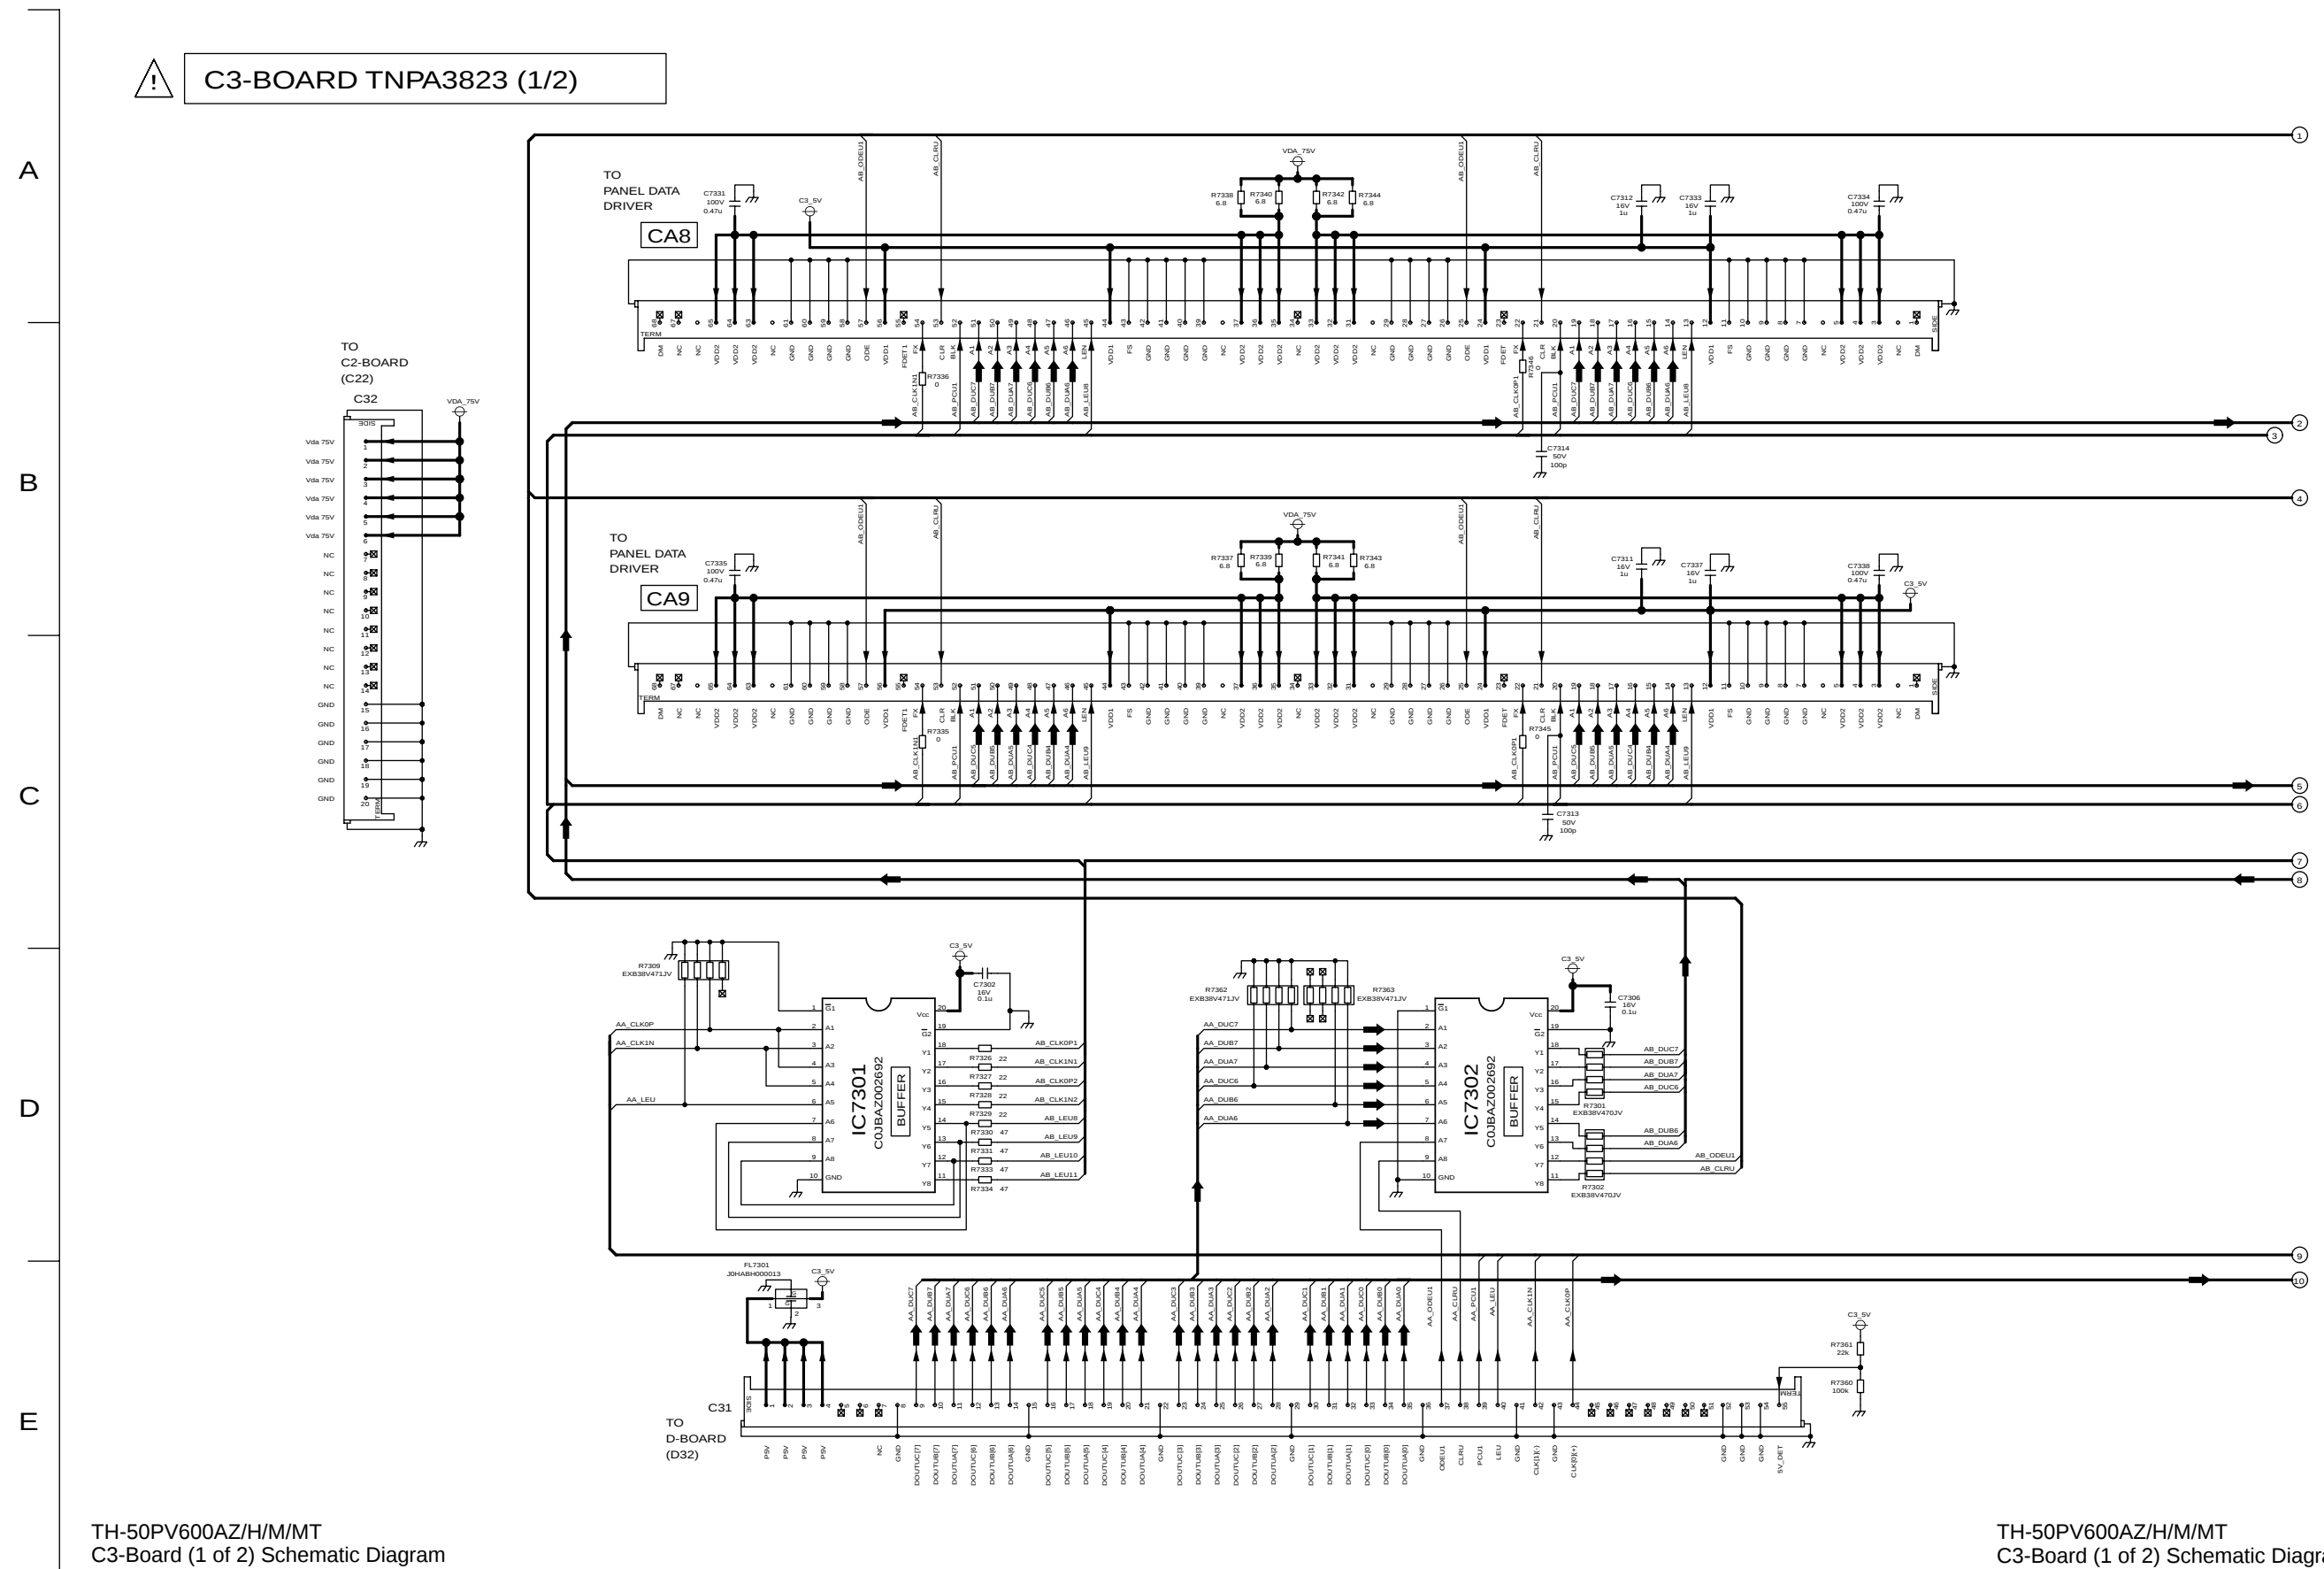


14.47. C4-Board (1 of 2) Schematic Diagram

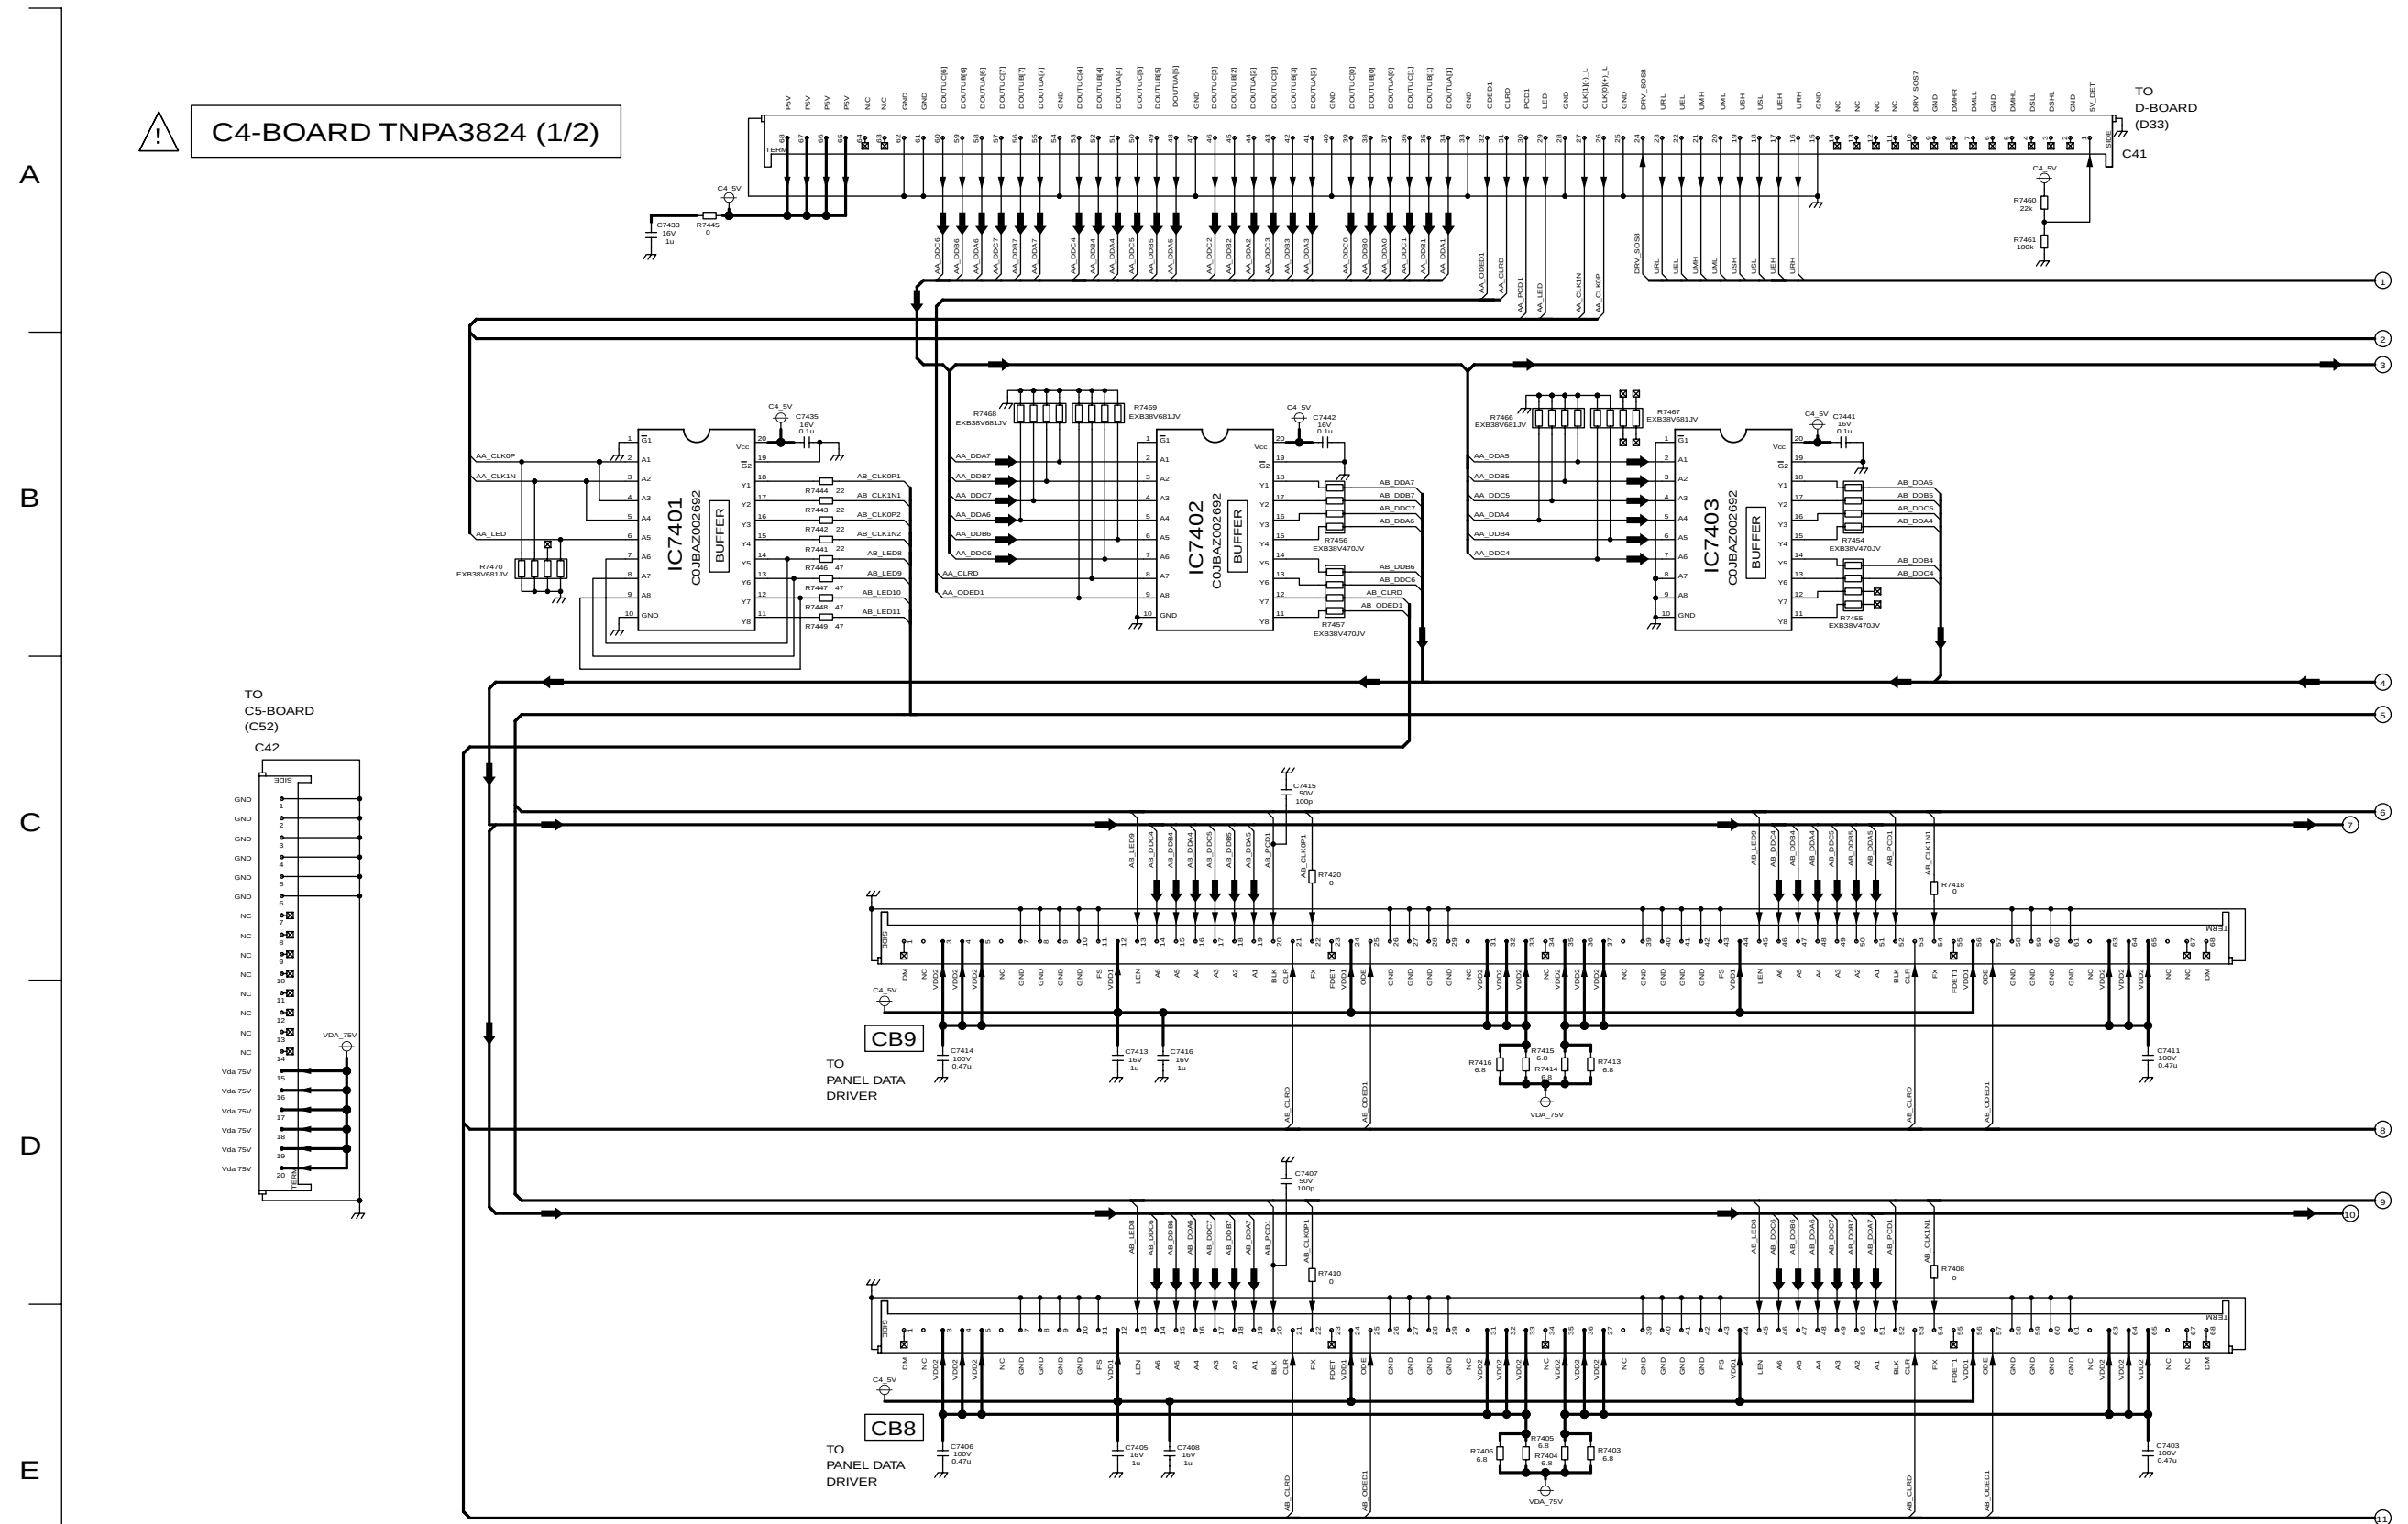




TH-50PV600AZ/H/M/MT
C4-Board (2 of 2) Schematic Diagram

14.49. C5-Board (1 of 3) Schematic Diagram

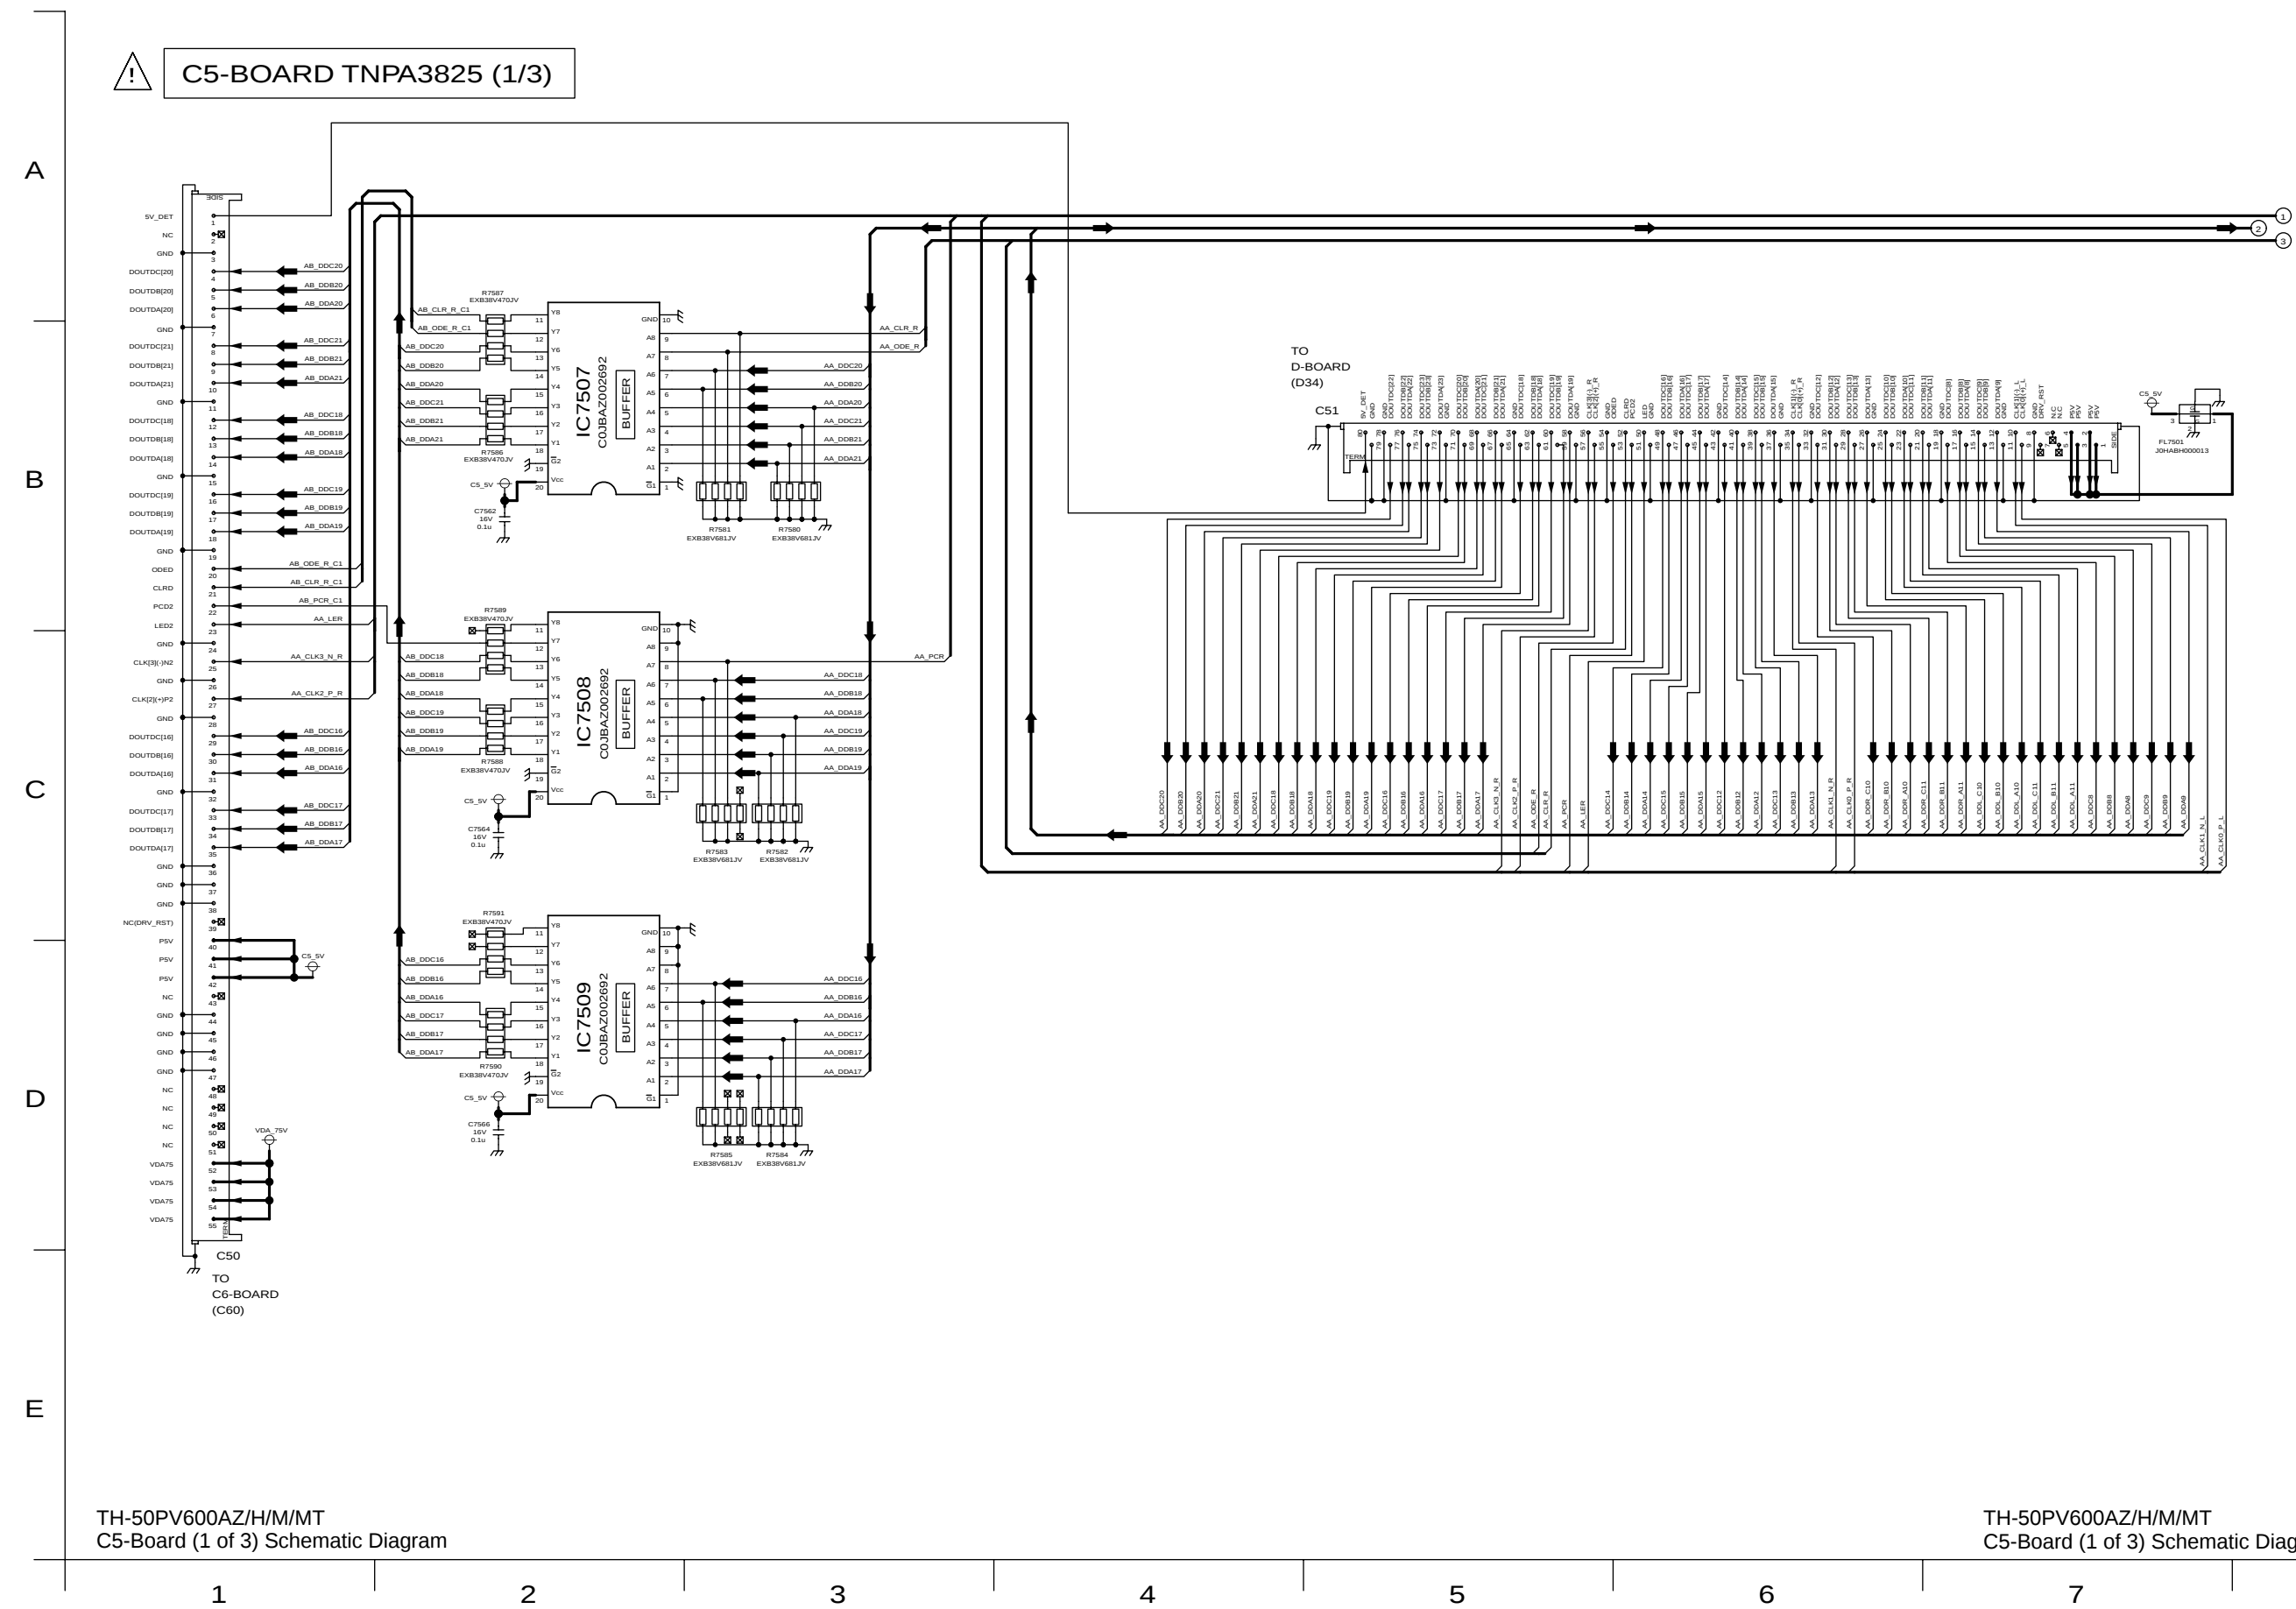

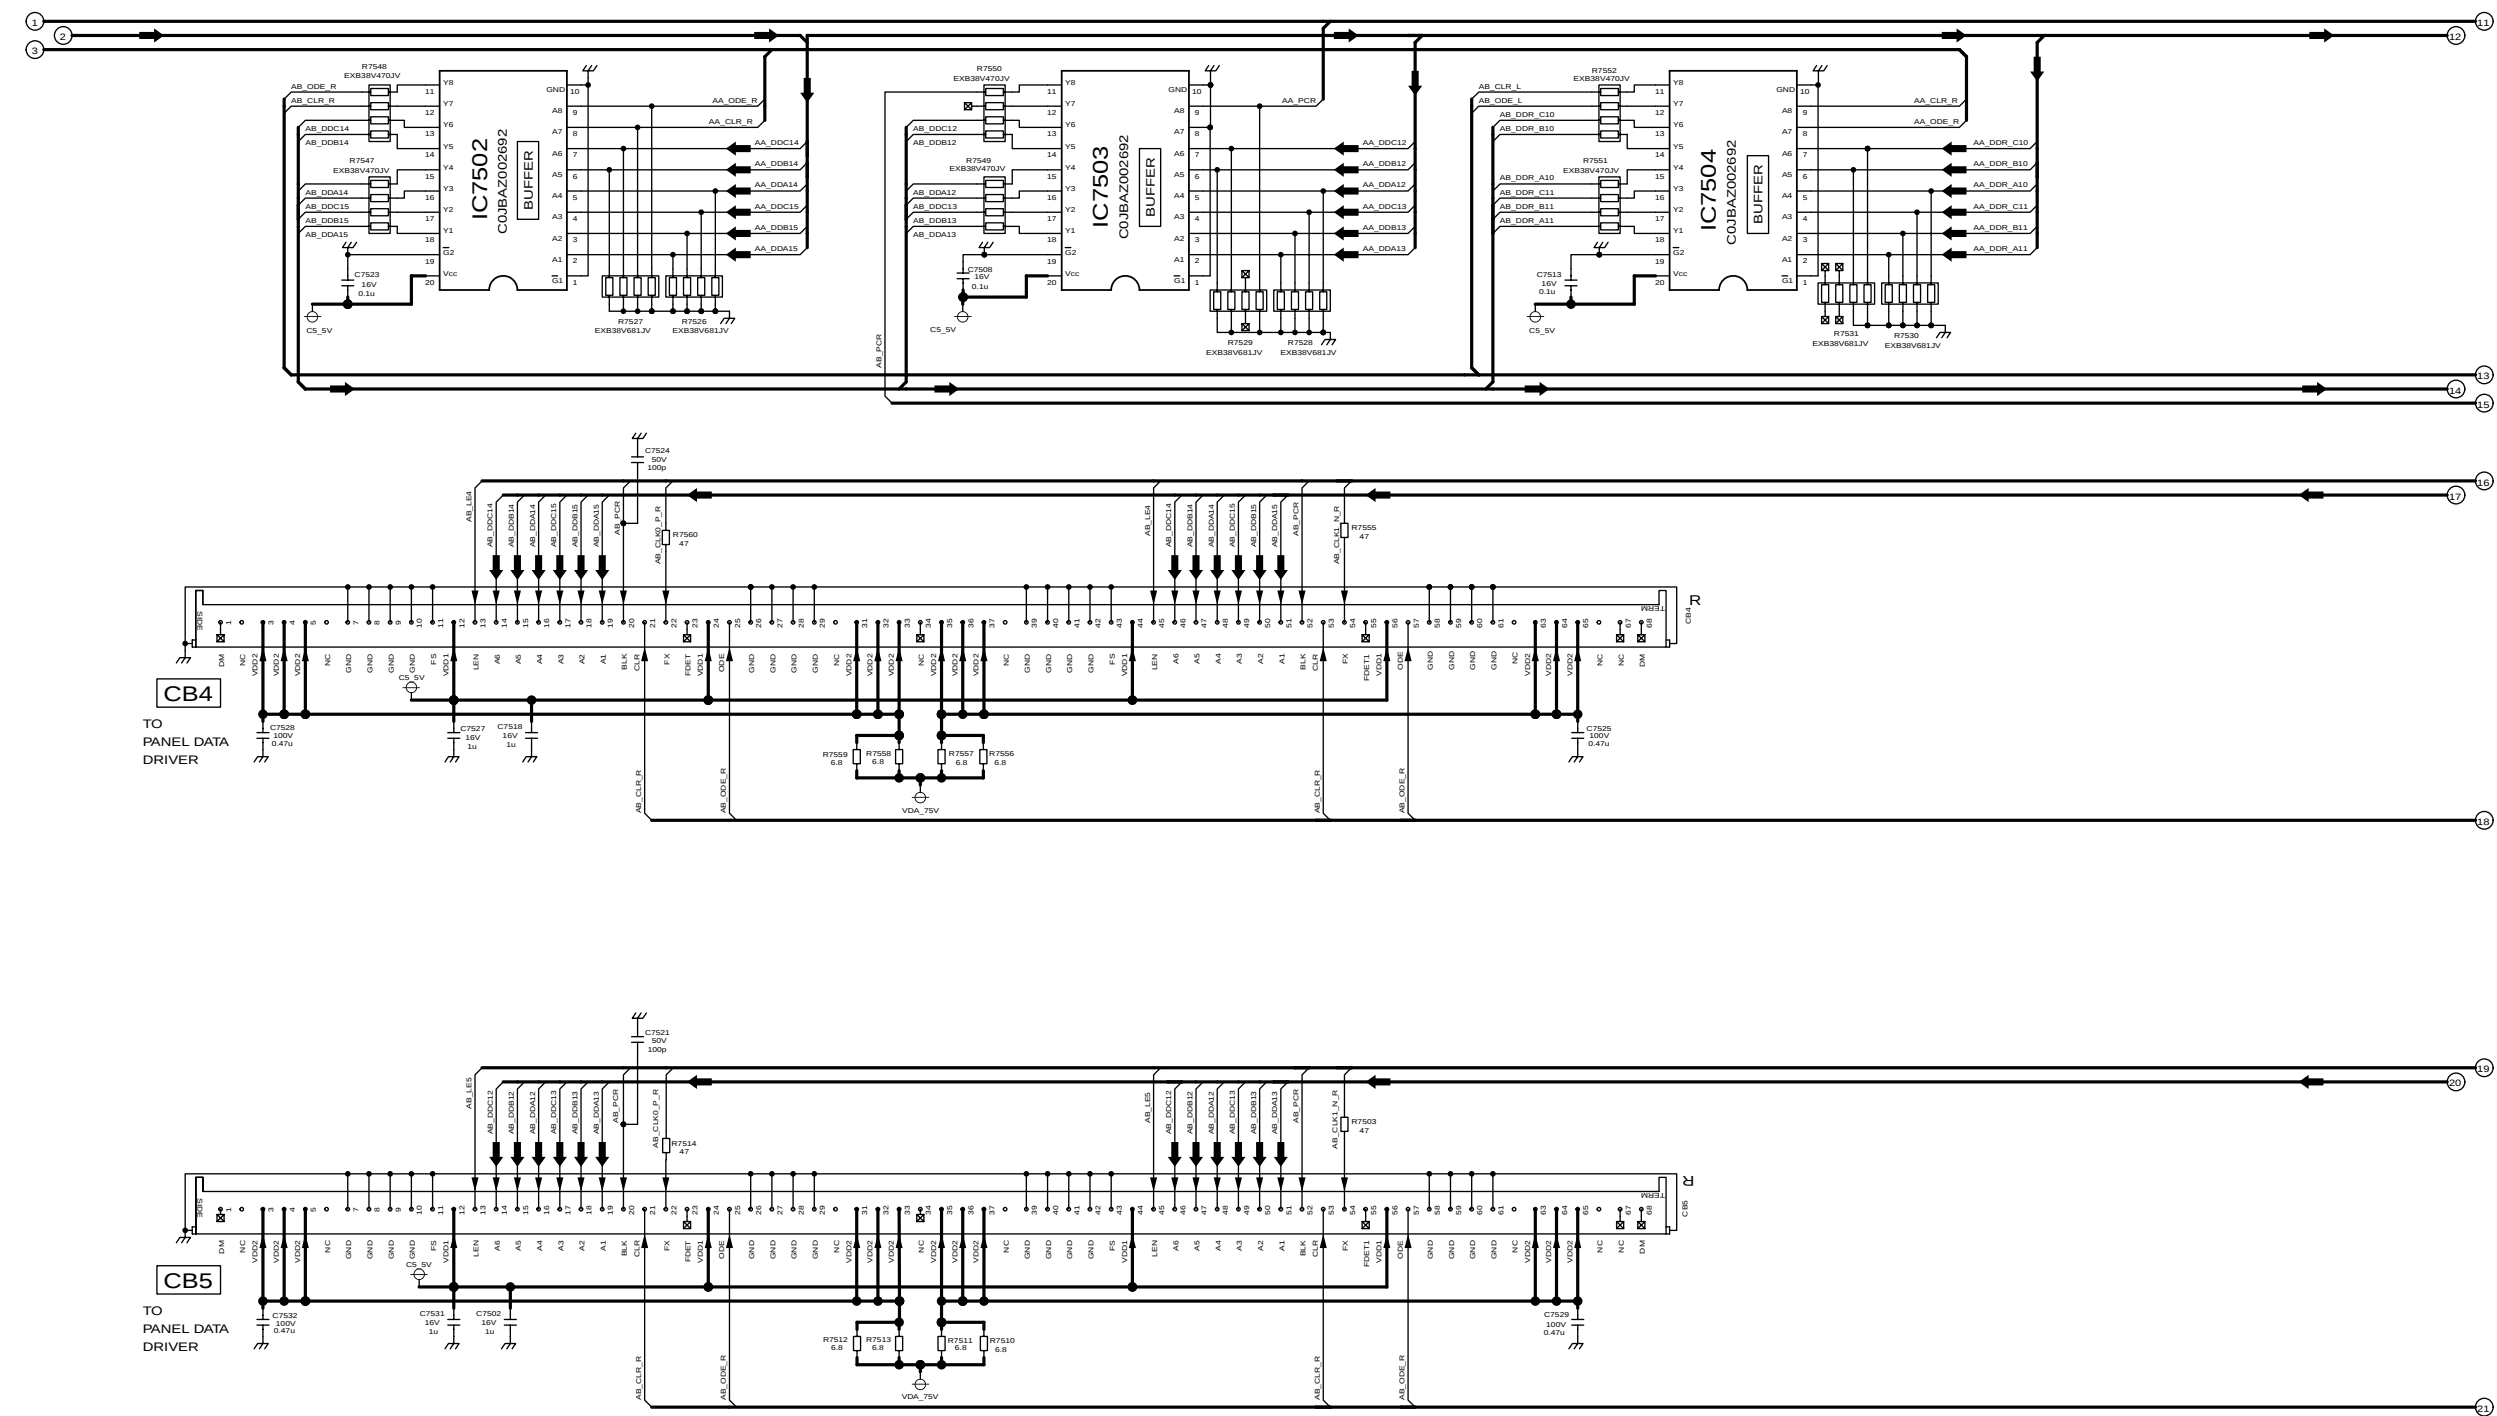


TH-50PV600AZ/H/M/MT
C5-Board (2 of 3) Schematic Diagram

14.51. C5-Board (3 of 3) Schematic Diagram




C5-BOARD TNPA3825 (3/3)

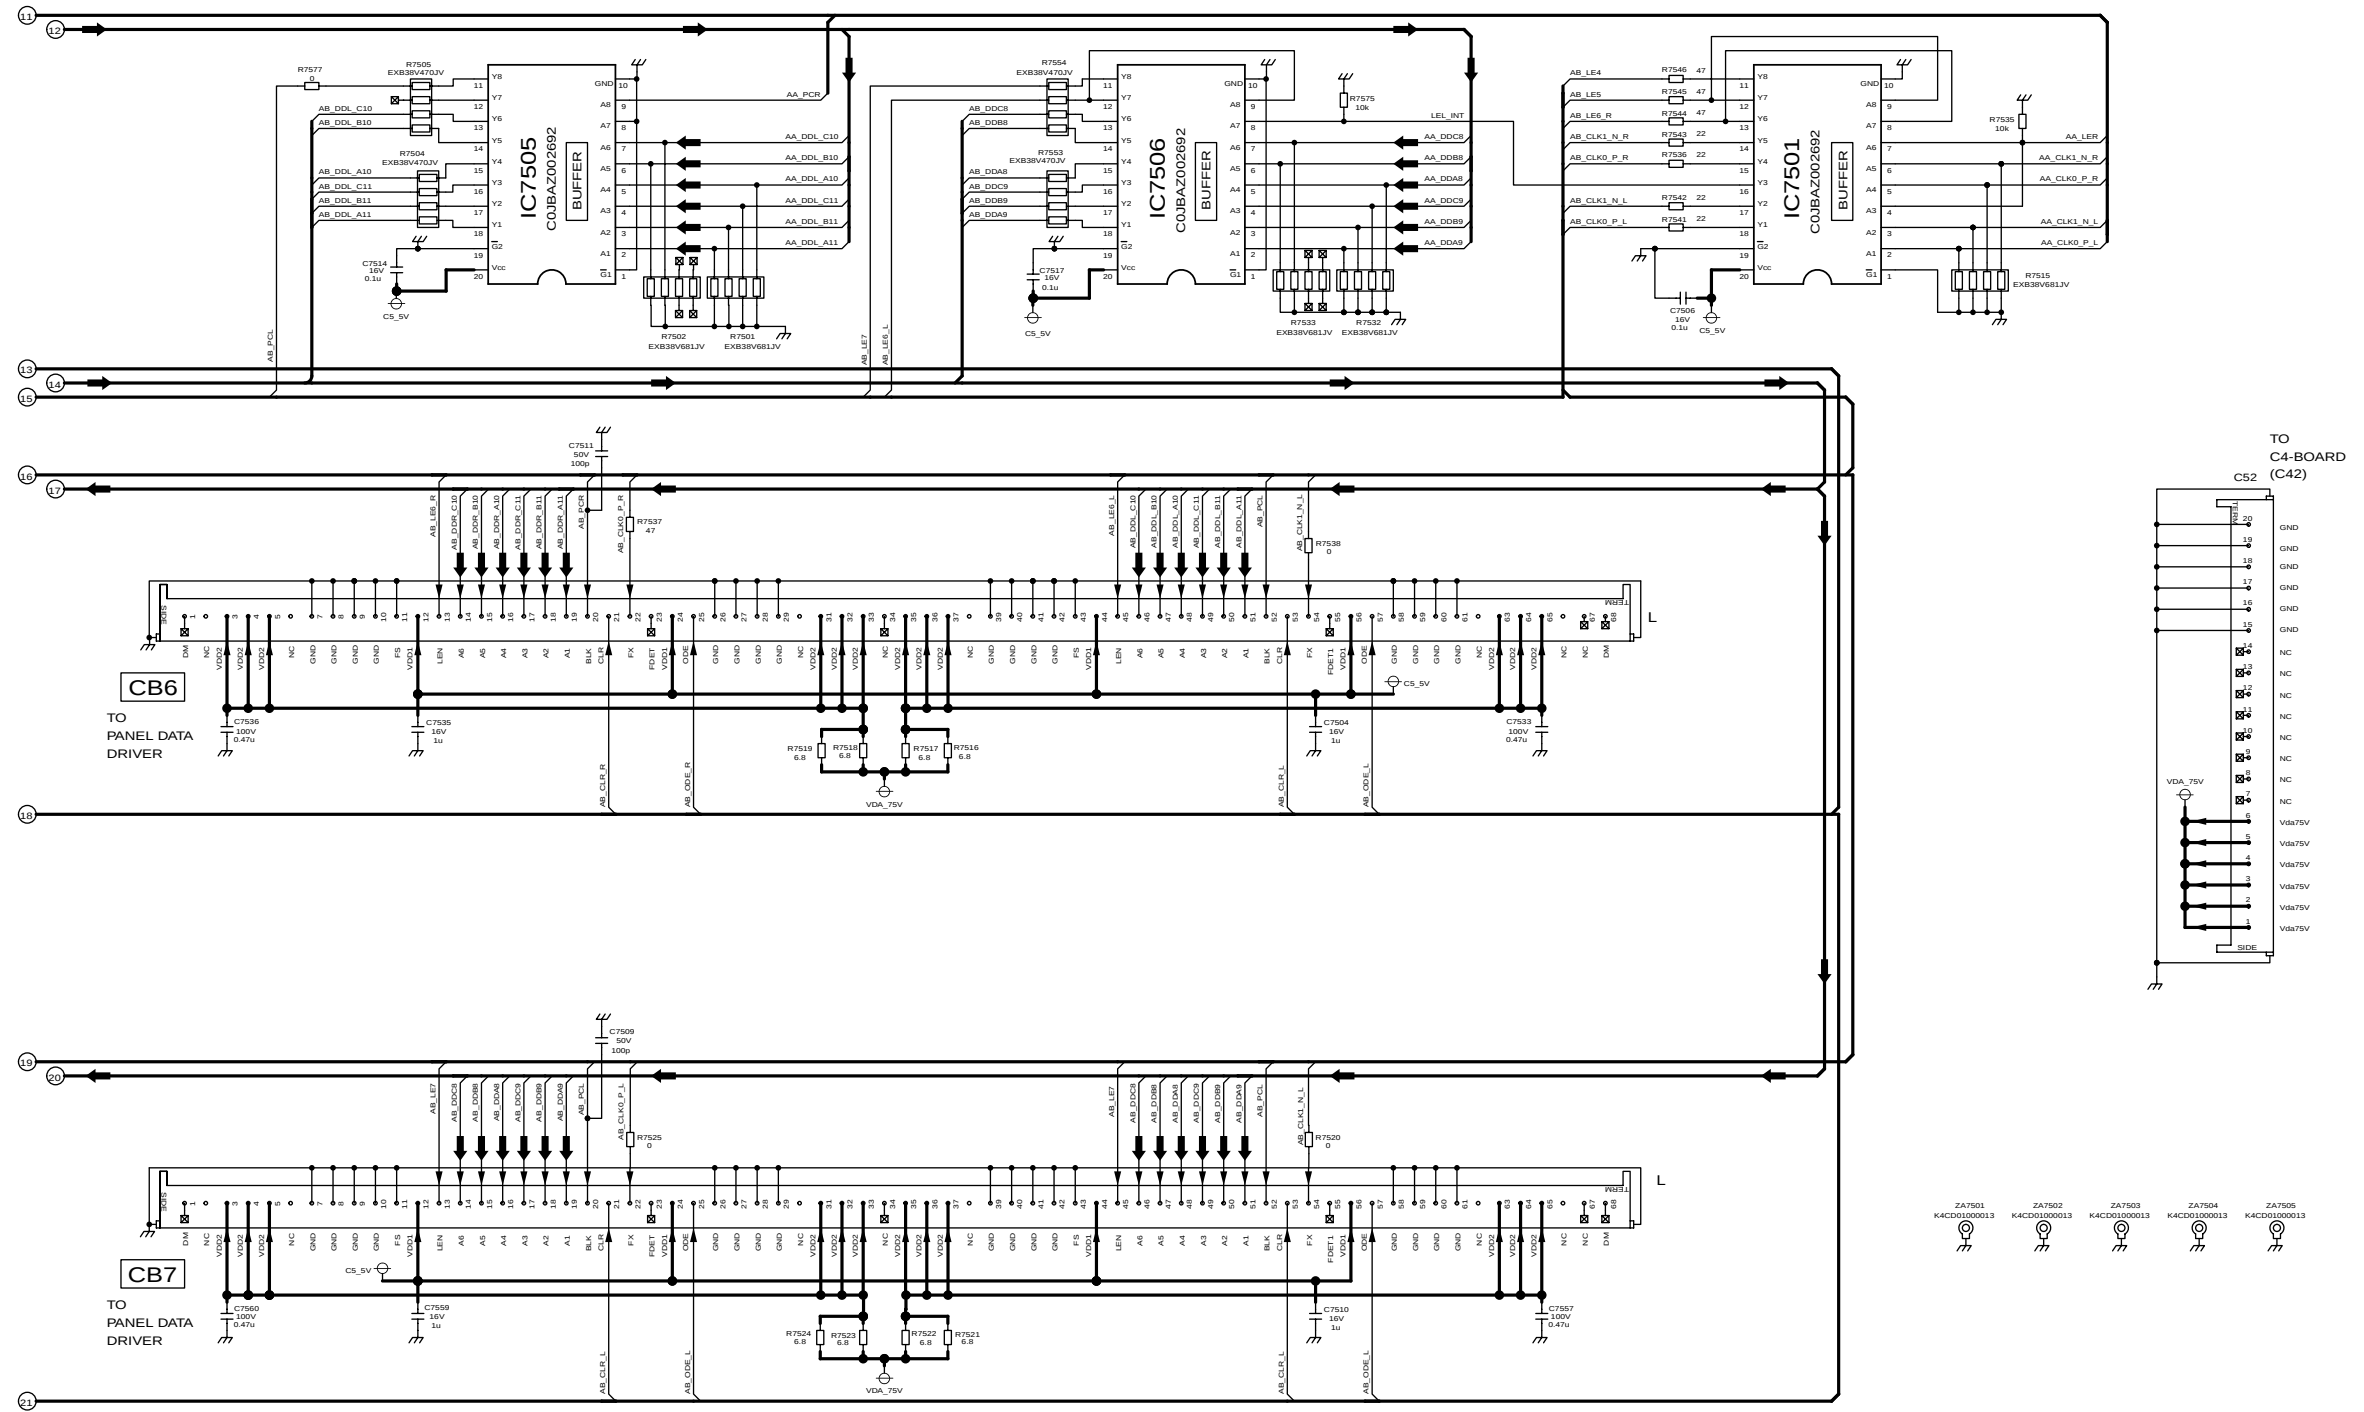

TH-50PV600AZ/H/M/MT
C5-Board (3 of 3) Schematic Diagram

TH-50PV600AZ/H/M/MT
C5-Board (3 of 3) Schematic Diagram

14.53. C6-Board (2 of 2) Schematic Diagram

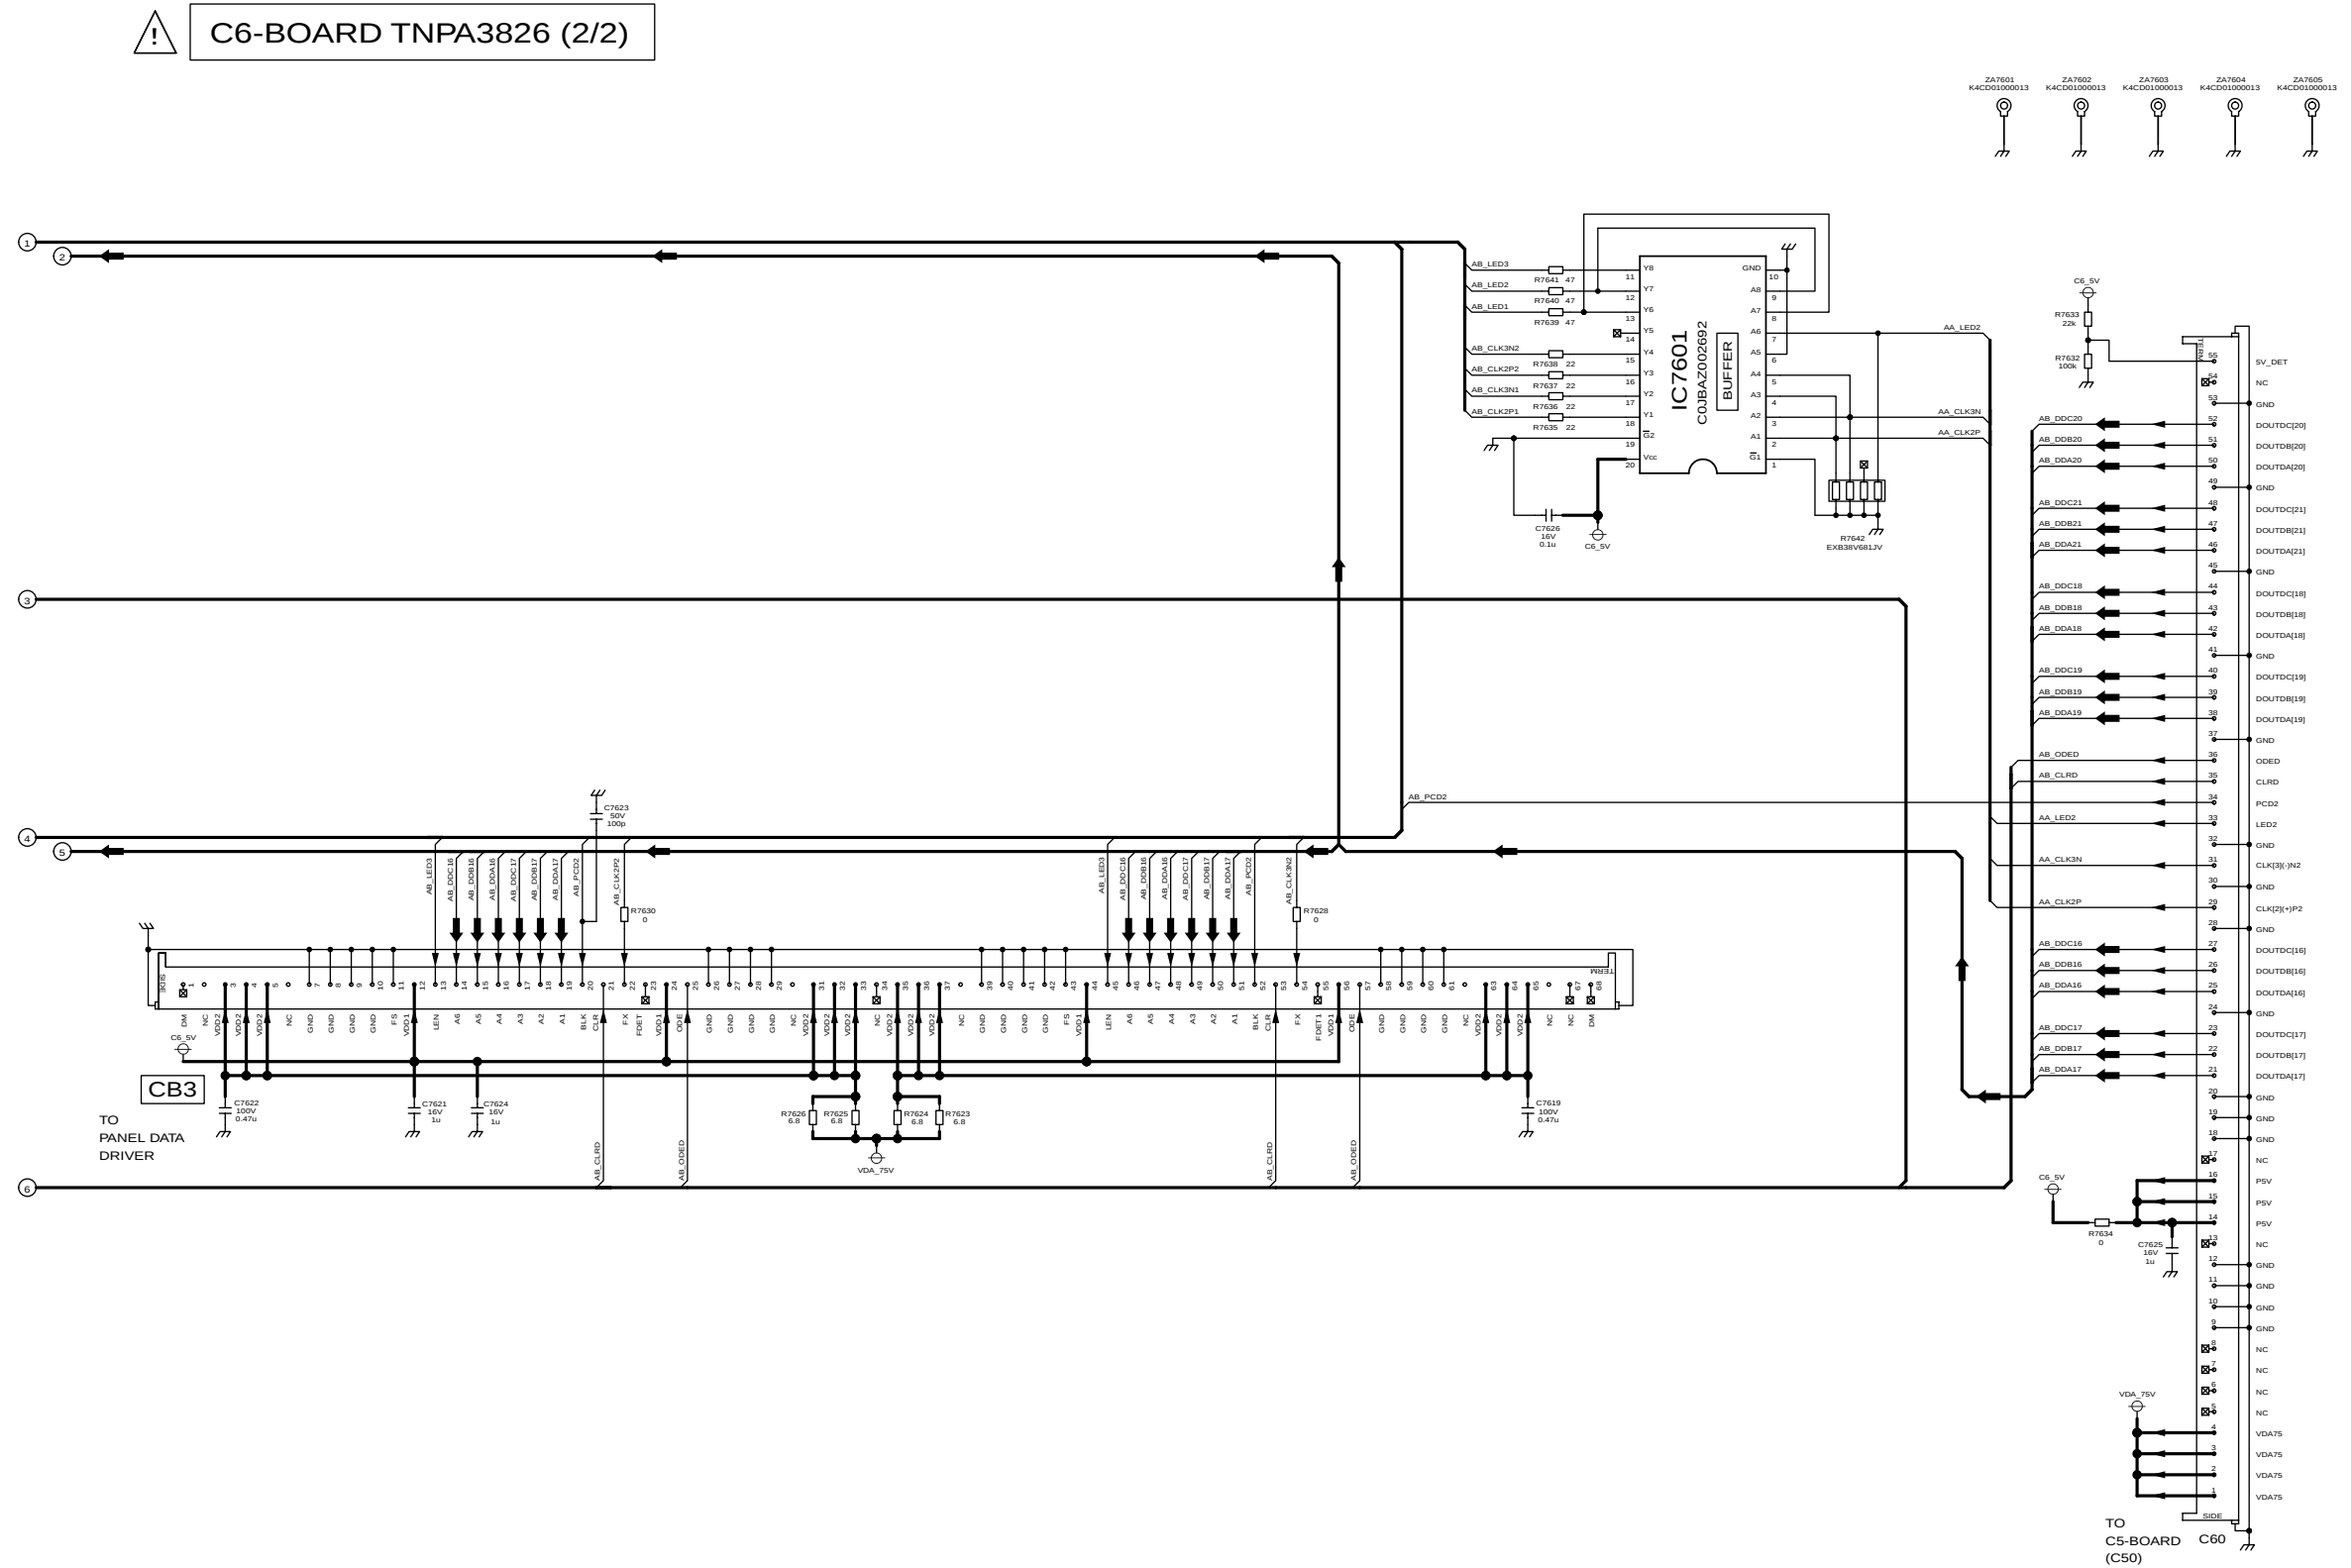

TH-50PV600AZ/H/M/MT
C6-Board (2 of 2) Schematic Diagram

TH-50PV600AZ/H/M/MT
C6-Board (2 of 2) Schematic Diagram

8

9

10

11


12

13


14

15

14.54. SS, SS2 and SS3-Board Schematic Diagram

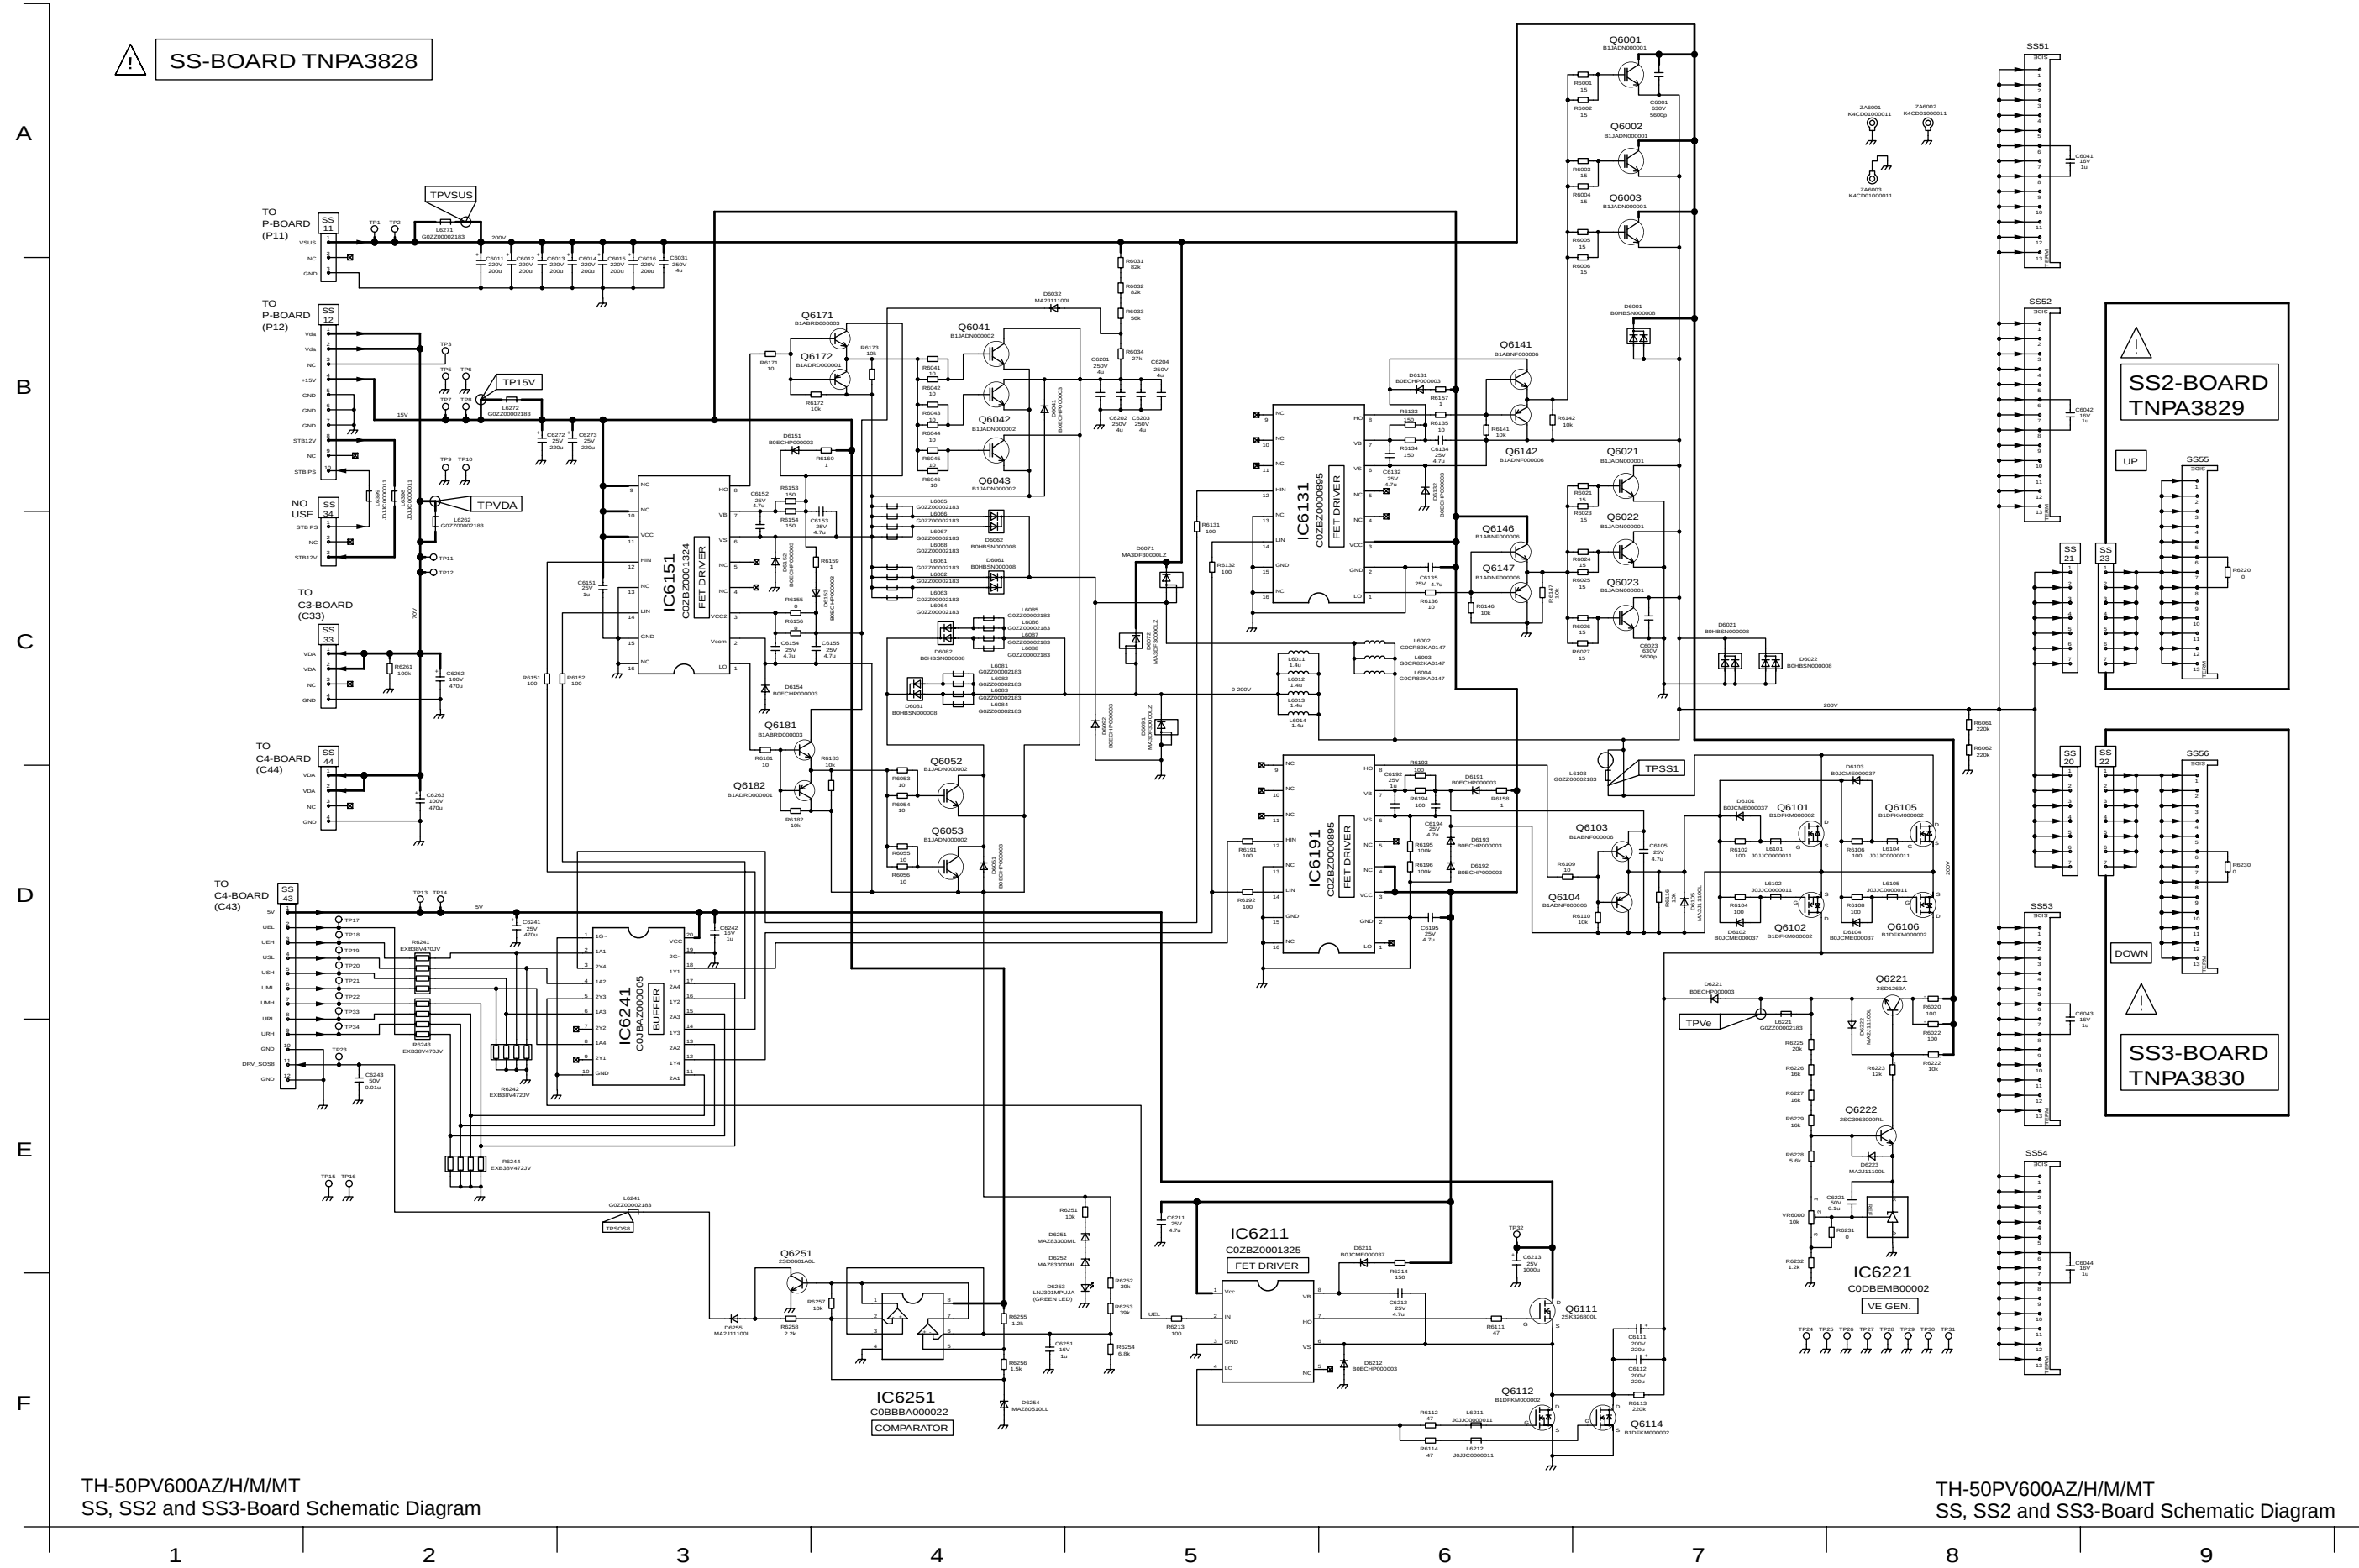


14.55. SC, SU and SD-Board Block Diagram

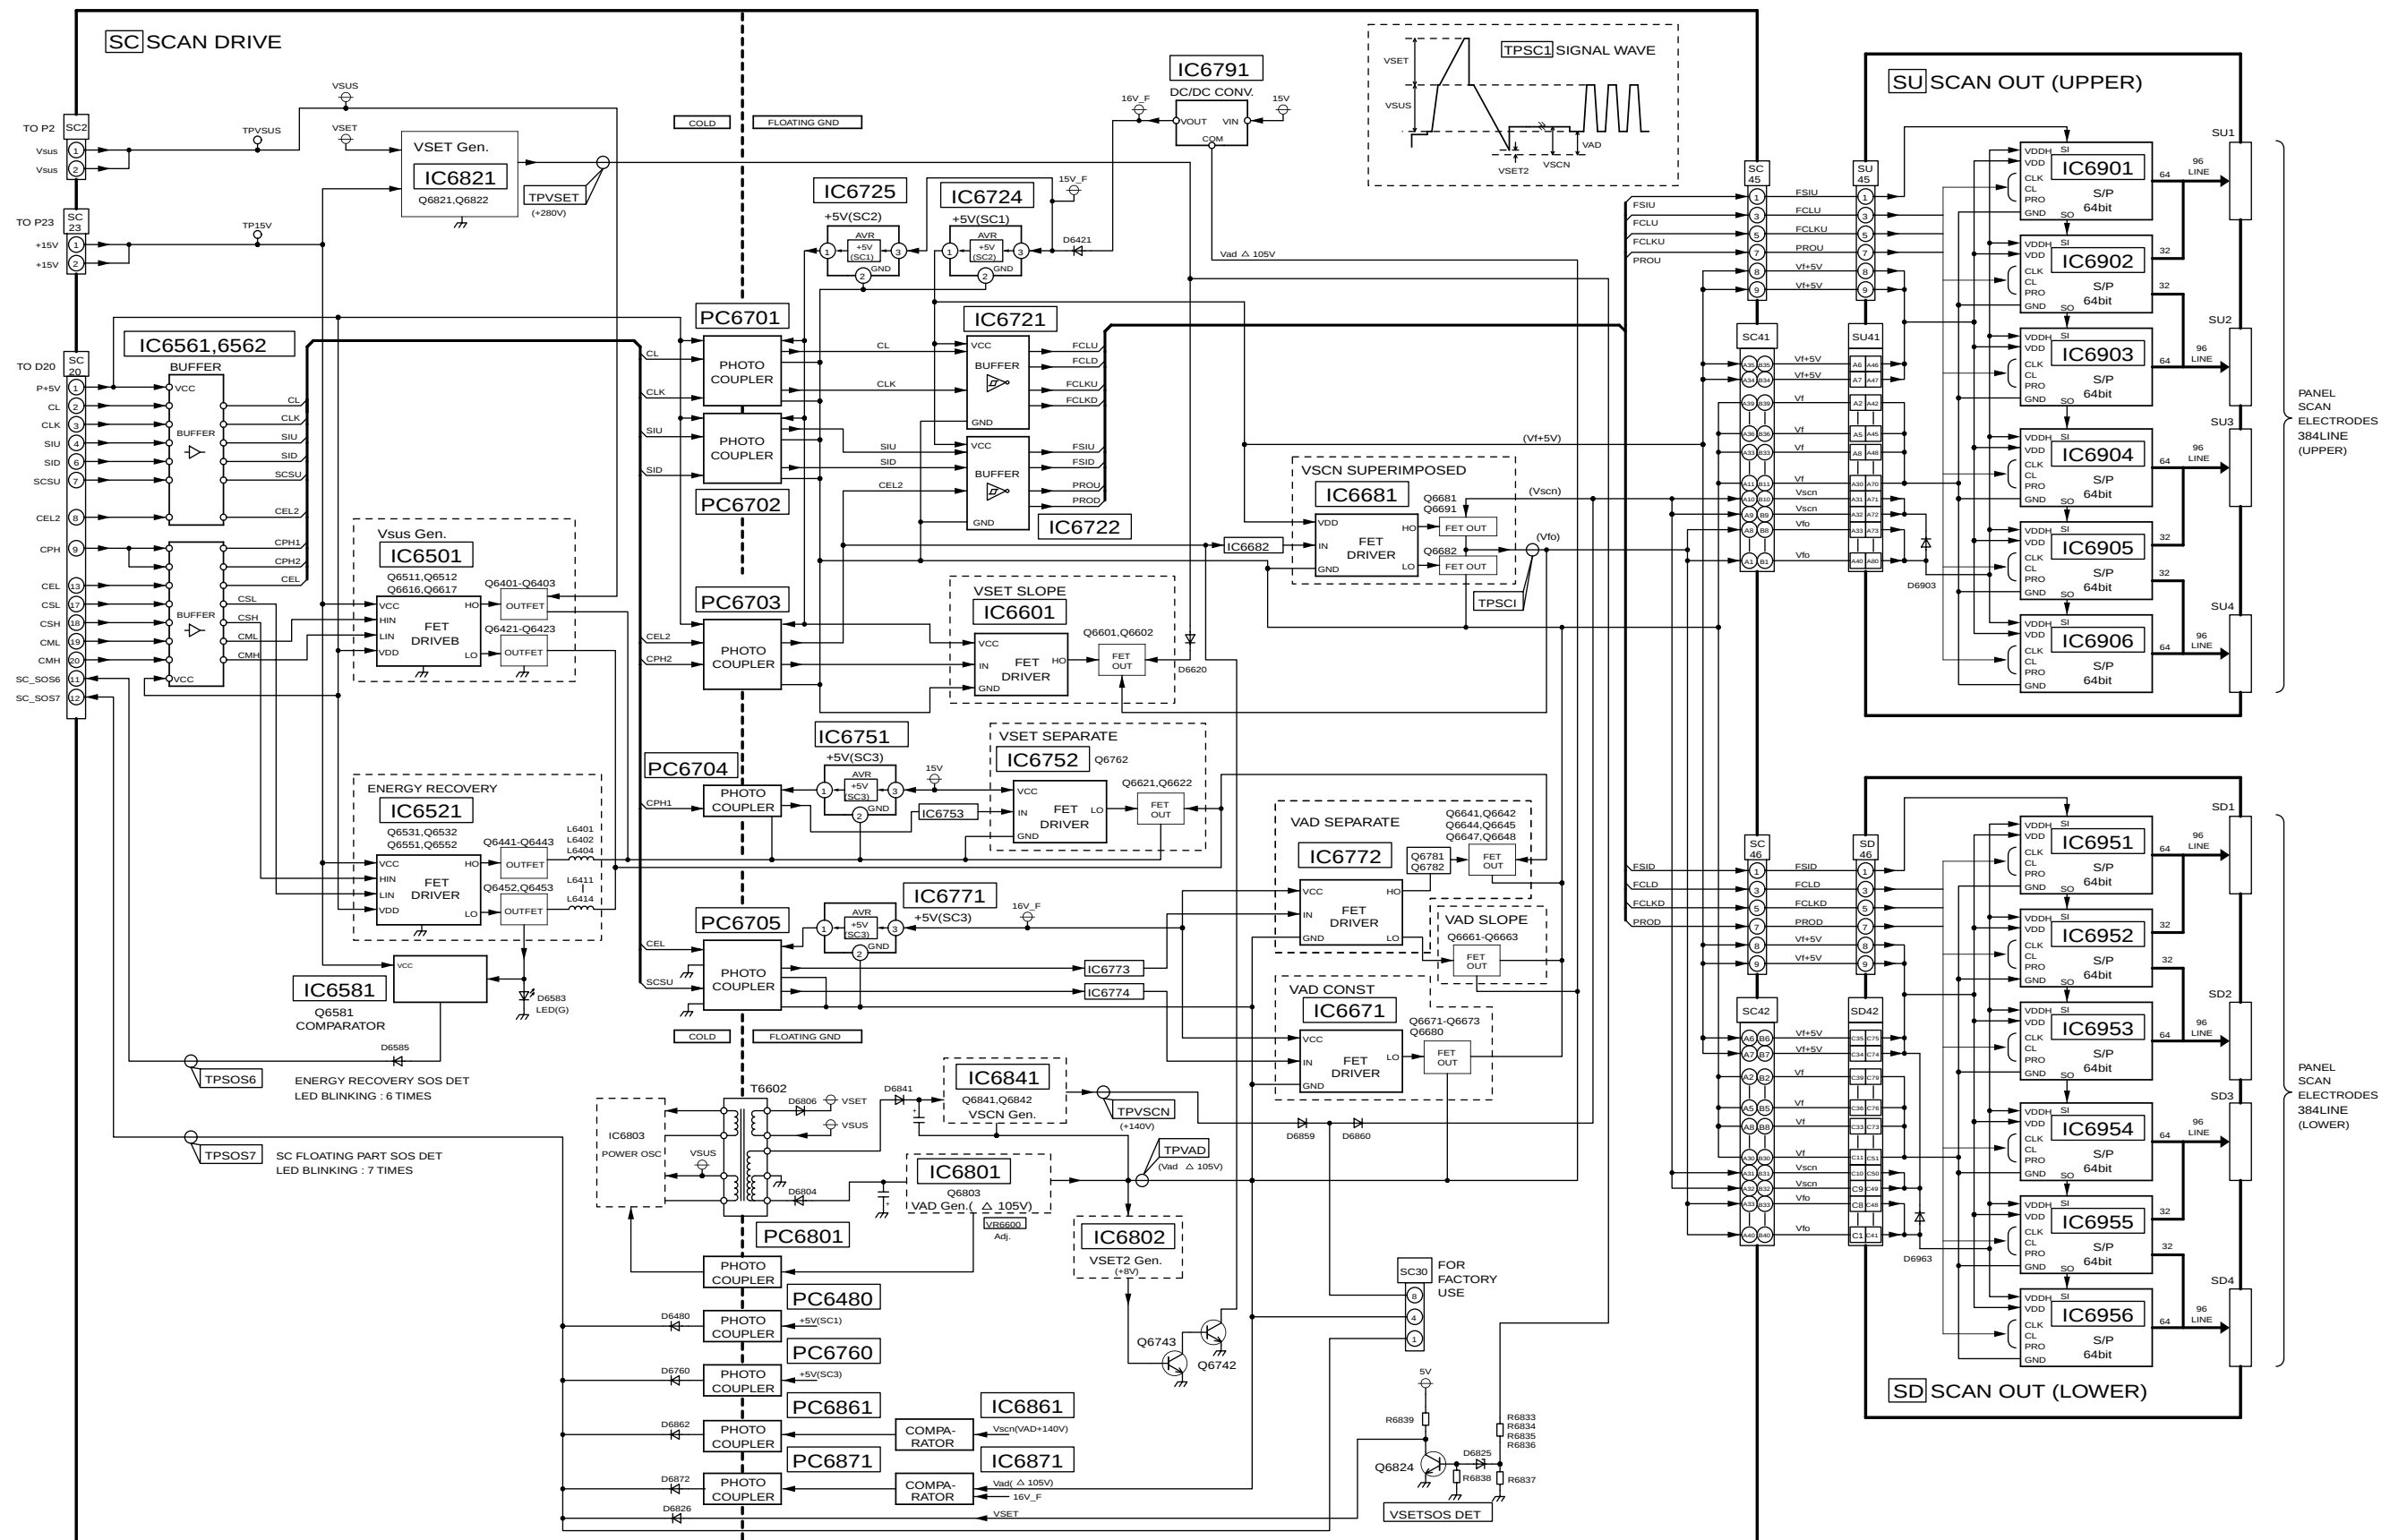

TH-50PV600AZ/H/M/MT
SC, SU and SD-Board Block Diagram

TH-50PV600AZ/H/M/MT SC, SU and SD-Board Block Diagram


14.57. SC-Board (2 of 2) Schematic Diagram

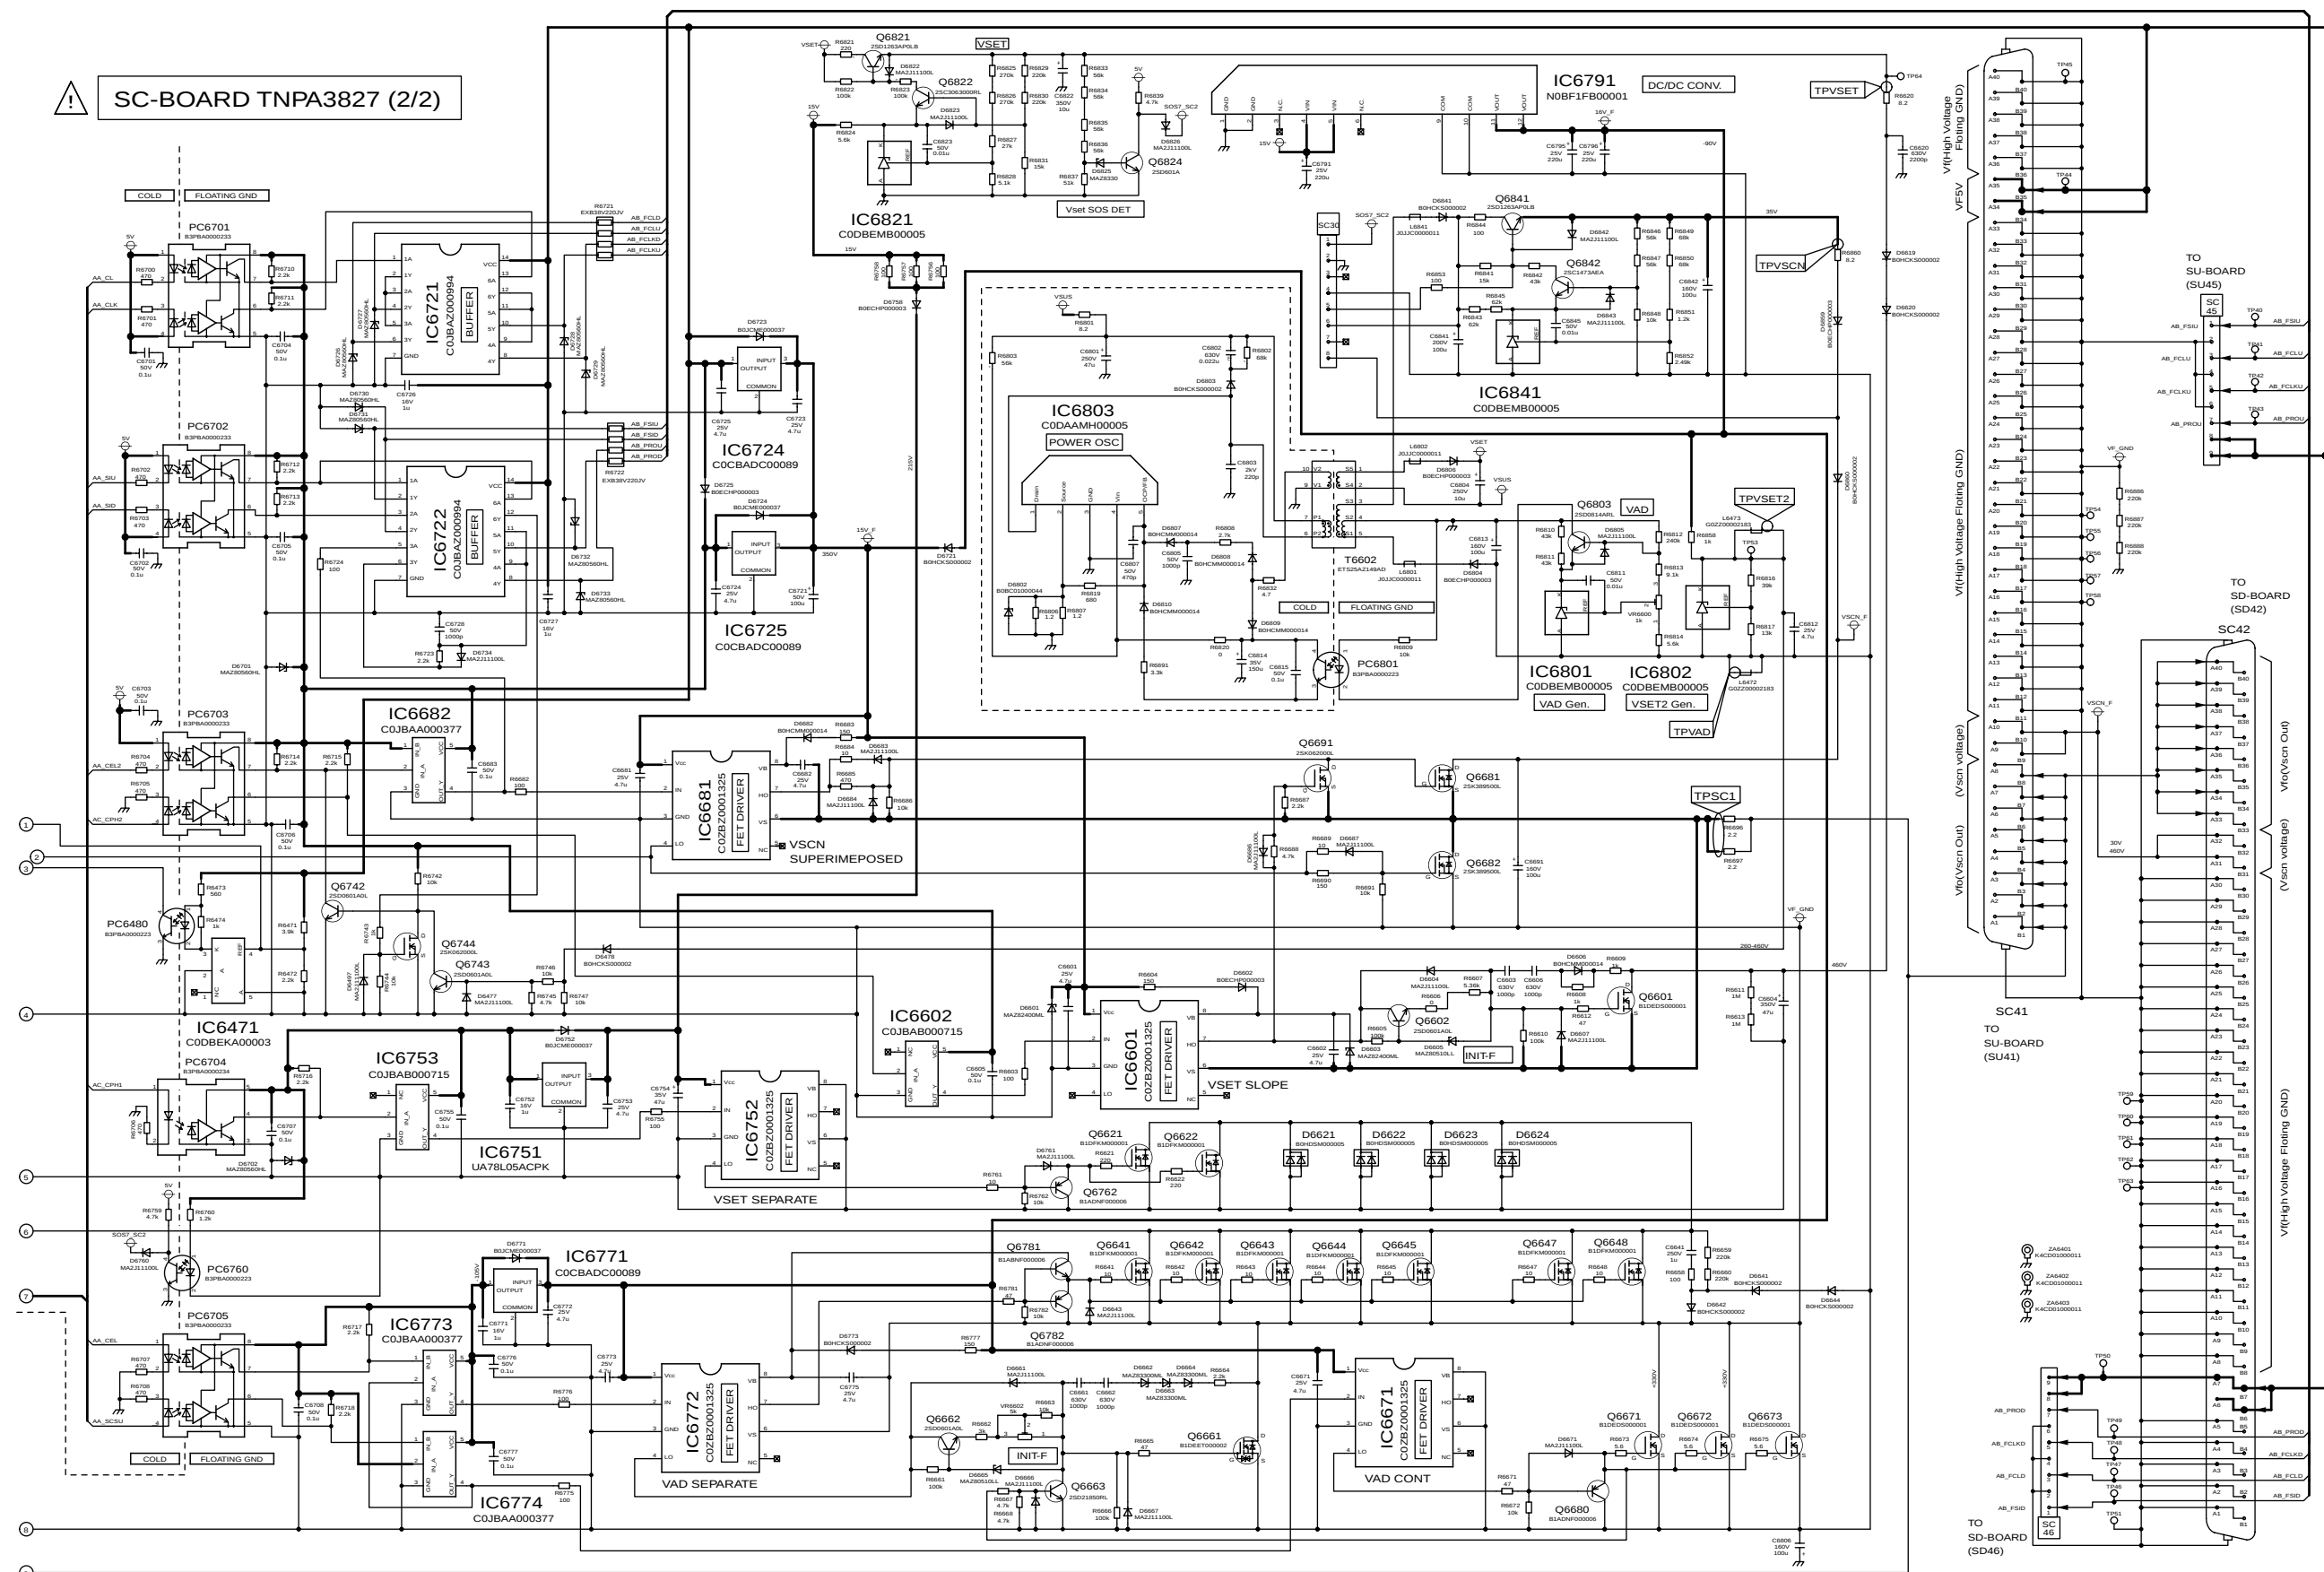


TH-50PV600AZ/H/M/MT SC-Board (2 of 2) Schematic Diagram

TH-50PV600AZ/H/M/MT SC-Board (2 of 2) Schematic Diagram


14.58. SU-Board (1 of 2) Schematic Diagram

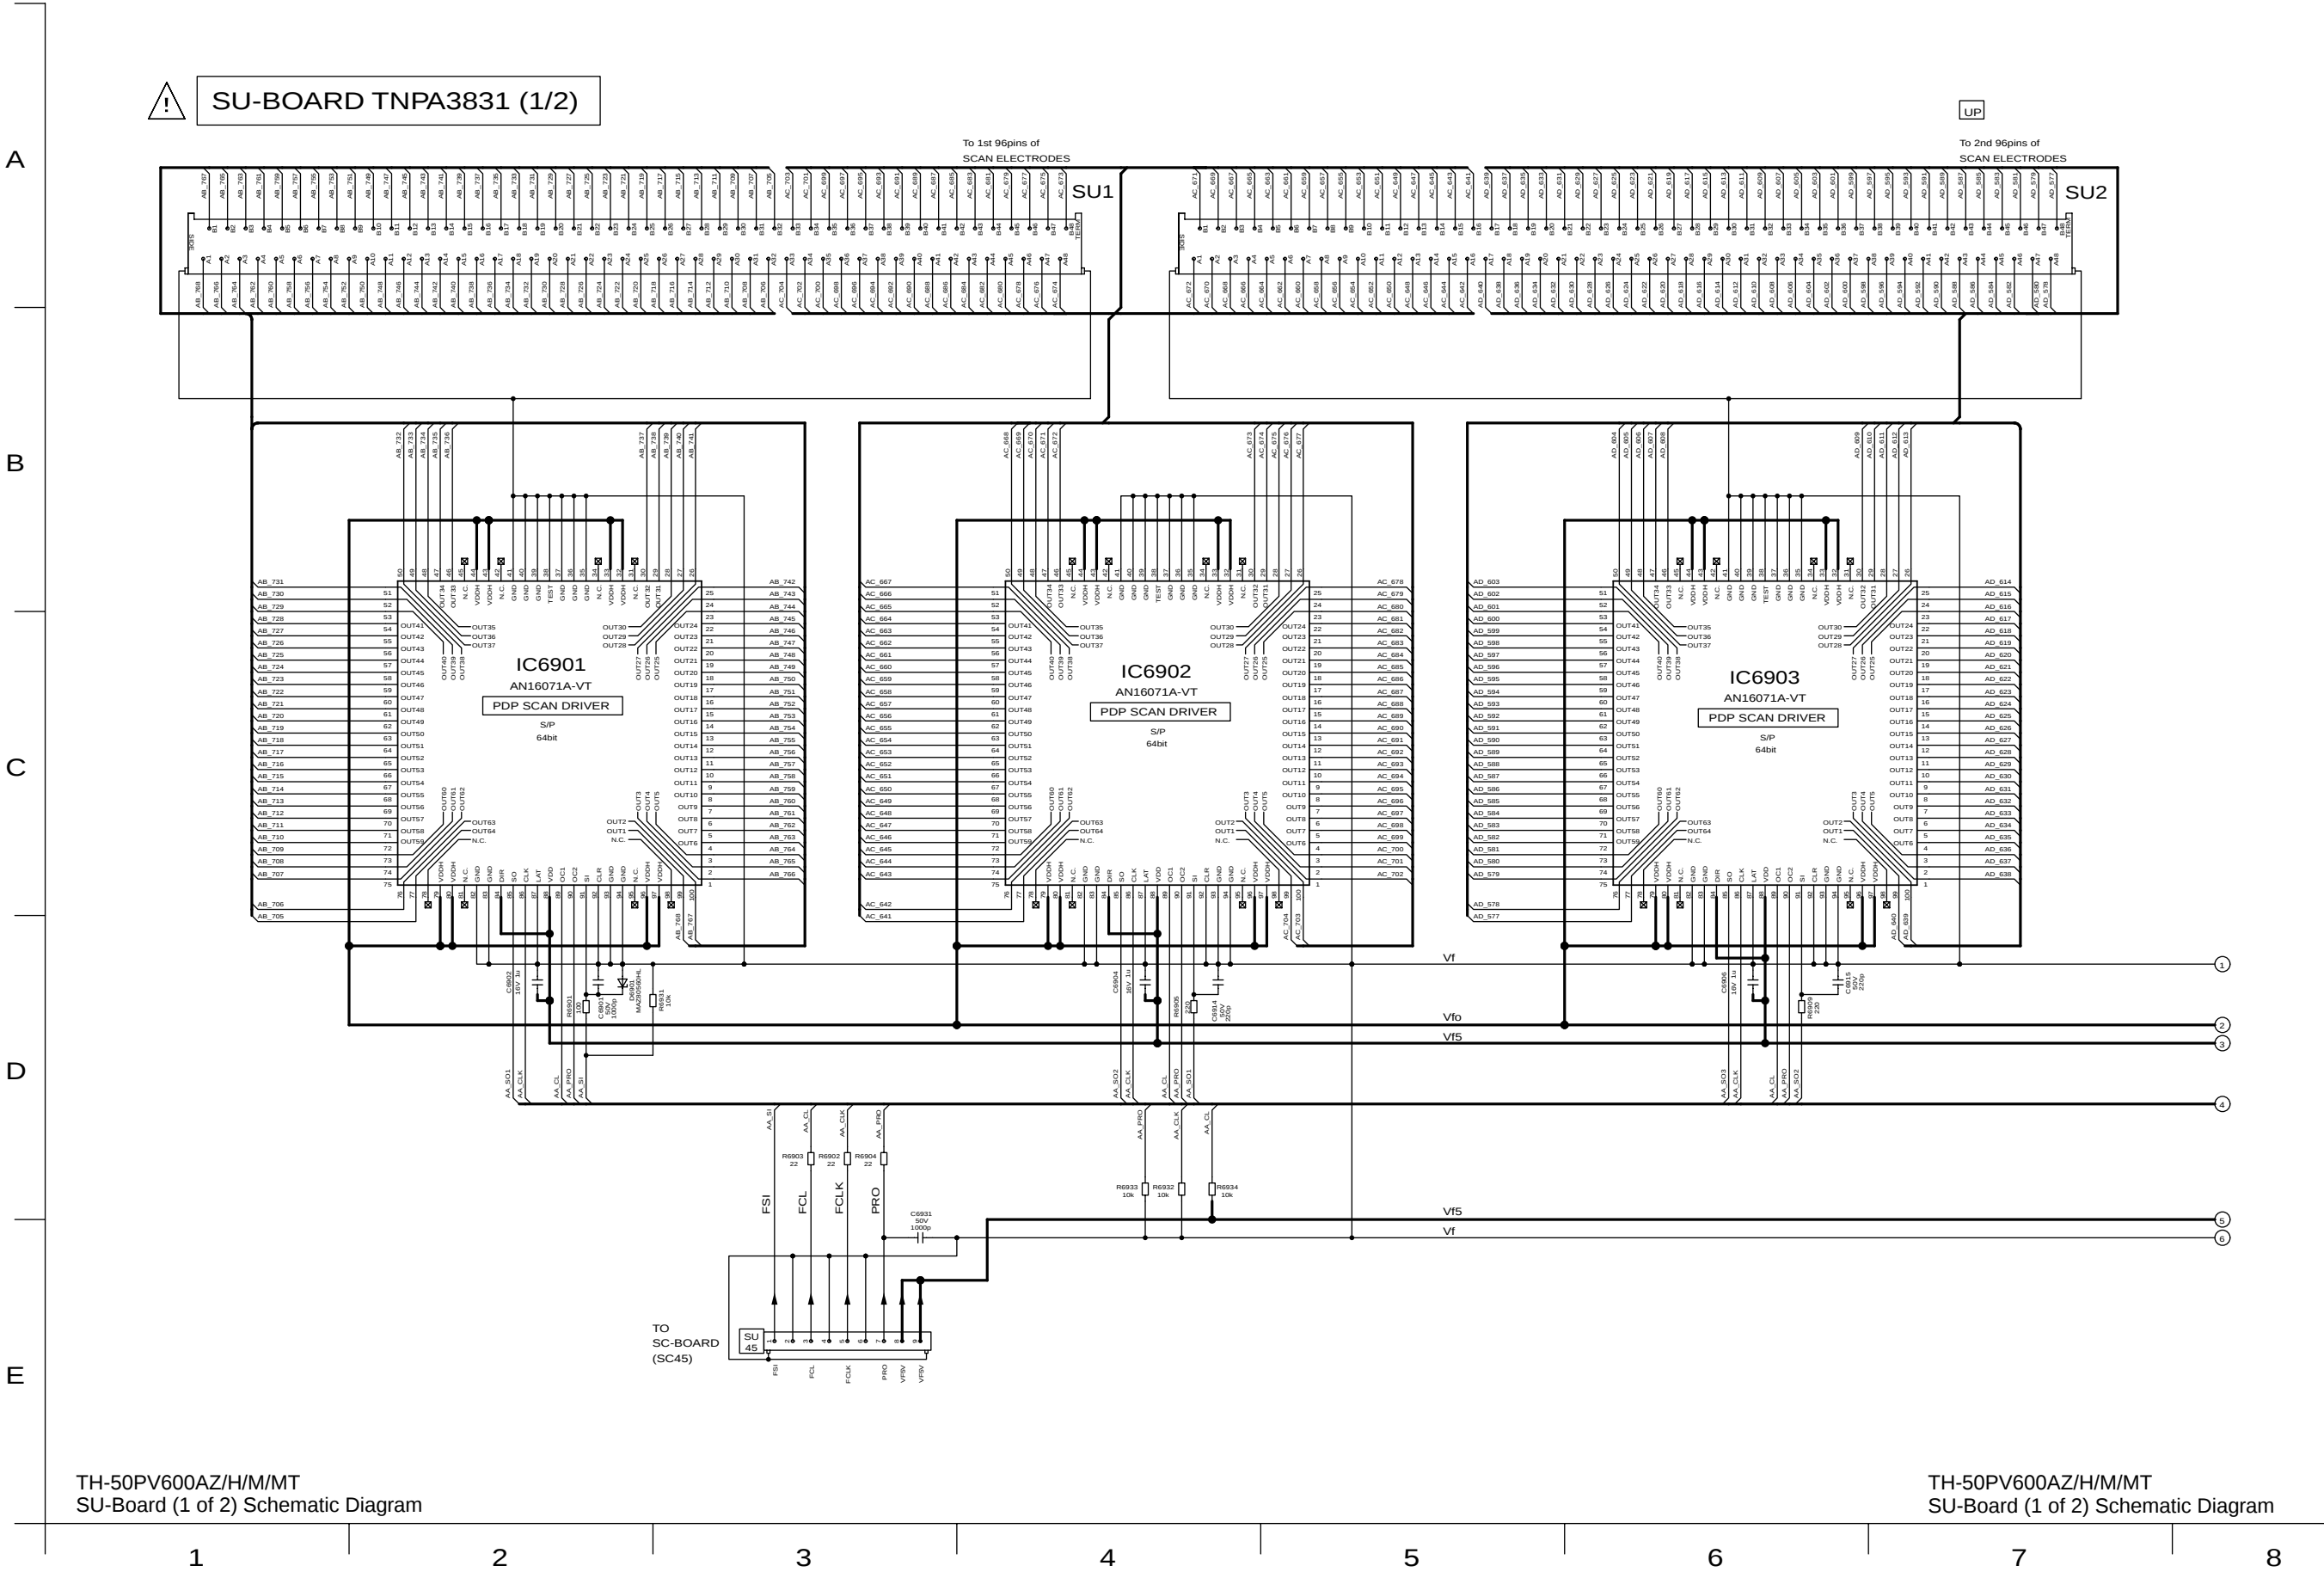


14.59. SU-Board (2 of 2) Schematic Diagram

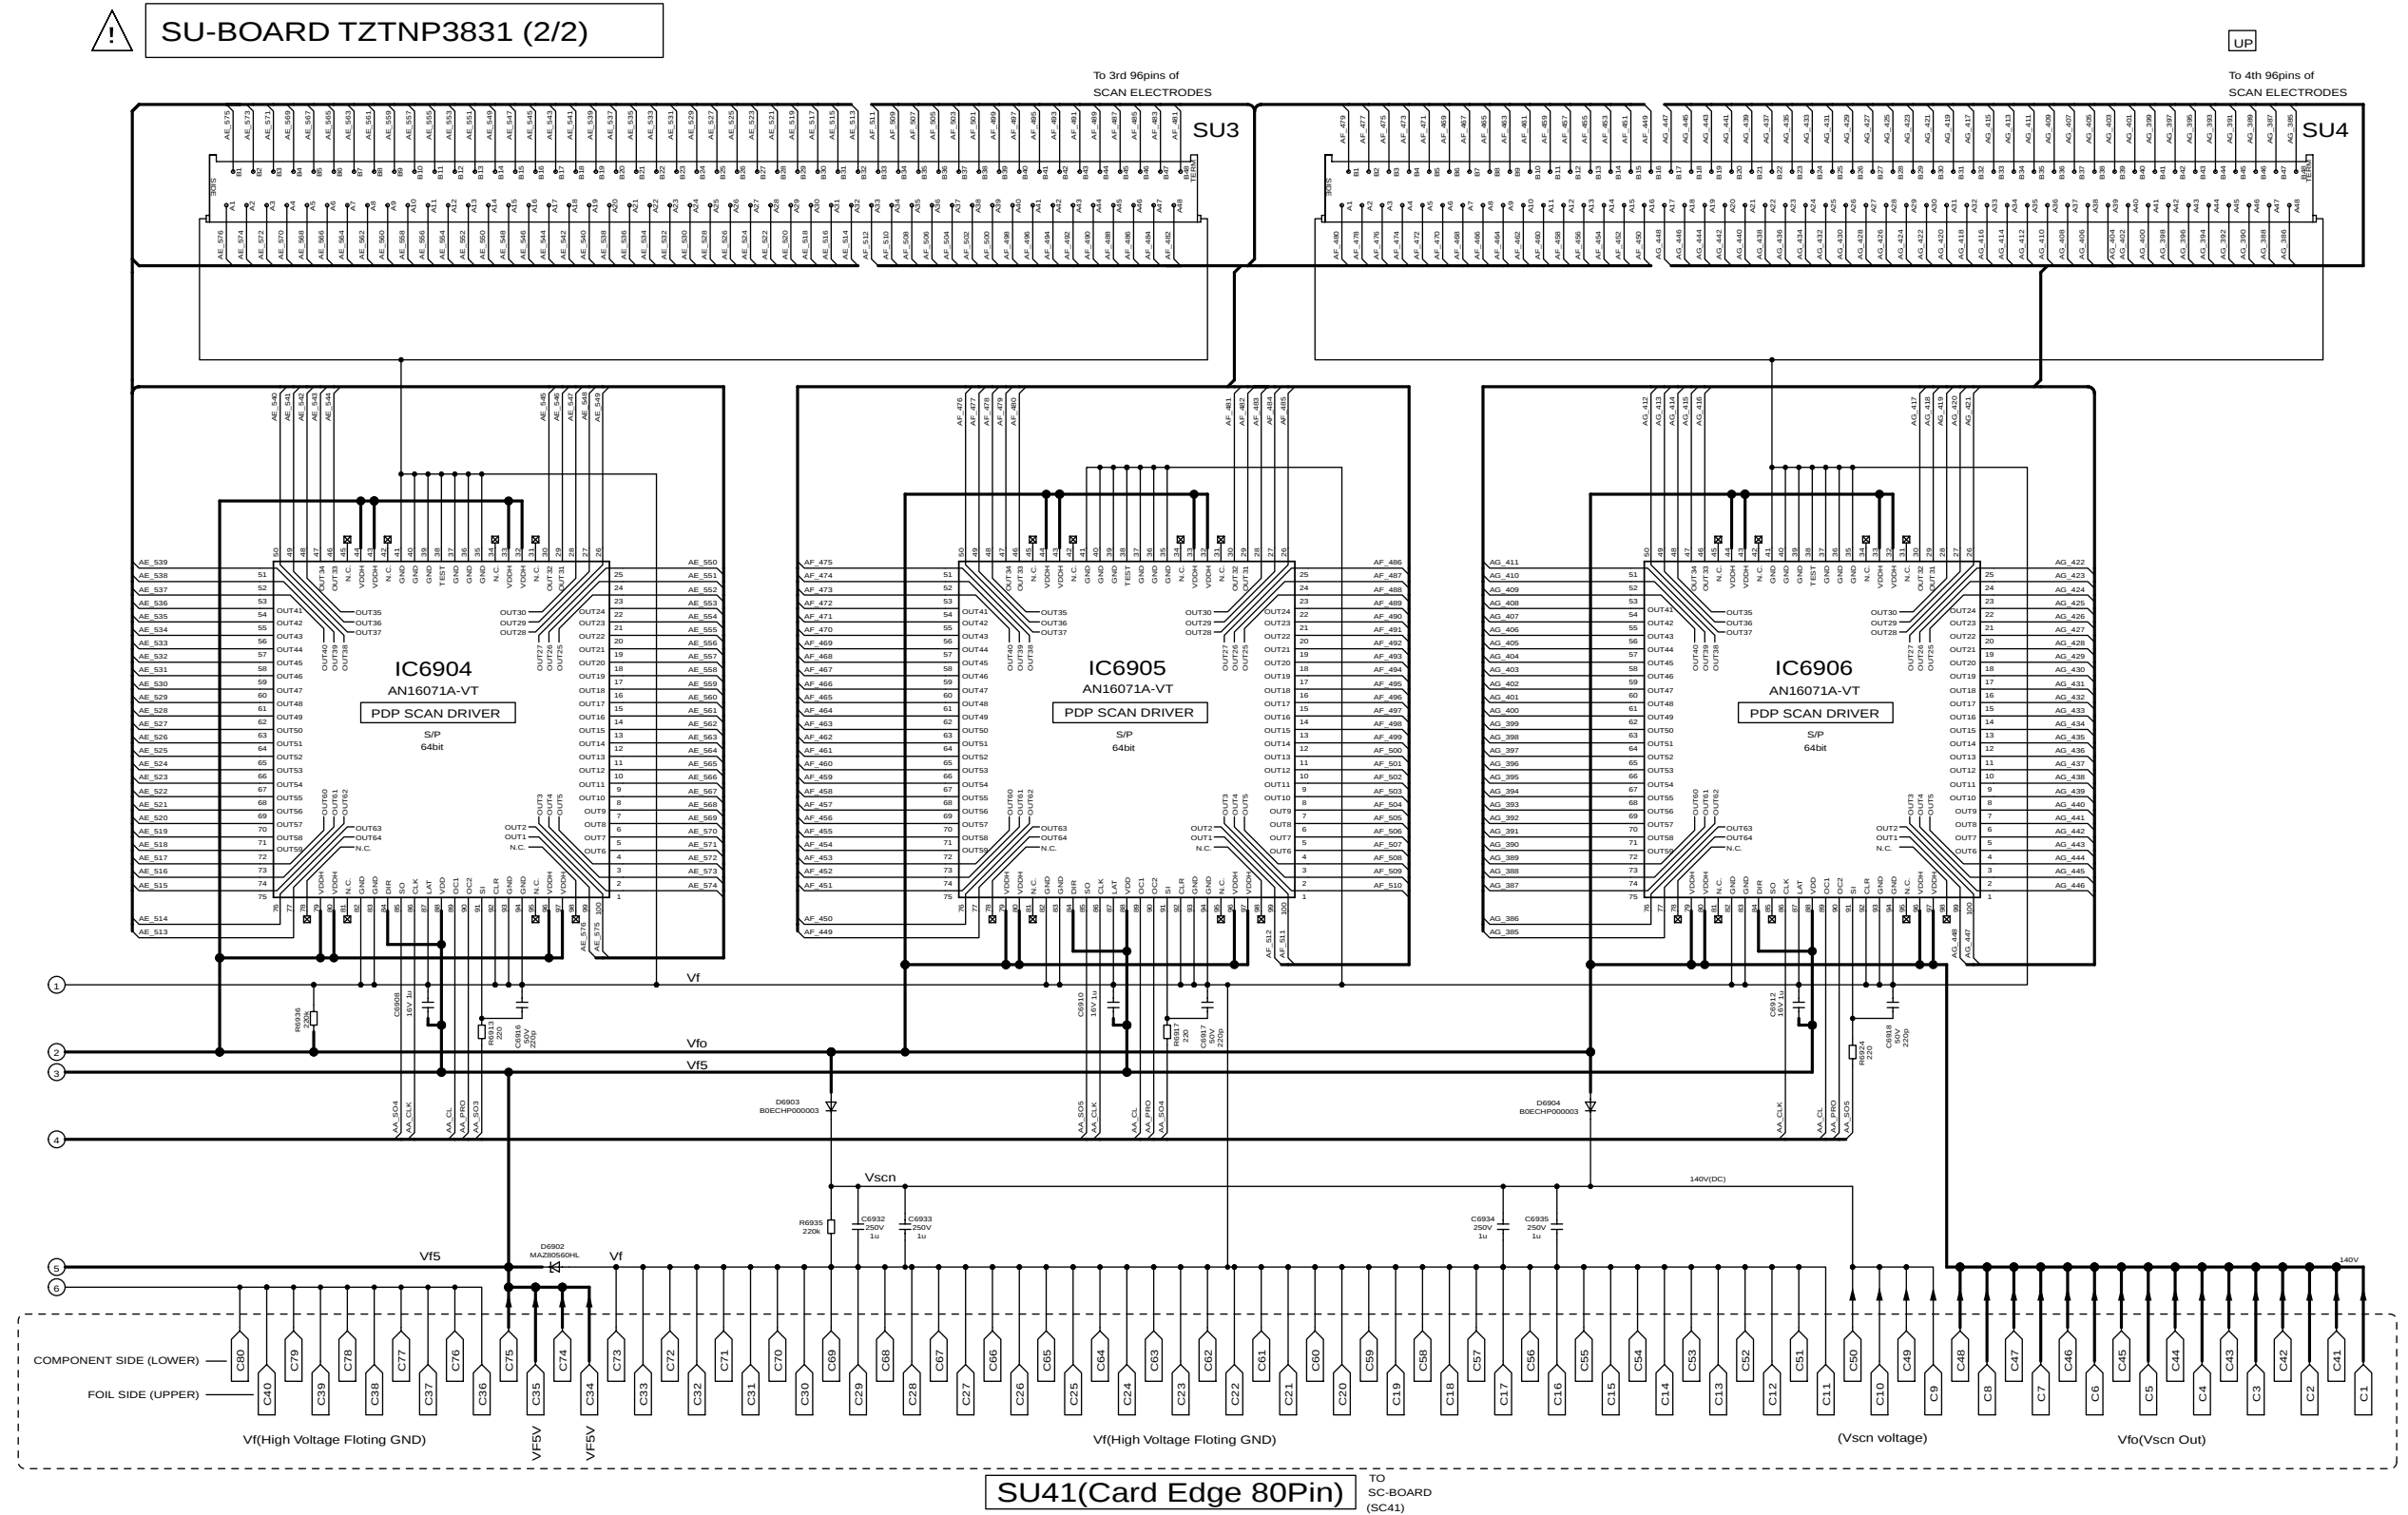



14.60. SD-Board (1 of 2) Schematic Diagram

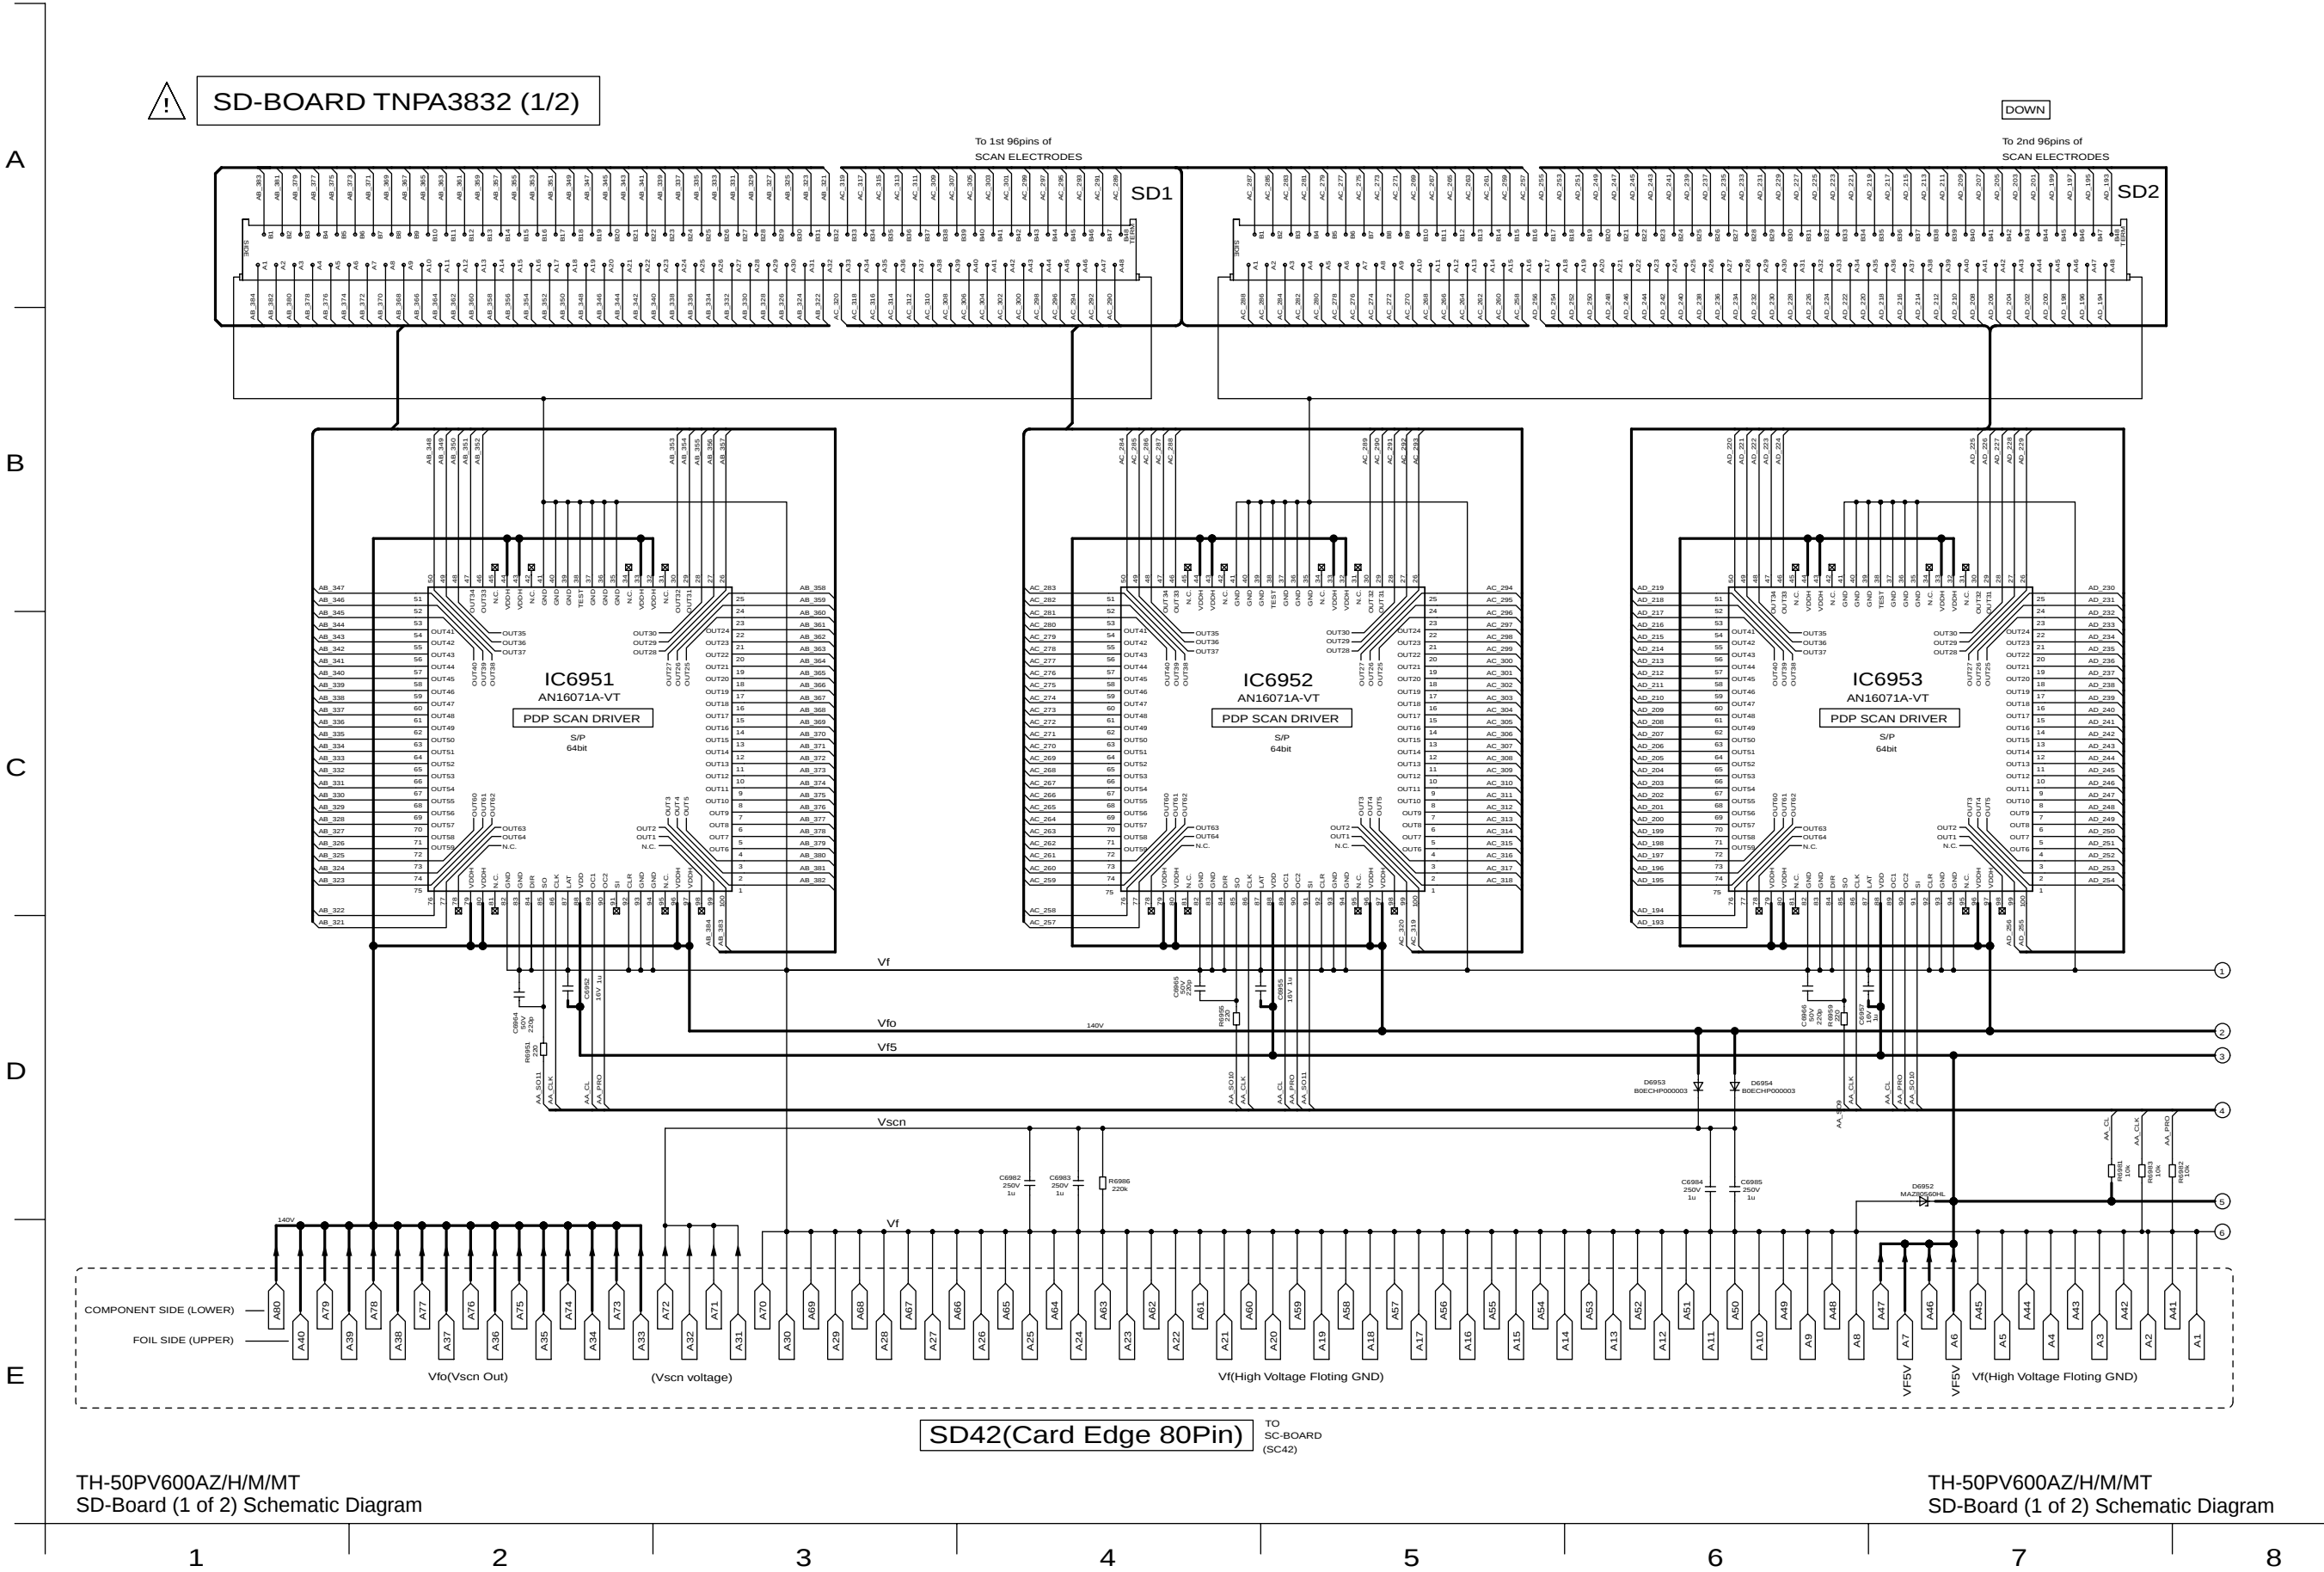

14.61. SD-Board (2 of 2) Schematic Diagram

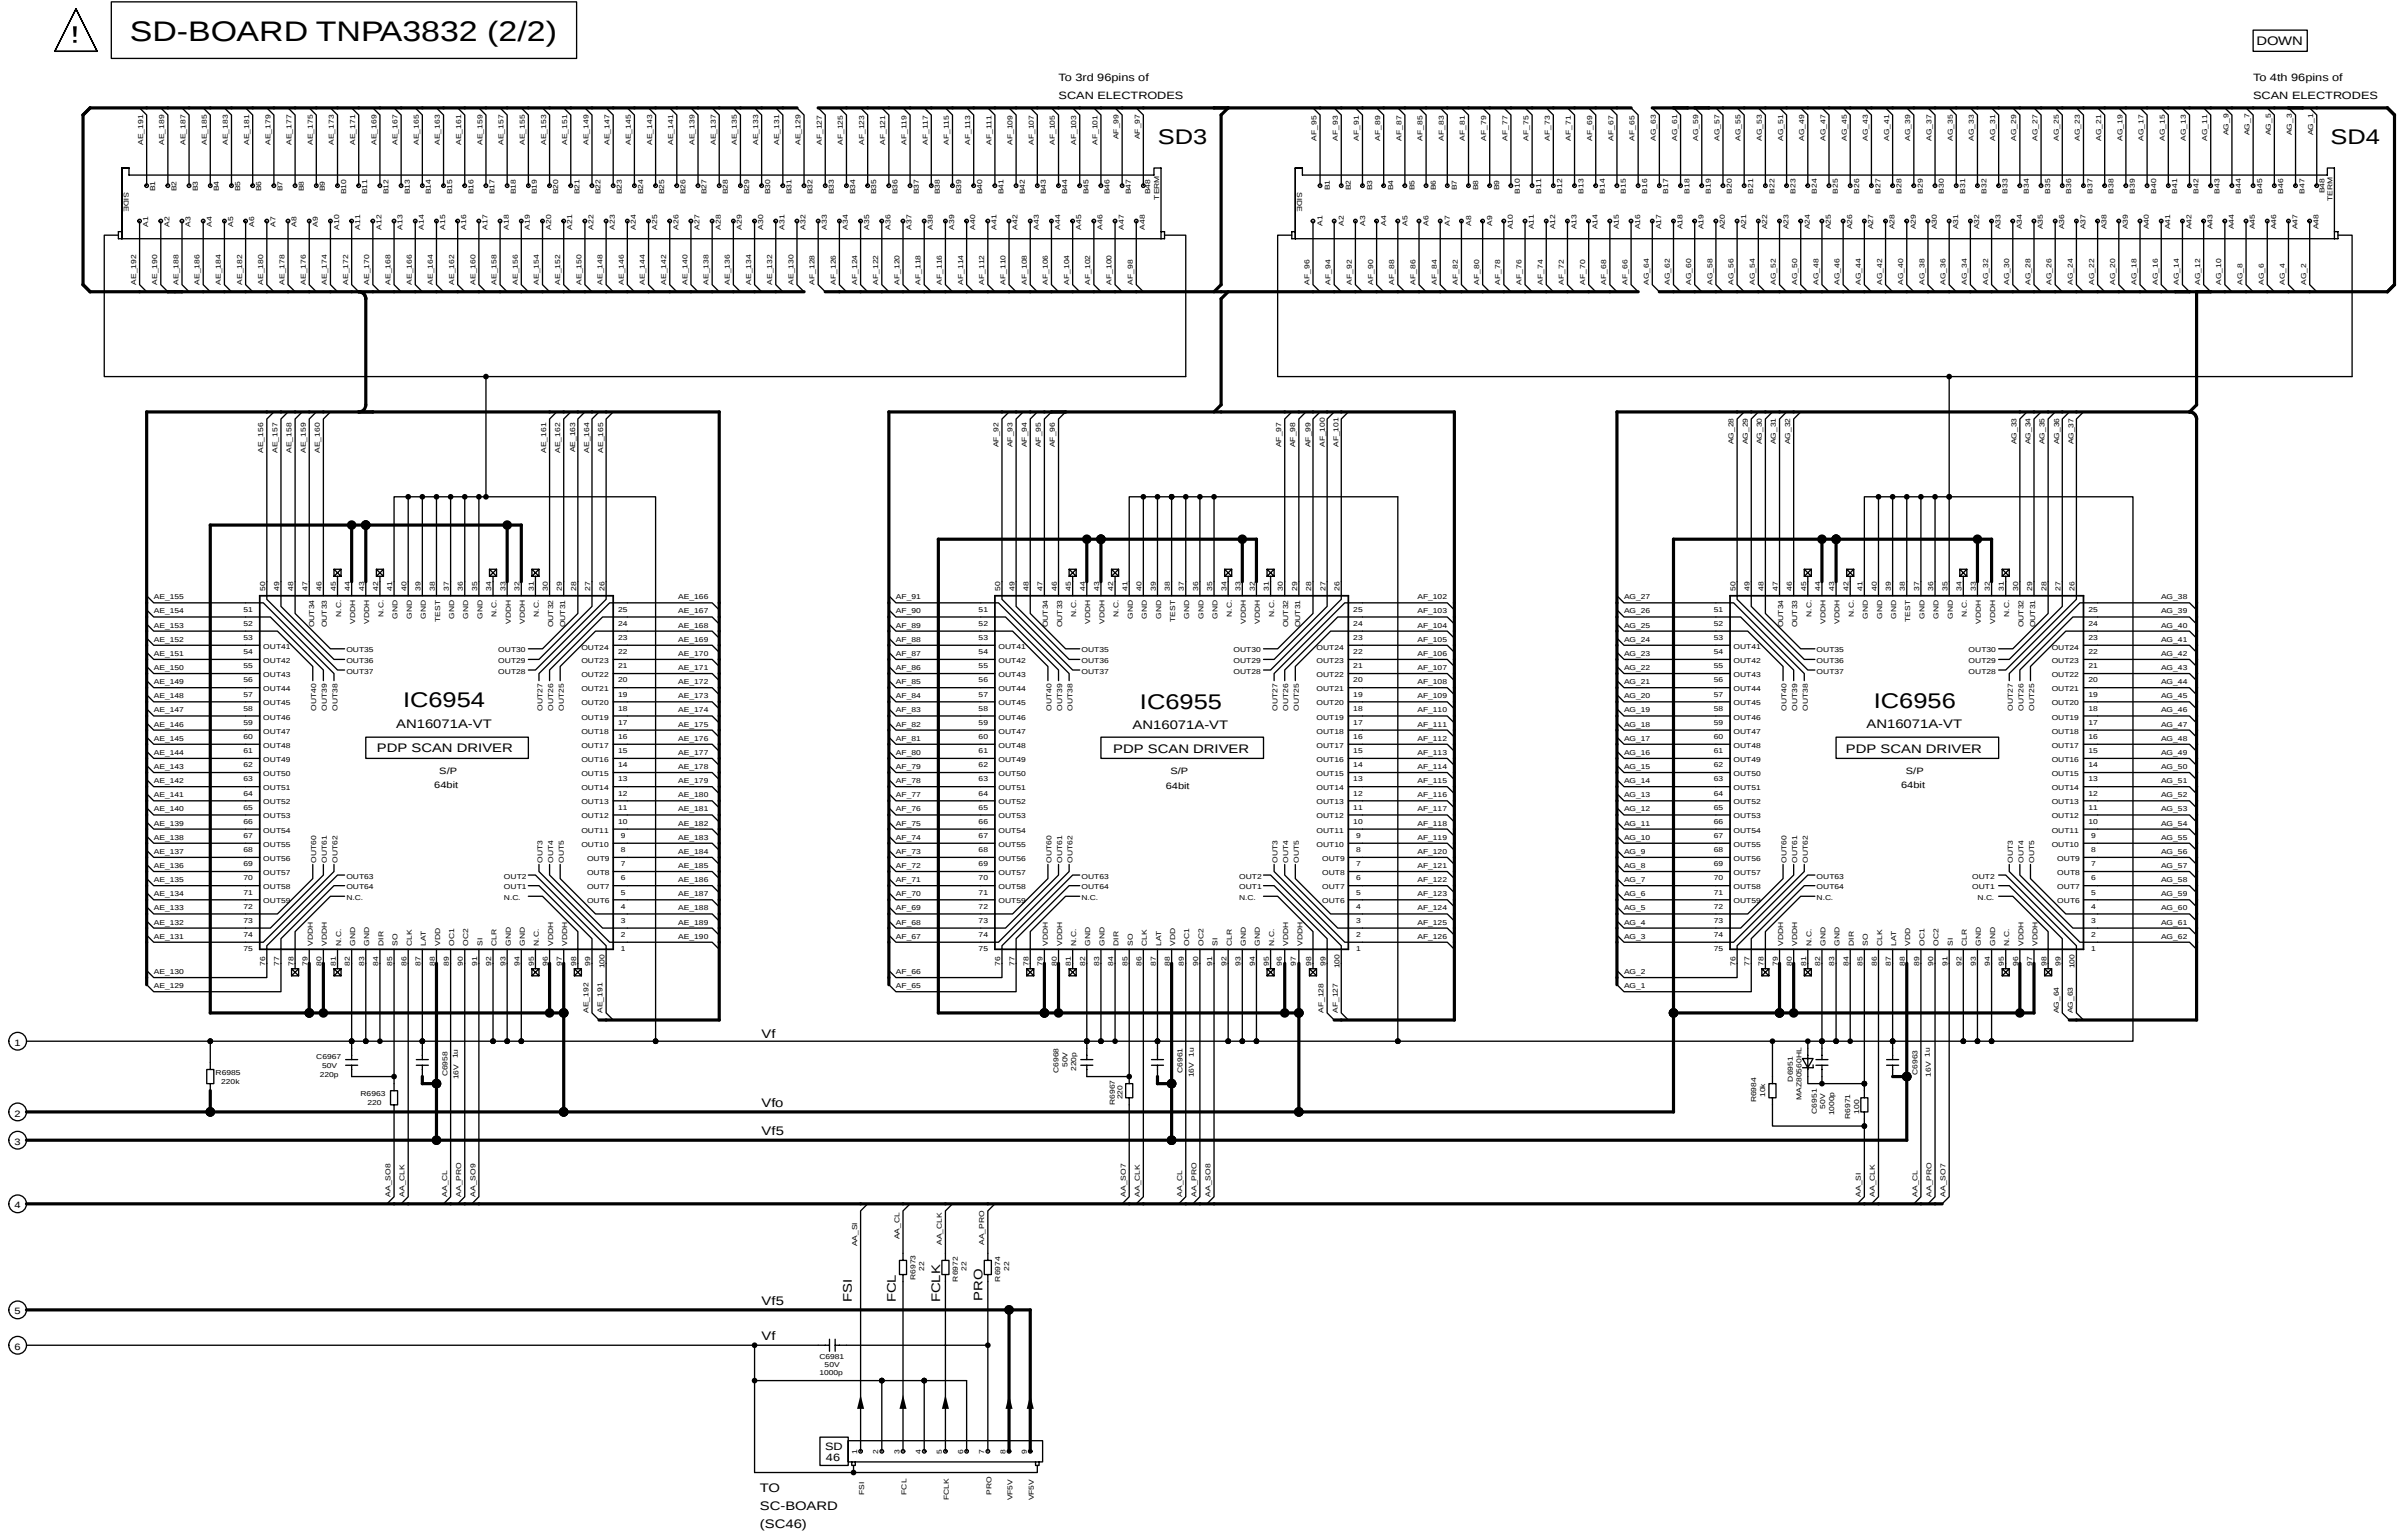

14.62. GS-Board Block and Schematic Diagram

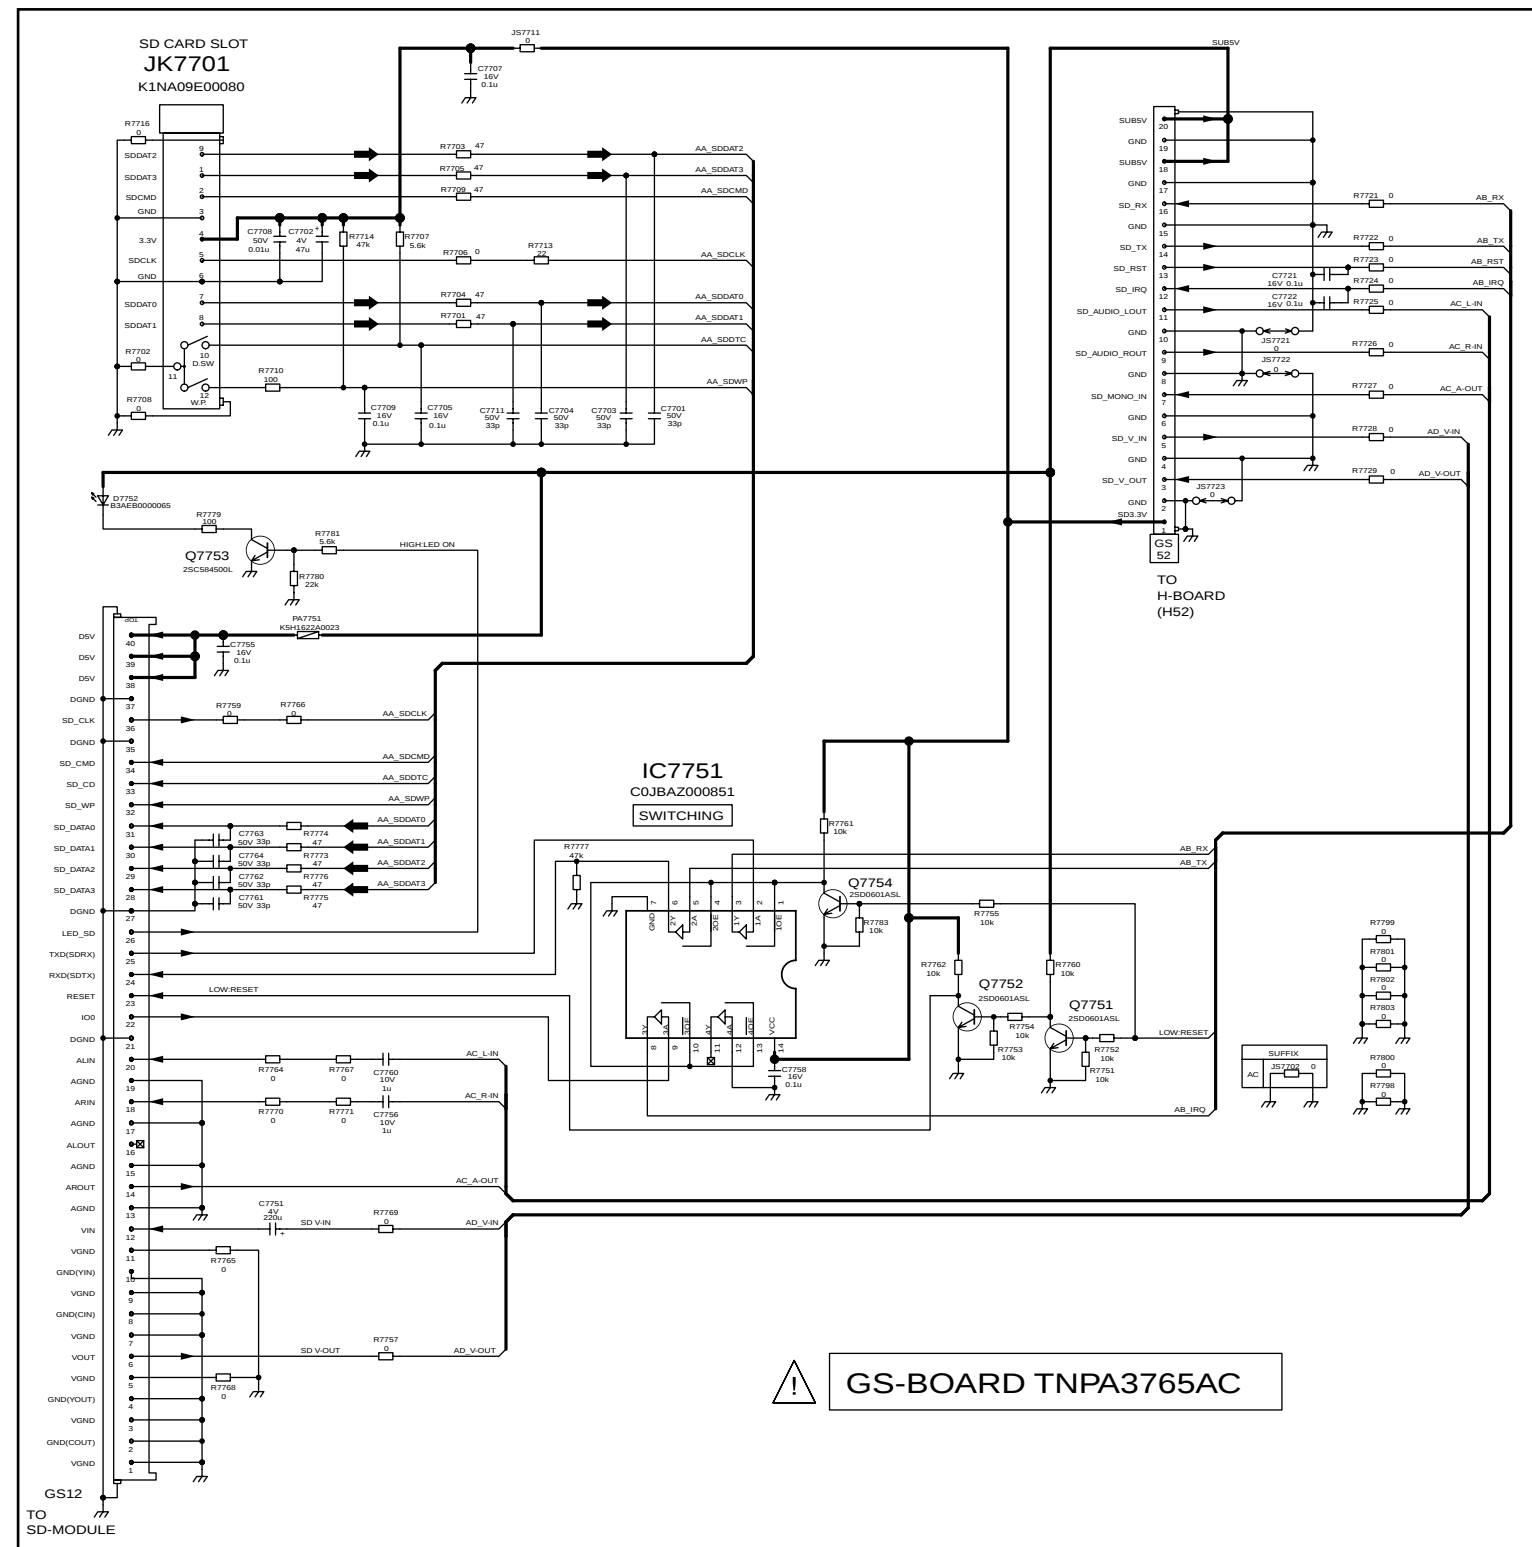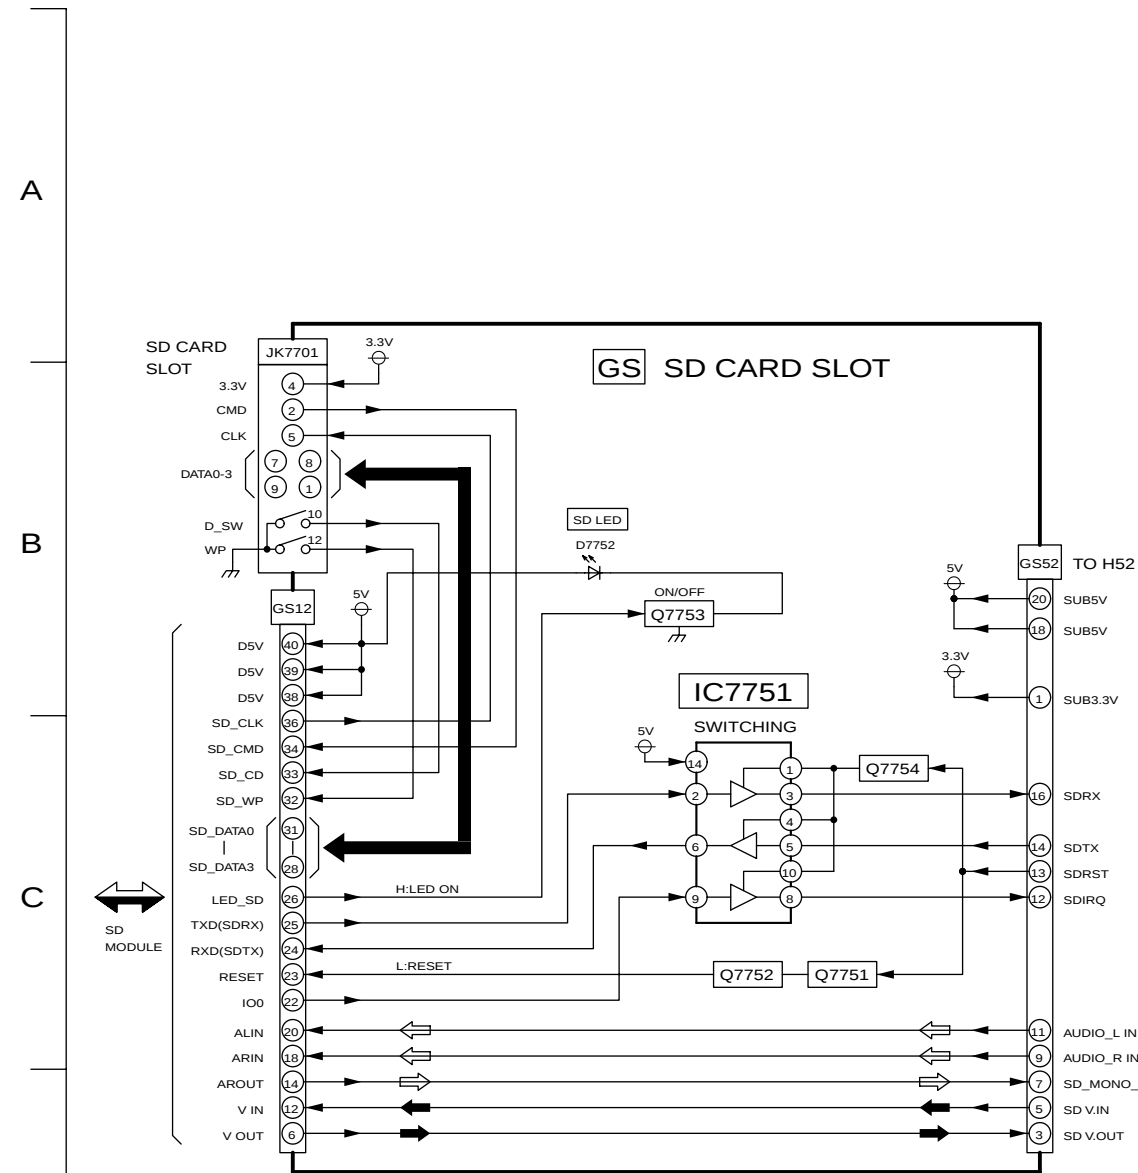


TH-50PV600AZ/H/M/MT GS-Board Block and Schematic Diagram


TH-50PV600AZ/H/M/MT GS-Board Block and Schematic Diagram

15 Parts Location & Mechanical Replacement Parts List


15.1. Parts Location

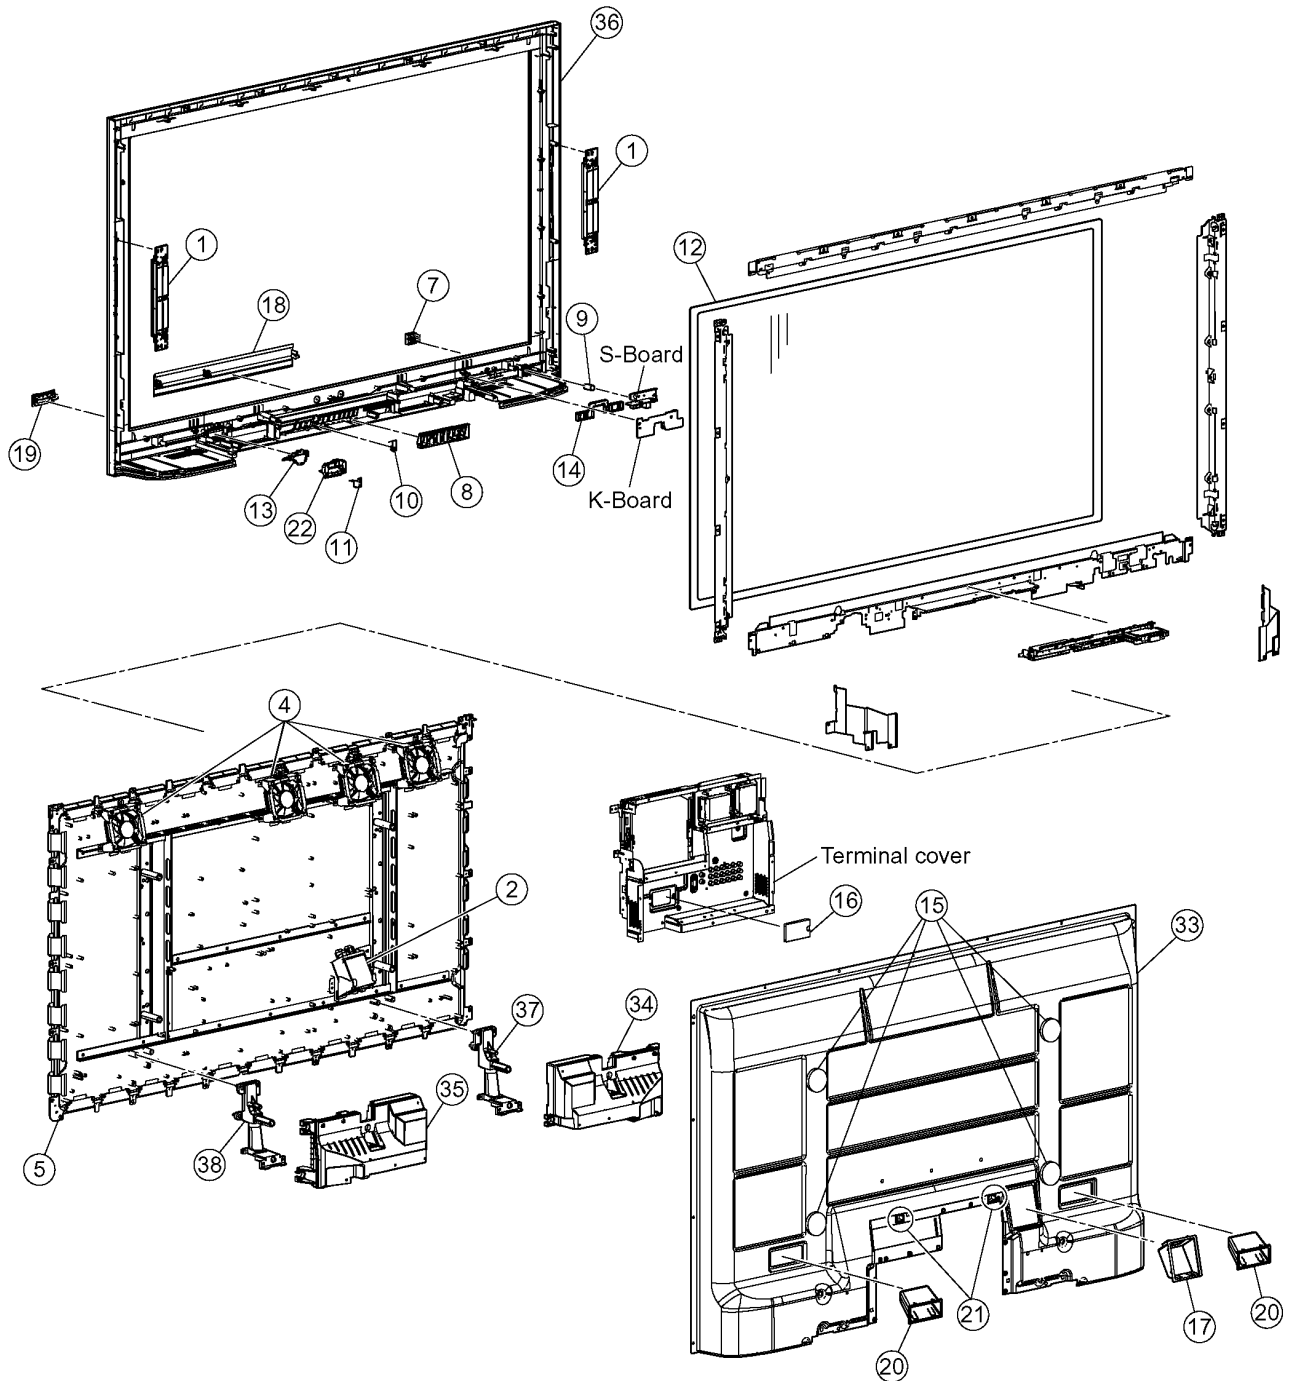


15.2. Packing Exploded Views (1)

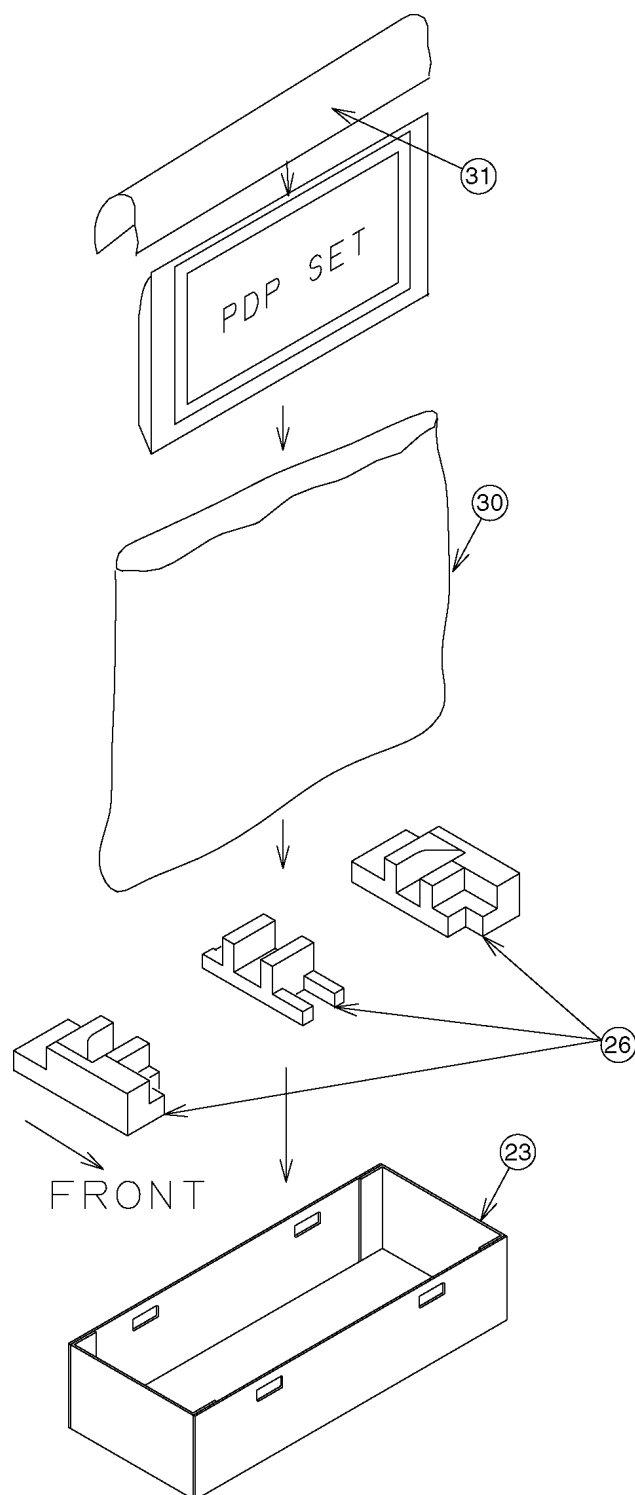

15.3. Packing Exploded Views (2)

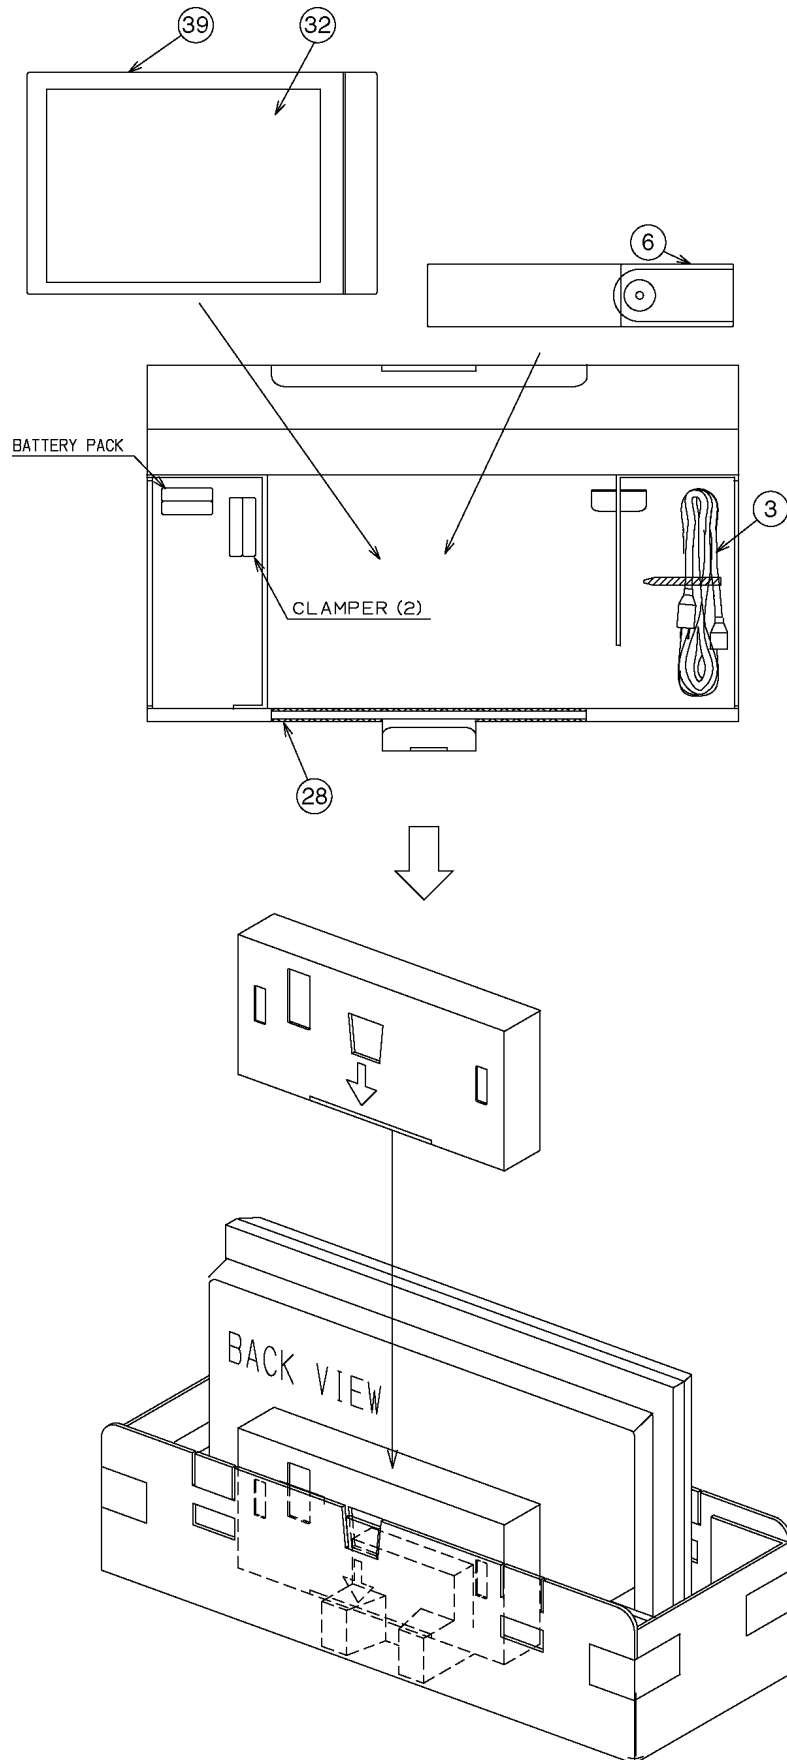

15.4. Packing Exploded Views

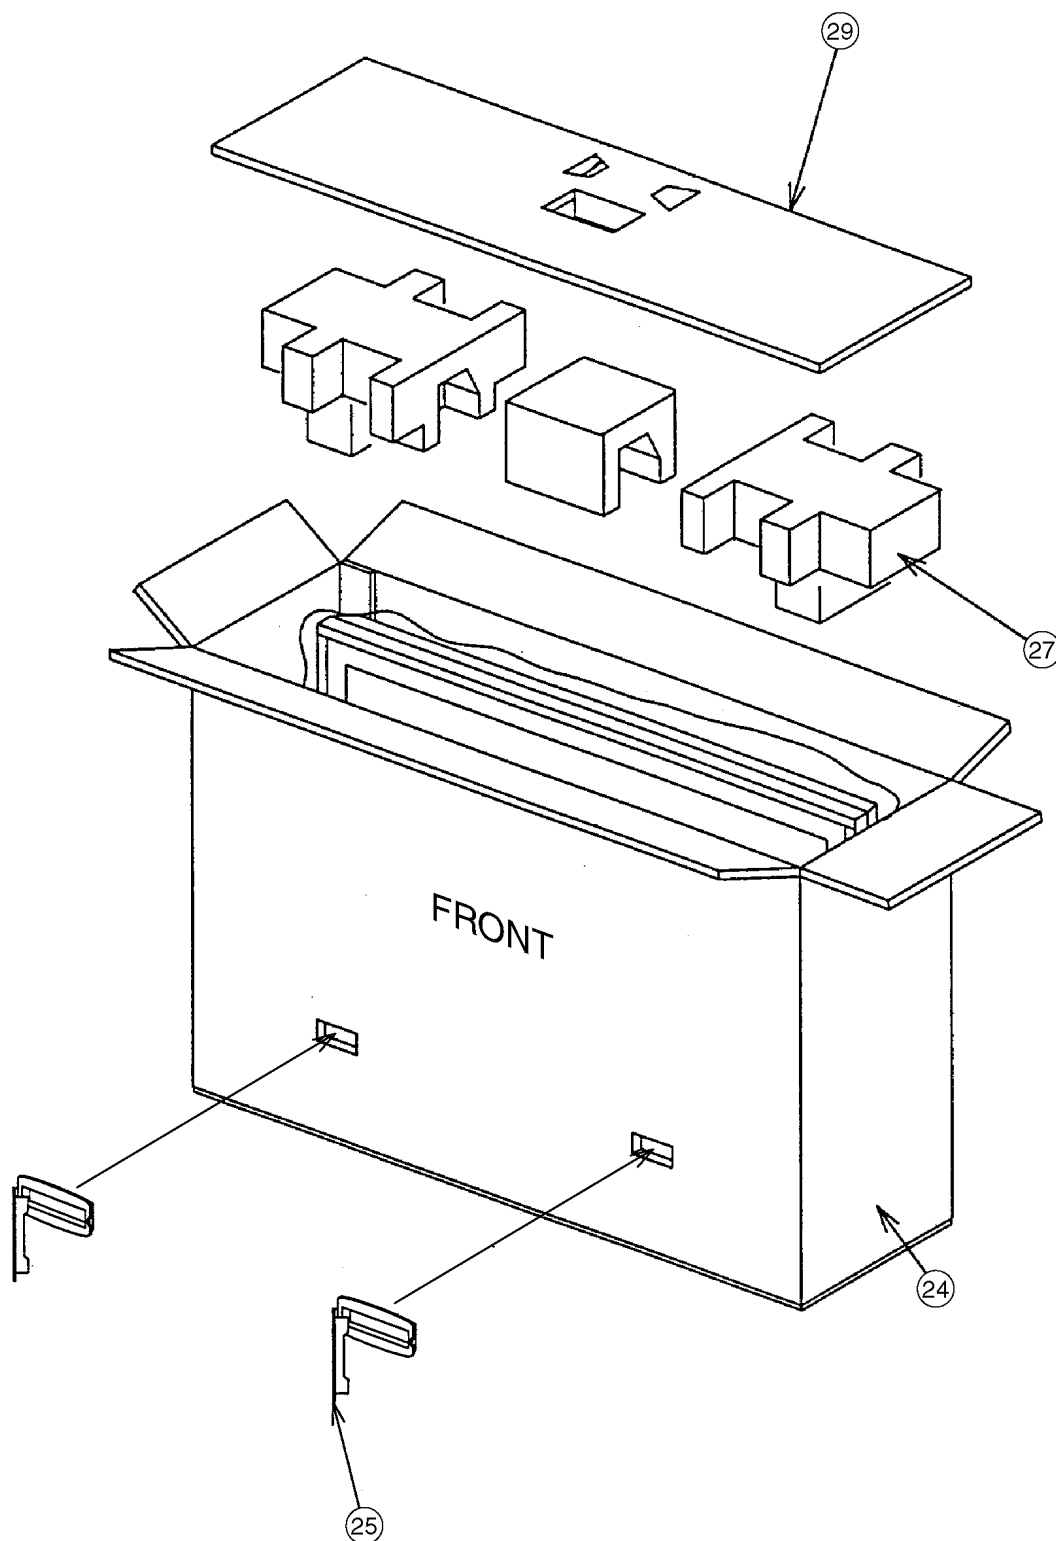

15.5. Mechanical Replacement Parts List

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
1	EAS10D85A	SQUAWKER SPEAKER (LEFT/RIGHT)	2	
	J0KG00000014	FILTER	1	
	J2ZZ00000036	RF CABLE	1	
	K1YD68000002	68P CONNECTOR	1	
	K1YD80000002	80P CONNECTOR	1	
2	K2AHYH000008	AC INLET	1	△
3	K2CG3DH00051	AC CORD	1	TH-50PV600MT △
3	K2CK3DH00029	AC CORD	1	TH-50PV600AZ △
3	K2CN3DH00006	AC CORD	1	TH-50PV600M △
3	K2CT3DH00018	AC CORD	1	TH-50PV600H/M △
4	L6FAYYYH0011	FAN (80MM)	3	
5	MD50H09A1J	PLASMA DISPLAY PANEL	1	△
6	N2QAYB000023	REMOTE CONTROL	1	
7	TBXA48602	POWER BUTTON	1	
8	TBXA48803	CONTROL BOTTON	1	
9	TES4G204	SPRING	1	
10	TESA274	LEAF SPRING	1	
11	TESA275	SD DOOR SPRING	1	
	THEL0429	SCREW	26	
	THTA0419	HOOK SCREW	2	
	THTD011J	SCREW	2	
	THTD013N	SCREW	9	
	THTF011N	SCREW	152	
12	TKGA5279	FRONT GLASS	1	
13	TKKC5238	SD LIGHT PANEL	1	
14	TKKC5244	LED PANEL	1	
15	TKKL5231	M8 SPACER CAP	4	
16	TKKL5269-1	COVER	1	
17	TKPA94301	INLET COVER	1	
18	TKPB00605	BOTTOM DOOR	1	
19	TKPB02902	SD DOOR	1	
20	TKRA46201	REAR COVER HANDLE	2	
21	TKRA52101	HOLE CAP	2	
	TMKG646	SPONGE (TKG/UPPER/BOTTOM)	2	
	TMKG647	SPONGE (TKG/LEFT/RIGHT)	2	
	TMKG670	FAN SPONGE	3	
	TMM16474	CLAMPER	1	
	TMM17499	CLAMPER	1	
	TMM25401	CLAMPER	8	
	TMM7464-2	CLAMPER	2	
	TMM7468-1	CLAMPER	2	
	TMME047	CLAMPER	3	
	TMME061	CLAMPER	1	
	TMME144	CLAMPER	3	
	TMME190	CLAMPER	3	
	TMME226	CLAMPER	1	
	TMME258	CLAMPER	2	
	TMME260	CLAMPER	25	
	TMMJ068	RUBBER (FAN)	9	
	TMMX134	M8-SPACER	4	
22	TMWX040	SD LIGHT PANEL BRACKET	1	
23	TPCB95301	CARTON BOX BOTTOM	1	
24	TPCB95401	CARTON BOX TOP	1	TH-50PV600H
24	TPCB95402	CARTON BOX TOP	1	TH-50PV600M
24	TPCB95403	CARTON BOX TOP	1	TH-50PV600AZ
24	TPCB95404	CARTON BOX TOP	1	TH-50PV600MT
25	TPD169487	JOINT	4	
26	TPDA1303	CUSHION BOTTOM	1	
27	TPDA1304	CUSHION	TOP 1	
28	TPDF0737	PAPER BOX	1	
29	TPDF1647	PAD TOP	1	
30	TPEH170	PROTECT COVER	1	
31	TPEH273	TOP-PROTECT SHEET	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
32	TQBC2100	INSTRUCTION BOOK (THAI)	1	TH-50PV600MT △
32	TQBC2095	INSTRUCTION BOOK (ENGLISH)	1	TH-50PV600AZ △
32	TQBC2096	INSTRUCTION BOOK (ENGLISH)	1	TH-50PV600H/M/MT △
32	TQBC2097	INSTRUCTION BOOK (CHINA)	1	TH-50PV600H △
32	TQBC2098	INSTRUCTION BOOK (ARABIA)	1	TH-50PV600M △
32	TQBC2099	INSTRUCTION BOOK (PERSIAN)	1	TH-50PV600M △
	TSXL514	CABLE (D32-C31)	1	
	TSXL515	CABLE (D33-C41)	1	
	TSXL516	CABLE (D31-C21)	1	
	TSXL517	CABLE (D34-C51)	1	
	TSXL518	CABLE (C10-C20/C50-C60)	2	
	TSXL519	CABLE (C22-C32/C52-C42)	2	
	TSXL520	CABLE (DG1-H1)	1	
	TSXL521	CABLE (DG15-HC15)	1	
	TSXL524	CABLE (DG3-D3)	1	
	TSXL525	CABLE (DG20-PA20)	1	
	TSXL545	CABLE (GS12-SD)	1	
33	TTUA1382	REAR COVER	1	TH-50PV600H △
33	TTUA1383	REAR COVER	1	TH-50PV600M △
33	TTUA1384	REAR COVER	1	TH-50PV600AZ △
33	TTUA1387	REAR COVER	1	TH-50PV600MT △
34	TXFAB01BETH	SPEAKER BOX ASSY (LEFT)	1	
35	TXFAB02BETH	SPEAKER BOX ASSY (RIGHT)	1	
36	TXFKE01BETH	ESCUTCHEON ASSY	1	△
37	TXFMZ01BETJ	STAND BLOCK ASSY LEFT	1	
38	TXFMZ02BETJ	STAND BLOCK ASSY RIGHT	1	
	XTB4+12GFJ	SCREW	1	
	XTB4+12GFJK	SCREW	71	
	XTV3+10GFJ	SCREW	4	
	XTV3+10JFJK	SCREW	6	
	XTW3+10TFJ	SCREW	2	
	XYN2+F5FJ	SCREW (TOP`BOT)	1	
	XYN3+F10FJ	SCREW	1	
	XYN3+F6FJ	SCREW	1	
	XYN3+F8FJ	SCREW	27	
	XYN3+J12FJ	SCREW	40	
	XYN3+J8FJ	SCREW ROHS	2	
	XYN4+E8FJ	SCREW	1	
	XYN4+F10FJK	SCREW	12	
	XYN5+C15FJ	SCREW	8	
39	XZBT6506	POLY BAG	1	

16 Electrical Replacement Parts List

16.1. Replacement Parts List Notes

Important Safety Notice

*Components identified by $\triangle$ mark have special characteristics important for safety.
When replacing any of these components, use only manufacturer's specified parts.*

RTL (Retention Time Limited)

Note: The marking (RTL) indicates that the Retention Time is Limited for this item.

After the discontinuation of this assembly in production, the item will continue to be available for a specific period of time. The retention period of availability is dependant on the type of assembly, and in accordance with the laws governing part and product retention. After the end of this period, the assembly will no longer be available.

Abbreviation of part name and description

1. Resistor

Example:

ERD25TJ104 C 100KOHM, J, 1/4W
 Type Allowance

2. Capacitor

Example:

ECKF1H103ZF C 0.01UF, Z, 50V
 Type Allowance

Type	Allowance
C : Carbon	F : $\pm 1\%$
F : Fuse	G : $\pm 2\%$
M : Metal Oxide	J : $\pm 5\%$
Metal Film	K : $\pm 10\%$
S : Solid	M : $\pm 20\%$
W : Wire Wound	

Type	Allowance
C : Ceramic	C : $\pm 0.25\text{pF}$
E : Electrolytic	D : $\pm 0.5\text{pF}$
P : Polyester	F : $\pm 1\text{pF}$
Polypropylene	G : $\pm 3\text{pF}$
	J : $\pm 5\text{pF}$
T : Tantalum	K : $\pm 10\text{pF}$
	L : $\pm 15\text{pF}$
	M : $\pm 20\text{pF}$
	P : +100%, -0%
	Z : +80%, -20%

16.2. Electrical Replacement Parts List

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
F601.602	K5D103BMA001	TIME LAG FUSE HIGH	2	△
C002	ECA1HM100	E 10UF, 50V	1	
C003	ECJ1VF1H104Z	C 0.1UF, Z, 50V	1	
C006	ECA0JM102	E 1000UF, 6.3V	1	
C008	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C009	ECJ1XC1H101J	C 100PF, J, 50V	1	
C010	ECJ1VC1H330J	C 33PF, J, 50V	1	
C10	K1MN55BA0076	55P CONNECTOR	1	
C011	ECJ1VC1H330J	C 33PF, J, 50V	1	
C016	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C020	ECA0JM102	E 1000UF, 6.3V	1	
C20	K1MN55BA0076	55P CONNECTOR	1	
C021	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C21	K1MN80BA0076	80P CONNECTOR	1	
C022	ECJ1XC1H101J	C 100PF, J, 50V	1	
C22	K1MN20BA0231	20P CONNECTOR	1	
C024	ECJ1VF1H104Z	C 0.1UF, Z, 50V	1	
C029,30	ECJ1VC1H330J	C 33PF, J, 50V	2	
C31	K1MN55BA0076	55P CONNECTOR	1	
C32	K1MN20BA0231	20P CONNECTOR	1	
C33	K1KA04AA0150	4P CONNECTOR	1	
C040,41	ECJ1XF1C104Z	C 0.1UF, Z, 16V	2	
C41	K1MN68BA0076	68P CONNECTOR	1	
C042	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C42	K1MN20BA0231	20P CONNECTOR	1	
C043	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C43	K1KA12BA0107	12P CONNECTOR	1	
C44	K1KA04BA0107	4P CONNECTOR	1	
C50	K1MN55BA0076	55P CONNECTOR	1	
C51	K1MN80BA0076	80P CONNECTOR	1	
C52	K1MN20BA0231	20P CONNECTOR	1	
C60	K1MN55BA0076	55P CONNECTOR	1	
C1100	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C1102	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C1103	ECJ0EB1E271K	C 270PF, K, 25V	1	
C1105	ECJ0EB1E271K	C 270PF, K, 25V	1	
C1106	ECJ1VB1A105K	C 0.01UF, Z, 50V	1	
C1107	EEEB0G101R	C 100PF, J, 4V	1	
C1109-11	ECJ0EB1A104K	C 0.1UF, K, 10V	3	
C1112	ECJ0EB1E271K	C 270PF, K, 25V	1	
C1114	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C1116	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C1118-23	ECJ0EB1A104K	C 0.1UF, K, 10V	6	
C1125	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C1127-32	ECJ0EB1A104K	C 0.1UF, K, 10V	6	
C1133,34	ECJ1XC1H150J	C 15PF, J, 50V	2	
C1135-42	ECJ0EB1A104K	C 0.1UF, K, 10V	8	
C1144-50	ECJ0EB1A104K	C 0.1UF, K, 10V	7	
C1152	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C1153	EEEB0G101R	C 100PF, J, 4V	1	
C1154	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C1155	ECJ0EB1C103K	C0.010UF, K, 16V	1	
C1156,57	ECJ1XC1H220J	C 22PF, J, 50V	2	
C1158	F1J0J1060004	C 0.010UF, K, 16V	1	
C1159	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C1160	F2G0J470A019	E 47UF 6.3V	1	
C1161	ECJ1VB1A105K	C 0.01UF, Z, 50V	1	
C1162	ECJ0EB1C103K	C0.010UF, K, 16V	1	
C1167,68	ECJ1VB1A105K	C 0.01UF, Z, 50V	2	
C1172	ECJ0EB1A104K	C 0.1UF, K, 10V	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C1177	ECJ1VB1A334K	C 0.1UF, K, 16V	1	
C1178	ECJ1VB1A105K	C 0.01UF, Z, 50V	1	
C1190	ECJ0EB1C103K	C0.010UF, K, 16V	1	
C1209	ECJ1VB1A105K	C 0.01UF, Z, 50V	1	
C1212	ECJ1XC1H151J	C 150PF, J, 50V	1	
C1219,20	EEEBP1C100R	C 10PF, J, 16V	2	
C1221	ECJ0EB1H102K	C 1000PF, K, 50V	1	
C1222,23	F1J0J1060004	C 0.010UF, K, 16V	2	
C1226	F1J0J1060004	C 0.010UF, K, 16V	1	
C1227	ECJ0EB1H101K	C 100PF, K, 50V	1	
C1228-34	EEEBB1C470P	C 47PF, J, 16V	7	
C1294	ECJ1XC1H330J	C 33PF, J, 50V	1	
C2005,06	ECJ1XC1H561J	C 560PF, J, 50V	2	
C2010,11	ECJ1XC1H561J	C 560PF, J, 50V	2	
C2013,14	ECJ1XC1H561J	C 560PF, J, 50V	2	
C2016,17	ECJ1XC1H561J	C 560PF, J, 50V	2	
C2019	ECA1CM221	E 220UF, 16V	1	
C2020	ECA1HM220	E 22UF, 50V	1	
C2021,22	ECJ1XC1H561J	C 560PF, J, 50V	2	
C2111	ECJ2VF1C104Z	C 0.1UF, Z, 16V	1	
C2116	ECJ2VF1C104Z	C 0.1UF, Z, 16V	1	
C2118,19	ECEA1CN470U	E 47UF, 16V	2	
C2125,26	ECJ1VB1H102K	C 1000PF, K, 50V	2	
C2127	ECA1CMH101	E 100UF, 16V	1	
C2128	ECJ2VF1C104Z	C 0.1UF, Z, 16V	1	
C2129,30	F1J1A1050002	C 1UF, Z, 50V	2	
C2131	ECJ2VF1C104Z	C 0.1UF, Z, 16V	1	
C2132	EEEBB1C100R	C 10PF, J, 16V	1	
C2133,34	ECJ1XC1H470J	C 47PF, J, 50V	2	
C2135,36	ECJ2FB1C105K	C 1UF, K, 16V	2	
C2139-43	ECJ1VB1H103K	C 0.001UF, K, 50V	5	
C2146	ECJ2VF1C104Z	C 0.1UF, Z, 16V	1	
C2147	ECA1HM220	E 22UF, 50V	1	
C2148-50	ECJ2FB1C105K	C 1UF, K, 16V	3	
C2152	ECJ2FB1C105K	C 1UF, K, 16V	1	
C2153	ECJ2FF1C475Z	C 0.047UF, Z, 16V	1	
C2154	ECJ2VF1C104Z	C 0.1UF, Z, 16V	1	
C2155	ECJ2FB1C105K	C 1UF, K, 16V	1	
C2157	ECJ2FB1C105K	C 1UF, K, 16V	1	
C2159,60	ECJ2FB1C105K	C 1UF, K, 16V	2	
C2161	ECA1CMH101	E 100UF, 16V	1	
C2162-65	ECJ2FB1C105K	C 1UF, K, 16V	4	
C2168,69	ECJ2FB1C105K	C 1UF, K, 16V	2	
C2170-72	ECJ1VB1H102K	C 1000PF, K, 50V	3	
C2173	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C2174	ECJ1VB1H102K	C 1000PF, K, 50V	1	
C2175-77	ECJ1VB1H103K	C 0.001UF, K, 50V	3	
C2178,79	EEEBB1C100R	C 10PF, J, 16V	2	
C2181	ECJ2VF1C104Z	C 0.1UF, Z, 16V	1	
C2183	EEEBB1H3R3R	C 3.3PF, J, 50V	1	
C2184,85	ECJ2VF1C104Z	C 0.1UF, Z, 16V	2	
C2189,90	ECJ2FB1C105K	C 1UF, K, 16V	2	
C2191	ECJ2VF1C104Z	C 0.1UF, Z, 16V	1	
C2192	EEEBB1C100R	C 10PF, J, 16V	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C2195	ECJ1XC1H470J	C 47PF, J, 50V	1	
C2196	ECJ2VF1C104Z	C 0.1UF, Z, 16V	1	
C2197	ECJ2FB0J225K	C 2.2UF, Z, 16V	1	
C2198	EEHBOJ101P	C 100PF, J, 6.3V	1	
C2199	ECJ1VC1H560J	C 56PF, J, 50V	1	
C2200	ECJ1XC1H470J	C 47PF, J, 50V	1	
C2201	ECJ1XC1H030C	C 3PF, C, 50V	1	
C2202	ECJ1XC1H050C	C 5PF, C, 50V	1	
C2203	ECJ1VC1H100C	C 10PF, C, 50V	1	
C2204	ECJ1XC1H220J	C 22PF, J, 50V	1	
C2211	ECJ1VB1C104K	C 0.1UF, K, 16V	1	
C2213	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
C2217	FLH0J1050012	C 1UF, K, 16V	1	
C2222	ECJ2VF1C104Z	C 0.1UF, Z, 16V	1	
C2223	ECJ1XC1H390J	C 39PF, J, 50V	1	
C2225	ECJ2FB1C105K	C 1UF, K, 16V	1	
C2226	ECJ1VB1H102K	C 1000PF, K, 50V	1	
C2227	ECA1CMH101	E 100UF, 16V	1	
C2228	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C2229,30	ECA1CMH101	E 100UF, 16V	2	
C2231	ECA1CHG470	E 47UF, 16V	1	
C2232	FLH0J1050012	C 1UF, K, 16V	1	
C2233,34	ECJ1VB1H102K	C 1000PF, K, 50V	2	
C2235	FLH0J1050012	C 1UF, K, 16V	1	
C2236	ECA1CHG470	E 47UF, 16V	1	
C2237-40	ECJ1VB1H103K	C 0.001UF, K, 50V	4	
C2243	ECA1CHG470	E 47UF, 16V	1	
C2301	ECA1EHG471	E 470UF, 25V	1	
C2302,03	ECA1CMH101	E 100UF, 16V	2	
C2304,05	ECJ1VB1H103K	C 0.001UF, K, 50V	2	
C2306	ECJ1VB1C823K	C 0.082UF, K, 16V	1	
C2307	ECA1CMH101	E 100UF, 16V	1	
C2307	ECJ1VB1C823K02	C 0.082UF, K, 16V	1	
C2308,09	ECJ1VB1H822K	C 8200PF, K, 50V	2	
C2310	ECJ1XB1C393K	C 0.039UF, K, 16V	1	
C2311,12	ECJ1VB1H822K	C 8200PF, K, 50V	2	
C2313	ECJ1XB1C393K	C 0.039UF, K, 16V	1	
C2314	ECJ1VB1C105K	C 0.01UF, K, 16V	1	
C2317	ECJ2FB1A105K	C 1UF, K, 10V	1	
C2320	ECJ2FB1A105K	C 1UF, K, 10V	1	
C2321	ECJ2XB1H103K	C 0.01UF, K, 50V	1	
C2322	ECJ2FB1A105K	C 1UF, K, 10V	1	
C2323,24	ECJ2FB1E224K	C 22UF, K, 25V	2	
C2325,26	ECJ1VB1E104K	C 0.10UF, K, 25V	2	
C2327	FLJ1H474A757	C 0.47UF, 50V	1	
C2328-31	ECJ2FB1E105K	C 1UF, K, 25V	4	
C2332,33	ECA1EHG471	E 470UF, 25V	2	
C2334,35	ECJ1VB1E104K	C 0.10UF, K, 25V	2	
C2336	FLJ1H474A757	C 0.47UF, 50V	1	
C2337,38	ECJ2FB1E224K	C 22UF, K, 25V	2	
C2341	ECJ3YB1E106M	C 10 UF, K, 25V	1	
C2342	ECJ2FB1E105K	C 1UF, K, 25V	1	
C2346	ECJ2FB1A105K	C 1UF, K, 10V	1	
C2349	ECJ2FB1A105K	C 1UF, K, 10V	1	
C2350	ECJ2XB1H103K	C 0.01UF, K, 50V	1	
C2351	ECJ2FB1A105K	C 1UF, K, 10V	1	
C2352,53	ECJ2FB1E224K	C 22UF, K, 25V	2	
C2354,55	ECJ1VB1E104K	C 0.10UF, K, 25V	2	
C2356	FLJ1H474A757	C 0.47UF, 50V	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C2357-60	ECJ2FB1E105K	C 1UF, K, 25V	4	
C2361,62	ECA1EHG471	E 470UF, 25V	2	
C2363,64	ECJ1VB1E104K	C 0.10UF, K, 25V	2	
C2365	FLJ1H474A757	C 0.47UF, 50V	1	
C2366,67	ECJ2FB1E224K	C 22UF, K, 25V	2	
C2368,69	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C2370	ECJ3YB1E106M	C 10 UF, K, 25V	1	
C2371	ECJ2FB1E105K	C 1UF, K, 25V	1	
C2372	ECA1HHG100	E 10UF, 50V	1	
C2373	ECJ1VF1H104Z	C 0.1UF, Z, 50V	1	
C2374	ECJ1VF1A105Z	C 1UF, Z, 10V	1	
C2380,81	ECJ1VB1H103K	C 0.001UF, K, 50V	2	
C2382	ECJ1VB1C105K	C 0.01UF, K, 16V	1	
C2385	ECJ2FB1A105K	C 1UF, K, 10V	1	
C2387	ECJ2FB1A105K	C 1UF, K, 10V	1	
C2389	ECJ2FB1A105K	C 1UF, K, 10V	1	
C2391	ECJ2FB1A105K	C 1UF, K, 10V	1	
C2393-96	ECJ1VB1C105K	C 0.01UF, K, 16V	4	
C2401	ECJ2FB1A105K	C 1UF, K, 10V	1	
C2402	ECJ2FB0J106M	C 10UF, Z,6.3V	1	
C2403	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C2404	ECJ2FB1A105K	C 1UF, K, 10V	1	
C2405	ECJ2FB0J106M	C 10UF, Z,6.3V	1	
C2416	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C2417,18	ECJ2FB0J106M	C 10UF, Z,6.3V	2	
C2430	ECJ1VF1A105Z	C 1UF, Z, 10V	1	
C2510,11	ECJ2VF1C105Z	C 1UF, Z, 16V	2	
C2512	ECJ3XB0J106M	C 10UF, M,6.3V	1	
C2515	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C2521	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C3005	ECJ2VF1C104Z	C 0.1UF, Z, 16V	1	
C3021-25	FLJ1A1050002	C 1UF, Z, 50V	5	
C3026	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C3027,28	FLJ1A1050002	C 1UF, Z, 50V	2	
C3029	ECJ2VF1C105Z	C 1UF, Z, 16V	1	
C3030	ECJ2VF1C104Z	C 0.1UF, Z, 16V	1	
C3031	FLJ1A1050002	C 1UF, Z, 50V	1	
C3033	FLJ1A1050002	C 1UF, Z, 50V	1	
C3035	FLJ1A1050002	C 1UF, Z, 50V	1	
C3036	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C3038	ECJ2VF1C104Z	C 0.1UF, Z, 16V	1	
C3039	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C3040	ECJ2VF1C104Z	C 0.1UF, Z, 16V	1	
C3041	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C3042,43	FLJ1A1050002	C 1UF, Z, 50V	2	
C3045	FLJ1A1050002	C 1UF, Z, 50V	1	
C3046	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C3047	FLJ1A1050002	C 1UF, Z, 50V	1	
C3048	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C3049,50	FLJ1A1050002	C 1UF, Z, 50V	2	
C3051-53	ECJ1VB1H103K	C 0.001UF, K, 50V	3	
C3054-56	FLJ1A1050002	C 1UF, Z, 50V	3	
C3058	ECA1EM471	E 470UF, 25V	1	
C3059,60	ECJ2VF1C105Z	C 1UF, Z, 16V	2	
C3061-64	ECJ2VF1C104Z	C 0.1UF, Z, 16V	4	
C3065	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C3067	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C3069	ECA1EM471	E 470UF, 25V	1	
C3070	ECJ2VF1C104Z	C 0.1UF, Z, 16V	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C3075	ECA1CM221	E 220UF, 16V	1	
C3207	ECJ2FB1C105K	C 1UF, K, 16V	1	
C3208	ECJ2FB1C474K	C 0.47UF, Z, 16V	1	
C3214	ECJ2FF1A106Z	C 0.001UF, Z, 10V	1	
C3216	ECJ2FF1A106Z	C 0.001UF, Z, 10V	1	
C3226-29	ECJ2FF1A106Z	C 0.001UF, Z, 10V	4	
C3230	ECJ2VF1C104Z	C 0.1UF, Z, 16V	1	
C3231	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C3233	ECJ2VF1C104Z	C 0.1UF, Z, 16V	1	
C3241	ECJ2VF1C104Z	C 0.1UF, Z, 16V	1	
C3248	ECJ2FB1C105K	C 1UF, K, 16V	1	
C3249	ECJ2FB1C474K	C 0.47UF, Z, 16V	1	
C3251	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C3252	ECJ2FB1C105K	C 1UF, K, 16V	1	
C3253,54	ECJ1XF1C104Z	C 0.1UF, Z, 16V	2	
C3256	ECJ2FB1C105K	C 1UF, K, 16V	1	
C3257	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C3262	ECJ1VB1H472K	C 4700PF, K, 50V	1	
C3268	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C3305	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C3330	ECA1CM470	E 47UF, 16V	1	
C3331	ECJ2XB1H103K	C 0.01UF, K, 50V	1	
C3332	ECJ2VF1C104Z	C 0.1UF, Z, 16V	1	
C3334	ECEA1CN470U	E 47UF, 16V	1	
C3335	ECJ2VB1C104K	C 0.1UF, K, 16V	1	
C3336	ECEA1CN470U	E 47UF, 16V	1	
C3337	ECJ2VB1C104K	C 0.1UF, K, 16V	1	
C3338	ECEA1CN470U	E 47UF, 16V	1	
C3339	ECJ2VB1C104K	C 0.1UF, K, 16V	1	
C3340-42	ECJ2VF1C104Z	C 0.1UF, Z, 16V	3	
C3701	ECJ2XC1H561K	C 560PF, K, 50V	1	
C3703	ECJ2XC1H561K	C 560PF, K, 50V	1	
C3711,12	ECJ2VF1H333Z	C 0.033UF, Z, 50V	2	
C3750,51	ECJ2XC1H102K	C 1000PF, K, 50V	2	
C4003-08	F1J0J1060004	C 0.010UF, K, 16V	6	
C4009	ECJ1VB0J475K	C 4.7UF, K, 6.3V	1	
C4012,13	ECJ1XC1H180J	C 18PF, J, 50V	2	
C4014,15	F1J0J1060004	C 0.010UF, K, 16V	2	
C4023	F1J0J1060004	C 0.010UF, K, 16V	1	
C4026	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C4027	ECJ1VB1A105K	C 0.01UF, Z, 50V	1	
C4028	ECJ0EB1C103K	C0.010UF, K, 16V	1	
C4112	F1J0J1060004	C 0.010UF, K, 16V	1	
C4117	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C4142	F1H1C104A065	C 0.1UF, K, 16V	1	
C4144-46	ECJ1XC1H050C	C 5PF, C, 50V	3	
C4148-51	ECJ1VB1A105K	C 0.01UF, Z, 50V	4	
C4157	F1J0J1060004	C 0.010UF, K, 16V	1	
C4158	ECJ1VB1A105K	C 0.01UF, Z, 50V	1	
C4159	F1H1C104A065	C 0.1UF, K, 16V	1	
C4160	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C4161,62	ECJ1VB1A105K	C 0.01UF, Z, 50V	2	
C4165	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C4168	ECJ1XC1H680J	C 68PF, J, 50V	1	
C4169	ECJ1VB1A105K	C 0.01UF, Z, 50V	1	
C4171	ECJ1XC1H471J	C 470PF, J, 50V	1	
C4172,73	F1H1C104A065	C 0.1UF, K, 16V	2	
C4174	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C4175	F1H1C104A065	C 0.1UF, K, 16V	1	
C4176	ECJ1VB0J225K	C 2.2UF, K, 6.3V	1	
C4177	ECJ2FB1C684K	C 68UF, Z, 16V	1	
C4178	ECJ1XB1C393K	C 0.039UF, K, 16V	1	
C4180	F1H1C104A065	C 0.1UF, K, 16V	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C4181	ECJ0EB1C103K	C0.010UF, K, 16V	1	
C4182	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C4185,86	ECJ3XB0J106M	C 10UF, M, 6.3V	2	
C4187	F2G0J470A019	E 47UF 6.3V	1	
C4188	F1J0J1060004	C 0.010UF, K, 16V	1	
C4189-92	ECJ0EB1A104K	C 0.1UF, K, 10V	4	
C4193	ECJ0EB1H102K	C 1000PF, K, 50V	1	
C4194-97	F1H1C104A065	C 0.1UF, K, 16V	4	
C4198	ECJ1VB1A105K	C 0.01UF, Z, 50V	1	
C4199	ECJ0EB1C103K	C0.010UF, K, 16V	1	
C4200	F2G0J470A019	E 47UF 6.3V	1	
C4201	ECJ0EB1C103K	C0.010UF, K, 16V	1	
C4204	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C4205,06	F1H1C104A065	C 0.1UF, K, 16V	2	
C4208,09	ECJ0EB1A104K	C 0.1UF, K, 10V	2	
C4211	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C4212	EEEBH0G221P	C 220PF, J, 4V	1	
C4213	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C4214	ECJ1VB1A105K	C 0.01UF, Z, 50V	1	
C4215	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C4216	F2G0J470A019	E 47UF 6.3V	1	
C4217	F1H1C104A065	C 0.1UF, K, 16V	1	
C4218	ECJ0EB1H102K	C 1000PF, K, 50V	1	
C4219	ECJ1VB1A105K	C 0.01UF, Z, 50V	1	
C4220	ECJ0EB1C103K	C0.010UF, K, 16V	1	
C4224	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C4225	ECJ1VB1A105K	C 0.01UF, Z, 50V	1	
C4226	ECJ1XC1H680J	C 68PF, J, 50V	1	
C4227	ECJ1VB1C823K	C 0.082UF, K, 16V	1	
C4228	ECJ0EB1C103K	C0.010UF, K, 16V	1	
C4229	F1H1C104A065	C 0.1UF, K, 16V	1	
C4230-34	ECJ0EB1A104K	C 0.1UF, K, 10V	5	
C4235	ECJ0EB1C103K	C0.010UF, K, 16V	1	
C4236-42	ECJ0EB1A104K	C 0.1UF, K, 10V	7	
C4243,44	ECJ1VB1A105K	C 0.01UF, Z, 50V	2	
C4245,46	ECJ0EB1A104K	C 0.1UF, K, 10V	2	
C4248	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C4250,51	ECJ0EB1A104K	C 0.1UF, K, 10V	2	
C4252	ECJ1VB1A105K	C 0.01UF, Z, 50V	1	
C4253	F2G0J470A019	E 47UF 6.3V	1	
C4255	ECJ1VB1H562K	C 5600PF, K, 50V	1	
C4256	ECJ1VB1A105K	C 0.01UF, Z, 50V	1	
C4257	ECJ1VB0J475K	C 4.7UF, K, 6.3V	1	
C4258	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C4259	ECJ1VB0J225K	C 2.2UF, K, 6.3V	1	
C4261-65	ECJ0EB1A104K	C 0.1UF, K, 10V	5	
C4266	ECJ0EB1C103K	C0.010UF, K, 16V	1	
C4267,68	ECJ0EB1A104K	C 0.1UF, K, 10V	2	
C4269	ECJ1VB1A105K	C 0.01UF, Z, 50V	1	
C4270	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C4272	F2G0J470A019	E 47UF 6.3V	1	
C4273-75	ECJ0EB1A104K	C 0.1UF, K, 10V	3	
C4276	ECJ1VB0J225K	C 2.2UF, K, 6.3V	1	
C4277	ECJ1VB0J475K	C 4.7UF, K, 6.3V	1	
C4281-84	ECJ0EB1A104K	C 0.1UF, K, 10V	4	
C4287,88	ECJ0EB1A104K	C 0.1UF, K, 10V	2	
C4289,90	EEEBH0J330R	C 33PF, J, 6.3V	2	
C4291,92	ECJ0EB1A104K	C 0.1UF, K, 10V	2	
C4296	F1J0J1060004	C 0.010UF, K, 16V	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C4297	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C4298-06	ECJ1VB1A105K	C 0.01UF, Z, 50V	9	
C4307-09	ECJ0EB1A104K	C 0.1UF, K, 10V	3	
C4310	ECJ0EB1C103K	C0.010UF, K, 16V	1	
C4311	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C4312	ECJ0EB1C103K	C0.010UF, K, 16V	1	
C4313,14	ECJ0EB1A104K	C 0.1UF, K, 10V	2	
C4315	FLJ0J1060004	C 0.010UF, K, 16V	1	
C4316-18	ECJ0EB1A104K	C 0.1UF, K, 10V	3	
C4320-22	ECJ0EB1A104K	C 0.1UF, K, 10V	3	
C4325	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C4327	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C4329,30	ECJ0EB1A104K	C 0.1UF, K, 10V	2	
C4331	FLJ0J1060004	C 0.010UF, K, 16V	1	
C4332	ECJ1VB1A105K	C 0.01UF, Z, 50V	1	
C4333-38	ECJ0EB1A104K	C 0.1UF, K, 10V	6	
C4339	ECJ1VB0J225K	C 2.2UF, K, 6.3V	1	
C4340	ECJ1XC1H471J	C 470PF, J, 50V	1	
C4341	EEH1C470P	C 47PF, J, 16V	1	
C4342	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C4343	EEH1C100R	C 10PF, J, 16V	1	
C4344,45	FLJ0J1060004	C 0.010UF, K, 16V	2	
C4346	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C4347	ECJ1VB1A105K	C 0.01UF, Z, 50V	1	
C4348	EEH1C470P	C 47PF, J, 16V	1	
C4349	ECJ0EB1C103K	C0.010UF, K, 16V	1	
C4350,51	ECJ1XC1H181J	C 180PF, J, 50V	2	
C4352,53	ECJ1XC1H330J	C 33PF, J, 50V	2	
C4354	ECJ0EB1C103K	C0.010UF, K, 16V	1	
C4360	ECJ1VB1A105K	C 0.01UF, Z, 50V	1	
C4362	FLJ0J1060004	C 0.010UF, K, 16V	1	
C4363,64	ECJ0EB1A104K	C 0.1UF, K, 10V	2	
C4365	ECJ1VB1A105K	C 0.01UF, Z, 50V	1	
C4366	F2G0J470A019	E 47UF 6.3V	1	
C4367	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C4371	ECJ0EB1H102K	C 1000PF, K, 50V	1	
C4372	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C4373	ECJ1VB1A105K	C 0.01UF, Z, 50V	1	
C4374	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C4375,76	ECJ0EB1H102K	C 1000PF, K, 50V	2	
C4377	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C4379	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C4380	ECJ0EB1H102K	C 1000PF, K, 50V	1	
C4381,82	ECJ0EB1A104K	C 0.1UF, K, 10V	2	
C4383	ECJ0EB1H102K	C 1000PF, K, 50V	1	
C4384	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C4385	ECJ0EB1H102K	C 1000PF, K, 50V	1	
C4386	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C4387	ECJ0EB1H102K	C 1000PF, K, 50V	1	
C4388	ECJ1VB1A105K	C 0.01UF, Z, 50V	1	
C4389	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C4390	ECJ0EB1H102K	C 1000PF, K, 50V	1	
C4391	ECJ1VB1A105K	C 0.01UF, Z, 50V	1	
C4392	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C4393,94	ECJ0EB1H102K	C 1000PF, K, 50V	2	
C4395	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C4396	ECJ0EB1H102K	C 1000PF, K, 50V	1	
C4397,98	ECJ0EB1A104K	C 0.1UF, K, 10V	2	
C4399,00	ECJ1VB1A105K	C 0.01UF, Z, 50V	2	
C4401	ECJ0EB1A104K	C 0.1UF, K, 10V	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C4402,03	ECJ0EB1H102K	C 1000PF, K, 50V	2	
C4404	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C4405	ECJ1VB1A105K	C 0.01UF, Z, 50V	1	
C4406	ECJ0EB1H102K	C 1000PF, K, 50V	1	
C4407,08	ECJ0EB1A104K	C 0.1UF, K, 10V	2	
C4409	ECJ0EB1H102K	C 1000PF, K, 50V	1	
C4410	ECJ1VB1A105K	C 0.01UF, Z, 50V	1	
C4411,12	ECJ0EB1A104K	C 0.1UF, K, 10V	2	
C4413,14	ECJ0EB1H102K	C 1000PF, K, 50V	2	
C4415	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C4417	F2G0J470A019	E 47UF 6.3V	1	
C4418,19	ECJ1VB1A105K	C 0.01UF, Z, 50V	2	
C4420,21	ECJ0EB1A104K	C 0.1UF, K, 10V	2	
C4422-24	ECJ0EB1H102K	C 1000PF, K, 50V	3	
C4425,26	ECJ0EB1A104K	C 0.1UF, K, 10V	2	
C4427	ECJ0EB1H102K	C 1000PF, K, 50V	1	
C4428	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C4429,30	ECJ0EB1H102K	C 1000PF, K, 50V	2	
C4434	ECJ0EB1H102K	C 1000PF, K, 50V	1	
C4435	ECJ1VB1A105K	C 0.01UF, Z, 50V	1	
C4436-39	ECJ0EB1H102K	C 1000PF, K, 50V	4	
C4440	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C4441,42	ECJ0EB1H102K	C 1000PF, K, 50V	2	
C4447	ECJ1VB1A105K	C 0.01UF, Z, 50V	1	
C4448	ECJ0EB1C103K	C0.010UF, K, 16V	1	
C4451	ECJ0EB1H102K	C 1000PF, K, 50V	1	
C4452	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C4453,54	ECJ0EB1H102K	C 1000PF, K, 50V	2	
C4455	ECJ1VB1A105K	C 0.01UF, Z, 50V	1	
C4456	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C4457,58	ECJ0EB1H102K	C 1000PF, K, 50V	2	
C4459	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C4460	ECJ0EB1H102K	C 1000PF, K, 50V	1	
C4461	ECJ1XC1H820J	C 82PF, J, 50V	1	
C4462	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C4464	ECJ1VB1A105K	C 0.01UF, Z, 50V	1	
C4465	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C4466	ECJ0EB1C103K	C0.010UF, K, 16V	1	
C4467	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C4470	ECJ1VB1A105K	C 0.01UF, Z, 50V	1	
C4474	ECJ1VB1A105K	C 0.01UF, Z, 50V	1	
C4475,76	ECJ0EB1H102K	C 1000PF, K, 50V	2	
C4477	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C4478	ECJ1VB1A105K	C 0.01UF, Z, 50V	1	
C4479-81	ECJ0EB1H102K	C 1000PF, K, 50V	3	
C4482	ECJ1XC1H180J	C 18PF, J, 50V	1	
C4483	ECJ1XC1H150J	C 15PF, J, 50V	1	
C4493	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C4494	ECJ1VB1A105K	C 0.01UF, Z, 50V	1	
C4496	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C4497	EEH1C101R	C 100PF, J, 4V	1	
C4498	ECJ1XC1H471J	C 470PF, J, 50V	1	
C4499	EEFCD0G560ER	56UF,	1	
C4501	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C4502	ECJ0EB1C103K	C0.010UF, K, 16V	1	
C4503	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C4504	ECJ0EB1C103K	C0.010UF, K, 16V	1	
C4505	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C4506	ECJ0EB1C103K	C0.010UF, K, 16V	1	
C4507	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C4508	ECJ0EB1C103K	C0.010UF, K, 16V	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C4509-11	ECJ0EB1A104K	C 0.1UF, K, 10V	3	
C4512	ECJ0EB1C103K	C0.010UF, K, 16V	1	
C4513	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C4514	ECJ0EB1C103K	C0.010UF, K, 16V	1	
C4515,16	ECJ0EB1A104K	C 0.1UF, K, 10V	2	
C4517	ECJ0EB1C103K	C0.010UF, K, 16V	1	
C4518	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C4519	ECJ0EB1C103K	C0.010UF, K, 16V	1	
C4520	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C4521	ECJ0EB1C103K	C0.010UF, K, 16V	1	
C4522	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C4523	ECJ0EB1C103K	C0.010UF, K, 16V	1	
C4524	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C4525	ECJ0EB1C103K	C0.010UF, K, 16V	1	
C4526	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C4527	ECJ0EB1C103K	C0.010UF, K, 16V	1	
C4528	F2G0J470A019	E 47UF 6.3V	1	
C4529	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C4530,31	ECJ0EB1H102K	C 1000PF, K, 50V	2	
C4532,33	ECJ0EB1A104K	C 0.1UF, K, 10V	2	
C4534	ECJ0EB1H102K	C 1000PF, K, 50V	1	
C4535	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C4536	ECJ1VB1A105K	C 0.01UF, Z, 50V	1	
C4537	EEEB0G101R	C 100PF, J, 4V	1	
C4538	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C4539	ECJ1VB1A105K	C 0.01UF, Z, 50V	1	
C4540	ECJ0EB1H102K	C 1000PF, K, 50V	1	
C4541	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C4543	F1H1C104A065	C 0.1UF, K, 16V	1	
C4544	ECJ1VB1C105K	C 0.01UF, K, 16V	1	
C5604	ECA1HHG100	E 10UF, 50V	1	
C5605	EEUFC1E471	E 470UF, 25V	1	
C5606	ECA1CM471	E 470UF, 16V	1	
C5609	ECA1HM220	E 22UF, 50V	1	
C5611	F2A1H331A257	E 330UF, 50V	1	
C5612	ECA1CM471	E 470UF, 16V	1	
C5613	ECJ1VB1E104K	C 0.10UF, K, 25V	1	
C5616	ECJ1VB1E104K	C 0.10UF, K, 25V	1	
C5617	ECA1CM471	E 470UF, 16V	1	
C5618,19	ECJ1VB1E104K	C 0.10UF, K, 25V	2	
C5622	ECA1CM471	E 470UF, 16V	1	
C5623	ECJ1VB1E104K	C 0.10UF, K, 25V	1	
C5626	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C5633	ECA1EM221	E 220UF, 25V	1	
C5637	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C5641-44	ECJ1XF1C104Z	C 0.1UF, Z, 16V	4	
C5645	ECA1CHG470	E 47UF, 16V	1	
C5646	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C5647	ECA1CHG470	E 47UF, 16V	1	
C5648	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C5670	ECJ1VB1E104K	C 0.10UF, K, 25V	1	
C5672	ECA1HHG100	E 10UF, 50V	1	
C5673	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C5685	ECA1HHG100	E 10UF, 50V	1	
C5686	ECJ2XB1H103K	C 0.01UF, K, 50V	1	
C5801,02	EEUFC1E471	E 470UF, 25V	2	
C5804	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C5805	ECJ2VF1C105Z	C 1UF, Z, 16V	1	
C5809	ECJ3XF1E105Z	C 1UF, Z, 25V	1	
C5810	ECA1EHG470	E 47UF, 25V	1	
C6001	F1L2J562A022	C 5600UF, K,6.3V	1	
C6011-16	F2A2T201A001	E 200UF,	6	
C6023	F1L2J562A022	C 5600UF, K,6.3V	1	
C6031	F0C2E405A176	E 0.040UF, 250V	1	
C6041-44	TCUY1C105ZFN	C 1UF, 16V	4	
C6105	F1L1E4750004	C 4.7UF, 25V	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C6111,12	F2A2D221A022	E 220UF, 200V	2	
C6132	F1L1E4750004	C 4.7UF, 25V	1	
C6134,35	F1L1E4750004	C 4.7UF, 25V	2	
C6151	ECJ3YB1E105K	C 1UF, K, 25V	1	
C6152-55	F1L1E4750004	C 4.7UF, 25V	4	
C6192	ECJ3YB1E105K	C 1UF, K, 25V	1	
C6194,95	F1L1E4750004	C 4.7UF, 25V	2	
C6201-04	F0C2E405A176	E 0.040UF, 250V	4	
C6211,12	F1L1E4750004	C 4.7UF, 25V	2	
C6213	F2A1E102A220	E 1000UF, 25V	1	
C6221	ECJ2XB1H104K	C 0.1UF, K, 50V	1	
C6241	ECA1EM471	E 470UF, 25V	1	
C6242	TCUY1C105ZFN	C 1UF, 16V	1	
C6243	ECJ2XB1H103K	C 0.01UF, K, 50V	1	
C6251	TCUY1C105ZFN	C 1UF, 16V	1	
C6262,63	F2A2A471A072	E 470UF, 100V	2	
C6272,73	EEUFC1E221	E 220UF, 25V	2	
C6401-03	F1L2J222A022	C 2200UF, K,6.3V	3	
C6411-16	F2A2T201A001	E 200UF,	6	
C6421-24	F1L2J222A022	C 2200UF, K,6.3V	4	
C6431	F0C2E405A176	E 0.040UF, 250V	1	
C6472	ECJ2XB1H104K	C 0.1UF, K, 50V	1	
C6480	ECJ2XB1H104K	C 0.1UF, K, 50V	1	
C6502	F1L1E4750004	C 4.7UF, 25V	1	
C6504,05	F1L1E4750004	C 4.7UF, 25V	2	
C6512-15	F0C2E405A176	E 0.040UF, 250V	4	
C6521	ECJ3YB1E105K	C 1UF, K, 25V	1	
C6522	F1L1E4750004	C 4.7UF, 25V	1	
C6524,25	F1L1E4750004	C 4.7UF, 25V	2	
C6527	F1L1E4750004	C 4.7UF, 25V	1	
C6561	F2A1A1010074	E 100UF, 10V	1	
C6562	TCUY1C105ZFN	C 1UF, 16V	1	
C6563	F2A1A1010074	E 100UF, 10V	1	
C6564	TCUY1C105ZFN	C 1UF, 16V	1	
C6565,66	ECJ2XB1H103K	C 0.01UF, K, 50V	2	
C6581	ECJ3YB1E105K	C 1UF, K, 25V	1	
C6582	TCUY1C105ZFN	C 1UF, 16V	1	
C6592	ECA1EM471	E 470UF, 25V	1	
C6593	ECJ2XC1H102J	C 1000PF, J, 50V	1	
C6601,02	F1L1E4750004	C 4.7UF, 25V	2	
C6603	F1K2J102A014	C 1000UF, K,6.3V	1	
C6604	F2A2V470A020	E 47UF, 350V	1	
C6605	ECJ2XB1H104K	C 0.1UF, K, 50V	1	
C6606	F1K2J102A014	C 1000UF, K,6.3V	1	
C6610	ECJ3YB1E105K	C 1UF, K, 25V	1	
C6611	ECJ2XB1H103K	C 0.01UF, K, 50V	1	
C6612	ECJ3YB1E105K	C 1UF, K, 25V	1	
C6620	ECJ3XB2J222K	C 2200PF, K,630V	1	
C6641	ECQE2105RKB	P 1UF, 250V	1	
C6661,62	F1K2J102A014	C 1000UF, K,6.3V	2	
C6671	F1L1E4750004	C 4.7UF, 25V	1	
C6681,82	F1L1E4750004	C 4.7UF, 25V	2	
C6683	ECJ2XB1H104K	C 0.1UF, K, 50V	1	
C6691	ECA2CM101	E 100UF, 160V	1	
C6701-08	ECJ2XB1H104K	C 0.1UF, K, 50V	8	
C6721	ECA1HM101	E 100UF, 50V	1	
C6723-25	F1L1E4750004	C 4.7UF, 25V	3	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C6726,27	TCUY1C105ZFN	C 1UF, 16V	2	
C6728	ECJ2XC1H102J	C 1000PF, J, 50V	1	
C6752	TCUY1C105ZFN	C 1UF, 16V	1	
C6753	F1L1E4750004	C 4.7UF, 25V	1	
C6754	ECA1VM470	E 47UF, 35V	1	
C6755	ECJ2XB1H104K	C 0.1UF, K, 50V	1	
C6771	TCUY1C105ZFN	C 1UF, 16V	1	
C6772,73	F1L1E4750004	C 4.7UF, 25V	2	
C6775	F1L1E4750004	C 4.7UF, 25V	1	
C6776,77	ECJ2XB1H104K	C 0.1UF, K, 50V	2	
C6791	EEUFC1E221	E 220UF, 25V	1	
C6795,96	EEUFC1E221	E 220UF, 25V	2	
C6801	F2A2E470A022	E 47UF, 250V	1	
C6802	ECQE6223KF	P 0.022UF, K,400V	1	
C6803	ECKD3D221KBP	C 220PF, K, 2KV	1	
C6804	F2A2E100A022	E 10UF, 250V	1	
C6805	ECJ2XC1H102J	C 1000PF, J, 50V	1	
C6806	ECA2CM101	E 100UF, 160V	1	
C6807	ECJ2XC1H471J	C 470PF, J, 50V	1	
C6811	ECJ2XB1H103K	C 0.01UF, K, 50V	1	
C6812	F1L1E4750004	C 4.7UF, 25V	1	
C6813	ECA2CM101	E 100UF, 160V	1	
C6814	ECA1VM151	E 150UF, 35V	1	
C6815	ECJ2XB1H104K	C 0.1UF, K, 50V	1	
C6822	F2A2V100A019	E 10UF, 350V	1	
C6823	ECJ2XB1H103K	C 0.01UF, K, 50V	1	
C6841	ECA2DHG101	E 100UF, 200V	1	
C6842	ECA2CM101	E 100UF, 160V	1	
C6845	ECJ2XB1H103K	C 0.01UF, K, 50V	1	
C6861	TCUY1C105ZFN	C 1UF, 16V	1	
C6862	ECJ3YB1E105K	C 1UF, K, 25V	1	
C6863	ECJ2XB1H103K	C 0.01UF, K, 50V	1	
C6871	TCUY1C105ZFN	C 1UF, 16V	1	
C6872	ECJ3YB1E105K	C 1UF, K, 25V	1	
C6873	ECJ2XB1H103K	C 0.01UF, K, 50V	1	
C6901	ECJ2XB1H102K	C 1000PF, K, 50V	1	
C6902	TCUY1C105ZFN	C 1UF, 16V	1	
C6904	TCUY1C105ZFN	C 1UF, 16V	1	
C6906	TCUY1C105ZFN	C 1UF, 16V	1	
C6908	TCUY1C105ZFN	C 1UF, 16V	1	
C6910	TCUY1C105ZFN	C 1UF, 16V	1	
C6912	TCUY1C105ZFN	C 1UF, 16V	1	
C6914-18	ECJ2XB1H221K	C 220PF, K, 50V	5	
C6931	ECJ2XB1H102K	C 1000PF, K, 50V	1	
C6932-35	F1L2E105A013	E 0.10UF, 25V	4	
C6951	ECJ2XB1H102K	C 1000PF, K, 50V	1	
C6952	TCUY1C105ZFN	C 1UF, 16V	1	
C6955	TCUY1C105ZFN	C 1UF, 16V	1	
C6957,58	TCUY1C105ZFN	C 1UF, 16V	2	
C6961	TCUY1C105ZFN	C 1UF, 16V	1	
C6963	TCUY1C105ZFN	C 1UF, 16V	1	
C6964-68	ECJ2XB1H221K	C 220PF, K, 50V	5	
C6981	ECJ2XB1H102K	C 1000PF, K, 50V	1	
C6982-85	F1L2E105A013	E 0.10UF, 25V	4	
C7103	ECJ3XB2A474K	C 0.47UF, 6.3V	1	
C7105	TCUY1C105ZFN	C 1UF, 16V	1	
C7106	ECJ3XB2A474K	C 0.47UF, 6.3V	1	
C7108	ECJ1XC1H101J	C 100PF, J, 50V	1	
C7109	TCUY1C105ZFN	C 1UF, 16V	1	
C7112	ECJ3XB2A474K	C 0.47UF, 6.3V	1	
C7114	TCUY1C105ZFN	C 1UF, 16V	1	
C7115	ECJ3XB2A474K	C 0.47UF, 6.3V	1	
C7117	ECJ1XC1H101J	C 100PF, J, 50V	1	
C7118	TCUY1C105ZFN	C 1UF, 16V	1	
C7121	ECJ3XB2A474K	C 0.47UF, 6.3V	1	
C7123	TCUY1C105ZFN	C 1UF, 16V	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C7124	ECJ3XB2A474K	C 0.47UF, 6.3V	1	
C7126	ECJ1XC1H101J	C 100PF, J, 50V	1	
C7127,28	TCUY1C105ZFN	C 1UF, 16V	2	
C7130	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C7201-03	TCUY1C105ZFN	C 1UF, 16V	3	
C7205	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C7206	TCUY1C105ZFN	C 1UF, 16V	1	
C7208	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C7210	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C7213	ECJ1XC1H101J	C 100PF, J, 50V	1	
C7215	TCUY1C105ZFN	C 1UF, 16V	1	
C7216	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C7218	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C7221,22	ECJ1XC1H101J	C 100PF, J, 50V	2	
C7225	ECJ1XC1H101J	C 100PF, J, 50V	1	
C7226	ECJ3XB2A474K	C 0.47UF, 6.3V	1	
C7228	TCUY1C105ZFN	C 1UF, 16V	1	
C7229,30	ECJ3XB2A474K	C 0.47UF, 6.3V	2	
C7232	TCUY1C105ZFN	C 1UF, 16V	1	
C7233,34	ECJ3XB2A474K	C 0.47UF, 6.3V	2	
C7236	TCUY1C105ZFN	C 1UF, 16V	1	
C7237,38	ECJ3XB2A474K	C 0.47UF, 6.3V	2	
C7240	TCUY1C105ZFN	C 1UF, 16V	1	
C7241	ECJ3XB2A474K	C 0.47UF, 6.3V	1	
C7243	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C7247	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C7249	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C7251	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C7302	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C7306,07	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C7309,10	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C7311,12	TCUY1C105ZFN	C 1UF, 16V	2	
C7313-15	ECJ1XC1H101J	C 100PF, J, 50V	3	
C7316,17	TCUY1C105ZFN	C 1UF, 16V	2	
C7318	ECJ1XC1H101J	C 100PF, J, 50V	1	
C7319	ECJ3XB2A474K	C 0.47UF, 6.3V	1	
C7321	TCUY1C105ZFN	C 1UF, 16V	1	
C7322	ECJ3XB2A474K	C 0.47UF, 6.3V	1	
C7331	ECJ3XB2A474K	C 0.47UF, 6.3V	1	
C7333	TCUY1C105ZFN	C 1UF, 16V	1	
C7334,35	ECJ3XB2A474K	C 0.47UF, 6.3V	2	
C7337	TCUY1C105ZFN	C 1UF, 16V	1	
C7338,39	ECJ3XB2A474K	C 0.47UF, 6.3V	2	
C7341	TCUY1C105ZFN	C 1UF, 16V	1	
C7342	ECJ3XB2A474K	C 0.47UF, 6.3V	1	
C7403	ECJ3XB2A474K	C 0.47UF, 6.3V	1	
C7405	TCUY1C105ZFN	C 1UF, 16V	1	
C7406	ECJ3XB2A474K	C 0.47UF, 6.3V	1	
C7407	ECJ1XC1H101J	C 100PF, J, 50V	1	
C7408	TCUY1C105ZFN	C 1UF, 16V	1	
C7411	ECJ3XB2A474K	C 0.47UF, 6.3V	1	
C7413	TCUY1C105ZFN	C 1UF, 16V	1	
C7414	ECJ3XB2A474K	C 0.47UF, 6.3V	1	
C7415	ECJ1XC1H101J	C 100PF, J, 50V	1	
C7416	TCUY1C105ZFN	C 1UF, 16V	1	
C7419	ECJ3XB2A474K	C 0.47UF, 6.3V	1	
C7421	TCUY1C105ZFN	C 1UF, 16V	1	
C7422	ECJ3XB2A474K	C 0.47UF, 6.3V	1	
C7423	ECJ1XC1H101J	C 100PF, J, 50V	1	
C7424	TCUY1C105ZFN	C 1UF, 16V	1	
C7427	ECJ3XB2A474K	C 0.47UF, 6.3V	1	
C7429	TCUY1C105ZFN	C 1UF, 16V	1	
C7430	ECJ3XB2A474K	C 0.47UF, 6.3V	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C7431	ECJ1XC1H101J	C 100PF, J, 50V	1	
C7432,3	TCUY1C105ZFN	C 1UF, 16V	2	
C7435	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C7440-43	ECJ1XB1C104K	C 0.1UF, Z, 16V	4	
C7502	TCUY1C105ZFN	C 1UF, 16V	1	
C7504	TCUY1C105ZFN	C 1UF, 16V	1	
C7506	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C7508	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C7509	ECJ1XC1H101J	C 100PF, J, 50V	1	
C7510	TCUY1C105ZFN	C 1UF, 16V	1	
C7511	ECJ1XC1H101J	C 100PF, J, 50V	1	
C7513,1	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C7517	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C7518	TCUY1C105ZFN	C 1UF, 16V	1	
C7521	ECJ1XC1H101J	C 100PF, J, 50V	1	
C7523	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C7524	ECJ1XC1H101J	C 100PF, J, 50V	1	
C7525	ECJ3XB2A474K	C 0.47UF, 6.3V	1	
C7527	TCUY1C105ZFN	C 1UF, 16V	1	
C7528,2	ECJ3XB2A474K	C 0.47UF, 6.3V	2	
C7531	TCUY1C105ZFN	C 1UF, 16V	1	
C7532,3	ECJ3XB2A474K	C 0.47UF, 6.3V	2	
C7535	TCUY1C105ZFN	C 1UF, 16V	1	
C7536	ECJ3XB2A474K	C 0.47UF, 6.3V	1	
C7557	ECJ3XB2A474K	C 0.47UF, 6.3V	1	
C7559	TCUY1C105ZFN	C 1UF, 16V	1	
C7560	ECJ3XB2A474K	C 0.47UF, 6.3V	1	
C7562	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C7564	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C7566	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C7603	ECJ3XB2A474K	C 0.47UF, 6.3V	1	
C7605	TCUY1C105ZFN	C 1UF, 16V	1	
C7606	ECJ3XB2A474K	C 0.47UF, 6.3V	1	
C7607	ECJ1XC1H101J	C 100PF, J, 50V	1	
C7608	TCUY1C105ZFN	C 1UF, 16V	1	
C7611	ECJ3XB2A474K	C 0.47UF, 6.3V	1	
C7613	TCUY1C105ZFN	C 1UF, 16V	1	
C7614	ECJ3XB2A474K	C 0.47UF, 6.3V	1	
C7615	ECJ1XC1H101J	C 100PF, J, 50V	1	
C7616	TCUY1C105ZFN	C 1UF, 16V	1	
C7619	ECJ3XB2A474K	C 0.47UF, 6.3V	1	
C7621	TCUY1C105ZFN	C 1UF, 16V	1	
C7622	ECJ3XB2A474K	C 0.47UF, 6.3V	1	
C7623	ECJ1XC1H101J	C 100PF, J, 50V	1	
C7624,2	TCUY1C105ZFN	C 1UF, 16V	2	
C7626	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C7701	ECJ1XC1H330J	C 33PF, J, 50V	1	
C7702	EEEB0G470R	C 47PF, J, 4V	1	
C7703,0	ECJ1XC1H330J	C 33PF, J, 50V	2	
C7705	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C7707	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C7708	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C7709	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C7711	ECJ1XC1H330J	C 33PF, J, 50V	1	
C7721,2	ECJ1XF1C104Z	C 0.1UF, Z, 16V	2	
C7751	EEVHB0G221P	E 220UF, 4V	1	
C7755	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C7756	ECJ2FB1A105K	C 1UF, K, 10V	1	
C7758	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C7760	ECJ2FB1A105K	C 1UF, K, 10V	1	
C7761-64	ECJ1XC1H330J	C 33PF, J, 50V	4	
C9028,2	F1J0J1060004	C 0.010UF, K, 16V	2	
C9033,3	ECJ1XF1C104Z	C 0.1UF, Z, 16V	2	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C9035,3	F1J0J1060004	C 0.010UF, K, 16V	2	
C9037	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C9039	F1J0J1060004	C 0.010UF, K, 16V	1	
C9040	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C9044-53	ECJ1XF1C104Z	C 0.1UF, Z, 16V	10	
C9055-57	ECJ1XF1C104Z	C 0.1UF, Z, 16V	3	
C9058	F1J0J1060004	C 0.010UF, K, 16V	1	
C9300-25	ECJ1XB1C104K	C 0.1UF, Z, 16V	26	
C9327-51	ECJ1XB1C104K	C 0.1UF, Z, 16V	25	
C9352	EEFCD0G560ER	56UF,	1	
C9355-59	ECJ1XB1C104K	C 0.1UF, Z, 16V	5	
C9360-64	ECJ3XB0J106M	C 10UF, M,6.3V	5	
C9365	EEFCD0G560ER	56UF,	1	
C9366,6	ECJ1VF1H103Z	C 0.010UF, Z, 50V	2	
C9368	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C9442-70	ECJ1XB1C104K	C 0.1UF, Z, 16V	29	
C9472-96	ECJ1XB1C104K	C 0.1UF, Z, 16V	25	
C9497	EEFCD0G560ER	56UF,	1	
C9512,1	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C9514,1	ECJ2VF1C105Z	C 1UF, Z, 16V	2	
C9516-25	ECJ1XB1C104K	C 0.1UF, Z, 16V	10	
C9526	F1J0J1060004	C 0.010UF, K, 16V	1	
C9527-30	ECJ1XB1C104K	C 0.1UF, Z, 16V	4	
C9531	F1J0J1060004	C 0.010UF, K, 16V	1	
C9532	ECJ1XC1H101K	C 100PF, K, 50V	1	
C9533	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C9534-38	ECJ3XB0J106M	C 10UF, M,6.3V	5	
C9539	EEFCD0G560ER	56UF,	1	
C9540,4	ECJ1VF1H103Z	C 0.010UF, Z, 50V	2	
C9542	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C9546,4	ECJ1VC1H120J	C 12PF, J, 50V	2	
C9548	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C9552	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C9554	F1J0J1060004	C 0.010UF, K, 16V	1	
C9557	ECJ2VF1C105Z	C 1UF, Z, 16V	1	
C9601	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C9608	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C9800	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C9801	ECJ1VB1H472K	C 4700PF, K, 50V	1	
C9802	ECJ1XC1H470J	C 47PF, J, 50V	1	
C9803	ECJ1VB1H472K	C 4700PF, K, 50V	1	
C9804	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C9805	ECJ1VB0J475K	C 4.7UF, K, 6.3V	1	
C9806	ECGRL0G680ER	C 68PF, J, 4V	1	
C9807,0	ECJ3YB1E106M	C 10 UF, K, 25V	2	
C9809	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C9815,1	ECGRL0G680ER	C 68PF, J, 4V	2	
C9817,1	ECJ3YB1E106M	C 10 UF, K, 25V	2	
C9822	F1J0J1060004	C 0.010UF, K, 16V	1	
C9823,2	ECJ3YB1E106M	C 10 UF, K, 25V	2	
C9825	ECJ1XC1H101K	C 100PF, K, 50V	1	
C9826	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C9827	F1J0J1060004	C 0.010UF, K, 16V	1	
C9830-32	ECJ3XB1C106M	C 1.0UF, K, 16V	3	
C9833	ECJ3YB1E106M	C 10 UF, K, 25V	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C9837	ECJ3XB1C106M	C 1.0UF, K, 16V	1	
C9838	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C9840	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C9841,4	ECJ2VF1C105Z	C 1UF, Z, 16V	2	
C9843	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C9844	ECJ1VF1H103Z	C 0.010UF, Z, 50V	1	
C9845,4	ECJ1XF1C104Z	C 0.1UF, Z, 16V	2	
C9847,4	ECJ1VB1E104K	C 0.10UF, K, 25V	2	
C9880,8	ECJ1XB1H102K	C 1000UF, Z, 50V	2	
C9882	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C9883	ECJ1VB1H822K	C 8200PF, K, 50V	1	
C9884	ECJ1VC1H100C	C 10PF, C, 50V	1	
C9885	ECJ1XB1H102K	C 1000UF, Z, 50V	1	
C9886	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C9887	ECJ1VB0J475K	C 4.7UF, K, 6.3V	1	
C9891	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C9896	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C9897	ECJ1VB1H822K	C 8200PF, K, 50V	1	
C9898	ECJ1VC1H100C	C 10PF, C, 50V	1	
C9899	ECJ1XB1H102K	C 1000UF, Z, 50V	1	
C9926	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C9967	ECJ1VB0J475K	C 4.7UF, K, 6.3V	1	
C9971	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
CA1-11	K1MN68BA0002	68P CONNECTOR	11	
CB1-11	K1MN68BA0002	68P CONNECTOR	11	
D3	K1KY40B00003	40P CONNECTOR	1	
D5	K1KB31BA0064	31P CONNECTOR	1	
D6	K1KA21A00011	21P CONNECTOR	1	
D20	K1KA20BA0296	20P CONNECTOR	1	
D25	K1KA20AA0009	20P CONNECTOR	1	
D31	K1MN80BA0076	80P CONNECTOR	1	
D32	K1MN55BA0076	55P CONNECTOR	1	
D33	K1MN68BA0076	68P CONNECTOR	1	
D34	K1MN80BA0076	80P CONNECTOR	1	
D1106,0	MA729	DIODE	2	
D1117	MA3036L	ZENER DIODE	1	
D1119	MA704A	DIODE	1	
D1121	MA729	DIODE	1	
D2011-14	MA111	DIODE	4	
D2119	B0BC01100001	ZENER DIODE	1	
D2300,0	MA111	DIODE	2	
D2303,0	MA111	DIODE	2	
D2308	MA152	DIODE	1	
D2309	MA111	DIODE	1	
D2510,1	MA8056-M	ZENER DIODE	2	
D2512	MA8043LTX	ZENER DIODE	1	
D2520	LNJ107W5PRW	LED	1	
D2524	MA8056-M	ZENER DIODE	1	
D3003	MA8140M	ZENER DIODE	1	
D3005,0	MA8140M	ZENER DIODE	2	
D3017	MA8140M	ZENER DIODE	1	
D3021-23	MA111	DIODE	3	
D3024	B0BC01100001	ZENER DIODE	1	
D3038-43	MA8140M	ZENER DIODE	6	
D3044	MA111	DIODE	1	
D3045-52	MA8140M	ZENER DIODE	8	
D3100	MA8140M	ZENER DIODE	1	
D3334-39	MA111	DIODE	6	
D3702	MA8140M	ZENER DIODE	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
D4019-38	EZJZ0V80008B	VARISTOR	20	
D4041	EZJZ0V80008B	VARISTOR	1	
D4044,4	EZJZ0V80008B	VARISTOR	2	
D4047,4	MA3056M	ZENER DIODE	2	
D4049-52	B0HCM0000014	DIODE	4	
D5606	B0BC01100001	ZENER DIODE	1	
D5607	B0BC6R600005	ZENER DIODE	1	
D5610	B0BC4R700007	ZENER DIODE	1	(PA)
D5610	MA3X78900L	ZENER DIODE	1	(H)
D5612	B0BC3R700006	ZENER DIODE	1	
D5618	B0BC03900015	ZENER DIODE	1	
D5634	MA111	DIODE	1	
D5635	MA3047H	ZENER DIODE	1	
D5637,3	MA152	DIODE	2	
D5639	MA3047H	ZENER DIODE	1	
D5640	MA3039H	ZENER DIODE	1	
D5641	MA152	DIODE	1	
D5642	MA3120M	ZENER DIODE	1	
D5643	MA152	DIODE	1	
D5644	MA3068M	ZENER DIODE	1	
D5646,4	MA152	DIODE	2	
D5649	MA111	DIODE	1	
D5801	B0JCME000037	DIODE	1	
D5804	MA3120M	ZENER DIODE	1	
D5805,0	MA152	DIODE	2	
D5807	MA111	DIODE	1	
D6001	B0HBSN000008	DIODE	1	
D6021,2	B0HBSN000008	DIODE	2	
D6032	MA111	DIODE	1	
D6041	B0ECHP000003	DIODE	1	
D6051	B0ECHP000003	DIODE	1	
D6061,6	B0HBSN000008	DIODE	2	
D6071,7	B0HBSN000008	DIODE	2	
D6081,8	B0HBSN000008	DIODE	2	
D6091	B0HBSN000008	DIODE	1	
D6092	B0ECHP000003	DIODE	1	
D6101-04	B0JCME000037	DIODE	4	
D6105	MA111	DIODE	1	
D6131,3	B0ECHP000003	DIODE	2	
D6151-54	B0ECHP000003	DIODE	4	
D6191-93	B0ECHP000003	DIODE	3	
D6211	B0JCME000037	DIODE	1	
D6212	B0ECHP000003	DIODE	1	
D6221	B0ECHP000003	DIODE	1	
D6222,2	MA111	DIODE	2	
D6251,5	MA8330M	ZENER DIODE	2	
D6253	LNJ301MPUJA	LED	1	
D6254	MA8051L	ZENER DIODE	1	
D6255	MA111	DIODE	1	
D6401	B0HBSN000008	DIODE	1	
D6404	B0HBSN000008	DIODE	1	
D6431,3	B0HBSN000019	DIODE	2	
D6441	B0ECHP000003	DIODE	1	
D6451	B0ECHP000003	DIODE	1	
D6461,6	B0HBSN000008	DIODE	2	
D6466	MA111	DIODE	1	
D6471	B0HBSN000008	DIODE	1	
D6472	B0ECHP000003	DIODE	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
D6477	MA111	DIODE	1	
D6478	B0HCKS000002	DIODE	1	
D6480	MA111	DIODE	1	
D6481,82	B0HBSN000008	DIODE	2	
D6491	B0HBSP000019	DIODE	1	
D6497	MA111	DIODE	1	
D6501,02	B0ECHP000003	DIODE	2	
D6521-24	B0ECHP000003	DIODE	4	
D6581,82	MA8330M	ZENER DIODE	2	
D6583	LNJ301MPUJA	LED	1	
D6584	MA8051L	ZENER DIODE	1	
D6585	MA111	DIODE	1	
D6601	MA8240M	ZENER DIODE	1	
D6602	B0ECHP000003	DIODE	1	
D6603	MA8240M	ZENER DIODE	1	
D6604	MA111	DIODE	1	
D6605	MA8051L	ZENER DIODE	1	
D6606	B0HCMM000014	DIODE	1	
D6607	MA111	DIODE	1	
D6610	MAZ81500ML	ZENER DIODE	1	
D6611-14	MA111	DIODE	4	
D6619,20	B0HCKS000002	DIODE	2	
D6621-24	B0HDMS000005	DIODE	4	
D6641,42	B0HCKS000002	DIODE	2	
D6643	MA111	DIODE	1	
D6644	B0HCKS000002	DIODE	1	
D6661	MA111	DIODE	1	
D6662-64	MA8330M	ZENER DIODE	3	
D6665	MA8051L	ZENER DIODE	1	
D6666,67	MA111	DIODE	2	
D6671	MA111	DIODE	1	
D6682	B0HCMM000014	DIODE	1	
D6683,84	MA111	DIODE	2	
D6686,87	MA111	DIODE	2	
D6701,02	MA8056H	ZENER DIODE	2	
D6721	B0HCKS000002	DIODE	1	
D6723,24	B0JCME000037	DIODE	2	
D6725	B0ECHP000003	DIODE	1	
D6726-33	MA8056H	ZENER DIODE	8	
D6734	MA111	DIODE	1	
D6752	B0JCME000037	DIODE	1	
D6758	B0ECHP000003	DIODE	1	
D6760,61	MA111	DIODE	2	
D6771	B0JCME000037	DIODE	1	
D6773	B0HCKS000002	DIODE	1	
D6791	MA8200M	ZENER DIODE	1	
D6802	B0BC01000044	ZENER DIODE	1	
D6803	B0HCKS000002	DIODE	1	
D6804	B0ECHP000003	DIODE	1	
D6805	MA111	DIODE	1	
D6806	B0ECHP000003	DIODE	1	
D6807-10	B0HCMM000014	DIODE	4	
D6820-23	MA111	DIODE	4	
D6825	MA8330M	ZENER DIODE	1	
D6826	MA111	DIODE	1	
D6841	B0HCKS000002	DIODE	1	
D6842,43	MA111	DIODE	2	
D6859	B0ECHP000003	DIODE	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
D6860	B0HCKS000002	DIODE	1	
D6861	MA8051L	ZENER DIODE	1	
D6862	MA111	DIODE	1	
D6871	MA8051L	ZENER DIODE	1	
D6872	MA111	DIODE	1	
D6901,02	MA8056H	ZENER DIODE	2	
D6903,04	B0ECHP000003	DIODE	2	
D6951,52	MA8056H	ZENER DIODE	2	
D6953,54	B0ECHP000003	DIODE	2	
D7752	B3AEB0000065	DIODE	1	
D9017-19	MA3033	ZENER DIODE	3	
D9020	MA728	DIODE	1	
D9035	MA728	DIODE	1	
D9100-03	B0JCGD000002	DIODE	4	
D9105,06	B0JCGD000002	DIODE	2	
D9110	B0JCGD000002	DIODE	1	
D9300,01	MA152K	DIODE	2	
D9400,01	MA152K	DIODE	2	
D9800	B0JCME000037	DIODE	1	
D9801	B0JCDD000002	DIODE	1	
D9802	MA728	DIODE	1	
D9804	MA152K	DIODE	1	
D9807,08	MA152K	DIODE	2	
D9812	B0JCME000037	DIODE	1	
D9813	B0JCDD000002	DIODE	1	
D9814	B0JCME000037	DIODE	1	
D9815	B0JCDD000002	DIODE	1	
DG1	K1KY80A00011	80P CONNECTOR	1	
DG2	K1KA15B00074	15P CONNECTOR	1	
DG3	K1KY40B00003	40P CONNECTOR	1	
DG5	K1KB21BA0063	21P CONNECTOR	1	
DG7	K1KA20B00155	20P CONNECTOR	1	
DG8,G9	K1FY119D0001	CONNECTOR	2	
DG15	K1KY40B00003	40P CONNECTOR	1	
DG20	K1MN40B00045	40P CONNECTOR	1	
DG35	K1KA07BA0047	7P CONNECTOR	1	
FL3301,02	J0HABB000003	LC FILTER	2	
FL3303-05	J0HABB000004	LC FILTER	3	
FL7201	J0HABH000013	LC FILTER	1	
FL7301	J0HABH000013	LC FILTER	1	
FL7501	J0HABH000013	LC FILTER	1	
FL9300	F1J1E1040022	C 0.10UF, Z, 25V	1	
FL9301	J0HABH000013	LC FILTER	1	
FL9302-04	F1J1E1040022	C 0.10UF, Z, 25V	3	
FL9305,06	J0HABH000013	LC FILTER	2	
FL9400,01	J0HABH000013	LC FILTER	2	
FL9402-04	F1J1E1040022	C 0.10UF, Z, 25V	3	
FL9501,02	J0HABH000013	LC FILTER	2	
FL9800,01	J0HABH000013	LC FILTER	2	
FL9803,04	J0HABH000012	LC FILTER	2	
FL9805-07	J0HABH000013	LC FILTER	3	
G1	K1KA12A00317	12P CONNECTOR	1	
G3	K1KA03BA0047	3P CONNECTOR	1	
G51	K1KA30AA0009	30P CONNECTOR	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
GK3	K1KA03BA0061	3P CONNECTOR	1	
GS12	K1MN40A00025	40P CONNECTOR	1	
GS52	K1KA20AA0009	20P CONNECTOR	1	
H1	K1KY80A00011	80P CONNECTOR	1	
H2	K1KA15A00148	15P CONNECTOR	1	
H5,H6	K1KA15AA0288	15P CONNECTOR	2	
H15	K1KA04AA0150	4P CONNECTOR	1	
H40	K1KA20AA0009	20P CONNECTOR	1	
H51	K1KA30AA0009	30P CONNECTOR	1	
H52	K1KA20AA0009	20P CONNECTOR	1	
HC01	K1KA21A00011	21P CONNECTOR	1	
HC12	K1KA09AA0190	9P CONNECTOR	1	
HC15	K1KY40B00003	40P CONNECTOR	1	
HC21	K1KA08AA0193	8P CONNECTOR	1	
HC22	K1KA11AA0194	11P CONNECTOR	1	
IC1100	C3ABPG000155	IC	1	
IC1101	TVRN774	IC	1	
IC1102	TVRN769	IC	1	TH-50PV600M/MT
IC1102	TVRN939	IC	1	TH-50PV600AZ
IC1102	TVRN766	IC	1	TH-50PV600H
IC1103	MN103SB20RGL	IC	1	
IC1110	C0CBCAD00016	IC	1	
IC1111	C0EBY0000041	IC	1	
IC2103	AN77L08M	IC	1	
IC2104	COABBA000168	IC	1	
IC2105	AN15862A-VT	IC	1	
IC2106	C1AB00002469	IC	1	
IC2109	C1BB00000947	IC	1	
IC2110	AN7705SP	IC	1	
IC2300, 01	COABBA000168	IC	2	
IC2302	C1AB00002451	IC	1	
IC2303	C1AB00002452	IC	1	
IC2304-07	COABBA000168	IC	4	
IC2511	B3L000000020	IC	1	
IC3005	AN15867A-VT	IC	1	
IC3301	C0JBAZ002205	IC	1	
IC4013	C0CBCBF00009	IC	1	
IC4014	C0CBCAC00282	IC	1	
IC4016	C0CBCAC00275	IC	1	
IC4017	C0CBCAC00282	IC	1	
IC4018	C0CBCAC00275	IC	1	
IC4019	C1AB00002456	IC	1	
IC4020	C1AB00002202	IC	1	
IC4022	TVRN916	IC	1	
IC4023	TVRN917	IC	1	
IC4025	C0FBBK000038	IC	1	
IC4026	C1AB00002535	IC	1	
IC4027	C0DBFFD00003	IC	1	
IC4028	COABBB000230	IC	1	
IC4029	C0CBCAC00282	IC	1	
IC4030	C0CBCBC00190	IC	1	
IC4032	C0DBGYY00052	IC	1	
IC4035	C0CBCAF00031	IC	1	
IC4036	C0JBAP000020	IC	1	
IC4037	MN84522-A	IC	1	
IC4038	C3ABQJ000051	IC	1	
IC4040	C0CBCAC00282	IC	1	
IC5601	NOBG2DE00001	IC	1	
IC5602	EHMDD9851	LINEAR IC	1	
IC5603	C0DBAJB00004	IC	1	
IC5604	C0DBZGC00067	IC	1	
IC5801	C0DBAZF00003	IC	1	
IC6131	C0ZBZ0000895	IC	1	
IC6151	C0ZBZ0001324	IC	1	
IC6191	C0ZBZ0000895	IC	1	
IC6211	C0ZBZ0001325	IC	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
IC6221	AN1431M	LINEAR IC	1	
IC6241	C0JBAZ000005	IC	1	
IC6251	NJM2903M	INTEGRATED CIRCUIT	1	
IC6471	C0DBEKA00003	IC	1	
IC6472	C0JBAA000377	IC	1	
IC6501	C0ZBZ0000895	IC	1	
IC6521	C0ZBZ0001324	IC	1	
IC6561, 62	C0JBAZ000005	IC	2	
IC6581	NJM2903M	INTEGRATED CIRCUIT	1	
IC6601	C0ZBZ0001325	IC	1	
IC6602	C0JBAB000715	IC	1	
IC6610	NJM2903M	INTEGRATED CIRCUIT	1	
IC6671	C0ZBZ0001325	IC	1	
IC6681	C0ZBZ0001325	IC	1	
IC6682	C0JBAA000377	IC	1	
IC6721, 22	C0JBAZ000994	IC	2	
IC6724, 25	C0CBADC00089	IC	2	
IC6751	C0CBADC00089	IC	1	
IC6752	C0ZBZ0001325	IC	1	
IC6753	C0JBAB000715	IC	1	
IC6771	C0CBADC00089	IC	1	
IC6772	C0ZBZ0001325	IC	1	
IC6773, 74	C0JBAA000377	IC	2	
IC6791	N0BF1FB00001	IC	1	
IC6801, 02	C0DBEMB00005	IC	2	
IC6803	C0DAAMH00005	IC	1	
IC6821	C0DBEMB00005	IC	1	
IC6841	C0DBEMB00005	IC	1	
IC6861	NJM2903M	INTEGRATED CIRCUIT	1	
IC6871	NJM2903M	INTEGRATED CIRCUIT	1	
IC6901-06	AN16071A-VT	IC	6	
IC6951-56	AN16071A-VT	IC	6	
IC7101	C0JBAZ001120	IC	1	
IC7201-09	C0JBAZ001120	IC	9	
IC7301-05	C0JBAZ001120	IC	5	
IC7401-05	C0JBAZ001120	IC	5	
IC7501-09	C0JBAZ001120	IC	9	
IC7601	C0JBAZ001120	IC	1	
IC7751	C0JBAZ000851	IC	1	
IC9001	TVRN811	IC	1	
IC9002	C0ZBZ0001330	IC	1	
IC9003	TVRN805-1	IC	1	
IC9007	TVRN814	IC	1	
IC9011	C0EBF0000431	IC	1	
IC9200	C1ZBZ0003186	IC	1	
IC9300	MN84521-A	IC	1	
IC9301	C3ABQJ000051	IC	1	
IC9304	TVRN825	IC	1	
IC9400	MN84521-A	IC	1	
IC9401	C3ABQJ000051	IC	1	
IC9402	C0JBAZ002614	IC	1	
IC9500	C1ZBZ0002599	IC	1	
IC9503-05	C0JBAZ001120	IC	3	
IC9602	PST9128NR	IC (LOGIC)	1	
IC9800	C0DBAYY00054	IC	1	
IC9801	C0DBZFG00066	IC	1	
IC9802, 03	C0JBAZ001120	IC	2	
IC9806	C0DBAHD00011	IC	1	
IC9807	C0DBAYY00054	IC	1	
IC9809	C0DBAYY00054	IC	1	
JK2003	K2HA204A0038	JACK	1	
JK3001	K1FB315A0005	JACK	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
JK3100	TJB0A639	TERMINAL	1	
JK3701C	K4AK22B00002	TERMINAL BOARD	1	
JK7701	K1NA09E00080	9P CONNECTOR	1	
JS001	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS012	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS027	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS031	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS1100-02	ERJ2GE0R00	M 0.0 OHM, J,0.063W	3	
JS1109	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	
JS1117	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	
JS2021, 22	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
JS2026	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS2031-33	ERJ3GEY0R00	M 0 OHM, 1/16W	3	
JS2108, 09	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
JS2123, 24	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
JS2300-03	ERJ6GEY0R00	M 0 OHM, 1/10W	4	
JS2318, 19	ERJ6GEY0R00	M 0 OHM, 1/10W	2	
JS2331	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
JS3010-15	ERJ6GEY0R00	M 0 OHM, 1/10W	6	
JS3023	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS3029	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS3033-35	ERJ3GEY0R00	M 0 OHM, 1/16W	3	
JS3202	J0JCC0000241	CHIP INDUCTOR	1	
JS3205	J0JCC0000241	CHIP INDUCTOR	1	
JS3206	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS3215	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
JS3220, 21	ERJ6GEY0R00	M 0 OHM, 1/10W	2	
JS3230	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS3237-39	ERJ3GEY0R00	M 0 OHM, 1/16W	3	
JS3244, 45	J0JCC0000241	CHIP INDUCTOR	2	
JS3246	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
JS3252	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
JS3255	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
JS3256	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS3265, 66	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
JS3302-04	ERJ3GEY0R00	M 0 OHM, 1/16W	3	
JS3307-12	ERJ3GEY0R00	M 0 OHM, 1/16W	6	
JS3352	J0JCC0000241	CHIP INDUCTOR	1	
JS3354-59	J0JCC0000241	CHIP INDUCTOR	6	
JS3362, 63	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
JS3368	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS3402, 03	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
JS3404, 05	ERJ6GEY0R00	M 0 OHM, 1/10W	2	
JS3704, 05	ERJ6GEY0R00	M 0 OHM, 1/10W	2	
JS3707, 08	ERJ6GEY0R00	M 0 OHM, 1/10W	2	
JS3711-14	ERJ6GEY0R00	M 0 OHM, 1/10W	4	
JS3716	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS4013-17	ERJ2GE0R00	M 0.0 OHM, J,0.063W	5	
JS4020-24	ERJ2GE0R00	M 0.0 OHM, J,0.063W	5	
JS4025, 26	ERJ2GEJ101	M 100 OHM, J,0.063W	2	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
JS4027, 28	ERJ2GE0R00	M 0.0 OHM, J,0.063W	2	
JS4029	ERJ2GEJ221	M 220 OHM, J,0.063W	1	
JS4033-40	ERJ2GE0R00	M 0.0 OHM, J,0.063W	8	
JS4046	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	
JS4069	ERJ2GEJ221	M 220 OHM, J,0.063W	1	
JS4093, 94	ERJ2GE0R00	M 0.0 OHM, J,0.063W	2	TH-50PV600AZ
JS4103, 04	ERJ2GE0R00	M 0.0 OHM, J,0.063W	2	
JS4111-13	ERJ3GEY0R00	M 0 OHM, 1/16W	3	
JS4124	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	TH-50PV600H
JS4127	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	TH-50PV600M/MT
JS5603	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS7702	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS7711	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS7721-23	ERJ6GEY0R00	M 0 OHM, 1/10W	3	
K1	K1KY12B00001	12P CONNECTOR	1	
L001	J0JGC0000021	CHIP INDUCTOR COIL	1	
L007	J0JCC0000241	CHIP INDUCTOR	1	
L010,11	J0JCC0000241	CHIP INDUCTOR	2	
L013	J0JCC0000241	CHIP INDUCTOR	1	
L015	J0JGC0000021	CHIP INDUCTOR COIL	1	
L021	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
L024	TSK1032	BEAD CHOKE	1	
L025,26	J0JCC0000241	CHIP INDUCTOR	2	
L028	J0JGC0000021	CHIP INDUCTOR COIL	1	
L031,32	J0JGC0000021	CHIP INDUCTOR COIL	2	
L1101-04	J0JHC0000078	CHIP INDUCTOR	4	
L1109	J0JHC0000078	CHIP INDUCTOR	1	
L2001,02	J0JCC0000364	CHIP INDUCTOR	2	
L2003,04	TSK1032	BEAD CHOKE	2	
L2007,08	TSK1032	BEAD CHOKE	2	
L2011,12	TSK1032	BEAD CHOKE	2	
L2015,16	TSK1032	BEAD CHOKE	2	
L2107	TSK1032	BEAD CHOKE	1	
L2108	J0JCC0000241	CHIP INDUCTOR	1	
L2109,10	TSK1032	BEAD CHOKE	2	
L2111,12	J0JCC0000241	CHIP INDUCTOR	2	
L2115	J0JCC0000241	CHIP INDUCTOR	1	
L2117	ELESE6R8KA	PEAKING COIL	1	
L2118	EXCELDR35C	BEAD CHOKE	1	
L2123	J0JCC0000241	CHIP INDUCTOR	1	
L2178,79	J0JCC0000241	CHIP INDUCTOR	2	
L2182-87	J0JCC0000241	CHIP INDUCTOR	6	
L2204	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
L2205,06	J0JCC0000241	CHIP INDUCTOR	2	
L2300-07	G0C330MA0049	PEAKING COIL	8	
L2308	TALL08N3R9MA	INDUCTION COIL	1	
L3000	G0C101K00023	PEAKING COIL	1	
L3001-03	TSK1032	BEAD CHOKE	3	
L3009,10	TSK1032	BEAD CHOKE	2	
L3013	TSK1032	BEAD CHOKE	1	
L3026	TSK1032	BEAD CHOKE	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
L3212	TSK1032	BEAD CHOKE	1	
L3216	J0JGC0000021	CHIP INDUCTOR COIL	1	
L3219	J0JGC0000021	CHIP INDUCTOR COIL	1	
L3700,01	J0JCC00000364	CHIP INDUCTOR	2	
L3707,08	TSK1032	BEAD CHOKE	2	
L4021	J0JHC0000078	CHIP INDUCTOR	1	
L4023	J0JHC0000078	CHIP INDUCTOR	1	
L4027	J0JBC0000080	CHIP INDUCTOR	1	
L4028,29	J0JHC0000078	CHIP INDUCTOR	2	
L4031,32	J0JHC0000078	CHIP INDUCTOR	2	
L4033	TALC168T100K	CHIP INDUCTOR COIL	1	
L4034	J0JCC0000077	CHIP INDUCTOR	1	
L4037	J0JCC0000077	CHIP INDUCTOR	1	
L4038	J0JHC0000078	CHIP INDUCTOR	1	
L4040-46	J0JHC0000078	CHIP INDUCTOR	7	
L4048	J0JHC0000078	CHIP INDUCTOR	1	
L4049	J0JBC0000080	CHIP INDUCTOR	1	
L4050,51	J0JHC0000078	CHIP INDUCTOR	2	
L4052	J0JCC0000077	CHIP INDUCTOR	1	
L4053-55	J0JHC0000078	CHIP INDUCTOR	3	
L4056,57	J0JCC0000077	CHIP INDUCTOR	2	
L4060,61	J0JCC0000077	CHIP INDUCTOR	2	
L4065,66	J0JHC0000078	CHIP INDUCTOR	2	
L4068-70	J0JHC0000078	CHIP INDUCTOR	3	
L4071	J0JBC0000080	CHIP INDUCTOR	1	
L4073	J0JHC0000078	CHIP INDUCTOR	1	
L4075,76	J0JHC0000078	CHIP INDUCTOR	2	
L4077	J0JCC0000077	CHIP INDUCTOR	1	
L4078	J0JHC0000078	CHIP INDUCTOR	1	
L5602	TALL08N2R7MA	INDUCTION COIL	1	
L5604	TALL08N2R7MA	INDUCTION COIL	1	
L5605	G0A2R7ZA0021	CHOKE COIL	1	
L5606,07	G0A220GA0002	CHOKE COIL	2	
L5608	G1C100MA0072	INDUCTION COIL	1	
L5609	G0A220GA0002	CHOKE COIL	1	
L5610	G1C470MA0077	INDUCTION COIL	1	
L5612	TALL08N2R7MA	INDUCTION COIL	1	
L5615	TALL08N150KA	INDUCTION COIL	1	
L5621	G1C330MA0234	INDUCTION COIL	1	
L5622,23	G1C150MA0234	INDUCTION COIL	2	
L5624	G1C330MA0234	INDUCTION COIL	1	
L5651	G0A220GA0002	CHOKE COIL	1	
L5801	G0C101K00023	PEAKING COIL	1	
L5802	TALL08N101KA	INDUCTION COIL	1	
L6002-04	G0CR82KA0147	CHOKE COIL	3	
L6011-14	G0A1R4MA0003	CHOKE COIL	4	
L6061-68	G0ZZ00002183	PEAKING COIL	8	
L6081-88	G0ZZ00002183	PEAKING COIL	8	
L6101,02	J0JJC0000011	CHIP INDUCTOR	2	
L6103	G0ZZ00002183	PEAKING COIL	1	
L6104,05	J0JJC0000011	CHIP INDUCTOR	2	
L6211,12	J0JJC0000011	CHIP INDUCTOR	2	
L6221	G0ZZ00002183	PEAKING COIL	1	
L6241	G0ZZ00002183	PEAKING COIL	1	
L6262	G0ZZ00002183	PEAKING COIL	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
L6271,72	G0ZZ00002183	PEAKING COIL	2	
L6398,99	J0JJC0000011	CHIP INDUCTOR	2	
L6401,02	G0CR82KA0147	CHOKE COIL	2	
L6404	G0CR82KA0147	CHOKE COIL	1	
L6411-14	G0A1R4MA0003	CHOKE COIL	4	
L6461-68	G0ZZ00002183	PEAKING COIL	8	
L6472,73	G0ZZ00002183	PEAKING COIL	2	
L6481-88	G0ZZ00002183	PEAKING COIL	8	
L6591,92	G0ZZ00002183	PEAKING COIL	2	
L6601,02	G0ZZ00002183	PEAKING COIL	2	
L6801,02	J0JJC0000011	CHIP INDUCTOR	2	
L6841	J0JJC0000011	CHIP INDUCTOR	1	
L9501,02	J0JHC0000078	CHIP INDUCTOR	2	
L9503	G1C150KA0038	INDUCTION COIL	1	
L9800	G1C3R0MA0248	INDUCTION COIL	1	
L9801,02	G1C2R2MA0241	INDUCTION COIL	2	
L9810	J0JHC0000045	CHIP INDUCTOR	1	
PA1	K1KA04AA0192	4P CONNECTOR	1	
PA2	K1KA05AA0192	5P CONNECTOR	1	
PA5	K1KA11AA0194	11P CONNECTOR	1	
PA10	K1KA06A00452	6P CONNECTOR	1	
PA20	K1MN40A00024	40P CONNECTOR	1	
PA31-34	K1KA03AA0192	3P CONNECTOR	4	
PA40	K1KA20AA0009	20P CONNECTOR	1	
PA1101	K5H8012A0023	FUSE	1	
PA2055	K5H1622A0023	FUSE	1	
PA3100	K5H1622A0023	FUSE	1	
PA3104	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
PA7751	K5H1622A0023	FUSE	1	
PA9800	K5H4022A0023	FUSE	1	
PC6480	B3PBA0000223	IC	1	
PC6701-03	B3PBA0000233	IC	3	
PC6704	B3PBA0000234	IC	1	
PC6705	B3PBA0000233	IC	1	
PC6760	B3PBA0000223	IC	1	
PC6801	B3PBA0000223	IC	1	
PC6861	B3PBA0000223	IC	1	
PC6871	B3PBA0000223	IC	1	
Q002	2SA207700L	TRANSISTOR	1	
Q1100-03	2SC584500L	TRANSISTOR	4	
Q1108	2SC584500L	TRANSISTOR	1	
Q1109,10	B1CBHD000002	FET	2	
Q1111	2SC584500L	TRANSISTOR	1	
Q1113-16	2SC584500L	TRANSISTOR	4	
Q1130	2SC584500L	TRANSISTOR	1	
Q1131	B1ABDF000034	TRANSISTOR	1	
Q1134	2SC584500L	TRANSISTOR	1	
Q1135	B1ABDF000034	TRANSISTOR	1	
Q1137	2SC584500L	TRANSISTOR	1	
Q1139-43	2SC584500L	TRANSISTOR	5	
Q2001,02	2SC584500L	TRANSISTOR	2	
Q2011	2SA207700L	TRANSISTOR	1	
Q2012	2SC584500L	TRANSISTOR	1	
Q2013	2SA207700L	TRANSISTOR	1	
Q2102-05	2SA207700L	TRANSISTOR	4	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
Q2106	2SC584500L	TRANSISTOR	1	
Q2108	2SC584500L	TRANSISTOR	1	
Q2113,14	2SC584500L	TRANSISTOR	2	
Q2300	2SA207700L	TRANSISTOR	1	(PA)
Q2300	2SC584500L	TRANSISTOR	1	(H)
Q2301	2SD601A	TRANSISTOR	1	
Q2302	2SC584500L	TRANSISTOR	1	
Q2305	2SD601A	TRANSISTOR	1	
Q2306-09	2SA207700L	TRANSISTOR	4	
Q2314-17	2SC584500L	TRANSISTOR	4	
Q2510,11	2SD601A	TRANSISTOR	2	
Q2513	2SD601A	TRANSISTOR	1	
Q3002	2SA207700L	TRANSISTOR	1	
Q3008	2SA207700L	TRANSISTOR	1	
Q3011	2SA207700L	TRANSISTOR	1	
Q3014,15	2SA207700L	TRANSISTOR	2	
Q3017	2SA207700L	TRANSISTOR	1	
Q3023	2SC584500L	TRANSISTOR	1	
Q3204-07	2SC584500L	TRANSISTOR	4	
Q3210	2SA207700L	TRANSISTOR	1	
Q3331-33	2SC2480	TRANSISTOR	3	
Q4043,44	2SA207700L	TRANSISTOR	2	
Q4046	2SA207700L	TRANSISTOR	1	
Q4050	2SC584500L	TRANSISTOR	1	
Q4051,52	2SD1030	TRANSISTOR	2	
Q4053	2SC584500L	TRANSISTOR	1	
Q4054	2SD1030	TRANSISTOR	1	
Q4055-59	2SA207700L	TRANSISTOR	5	
Q4061-69	2SC584500L	TRANSISTOR	9	
Q4070,71	B1MBACA00008	TRANSISTOR	2	
Q4082,83	2SK1228	FET	2	
Q4084	B1ABDF000034	TRANSISTOR	1	
Q4918	B1ABDF000034	TRANSISTOR	1	
Q4919	2SC584500L	TRANSISTOR	1	
Q5601	B1DHDC000028	TRANSISTOR	1	
Q5602	2SD601A	TRANSISTOR	1	
Q5603	B1DHDC000028	TRANSISTOR	1	
Q5604,05	2SD601A	TRANSISTOR	2	
Q5610	2SD601A	TRANSISTOR	1	
Q5613	2SD601A	TRANSISTOR	1	
Q5614	2SK3065T100	FET	1	
Q5641-43	2SA207700L	TRANSISTOR	3	
Q5644	2SD601A	TRANSISTOR	1	
Q6001-03	B1JADN000001	TRANSISTOR	3	
Q6021-23	B1JADN000001	TRANSISTOR	3	
Q6041-43	B1JADN000002	TRANSISTOR	3	
Q6052,53	B1JADN000002	TRANSISTOR	2	
Q6101,02	B1DFKM000002	TRANSISTOR	2	
Q6103	B1ABNF000006	TRANSISTOR	1	
Q6104	B1ADNF000006	TRANSISTOR	1	
Q6105,06	B1DFKM000002	TRANSISTOR	2	
Q6111	2SK326800L	FET	1	
Q6112	B1DFKM000002	TRANSISTOR	1	
Q6114	B1DFKM000002	TRANSISTOR	1	
Q6141	B1ABNF000006	TRANSISTOR	1	
Q6142	B1ADNF000006	TRANSISTOR	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
Q6146	B1ABNF000006	TRANSISTOR	1	
Q6147	B1ADNF000006	TRANSISTOR	1	
Q6171	2SD2185	TRANSISTOR	1	
Q6172	B1ADRD000001	TRANSISTOR	1	
Q6181	2SD2185	TRANSISTOR	1	
Q6182	B1ADRD000001	TRANSISTOR	1	
Q6221	2SD1263A	TRANSISTOR	1	
Q6222	2SC3063	TRANSISTOR	1	
Q6251	2SD601A	TRANSISTOR	1	
Q6401-03	B1JADN000001	TRANSISTOR	3	
Q6421-23	B1JAEP000001	TRANSISTOR	3	
Q6441-43	B1JADN000002	TRANSISTOR	3	
Q6452,53	B1JADP000002	TRANSISTOR	2	
Q6471	B1CHGD000006	TRANSISTOR	1	
Q6511	B1ABNF000006	TRANSISTOR	1	
Q6512	B1ADNF000006	TRANSISTOR	1	
Q6516	B1ABNF000006	TRANSISTOR	1	
Q6517	B1ADNF000006	TRANSISTOR	1	
Q6531	2SD2185	TRANSISTOR	1	
Q6532	B1ADRD000001	TRANSISTOR	1	
Q6551	2SD2185	TRANSISTOR	1	
Q6552	B1ADRD000001	TRANSISTOR	1	
Q6581	2SD601A	TRANSISTOR	1	
Q6601	B1DEDS000001	TRANSISTOR	1	
Q6602	2SD601A	TRANSISTOR	1	
Q6621,22	B1DFKM000001	TRANSISTOR	2	
Q6641-45	B1DFKM000001	TRANSISTOR	5	
Q6647,48	B1DFKM000001	TRANSISTOR	2	
Q6661	B1DEET000002	TRANSISTOR	1	
Q6662	2SD601A	TRANSISTOR	1	
Q6663	2SD2185	TRANSISTOR	1	
Q6671-73	B1DEDS000001	TRANSISTOR	3	
Q6680	B1ADNF000006	TRANSISTOR	1	
Q6681,82	2SK389500L	FET	2	
Q6691	2SK620	FET	1	
Q6742,43	2SD601A	TRANSISTOR	2	
Q6744	2SK620	FET	1	
Q6762	B1ADNF000006	TRANSISTOR	1	
Q6781	B1ABNF000006	TRANSISTOR	1	
Q6782	B1ADNF000006	TRANSISTOR	1	
Q6791	2SD601A	TRANSISTOR	1	
Q6803	2SD814A	TRANSISTOR	1	
Q6821	2SD1263A	TRANSISTOR	1	
Q6822	2SC3063	TRANSISTOR	1	
Q6824	2SD601A	TRANSISTOR	1	
Q6841	2SD1263A	TRANSISTOR	1	
Q6842	2SC1473A	TRANSISTOR	1	
Q7751,52	2SD601A	TRANSISTOR	2	
Q7753	2SC584500L	TRANSISTOR	1	
Q7754	2SD601A	TRANSISTOR	1	
Q9044	2SD601A	TRANSISTOR	1	
Q9046	2SD601A	TRANSISTOR	1	
Q9049	2SB709A	TRANSISTOR	1	
Q9050-54	2SD601A	TRANSISTOR	5	
Q9057,58	B1CBHD000002	FET	2	
Q9100	2SD601A	TRANSISTOR	1	
Q9200,01	B1CBHD000002	FET	2	
Q9301,02	2SD601A	TRANSISTOR	2	
Q9400-02	2SD601A	TRANSISTOR	3	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
Q9800,01	B1MBEDA00015	TRANSISTOR	2	
Q9803	B1MBEDA00015	TRANSISTOR	1	
Q9805,06	2SD601A	TRANSISTOR	2	
R001	ERJ3GEYJ102	M 1KOHM, J, 1/16W	1	
R005	ERJ3GEYJ561	M 560 OHM, J, 1/16W	1	
R008	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R009	ERJ3GEYJ221	M 220 OHM, J, 1/16W	1	
R011	ERJ6GEYJ271	M 270 OHM, J, 1/10W	1	
R012,13	ERJ3GEYJ102	M 1KOHM, J, 1/16W	2	
R014	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R016	ERJ6GEYJ271	M 270 OHM, J, 1/10W	1	
R017-20	ERJ3GEYJ220	M 22 OHM, J, 1/16W	4	
R021	ERJ3GEYJ102	M 1KOHM, J, 1/16W	1	
R022	ERJ3GEYJ221	M 220 OHM, J, 1/16W	1	
R023,24	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R027	ERJ3GEYJ221	M 220 OHM, J, 1/16W	1	
R028	ERJ3EKF1503	M 150KOHM, 1/16W	1	
R029	ERJ3EKF2703	M 270KOHM, 1/16W	1	
R1101	ERJ2GEJ101	M 100 OHM, J, 0.063W	1	
R1102,03	ERJ2GEJ102	M 1KOHM, J, 0.063W	2	
R1105,06	ERJ2GEJ102	M 1KOHM, J, 0.063W	2	
R1108-12	ERJ2GEJ101	M 100 OHM, J, 0.063W	5	
R1113	ERJ2GEJ332	M 3.3KOHM, J, 0.063W	1	
R1114	ERJ2GE0R00	M 0.0 OHM, J, 0.063W	1	
R1116	ERJ2GEJ562	M 5.6KOHM, J, 0.063W	1	
R1117	ERJ2GE0R00	M 0.0 OHM, J, 0.063W	1	
R1118,19	EXB2HV680J	RESISTOR ARRAY	2	
R1121,22	ERJ2GEJ220	M 22 OHM, J, 0.063W	2	
R1123	ERJ2GEJ473	M 47KOHM, J, 0.063W	1	
R1124,25	ERJ2GEJ332	M 3.3KOHM, J, 0.063W	2	
R1128	ERJ2GEJ103	M 10KOHM, J, 0.063W	1	
R1130	ERJ2GEJ473	M 47KOHM, J, 0.063W	1	
R1131,32	ERJ2GEJ101	M 100 OHM, J, 0.063W	2	
R1133,34	ERJ2GEJ102	M 1KOHM, J, 0.063W	2	
R1135	ERJ2GEJ103	M 10KOHM, J, 0.063W	1	
R1140,41	ERJ2GEJ680	M 68 OHM, J, 0.063W	2	
R1146	ERJ2GEJ271	M 270 OHM, J, 0.063W	1	
R1147,48	D1HG5608A002	NETWORK RESISTER	2	
R1149	EXB2HV680J	RESISTOR ARRAY	1	
R1151	ERJ2GEJ101	M 100 OHM, J, 0.063W	1	
R1152	ERJ2GEJ102	M 1KOHM, J, 0.063W	1	
R1153	ERJ2GEJ101	M 100 OHM, J, 0.063W	1	
R1154,55	ERJ2GEJ472	M 4.7KOHM, J, 0.063W	2	
R1156	ERJ2GEJ104	M 100KOHM, J, 0.063W	1	
R1157	ERJ2GEJ101	M 100 OHM, J, 0.063W	1	
R1158	ERJ2GEJ273	M 27KOHM, J, 0.063W	1	
R1159	ERJ2GEJ123X	M 12KOHM, J, 0.063W	1	
R1160	ERJ2GEJ473	M 47KOHM, J, 0.063W	1	
R1162	ERJ2GEJ473	M 47KOHM, J, 0.063W	1	
R1164	ERJ2GEJ123X	M 12KOHM, J, 0.063W	1	
R1165	ERJ2GEJ153	M 15KOHM, J, 0.063W	1	
R1168,69	ERJ2GE0R00	M 0.0 OHM, J, 0.063W	2	
R1174	ERJ2GEJ101	M 100 OHM, J, 0.063W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R1175	ERJ2GEJ563	M 56KOHM, J, 0.063W	1	
R1176	ERJ2GEJ123X	M 12KOHM, J, 0.063W	1	
R1177-79	ERJ2GEJ101	M 100 OHM, J, 0.063W	3	
R1181	ERJ2GEJ101	M 100 OHM, J, 0.063W	1	
R1182	ERJ2GEJ683	M 68KOHM, J, 0.063W	1	
R1183	EXB28V680JX	RESISTOR ARRAY	1	
R1184	ERJ2GE0R00	M 0.0 OHM, J, 0.063W	1	
R1187	EXB2HV680J	RESISTOR ARRAY	1	
R1188,89	ERJ2GEJ103	M 10KOHM, J, 0.063W	2	
R1193,94	ERJ2GEJ101	M 100 OHM, J, 0.063W	2	
R1199	ERJ2GEJ473	M 47KOHM, J, 0.063W	1	
R1200	EXB2HV680J	RESISTOR ARRAY	1	
R1203	ERJ2GEJ102	M 1KOHM, J, 0.063W	1	
R1207	ERJ2GEJ104	M 100KOHM, J, 0.063W	1	
R1212,13	ERJ2GE0R00	M 0.0 OHM, J, 0.063W	2	
R1214	ERJ2GEJ103	M 10KOHM, J, 0.063W	1	
R1215-17	ERJ2GEJ101	M 100 OHM, J, 0.063W	3	
R1218	ERJ2GEJ680	M 68 OHM, J, 0.063W	1	
R1220	ERJ2GEJ680	M 68 OHM, J, 0.063W	1	
R1221	ERJ2GEJ332	M 3.3KOHM, J, 0.063W	1	
R1222	ERJ2GEJ330	M 33 OHM, J, 0.063W	1	
R1223	ERJ2GEJ102	M 1KOHM, J, 0.063W	1	
R1224	ERJ2GEJ473	M 47KOHM, J, 0.063W	1	
R1225,26	ERJ2GEJ220	M 22 OHM, J, 0.063W	2	
R1228	ERJ2GEJ220	M 22 OHM, J, 0.063W	1	
R1229	ERJ2GEJ182	M 1.8KOHM, J, 0.063W	1	
R1230	ERJ2GEJ220	M 22 OHM, J, 0.063W	1	
R1231	ERJ2GEJ473	M 47KOHM, J, 0.063W	1	
R1232,33	ERJ2GEJ332	M 3.3KOHM, J, 0.063W	2	
R1234	ERJ2GE0R00	M 0.0 OHM, J, 0.063W	1	
R1235,36	ERJ2GEJ272	M 2.7KOHM, J, 0.063W	2	
R1238	ERJ2GEJ473	M 47KOHM, J, 0.063W	1	
R1239	ERJ3EKF1202	M 12KOHM, 1/16W	1	
R1240	ERJ2GEJ473	M 47KOHM, J, 0.063W	1	
R1241	ERJ2GEJ822	M 8.2KOHM, J, 0.063W	1	
R1243	ERJ2GEJ102	M 1KOHM, J, 0.063W	1	
R1246	ERJ2GEJ912	M 9.1KOHM, J, 0.063W	1	
R1249	ERJ2GEJ473	M 47KOHM, J, 0.063W	1	
R1250	ERJ2GEJ224	M 220KOHM, J, 0.063W	1	
R1251,52	EXB2HV101J	RESISTOR ARRAY	2	
R1254	ERJ2GE0R00	M 0.0 OHM, J, 0.063W	1	
R1256	ERJ2GEJ102	M 1KOHM, J, 0.063W	1	
R1263,64	ERJ2GEJ101	M 100 OHM, J, 0.063W	2	
R1269	ERJ2GE0R00	M 0.0 OHM, J, 0.063W	1	
R1270,71	ERJ2GEJ220	M 22 OHM, J, 0.063W	2	
R1275	ERJ3EKF7151	M 7.15KOHM, 1/16W	1	
R1279,80	ERJ2GEJ220	M 22 OHM, J, 0.063W	2	
R1281	ERJ2GEJ102	M 1KOHM, J, 0.063W	1	
R1282	ERJ2GEJ153	M 15KOHM, J, 0.063W	1	
R1283	ERJ2GEJ101	M 100 OHM, J, 0.063W	1	
R1284	ERJ2GEJ682	M 6.8KOHM, J, 0.063W	1	
R1290	ERJ2GEJ472	M 4.7KOHM, J, 0.063W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R1299-02	ERJ2GE0R00	M 0.0 OHM, J,0.063W	4	
R1307	ERJ2GEJ104	M 100KOHM, J,0.063W	1	
R1308	ERJ2GEJ273	M 27KOHM, J,0.063W	1	
R1309-12	ERJ2GEJ220	M 22 OHM, J,0.063W	4	
R1313,14	ERJ2GEJ103	M 10KOHM, J,0.063W	2	
R1315	ERJ2GEJ333	M 33KOHM, J,0.063W	1	
R1316	ERJ2GEJ103	M 10KOHM, J,0.063W	1	
R1318,19	ERJ2GEJ512X	M5.12KOHM, J,0.063W	2	
R1321	ERJ2GEJ153	M 15KOHM, J,0.063W	1	
R1322	ERJ2GEJ100	M 10 OHM, J,0.063W	1	
R1323,24	ERJ2GEJ823	M 82KOHM, J,0.063W	2	
R1325,26	ERJ2GEJ104	M 100KOHM, J,0.063W	2	
R1327,28	ERJ2GEJ683	M 68KOHM, J,0.063W	2	
R1329,30	ERJ2GEJ473	M 47KOHM, J,0.063W	2	
R1331,32	ERJ2GEJ104	M 100KOHM, J,0.063W	2	
R1333	ERJ2GEJ101	M 100 OHM, J,0.063W	1	
R1340	ERJ2GEJ473	M 47KOHM, J,0.063W	1	
R1344	ERJ2GEJ101	M 100 OHM, J,0.063W	1	
R1348	ERJ2GEJ101	M 100 OHM, J,0.063W	1	
R1351	ERJ2GEJ101	M 100 OHM, J,0.063W	1	
R1352	ERJ2GEJ473	M 47KOHM, J,0.063W	1	
R1354	ERJ2GEJ101	M 100 OHM, J,0.063W	1	
R1363	ERJ2GEJ473	M 47KOHM, J,0.063W	1	
R1367	ERJ2GEJ333	M 33KOHM, J,0.063W	1	
R1368	ERJ2GEJ183	M 18KOHM, J,0.063W	1	
R1369	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	
R1372	ERJ2GEJ473	M 47KOHM, J,0.063W	1	
R1375	ERJ2GEJ104	M 100KOHM, J,0.063W	1	
R1376	ERJ2GEJ273	M 27KOHM, J,0.063W	1	
R1377	ERJ8GEY0R00	M 0 OHM, 1/8W	1	
R1379	ERJ2GEJ331	M 330 OHM, J,0.063W	1	
R1382,83	ERJ2GE0R00	M 0.0 OHM, J,0.063W	2	
R1384	ERJ2GEJ101	M 100 OHM, J,0.063W	1	
R1389	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	
R1408	ERJ2GEJ104	M 100KOHM, J,0.063W	1	
R1410	ERJ2GEJ102	M 1KOHM, J,0.063W	1	
R1411	ERJ2GEJ472	M 4.7KOHM, J,0.063W	1	
R1412,13	ERJ2GEJ104	M 100KOHM, J,0.063W	2	
R1414	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	
R1426-32	ERJ8GEY0R00	M 0 OHM, 1/8W	7	
R1436,37	ERJ2GEJ561	M 60 OHM, J,0.063W	2	
R1439	ERJ2GEJ271	M 270 OHM, J,0.063W	1	
R1441	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	
R1446,47	ERJ2GEJ471	M 470 OHM, J,0.063W	2	
R1449	ERJ2GEJ473	M 47KOHM, J,0.063W	1	
R1451,52	ERJ2GEJ473	M 47KOHM, J,0.063W	2	
R1454	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R1458,59	ERJ2GEJ101	M 100 OHM, J,0.063W	2	
R1461,62	ERJ2GE0R00	M 0.0 OHM, J,0.063W	2	
R1466	ERJ2GEJ103	M 10KOHM, J,0.063W	1	
R1467	ERJ2GEJ473	M 47KOHM, J,0.063W	1	
R1470	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	
R1472,73	ERJ2GEJ301	M 300 OHM, J,0.063W	2	
R1474	ERJ8GEY0R00	M 0 OHM, 1/8W	1	
R1475	ERJ2GEJ271	M 270 OHM, J,0.063W	1	
R1478	ERJ2GEJ680	M 68 OHM, J,0.063W	1	
R1479,80	ERJ2GEJ473	M 47KOHM, J,0.063W	2	
R1491	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	
R1526	ERJ2GEJ102	M 1KOHM, J,0.063W	1	
R1530,31	ERJ2GE0R00	M 0.0 OHM, J,0.063W	2	
R1554,55	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R1556	ERJ2GEJ331	M 330 OHM, J,0.063W	1	
R2005	ERJ3GEYJ104	M 100KOHM, J,1/16W	1	
R2006-11	ERJ6GEYJ223	M 22KOHM, J,1/10W	6	
R2012	ERJ3GEYJ104	M 100KOHM, J,1/16W	1	
R2013,14	ERJ3GEYJ222	M 2.2KOHM, J,1/16W	2	
R2015,16	ERJ3GEYJ331	M 330 OHM, J,1/16W	2	
R2042	ERJ3GEYJ105	M 1MOHM, J,1/16W	1	
R2043	ERJ3GEYJ473	M 47KOHM, J,1/16W	1	
R2044	ERJ3GEYJ102	M 1KOHM, J,1/16W	1	
R2045,46	ERJ3GEYJ103	M 10KOHM, J,1/16W	2	
R2048	ERJ6GEYJ471	M 470 OHM, J,1/10W	1	
R2049,50	ERJ3GEYJ103	M 10KOHM, J,1/16W	2	
R2051,52	ERJ6GEYJ184	M 180KOHM, J,1/10W	2	
R2053	ERJ6GEYJ471	M 470 OHM, J,1/10W	1	
R2054	ERJ3GEYJ103	M 10KOHM, J,1/16W	1	
R2113,14	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R2116	J0JCC0000241	CHIP INDUCTOR	1	
R2124,25	ERJ3GEYJ101	M 100 OHM, J,1/16W	2	
R2126,27	ERJ3GEYJ472	M 4.7KOHM, J,1/16W	2	
R2128,29	ERJ3GEYJ101	M 100 OHM, J,1/16W	2	
R2130	ERJ3EKF1002	M 10KOHM, 1/16W	1	
R2131	ERJ3EKF8201	M 8.2KOHM, 1/16W	1	
R2132	ERJ3GEYJ333	M 33KOHM, J,1/16W	1	
R2133	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R2137	ERJ3GEYJ333	M 33KOHM, J,1/16W	1	
R2138	ERJ3EKF1002	M 10KOHM, 1/16W	1	
R2139,40	ERJ3GEYJ221	M 220 OHM, J,1/16W	2	
R2147	ERJ3EKF1002	M 10KOHM, 1/16W	1	
R2148,49	ERJ3EKF6342	M6.34KOHM, 1/16W	2	
R2152	ERJ3GEYJ220	M 22 OHM, J,1/16W	1	
R2153	ERJ3GEYJ221	M 220 OHM, J,1/16W	1	
R2154	ERJ3GEYJ220	M 22 OHM, J,1/16W	1	
R2155-60	ERJ3GEYJ221	M 220 OHM, J,1/16W	6	
R2162	ERJ3GEYJ221	M 220 OHM, J,1/16W	1	
R2164	ERJ3GEYJ221	M 220 OHM, J,1/16W	1	
R2165,66	ERJ3GEYJ102	M 1KOHM, J,1/16W	2	
R2167	ERJ3GEYJ221	M 220 OHM, J,1/16W	1	
R2168,69	ERJ3GEYJ472	M 4.7KOHM, J,1/16W	2	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R2170-73	ERJ3GEYJ221	M 220 OHM,J,1/16W	4	
R2176,77	ERJ3GEYJ221	M 220 OHM,J,1/16W	2	
R2181	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R2182,83	ERJ3GEYJ101	M 100 OHM,J,1/16W	2	
R2184-87	ERJ3GEYJ221	M 220 OHM,J,1/16W	4	
R2188	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R2192,93	ERJ3GEYJ221	M 220 OHM,J,1/16W	2	
R2195,96	ERJ3GEYJ104	M 100KOHM,J,1/16W	2	
R2197	ERJ3GEYJ471	M 470 OHM,J,1/16W	1	
R2202	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R2203	ERJ6GEYJ101	M 100 OHM,J,1/10W	1	
R2204	ERJ6GEYJ561	M 560 OHM,J,1/10W	1	
R2208	ERJ6GEYJ471	M 470 OHM,J,1/10W	1	
R2209	ERJ3GEYJ332	M 3.3KOHM,J,1/16W	1	
R2210	ERJ6GEYJ122	M 1.2KOHM,J,1/10W	1	
R2211	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R2213	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R2214	ERJ3GEYJ332	M 3.3KOHM,J,1/16W	1	
R2215	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R2219	ERJ6GEYJ101	M 100 OHM,J,1/10W	1	
R2220	ERJ3GEYJ153	M 15KOHM,J,1/16W	1	
R2224,25	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R2227	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R2230,31	ERJ3GEYJ104	M 100KOHM,J,1/16W	2	
R2232,33	ERJ3GEYJ153	M 15KOHM,J,1/16W	2	
R2234-37	ERJ3GEYJ103	M 10KOHM,J,1/16W	4	
R2238,39	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R2300,01	ERJ6GEYJ102	M 1KOHM,J,1/10W	2	
R2302	ERJ3GEYJ223	M 22KOHM,J,1/16W	1	
R230302	ERJ3GEYJ433	M 43KOHM,J,1/16W	1	(PA)
R2303	ERJ3GEYJ562	M 5.6KOHM,J,1/16W	1	(H)
R2304	ERJ3GEYJ104	M 100KOHM,J,1/16W	1	
R2305	ERJ3GEYJ223	M 22KOHM,J,1/16W	1	(PA)
R2305	ERJ3GEYJ471	M 470 OHM,J,1/16W	1	(H)
R2306	ERJ3GEYJ223	M 22KOHM,J,1/16W	1	(PA)
R2306	ERJ6GEYJ821	M 820 OHM,J,1/10W	1	(H)
R2307	ERJ3GEYJ104	M 100KOHM,J,1/16W	1	
R2307	ERJ3GEYJ433	M 43KOHM,J,1/16W	1	
R2308,09	ERJ3GEYJ223	M 22KOHM,J,1/16W	2	
R2310	ERJ3GEY0R00	M 0 OHM, 1/16W	1	(PA)
R2310	ERJ3GEYJ184	M 180KOHM,J,1/16W	1	(H)
R2311	ERJ3GEY0R00	M 0 OHM, 1/16W	1	(PA)
R2311	ERJ6GEYJ182	M 1.8KOHM,J,1/10W	1	(H)
R2312	ERJ3EKF1002	M 10KOHM, 1/16W	1	
R2313,14	ERJ3GEYJ222	M 2.2KOHM,J,1/16W	2	
R2323,24	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R2325	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R2328	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R2329	ERJ3EKF1003	M 100KOHM, 1/16W	1	
R2332	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R2338	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R2341	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R2342,43	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R2346,47	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R2348	ERJ3EKF1003	M 100KOHM, 1/16W	1	
R2349,50	ERJ3GEYJ101	M 100 OHM,J,1/16W	2	
R2351	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R2352	ERJ3GEY0R00	M 0 OHM, 1/16W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R2353,02	ERJ3EKF1002	M 10KOHM, 1/16W	2	
R2354	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R2355,56	ERJ3GEYJ222	M 2.2KOHM,J,1/16W	2	
R2357,58	ERJ6GEY0R00	M 0 OHM, 1/10W	2	
R2359	ERJ3GEYJ222	M 2.2KOHM,J,1/16W	1	
R2360	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R2361	ERJ3GEYJ562	M 5.6KOHM,J,1/16W	1	
R2362	ERJ3GEYJ153	M 15KOHM,J,1/16W	1	
R2363	ERJ3GEYJ471	M 470 OHM,J,1/16W	1	
R2364	ERJ3GEYJ473	M 47KOHM,J,1/16W	1	
R2366	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	1	
R2367	ERJ6GEYJ681	M 680 OHM,J,1/10W	1	
R2368	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R2372-74	ERJ6GEYJ681	M 680 OHM,J,1/10W	3	
R2376	ERJ3EKF1002	M 10KOHM, 1/16W	1	
R2377,78	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R2379,80	ERJ6ENF2201	M 2.2KOHM, 1/10W	2	
R2383	ERJ3EKF3741	M3.74KOHM, 1/16W	1	
R2384	ERJ3EKF7150	M 715 OHM, 1/16W	1	
R2387	ERJ3EKF7150	M 715 OHM, 1/16W	1	
R2388	ERJ3EKF3741	M3.74KOHM, 1/16W	1	(PA)
R2388,89	ERJ6GEYJ102	M 1KOHM,J,1/10W	2	(H)
R2390	ERJ3GEYJ203	M 20KOHM,J,1/16W	1	
R2391	ERJ3EKF2801	M 2.8KOHM, 1/16W	1	(PA)
R2391	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	(H)
R2392	ERJ3EKF1651	M1.65KOHM, 1/16W	1	(PA)
R2392	ERJ3GEYJ223	M 22KOHM,J,1/16W	1	(H)
R2393	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R2395	ERJ3EKF2801	M 2.8KOHM, 1/16W	1	
R2396	ERJ3EKF1651	M1.65KOHM, 1/16W	1	(PA)
R2396	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	(H)
R2397	ERJ3GEYJ473	M 47KOHM,J,1/16W	1	(H)
R2397	ERJ6GEY0R00	M 0 OHM, 1/10W	1	(PA)
R2398	ERJ3GEYJ123	M 12KOHM,J,1/16W	1	(H)
R2398	ERJ6GEY0R00	M 0 OHM, 1/10W	1	(PA)
R2399	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R2400	ERJ6GEYJ182	M 1.8KOHM,J,1/10W	1	
R2401,02	ERJ3GEYJ331	M 330 OHM,J,1/16W	2	
R2403	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	1	
R2404,05	ERJ3GEYJ331	M 330 OHM,J,1/16W	2	
R2406	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	1	
R2407	ERJ3EKF1241	M1.24KOHM, 1/16W	1	
R2408	ERJ3EKF1071	M1.07KOHM, 1/16W	1	
R2409	ERJ3EKF1621	M1.62KOHM, 1/16W	1	
R2410	ERJ3EKF7870	M 787 OHM, 1/16W	1	
R2411,12	ERJ3GEYJ331	M 330 OHM,J,1/16W	2	
R2413	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	1	
R2414,15	ERJ3GEYJ331	M 330 OHM,J,1/16W	2	
R2416	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	1	
R2417	ERJ3EKF1241	M1.24KOHM, 1/16W	1	
R2418	ERJ3EKF1001	M 1KOHM, 1/16W	1	
R2419	ERJ3EKF1501	M 1.5KOHM, 1/16W	1	
R2420	ERJ3EKF7870	M 787 OHM, 1/16W	1	
R2421	ERJ3EKF1621	M1.62KOHM, 1/16W	1	
R2422	ERJ3EKF7870	M 787 OHM, 1/16W	1	
R2423	ERJ3EKF1501	M 1.5KOHM, 1/16W	1	
R2424	ERJ3EKF7870	M 787 OHM, 1/16W	1	
R2512	ERJ6GEYJ470	M 47 OHM,J,1/10W	1	
R2516	ERJ3GEYJ223	M 22KOHM,J,1/16W	1	
R2517	ERJ6GEYJ470	M 47 OHM,J,1/10W	1	
R2520	ERJ3GEYJ224	M 220KOHM,J,1/16W	1	
R2521	ERJ6GEYJ470	M 47 OHM,J,1/10W	1	
R2524	ERJ3GEYJ223	M 22KOHM,J,1/16W	1	
R2525	ERJ3EKF5760	M 576 OHM, 1/16W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R2530	ERJ3GEYJ223	M 22KOHM,J,1/16W	1	
R2531	ERJ3EKF2700	M 270 OHM, 1/16W	1	
R2542	ERJ3GEYJ473	M 47KOHM,J,1/16W	1	
R2556,5	ERJ3GEYJ562	M 5.6KOHM,J,1/16W	2	
7				
R2558	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R3001-10	ERJ6ENF75R0	M 75 OHM, 1/10W	10	
R3011	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R3012	ERJ6ENF75R0	M 75 OHM, 1/10W	1	
R3020	ERJ6ENF2202	M 2.2KOHM, 1/10W	1	
R3021,2	ERJ3GEYJ103	M 10KOHM,J,1/16W	2	
2				
R3027	ERJ6ENF75R0	M 75 OHM, 1/10W	1	
R3039	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R3044,4	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
5				
R3048	ERJ3GEYJ223	M 22KOHM,J,1/16W	1	
R3049	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R3050	ERJ3GEYJ242	M 2.4KOHM,J,1/16W	1	
R3051	ERJ3GEYJ682	M 6.8KOHM,J,1/16W	1	
R3057,5	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
8				
R3059,6	ERJ3GEYJ221	M 220 OHM,J,1/16W	2	
0				
R3061	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R3062-64	ERJ3GEYJ221	M 220 OHM,J,1/16W	3	
R3068	ERJ6ENF75R0	M 75 OHM, 1/10W	1	
R3070	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R3072-75	ERJ3GEYJ221	M 220 OHM,J,1/16W	4	
R3076	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R3080	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R3085	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R3087	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R3089,9	ERJ3GEYJ220	M 22 OHM,J,1/16W	2	
0				
R3092	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R3094,9	ERJ3GEYJ221	M 220 OHM,J,1/16W	2	
5				
R3096	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R3097	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R3099-01	ERJ3GEYJ221	M 220 OHM,J,1/16W	3	
R3102	ERJ3GEYJ682	M 6.8KOHM,J,1/16W	1	
R3111-14	ERJ3GEY0R00	M 0 OHM, 1/16W	4	
R3115	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R3118	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R3119,2	ERJ3EKF91R0	M 91 OHM, 1/16W	2	
0				
R3121	ERJ3EKF1300V	M 130 OHM, 1/16W	1	
R3122	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R3123	ERJ3EKF1300V	M 130 OHM, 1/16W	1	
R3125	ERJ6GEYJ102	M 1KOHM,J,1/10W	1	
R3126	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R3127	ERJ6GEYJ102	M 1KOHM,J,1/10W	1	
R3134	ERJ3GEYJ104	M 100KOHM,J,1/16W	1	
R3135	ERJ3EKF91R0	M 91 OHM, 1/16W	1	
R3138	ERJ3EKF1000	M 100 OHM, 1/16W	1	
R3139	ERJ6GEYJ102	M 1KOHM,J,1/10W	1	
R3140	ERJ3EKF1300V	M 130 OHM, 1/16W	1	
R3141	ERJ6GEYJ102	M 1KOHM,J,1/10W	1	
R3160,6	ERJ6GEYJ102	M 1KOHM,J,1/10W	2	
1				
R3167	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R3168	ERJ3GEYJ750	M 75 OHM,J,1/16W	1	
R3170	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R3171	ERJ3GEYJ471	M 470 OHM,J,1/16W	1	
R3173	ERJ3GEYJ271	M 270 OHM,J,1/16W	1	
R3174-76	ERJ3GEYJ221	M 220 OHM,J,1/16W	3	
R3206	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R3213,1	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
4				

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R3215	J0JCC0000241	CHIP INDUCTOR	1	
R3219	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R3222	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R3224	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R3227-29	ERJ3GEY0R00	M 0 OHM, 1/16W	3	
R3233,3	ERJ6ENF75R0	M 75 OHM, 1/10W	2	
4				
R3236	ERJ6ENF75R0	M 75 OHM, 1/10W	1	
R3238	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R3239-42	ERJ3GEYJ103	M 10KOHM,J,1/16W	4	
R3250,5	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
1				
R3253	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R3254	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R3255	ERJ6GEYJ561	M 560 OHM,J,1/10W	1	
R3256	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R3259	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R3261-64	ERJ3GEY0R00	M 0 OHM, 1/16W	4	
R3266,6	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
7				
R3278,7	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
9				
R3281	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R3283,8	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
4				
R3286	J0JCC0000241	CHIP INDUCTOR	1	
R3302	ERJ6GEYJ101	M 100 OHM,J,1/10W	1	
R3305	ERJ6GEYJ101	M 100 OHM,J,1/10W	1	
R3306,0	ERJ6GEYJ472	M 4.7KOHM,J,1/10W	2	
7				
R3308,0	ERJ6GEY0R00	M 0 OHM, 1/10W	2	
9				
R3310	ERJ6ENF75R0	M 75 OHM, 1/10W	1	
R3312	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R3313	ERJ6ENF75R0	M 75 OHM, 1/10W	1	
R3317	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R3318	ERJ6ENF75R0	M 75 OHM, 1/10W	1	
R3320	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R3323,2	ERJ6GEY0R00	M 0 OHM, 1/10W	2	
4				
R3330	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R3336	ERJ3GEYJ473	M 47KOHM,J,1/16W	1	
R3337	ERJ3GEYJ183	M 18KOHM,J,1/16W	1	
R3338	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R3339	ERJ3GEYJ471	M 470 OHM,J,1/16W	1	
R3340	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R3341	ERJ3GEYJ473	M 47KOHM,J,1/16W	1	
R3342	ERJ3GEYJ183	M 18KOHM,J,1/16W	1	
R3343	ERJ3GEYJ471	M 470 OHM,J,1/16W	1	
R3344	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R3345	ERJ3GEYJ183	M 18KOHM,J,1/16W	1	
R3346	ERJ3GEYJ473	M 47KOHM,J,1/16W	1	
R3347	ERJ3GEYJ471	M 470 OHM,J,1/16W	1	
R3348,4	ERJ3GEYJ680	M 68 OHM,J,1/16W	2	
9				
R3350-52	ERJ3GEYJ510	M 51 OHM,J,1/16W	3	
R3353	ERJ3EKF2703	M 270KOHM, 1/16W	1	
R3354	ERJ3EKF1503	M 150KOHM, 1/16W	1	
R3408,0	ERJ3GEYJ361	M 360 OHM,J,1/16W	2	
9				
R3704	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R3709-11	ERJ3GEY0R00	M 0 OHM, 1/16W	3	
R3714	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R3716,1	ERJ6GEYJ184	M 180KOHM,J,1/10W	2	
7				
R3721	ERJ6GEYJ103	M 10KOHM,J,1/10W	1	
R3732	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R3733	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R3736-41	ERJ3GEY0R00	M 0 OHM, 1/16W	6	
R3746	ERJ6GEY0R00	M 0 OHM, 1/10W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R3748	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R3750	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R3751	ERJ6ENF1432	M14.3KOHM, 1/10W	1	
R3753	ERJ6ENF1741	M1.74KOHM, 1/10W	1	
R3754	ERJ6ENF1621	M1.62KOHM, 1/10W	1	
R3755	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R3757	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R3758	ERJ6ENF6651	M6.65KOHM, 1/10W	1	
R3759-64	ERJ6GEY0R00	M 0 OHM, 1/10W	6	
R3765	ERJ6ENF2321	M2.32KOHM, 1/10W	1	
R3767	ERJ6ENF3161	M3.16KOHM, 1/10W	1	
R3768	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R4001	ERJ3EKF1211	M1.21KOHM, 1/16W	1	
R4004	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	
R4008	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	
R4010	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	
R4018	ERJ2GEJ103	M 10KOHM, J,0.063W	1	
R4021	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	
R4022	ERJ2GEJ102	M 1KOHM, J,0.063W	1	
R4024,25	ERJ2GE0R00	M 0.0 OHM, J,0.063W	2	
R4026,27	ERJ2GEJ102	M 1KOHM, J,0.063W	2	
R4029	ERJ2GEJ220	M 22 OHM, J,0.063W	1	
R4031-33	ERJ2GEJ103	M 10KOHM, J,0.063W	3	
R4037-39	DIHG1038A002	NETWORK RESISTER	3	
R4040,41	ERJ2GE0R00	M 0.0 OHM, J,0.063W	2	
R4045,46	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R4101	ERJ2GEJ103	M 10KOHM, J,0.063W	1	
R4257	ERJ3EKF3302	M 33KOHM, 1/16W	1	
R4265	ERJ3EKF3242	M32.4KOHM, 1/16W	1	
R4269	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	
R4271,72	ERJ2GE0R00	M 0.0 OHM, J,0.063W	2	
R4286,87	ERJ2GE0R00	M 0.0 OHM, J,0.063W	2	
R4293	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	
R4338-43	ERJ2GE0R00	M 0.0 OHM, J,0.063W	6	
R4434	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	
R4436	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	
R4438	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	
R4442,43	ERJ3EKF4220	M 422 OHM, 1/10W	2	
R4444,45	ERJ3EKF3301	M 3.3KOHM, 1/16W	2	
R4447	ERJ3EKF7680	M 768 OHM, 1/16W	1	
R4449	ERJ3EKF1211	M1.21KOHM, 1/16W	1	
R4450,51	ERJ6GEYJ821	M 820 OHM, J,1/10W	2	
R4454	ERJ6GEYJ681	M 680 OHM, J,1/10W	1	
R4457	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	
R4465	ERJ2GEJ224	M 220KOHM, J,0.063W	1	
R4466,67	ERJ2GEJ330	M 33 OHM, J,0.063W	2	
R4469,70	ERJ3EKF1500	M 150 OHM, 1/16W	2	
R4474	ERJ3EKF1211	M1.21KOHM, 1/16W	1	
R4476	ERJ2GEJ330	M 33 OHM, J,0.063W	1	
R4477,78	ERJ6GEYJ471	M 470 OHM, J,1/10W	2	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R4479,80	ERJ3EKF4220	M 422 OHM, 1/10W	2	
R4481	ERJ3EKF2201	M 2.2KOHM, 1/16W	1	
R4482,83	ERJ3EKF1781	M1.78KOHM, 1/16W	2	
R4484,85	ERJ2GE0R00	M 0.0 OHM, J,0.063W	2	
R4486	ERJ3EKF4870	M 487 OHM, 1/16W	1	
R4487	ERJ3EKF5600	M 560 OHM, 1/16W	1	
R4488	ERJ3EKF2201	M 2.2KOHM, 1/16W	1	
R4489	ERJ6GEYJ331	M 330 OHM, J,1/10W	1	
R4490	ERJ6GEYJ102	M 1KOHM, J,1/10W	1	
R4491	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	
R4492	ERJ6GEYJ102	M 1KOHM, J,1/10W	1	
R4495	ERJ3EKF4302	M 43KOHM, 1/16W	1	
R4496-99	ERJ6GEYJ102	M 1KOHM, J,1/10W	4	
R4500	ERJ3EKF2702V	M27.0KOHM, 1/16W	1	
R4501,02	ERJ6GEYJ102	M 1KOHM, J,1/10W	2	
R4503	ERJ3EKF1600	M 160 OHM, 1/16W	1	
R4507,08	ERJ2GE0R00	M 0.0 OHM, J,0.063W	2	
R4510	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	
R4514-16	ERJ2GE0R00	M 0.0 OHM, J,0.063W	3	
R4517	ERJ3EKF1371	M 13.7 OHM, 1/16W	1	
R4519	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	
R4520	ERJ3EKF1691	M1.69KOHM, 1/16W	1	
R4521,22	ERJ2GEJ220	M 22 OHM, J,0.063W	2	
R4523-25	ERJ3EKF33R0	M 33 OHM, 1/16W	3	
R4526	ERJ3EKF1401	M 1.4KOHM, 1/16W	1	
R4527	ERJ2GEJ220	M 22 OHM, J,0.063W	1	
R4528-30	ERJ3EKF33R0	M 33 OHM, 1/16W	3	
R4531	ERJ3EKF2701	M 2.7KOHM, 1/16W	1	
R4532	ERJ3EKF4700	M 470 OHM, 1/16W	1	
R4533	ERJ2GEJ220	M 22 OHM, J,0.063W	1	
R4534,35	ERJ2GEJ101	M 100 OHM, J,0.063W	2	
R4536-38	ERJ3EKF1500	M 150 OHM, 1/16W	3	
R4539	ERJ3EKF1001	M 1KOHM, 1/16W	1	
R4541	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	
R4543	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	
R4544	ERJ2GEJ220	M 22 OHM, J,0.063W	1	
R4545-47	ERJ2GE0R00	M 0.0 OHM, J,0.063W	3	
R4548	ERJ2GEJ911X	M 910 OHM, J,0.063W	1	
R4549	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	
R4550	EXB28V220J	RESISTOR ARRAY	1	
R4551	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	
R4552	EXB28V220J	RESISTOR ARRAY	1	
R4553	ERJ2GEJ101	M 100 OHM, J,0.063W	1	
R4554	ERJ2GEJ220	M 22 OHM, J,0.063W	1	
R4555	EXB28V220J	RESISTOR ARRAY	1	
R4556,57	ERJ2GEJ220	M 22 OHM, J,0.063W	2	
R4560,61	EXB28V220J	RESISTOR ARRAY	2	
R4562	ERJ2GEJ560	M 56 OHM, J,0.063W	1	
R4563-65	ERJ2GEJ220	M 22 OHM, J,0.063W	3	
R4566	ERJ2GEJ560	M 56 OHM, J,0.063W	1	
R4567	ERJ2GEJ470	M 47 OHM, J,0.063W	1	
R4568	ERJ2GEJ101	M 100 OHM, J,0.063W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R4569	D1HG5608A002	NETWORK RESISTER	1	
R4570,71	EXB28V560JX	RESISTOR ARRAY	2	
R4572	ERJ2GEJ103	M 10KOHM, J,0.063W	1	
R4575	ERJ2GEJ472	M 4.7KOHM, J,0.063W	1	
R4577-79	ERJ2GEJ222	M 2.2KOHM, J,0.063W	3	
R4583,84	ERJ2GEJ390	M 39 OHM, J,0.063W	2	
R4589-04	ERJ2GEJ2R7X	M 2.7OHM, J,0.063W	16	
R4605,06	ERJ2GEJ103	M 10KOHM, J,0.063W	2	
R4607	ERJ2GEJ220	M 22 OHM, J,0.063W	1	
R4609,10	ERJ2GEJ103	M 10KOHM, J,0.063W	2	
R4612,13	ERJ2GEJ472	M 4.7KOHM, J,0.063W	2	
R4617,18	ERJ2GEJ472	M 4.7KOHM, J,0.063W	2	
R4619	ERJ2GEJ473	M 47KOHM, J,0.063W	1	
R4620	ERJ2GEJ560	M 56 OHM, J,0.063W	1	
R4621	ERJ2GEJ473	M 47KOHM, J,0.063W	1	
R4622	ERJ2GEJ560	M 56 OHM, J,0.063W	1	
R4624	ERJ2GEJ560	M 56 OHM, J,0.063W	1	
R4626	ERJ2GEJ560	M 56 OHM, J,0.063W	1	
R4628	ERJ2GEJ103	M 10KOHM, J,0.063W	1	
R4629-32	ERJ2GEJ472	M 4.7KOHM, J,0.063W	4	
R4633,34	ERJ2GEJ220	M 22 OHM, J,0.063W	2	
R4636	ERJ2GEJ103	M 10KOHM, J,0.063W	1	
R4637	ERJ2GEJ330	M 33 OHM, J,0.063W	1	
R4639	ERJ2GEJ103	M 10KOHM, J,0.063W	1	
R4640	ERJ2GEJ220	M 22 OHM, J,0.063W	1	
R4641	EXB28V330J	RESISTOR ARRAY	1	
R4642-45	ERJ2GEJ220	M 22 OHM, J,0.063W	4	
R4647	ERJ2GEJ220	M 22 OHM, J,0.063W	1	
R4648	ERJ2GEJ330	M 33 OHM, J,0.063W	1	
R4655	ERJ2GEJ330	M 33 OHM, J,0.063W	1	
R4657	ERJ2GEJ182	M 1.8KOHM, J,0.063W	1	
R4658	ERJ2GEJ220	M 22 OHM, J,0.063W	1	
R4660	ERJ2GEJ220	M 22 OHM, J,0.063W	1	
R4661	ERJ2GEJ472	M 4.7KOHM, J,0.063W	1	
R4662	ERJ2GEJ220	M 22 OHM, J,0.063W	1	
R4665	EXB2HV220JV	RESISTOR ARRAY	1	
R4667	EXB2HV220JV	RESISTOR ARRAY	1	
R4668	ERJ2GEJ680	M 68 OHM, J,0.063W	1	
R4669	EXB2HV220JV	RESISTOR ARRAY	1	
R4672,73	ERJ2GEJ103	M 10KOHM, J,0.063W	2	
R4675	ERJ3EKF1802	M 18KOHM, 1/16W	1	
R4677	ERJ3EKF1802	M 18KOHM, 1/16W	1	
R4679,80	ERJ3EKF2202	M 22KOHM, 1/16W	2	
R4681,82	ERJ3EKF3302	M 33KOHM, 1/16W	2	
R4701	ERJ2GEJ680	M 68 OHM, J,0.063W	1	
R4706	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	
R4708,09	ERJ2GEJ680	M 68 OHM, J,0.063W	2	
R4711	ERJ2GEJ103	M 10KOHM, J,0.063W	1	
R4712	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	
R4713,14	EXB2HV221JV	RESISTOR ARRAY	2	
R4715	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	
R4718-20	ERJ2GEJ680	M 68 OHM, J,0.063W	3	
R4727	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R4729,30	ERJ3EKF1000	M 100 OHM, 1/16W	2	
R4731	ERJ3EKF1001	M 1KOHM, 1/16W	1	
R4732	ERJ3EKF4751	M 4.75KOHM, 1/16W	1	
R4733	ERJ3EKF75R0	M 0.75HM, 1/16W	1	
R4734	ERJ2GEJ223	M 22KOHM, J,0.063W	1	
R4735	ERJ3EKF2001	M 2KOHM, 1/16W	1	
R4737	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	
R4738,39	ERJ2GEJ332	M 3.3KOHM, J,0.063W	2	
R4743-47	ERJ2GEJ680	M 68 OHM, J,0.063W	5	
R4749,50	EXB2HV680J	RESISTOR ARRAY	2	
R4751-54	ERJ2GEJ220	M 22 OHM, J,0.063W	4	
R4756-60	ERJ2GEJ680	M 68 OHM, J,0.063W	5	
R4762	EXB2HV680J	RESISTOR ARRAY	1	
R4763-65	ERJ2GE0R00	M 0.0 OHM, J,0.063W	3	
R4772	EXB2HV470JV	RESISTOR ARRAY	1	
R4773	ERJ2GEJ470	M 47 OHM, J,0.063W	1	
R4774	EXB2HV470JV	RESISTOR ARRAY	1	
R4775	ERJ2GEJ470	M 47 OHM, J,0.063W	1	
R4776	EXB2HV470JV	RESISTOR ARRAY	1	
R4777	ERJ2GEJ470	M 47 OHM, J,0.063W	1	
R4778	EXB2HV470JV	RESISTOR ARRAY	1	
R4779	ERJ2GEJ470	M 47 OHM, J,0.063W	1	
R4782	ERJ2GEJ220	M 22 OHM, J,0.063W	1	
R4783	ERJ2GEJ472	M 4.7KOHM, J,0.063W	1	
R4784	ERJ2GEJ220	M 22 OHM, J,0.063W	1	
R4785	ERJ2GEJ472	M 4.7KOHM, J,0.063W	1	
R4788	EXB2HV470JV	RESISTOR ARRAY	1	
R4791,92	ERJ2GEJ470	M 47 OHM, J,0.063W	2	
R4793,94	ERJ2GEJ220	M 22 OHM, J,0.063W	2	
R4796	EXB2HV470JV	RESISTOR ARRAY	1	
R4804	ERJ2GEJ101	M 100 OHM, J,0.063W	1	
R4805,06	ERJ3EKF1001	M 1KOHM, 1/16W	2	
R4807-11	ERJ2GE0R00	M 0.0 OHM, J,0.063W	5	
R4814	ERJ2GEJ103	M 10KOHM, J,0.063W	1	
R4816,17	ERJ2GEJ223	M 22KOHM, J,0.063W	2	
R4819	ERJ2GEJ223	M 22KOHM, J,0.063W	1	
R4822	ERJ2GEJ103	M 10KOHM, J,0.063W	1	
R4823-25	J0JAD0000025	CHIP INDUCTOR	3	
R4837	ERJ2GEJ220	M 22 OHM, J,0.063W	1	
R4838	ERJ2GEJ112	M 1.1KOHM, J,0.063W	1	
R4891	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	
R4898	ERJ2GEJ103	M 10KOHM, J,0.063W	1	
R4960	EXB2HV680J	RESISTOR ARRAY	1	
R4961-63	ERJ2GEJ680	M 68 OHM, J,0.063W	3	
R4964	EXB2HV680J	RESISTOR ARRAY	1	
R4965,66	ERJ2GEJ680	M 68 OHM, J,0.063W	2	
R4967	EXB2HV680J	RESISTOR ARRAY	1	
R4968-72	ERJ2GEJ680	M 68 OHM, J,0.063W	5	
R5601	ERJ3EKF1800	M 180 OHM, 1/16W	1	
R5603	ERJ3EKF1542	M 15.4KOHM, 1/16W	1	
R5605	ERJ3GEYJ472	M 4.7KOHM, J,1/16W	1	
R5606	ERJ3GEYJ222	M 2.2KOHM, J,1/16W	1	
R5607	ERJ3EKF4531	M 4.53KOHM, 1/16W	1	
R5609	ERJ3EKF2000	M 200 OHM, 1/16W	1	
R5611	ERJ6ENF8202	M 82KOHM, 1/10W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R5612	ERJ6ENF1602	M 16KOHM, 1/10W	1	
R5615	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R5617	ERJ3GEYJ102	M 1KOHM, J, 1/16W	1	
R5619	ERJ3GEYJ333	M 33KOHM, J, 1/16W	1	
R5620	ERJ3GEYJ102	M 1KOHM, J, 1/16W	1	
R5621	ERJ3GEYJ472	M 4.7KOHM, J, 1/16W	1	
R5625-27	ERJ3GEYJ472	M 4.7KOHM, J, 1/16W	3	
R5632	ERJ3GEYJ471	M 470 OHM, J, 1/16W	1	
R5633	ERJ3GEYJ102	M 1KOHM, J, 1/16W	1	
R5634	ERJ3GEYJ471	M 470 OHM, J, 1/16W	1	
R5635	ERJ3GEYJ221	M 220 OHM, J, 1/16W	1	
R5637, 38	ERJ3GEYJ103	M 10KOHM, J, 1/16W	2	
R5639	ERJ3GEYJ222	M 2.2KOHM, J, 1/16W	1	
R5640	ERJ3GEYJ472	M 4.7KOHM, J, 1/16W	1	
R5641	ERJ3GEYJ222	M 2.2KOHM, J, 1/16W	1	
R5642	ERJ3GEYJ471	M 470 OHM, J, 1/16W	1	
R5643	ERJ3GEYJ102	M 1KOHM, J, 1/16W	1	
R5644	ERJ3GEYJ222	M 2.2KOHM, J, 1/16W	1	
R5645	ERJ3EKF2201	M 2.2KOHM, 1/16W	1	
R5646	ERJ3EKF4701	M 4.7KOHM, 1/16W	1	
R5647	ERJ3GEYJ221	M 220 OHM, J, 1/16W	1	
R5648	ERJ3GEYJ392	M 3.9KOHM, J, 1/16W	1	
R5649	ERJ3GEYJ104	M 100KOHM, J, 1/16W	1	
R5650	ERJ3GEYJ221	M 220 OHM, J, 1/16W	1	
R5652	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R5653, 54	ERJ3GEYJ103	M 10KOHM, J, 1/16W	2	
R5659	ERJ3EKF4700	M 470 OHM, 1/16W	1	
R5660	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R5662	ERJ3GEYJ472	M 4.7KOHM, J, 1/16W	1	
R5664	ERJ3GEYJ472	M 4.7KOHM, J, 1/16W	1	
R5665	ERJ3GEYJ473	M 47KOHM, J, 1/16W	1	
R5667-69	ERJ3GEYJ473	M 47KOHM, J, 1/16W	3	
R5672	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R5676	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R5692	ERJ3GEYJ102	M 1KOHM, J, 1/16W	1	
R5693	ERJ3GEYJ333	M 33KOHM, J, 1/16W	1	
R5694	ERJ3GEYJ473	M 47KOHM, J, 1/16W	1	
R5695	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R5801	ERJ3EKF8450	M 845 OHM, 1/16W	1	
R5802	ERJ3EKF1302	M 23KOHM, 1/16W	1	
R5803	ERJ3EKF2001	M 2KOHM, 1/16W	1	
R5804	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R5805-08	ERJ3GEYJ222	M 2.2KOHM, J, 1/16W	4	
R5809	ERJ3GEYJ472	M 4.7KOHM, J, 1/16W	1	
R5822-24	ERJ3GEYJ101	M 100 OHM, J, 1/16W	3	
R5826	ERJ3GEYJ101	M 100 OHM, J, 1/16W	1	
R5836	ERJ3GEYJ102	M 1KOHM, J, 1/16W	1	
R6001-06	ERJ14YJ150U	M 15 OHM, J, 1/4W	6	
R6020	ERG3FJS101D	M 100 OHM, J, 3W	1	
R6021	ERJ14YJ150U	M 15 OHM, J, 1/4W	1	
R6022	ERG3FJS101D	M 100 OHM, J, 3W	1	
R6023-27	ERJ14YJ150U	M 15 OHM, J, 1/4W	5	
R6031, 32	ERJ6ENF8202	M 82KOHM, 1/10W	2	
R6033	ERJ6ENF5602	M 56KOHM, 1/10W	1	
R6034	ERJ6ENF2702	M 27KOHM, 1/10W	1	
R6041-46	ERJ14YJ100	M 10 OHM, J, 1/4W	6	
R6053-56	ERJ14YJ100	M 10 OHM, J, 1/4W	4	
R6061, 62	ERJ6GEYJ224	M 220KOHM, J, 1/10W	2	
R6102	DOGD101JA036	M 100 OHM, J, 0.25W	1	
R6104	DOGD101JA036	M 100 OHM, J, 0.25W	1	
R6106	DOGD101JA036	M 100 OHM, J, 0.25W	1	
R6108	DOGD101JA036	M 100 OHM, J, 0.25W	1	
R6109	DOGD100JA036	M 10 OHM, J, 0.25W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R6110	ERJ6GEYJ103	M 10KOHM, J, 1/10W	1	
R6111, 12	DOGD470JA036	M 47 OHM, J, 0.25W	2	
R6113	ERJ14YJ224	M 220KOHM, J, 1/4W	1	
R6114	DOGD470JA036	M 47 OHM, J, 0.25W	1	
R6116	ERJ6GEYJ103	M 10KOHM, J, 1/10W	1	
R6131, 32	ERJ6GEYJ101	M 100 OHM, J, 1/10W	2	
R6133, 34	ERJ6GEYJ151	M 150 OHM, J, 1/10W	2	
R6135, 36	DOGD100JA036	M 10 OHM, J, 0.25W	2	
R6141, 42	ERJ6GEYJ103	M 10KOHM, J, 1/10W	2	
R6146, 47	ERJ6GEYJ103	M 10KOHM, J, 1/10W	2	
R6151, 52	ERJ6GEYJ101	M 100 OHM, J, 1/10W	2	
R6153, 54	ERJ6GEYJ151	M 150 OHM, J, 1/10W	2	
R6155, 56	ERJ6GEY0R00	M 0 OHM, 1/10W	2	
R6157-60	DOGF1R0JA047	M 1.0 OHM, J, 0.33W	4	
R6171	DOGD100JA036	M 10 OHM, J, 0.25W	1	
R6172, 73	ERJ6GEYJ103	M 10KOHM, J, 1/10W	2	
R6181	DOGD100JA036	M 10 OHM, J, 0.25W	1	
R6182, 83	ERJ6GEYJ103	M 10KOHM, J, 1/10W	2	
R6191-94	ERJ6GEYJ101	M 100 OHM, J, 1/10W	4	
R6195	DOGD104JA036	M 100KOHM, J, 0.25W	1	
R6196	ERJ6GEYJ104	M 100KOHM, J, 1/10W	1	
R6213	ERJ6GEYJ101	M 100 OHM, J, 1/10W	1	
R6214	DOGD151JA036	M 150 OHM, J, 0.25W	1	
R6220	ERDS2TC0	C 0 OHM, 1/4W	1	
R6222	ERG1FJS103D	M 10KOHM, J, 1W	1	
R6223	ERG2FJS123D	M 12KOHM, J, 2W	1	
R6225	DOGD203JA036	M 20KOHM, J, 0.25W	1	
R6226, 27	ERJ6GEYJ163	M 16KOHM, J, 1/10W	2	
R6228	ERJ6GEYJ562	M 5.6KOHM, J, 1/10W	1	
R6229	ERJ6GEYJ163	M 16KOHM, J, 1/10W	1	
R6230	ERDS2TC0	C 0 OHM, 1/4W	1	
R6231	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R6232	ERJ6ENF1201	M 1.2KOHM, 1/10W	1	
R6241	EXB38V470J	RESISTOR ARRAY	1	
R6242	EXB38V472J	RESISTOR ARRAY	1	
R6243	EXB38V470J	RESISTOR ARRAY	1	
R6244	EXB38V472J	RESISTOR ARRAY	1	
R6251	DOGD103JA036	M 10KOHM, J, 0.25W	1	
R6252, 53	ERJ6ENF3902	M 39KOHM, 1/10W	2	
R6254	ERJ6ENF6801	M 6.8KOHM, 1/10W	1	
R6255	ERJ6ENF1201	M 1.2KOHM, 1/10W	1	
R6256	ERJ6ENF1501	M 1.5KOHM, 1/10W	1	
R6257	ERJ6GEYJ103	M 10KOHM, J, 1/10W	1	
R6258	ERJ6GEYJ222	M 2.2KOHM, J, 1/10W	1	
R6261	ERJ6GEYJ104	M 100KOHM, J, 1/10W	1	
R6401-06	ERJ14YJ150U	M 15 OHM, J, 1/4W	6	
R6421-26	ERJ14YJ150U	M 15 OHM, J, 1/4W	6	
R6441-46	ERJ14YJ100	M 10 OHM, J, 1/4W	6	
R6453-56	ERJ14YJ100	M 10 OHM, J, 1/4W	4	
R6465	ERJ6ENF2702	M 27KOHM, 1/10W	1	
R6466	ERJ6ENF5602	M 56KOHM, 1/10W	1	
R6467, 68	ERJ6ENF8202	M 82KOHM, 1/10W	2	
R6471	ERJ6GEYJ392	M 3.9KOHM, J, 1/10W	1	
R6472	ERJ6GEYJ222	M 2.2KOHM, J, 1/10W	1	
R6473	ERJ6GEYJ561	M 560 OHM, J, 1/10W	1	
R6474	ERJ6GEYJ102	M 1KOHM, J, 1/10W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R6475,76	ERJ6GEYJ472	M 4.7KOHM, J, 1/10W	2	
R6477	ERJ6GEYJ102	M 1KOHM, J, 1/10W	1	
R6478	ERJ6GEYJ472	M 4.7KOHM, J, 1/10W	1	
R6479	ERJ6GEYJ104	M 100KOHM, J, 1/10W	1	
R6501,02	ERJ6GEYJ101	M 100 OHM, J, 1/10W	2	
R6503	D0GD100JA036	M 10 OHM, J, 0.25W	1	
R6504,05	ERJ6GEYJ151	M 150 OHM, J, 1/10W	2	
R6506	D0GD100JA036	M 10 OHM, J, 0.25W	1	
R6507-09	D0GF1R0JA047	M 1.0 OHM, J, 0.33W	3	
R6511,12	ERJ6GEYJ103	M 10KOHM, J, 1/10W	2	
R6516,17	ERJ6GEYJ103	M 10KOHM, J, 1/10W	2	
R6521,22	ERJ6GEYJ101	M 100 OHM, J, 1/10W	2	
R6523,24	ERJ6GEYJ151	M 150 OHM, J, 1/10W	2	
R6525,26	ERJ6GEY0R00	M 0 OHM, 1/10W	2	
R6531	D0GD100JA036	M 10 OHM, J, 0.25W	1	
R6532,33	ERJ6GEYJ103	M 10KOHM, J, 1/10W	2	
R6551	D0GD100JA036	M 10 OHM, J, 0.25W	1	
R6552,53	ERJ6GEYJ103	M 10KOHM, J, 1/10W	2	
R6561-64	EXB38V470J	RESISTOR ARRAY	4	
R6565-68	EXB38V472J	RESISTOR ARRAY	4	
R6581	D0GD103JA036	M 10KOHM, J, 0.25W	1	
R6582,83	ERJ6ENF3902	M 39KOHM, 1/10W	2	
R6584	ERJ6ENF8201	M 8.2KOHM, 1/10W	1	
R6585	ERJ6ENF1201	M 1.2KOHM, 1/10W	1	
R6586	ERJ6ENF1801	M 1.8KOHM, 1/10W	1	
R6587	ERJ6GEYJ222	M 2.2KOHM, J, 1/10W	1	
R6588	ERJ6GEYJ103	M 10KOHM, J, 1/10W	1	
R6590	ERJ6GEYJ221	M 220 OHM, J, 1/10W	1	
R6591	EXB38V472J	RESISTOR ARRAY	1	
R6592	ERJ6GEYJ472	M 4.7KOHM, J, 1/10W	1	
R6603	ERJ6GEYJ101	M 100 OHM, J, 1/10W	1	
R6604	D0GD151JA036	M 150 OHM, J, 0.25W	1	
R6605	ERJ6GEYJ104	M 100KOHM, J, 1/10W	1	
R6606	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R6607	ERJ6ENF5361	M 5.36KOHM, 1/10W	1	
R6608,09	D0GF102JA047	M 1.0 KOHM, J, 0.33W	2	
R6610	ERJ6GEYJ104	M 100KOHM, J, 1/10W	1	
R6611	ERJ6GEYJ105	M 1MOHM, J, 1/10W	1	
R6612	ERJ6GEYJ470	M 47 OHM, J, 1/10W	1	
R6613	ERJ6GEYJ105	M 1MOHM, J, 1/10W	1	
R6614,15	D0GF243JA047	M 24 KOHM, J, 0.33W	2	
R6616	ERJ6ENF1502	M 15KOHM, 1/10W	1	
R6617	ERJ6GEYJ105	M 1MOHM, J, 1/10W	1	
R6618	ERJ6ENF1202	M 12KOHM, 1/10W	1	
R6619	ERJ6ENF1501	M 1.5KOHM, 1/10W	1	
R6620	D0D28R2JA021	M 8.2 OHM, J, 5W	1	
R6621,22	ERJ6GEYJ221	M 220 OHM, J, 1/10W	2	
R6641-45	ERJ6GEYJ100	M 10 OHM, J, 1/10W	5	
R6647,48	ERJ6GEYJ100	M 10 OHM, J, 1/10W	2	
R6658	D0D1101JA009	M 100 OHM, J, 1W	1	
R6659,60	ERJ6GEYJ224	M 220KOHM, J, 1/10W	2	
R6661	ERJ6GEYJ104	M 100KOHM, J, 1/10W	1	
R6662	ERJ6ENF3001	M 3KOHM, 1/10W	1	
R6663	ERJ6GEYJ103	M 10KOHM, J, 1/10W	1	
R6664	D0GF222JA047	M 2.2 KOHM, J, 0.33W	1	
R6665	ERJ14YJ470	M 47 OHM, J, 1/2W	1	
R6666	ERJ6GEYJ104	M 100KOHM, J, 1/10W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R6667,68	ERJ6GEYJ472	M 4.7KOHM, J, 1/10W	2	
R6671	ERJ6GEYJ470	M 47 OHM, J, 1/10W	1	
R6672	ERJ6GEYJ103	M 10KOHM, J, 1/10W	1	
R6673-75	D0GD5R6JA059	M 5.6 OHM, J, 0.25W	3	
R6682	ERJ6GEYJ101	M 100 OHM, J, 1/10W	1	
R6683	D0GD151JA036	M 150 OHM, J, 0.25W	1	
R6684	ERJ6GEYJ100	M 10 OHM, J, 1/10W	1	
R6685	ERJ6GEYJ471	M 470 OHM, J, 1/10W	1	
R6686	ERJ6GEYJ103	M 10KOHM, J, 1/10W	1	
R6687	ERJ6GEYJ222	M 2.2KOHM, J, 1/10W	1	
R6688	ERJ6GEYJ472	M 4.7KOHM, J, 1/10W	1	
R6689	ERJ6GEYJ100	M 10 OHM, J, 1/10W	1	
R6690	ERJ6GEYJ151	M 150 OHM, J, 1/10W	1	
R6691	ERJ6GEYJ103	M 10KOHM, J, 1/10W	1	
R6696,97	D0D32R2JA020	M 2.2 OHM, J, 5W	2	
R6700-08	ERJ6GEYJ471	M 470 OHM, J, 1/10W	9	
R6710-18	ERJ6GEYJ222	M 2.2KOHM, J, 1/10W	9	
R6721,22	EXB38V220J	RESISTOR ARRAY	2	
R6723	ERJ6GEYJ222	M 2.2KOHM, J, 1/10W	1	
R6724	ERJ6GEYJ101	M 100 OHM, J, 1/10W	1	
R6742	ERJ6GEYJ103	M 10KOHM, J, 1/10W	1	
R6743	ERJ6GEYJ102	M 1KOHM, J, 1/10W	1	
R6744	ERJ6GEYJ103	M 10KOHM, J, 1/10W	1	
R6745	ERJ6GEYJ472	M 4.7KOHM, J, 1/10W	1	
R6746,47	D0GD103JA036	M 10KOHM, J, 0.25W	2	
R6755	ERJ6GEYJ101	M 100 OHM, J, 1/10W	1	
R6756-58	D0GD101JA059	M 100 OHM, J, 0.25W	3	
R6759	ERJ6GEYJ472	M 4.7KOHM, J, 1/10W	1	
R6760	ERJ6GEYJ122	M 1.2KOHM, J, 1/10W	1	
R6761	ERJ6GEYJ100	M 10 OHM, J, 1/10W	1	
R6762	ERJ6GEYJ103	M 10KOHM, J, 1/10W	1	
R6775,76	ERJ6GEYJ101	M 100 OHM, J, 1/10W	2	
R6777	D0GD151JA036	M 150 OHM, J, 0.25W	1	
R6781	ERJ6GEYJ470	M 47 OHM, J, 1/10W	1	
R6782	ERJ6GEYJ103	M 10KOHM, J, 1/10W	1	
R6791	ERJ6GEYJ102	M 1KOHM, J, 1/10W	1	
R6792	ERJ6GEYJ103	M 10KOHM, J, 1/10W	1	
R6793	ERJ6GEYJ101	M 100 OHM, J, 1/10W	1	
R6801	ERX3FJS8R2D	M 8.2 OHM, J, 3W	1	
R6802	ERG2FJS8683D	M 68KOHM, J, 2W	1	
R6803	ERG2FJS563D	M 56KOHM, J, 2W	1	
R6806,07	ERX12SJ1R2	M 1.2 OHM, J, 1/2W	2	
R6808	D0GD272JA059	M 2.7KOHM, J, 0.25W	1	
R6809	ERJ6GEYJ103	M 10KOHM, J, 1/10W	1	
R6810,11	ERJ6GEYJ433	M 43KOHM, J, 1/10W	2	
R6812	ERJ6ENF2403	M 240KOHM, 1/10W	1	
R6813	ERJ6ENF9101	M 9.1KOHM, 1/10W	1	
R6814	ERJ6ENF5601	M 5.6KOHM, 1/10W	1	
R6816	ERJ6ENF3902	M 39KOHM, 1/10W	1	
R6817	ERJ6ENF1302	M 13KOHM, 1/10W	1	
R6819	ERJ6GEYJ681	M 680 OHM, J, 1/10W	1	
R6820	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R6821	ERG2FJS221D	M 220 OHM, J, 2W	1	
R6822	ERJ12YJ104U	M 100KOHM, 1/2W	1	
R6823	ERG1FJS104D	M 100KOHM, J, 1W	1	
R6824	ERJ6GEYJ562	M 5.6KOHM, J, 1/10W	1	
R6825,26	ERJ6ENF2703	M 270KOHM, 1/10W	2	
R6827	ERJ6ENF2702	M 27KOHM, 1/10W	1	
R6828	ERJ6ENF5101	M 5.1KOHM, 1/10W	1	
R6829,30	ERJ6GEYJ224	M 220KOHM, J, 1/10W	2	
R6831	ERJ6GEYJ153	M 15KOHM, J, 1/10W	1	
R6832	ERDS1FJ4R7	C 4.7 OHM, J, 1/2W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R6833-36	ERJ6ENF5602	M 56KOHM, 1/10W	4	
R6837	ERJ6ENF5102	M 51KOHM, 1/10W	1	
R6839	ERJ6GEYJ472	M 4.7KOHM, J, 1/10W	1	
R6841	ERJ12YJ153U	M 15KOHM, 1/2W	1	
R6842	ERJ14YJ433U	M 43KOHM, 1/2W	1	
R6843	ERJ6GEYJ623	M 62KOHM, J, 1/10W	1	
R6844	DOD2101JA021	M 100 OHM, J, 2W	1	
R6845	ERJ6GEYJ623	M 62KOHM, J, 1/10W	1	
R6846, 47	ERJ6GEYJ563	M 56KOHM, J, 1/10W	2	
R6848	ERJ6GEYJ103	M 10KOHM, J, 1/10W	1	
R6849, 50	ERJ6ENF6802	M 68KOHM, 1/10W	2	
R6851	ERJ6ENF1201	M 1.2KOHM, 1/10W	1	
R6852	ERJ6ENF2491	M 2.49KOHM, 1/10W	1	
R6853	ERJ6GEYJ101	M 100 OHM, J, 1/10W	1	
R6858	DOD102JA059	M 1.0KOHM, J, 0.25W	1	
R6860	DOD28R2JA021	M 8.2 OHM, J, 5W	1	
R6861	ERJ6ENF3902	M 39KOHM, 1/10W	1	
R6862, 63	ERJ6ENF4702	M 47KOHM, 1/10W	2	
R6864	ERJ6ENF9101	M 9.1KOHM, 1/10W	1	
R6865, 66	ERJ6ENF2201	M 2.2KOHM, 1/10W	2	
R6867	ERJ6GEYJ392	M 3.9KOHM, J, 1/10W	1	
R6868	ERJ6GEYJ223	M 22KOHM, J, 1/10W	1	
R6869	ERJ6GEYJ472	M 4.7KOHM, J, 1/10W	1	
R6871-73	ERJ6ENF3902	M 39KOHM, 1/10W	3	
R6874	ERJ6ENF8201	M 8.2KOHM, 1/10W	1	
R6875	ERJ6ENF3301	M 3.3KOHM, 1/10W	1	
R6876	ERJ6ENF1201	M 1.2KOHM, 1/10W	1	
R6877	ERJ6GEYJ392	M 3.9KOHM, J, 1/10W	1	
R6878	ERJ6GEYJ223	M 22KOHM, J, 1/10W	1	
R6879	ERJ6GEYJ472	M 4.7KOHM, J, 1/10W	1	
R6886-88	ERJ6GEYJ224	M 220KOHM, J, 1/10W	3	
R6891	ERJ6GEYJ332	M 3.3KOHM, J, 1/10W	1	
R6901	ERJ6GEYJ101	M 100 OHM, J, 1/10W	1	
R6902-04	ERJ3GEYJ220	M 22 OHM, J, 1/16W	3	
R6905	ERJ6GEYJ221	M 220 OHM, J, 1/10W	1	
R6909	ERJ6GEYJ221	M 220 OHM, J, 1/10W	1	
R6913	ERJ6GEYJ221	M 220 OHM, J, 1/10W	1	
R6917	ERJ6GEYJ221	M 220 OHM, J, 1/10W	1	
R6924	ERJ6GEYJ221	M 220 OHM, J, 1/10W	1	
R6931-34	ERJ6GEYJ103	M 10KOHM, J, 1/10W	4	
R6935, 36	ERJ8GEYJ224	M 220KOHM, J, 1/8W	2	
R6951	ERJ6GEYJ221	M 220 OHM, J, 1/10W	1	
R6955	ERJ6GEYJ221	M 220 OHM, J, 1/10W	1	
R6959	ERJ6GEYJ221	M 220 OHM, J, 1/10W	1	
R6963	ERJ6GEYJ221	M 220 OHM, J, 1/10W	1	
R6967	ERJ6GEYJ221	M 220 OHM, J, 1/10W	1	
R6971	ERJ6GEYJ101	M 100 OHM, J, 1/10W	1	
R6972-74	ERJ3GEYJ220	M 22 OHM, J, 1/16W	3	
R6981-84	ERJ6GEYJ103	M 10KOHM, J, 1/10W	4	
R6985, 86	ERJ8GEYJ224	M 220KOHM, J, 1/8W	2	
R7103-06	ERJ12YJ6R8U	M 6.8 OHM, J, 1/2W	4	
R7108	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R7110	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R7113-16	ERJ12YJ6R8U	M 6.8 OHM, J, 1/2W	4	
R7118	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R7120	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R7123-26	ERJ12YJ6R8U	M 6.8 OHM, J, 1/2W	4	
R7128	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R7130	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R7131	ERJ6GEYJ102	M 1KOHM, J, 1/10W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R7132	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R7133	ERJ6GEYJ223	M 22KOHM, J, 1/10W	1	
R7134	ERJ6GEYJ104	M 100KOHM, J, 1/10W	1	
R7135	EXB38V471J	RESISTOR ARRAY	1	
R7136-39	ERJ3GEYJ220	M 22 OHM, J, 1/16W	4	
R7140-42	ERJ3GEYJ470	M 47 OHM, J, 1/16W	3	
R7201	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R7203-05	ERJ12YJ6R8U	M 6.8 OHM, J, 1/2W	3	
R7207	ERJ3GEYJ470	M 47 OHM, J, 1/16W	1	
R7209, 10	ERJ3GEYJ470	M 47 OHM, J, 1/16W	2	
R7211-13	EXB38V471J	RESISTOR ARRAY	3	
R7215, 16	EXB38V470J	RESISTOR ARRAY	2	
R7221-25	ERJ12YJ6R8U	M 6.8 OHM, J, 1/2W	5	
R7228, 29	ERJ3GEYJ470	M 47 OHM, J, 1/16W	2	
R7234, 35	ERJ12YJ6R8U	M 6.8 OHM, J, 1/2W	2	
R7238, 39	ERJ12YJ6R8U	M 6.8 OHM, J, 1/2W	2	
R7240	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R7241-44	EXB38V471J	RESISTOR ARRAY	4	
R7245	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R7246-49	EXB38V471J	RESISTOR ARRAY	4	
R7250-53	ERJ12YJ6R8U	M 6.8 OHM, J, 1/2W	4	
R7254	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R7256	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R7257-60	ERJ3GEYJ220	M 22 OHM, J, 1/16W	4	
R7261-63	ERJ3GEYJ470	M 47 OHM, J, 1/16W	3	
R7264-71	EXB38V470J	RESISTOR ARRAY	8	
R7274-79	EXB38V471J	RESISTOR ARRAY	6	
R7280-85	EXB38V470J	RESISTOR ARRAY	6	
R7301-08	EXB38V470J	RESISTOR ARRAY	8	
R7309	EXB38V471J	RESISTOR ARRAY	1	
R7326-29	ERJ3GEYJ220	M 22 OHM, J, 1/16W	4	
R7330, 31	ERJ3GEYJ470	M 47 OHM, J, 1/16W	2	
R7332	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R7333, 34	ERJ3GEYJ470	M 47 OHM, J, 1/16W	2	
R7335, 36	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R7337-44	ERJ12YJ6R8U	M 6.8 OHM, J, 1/2W	8	
R7345-48	ERJ3GEY0R00	M 0 OHM, 1/16W	4	
R7349-56	ERJ12YJ6R8U	M 6.8 OHM, J, 1/2W	8	
R7357, 58	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R7359	ERJ6GEYJ102	M 1KOHM, J, 1/10W	1	
R7360	ERJ6GEYJ104	M 100KOHM, J, 1/10W	1	
R7361	ERJ6GEYJ223	M 22KOHM, J, 1/10W	1	
R7362-69	EXB38V471J	RESISTOR ARRAY	8	
R7403-06	ERJ12YJ6R8U	M 6.8 OHM, J, 1/2W	4	
R7408	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R7410	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R7413-16	ERJ12YJ6R8U	M 6.8 OHM, J, 1/2W	4	
R7418	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R7420	ERJ3GEY0R00	M 0 OHM, 1/16W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R7423-26	ERJ12YJ6R8U	M 6.8 OHM, J,1/2W	4	
R7428	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R7430	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R7433-36	ERJ12YJ6R8U	M 6.8 OHM, J,1/2W	4	
R7438	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R7440	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R7441-44	ERJ3GEYJ220	M 22 OHM,J,1/16W	4	
R7445	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R7446-49	ERJ3GEYJ470	M 47 OHM,J,1/16W	4	
R7450-57	EXB38V470J	RESISTOR ARRAY	8	
R7459	ERJ6GEYJ102	M 1KOHM,J,1/10W	1	
R7460	ERJ6GEYJ223	M 22KOHM,J,1/10W	1	
R7461	ERJ6GEYJ104	M 100KOHM,J,1/10W	1	
R7462-70	EXB38V681J	RESISTOR ARRAY	9	
R7501,02	EXB38V681J	RESISTOR ARRAY	2	
R7503	ERJ3GEYJ470	M 47 OHM,J,1/16W	1	
R7504,05	EXB38V470J	RESISTOR ARRAY	2	
R7510-13	ERJ12YJ6R8U	M 6.8 OHM, J,1/2W	4	
R7514	ERJ3GEYJ470	M 47 OHM,J,1/16W	1	
R7515	EXB38V681J	RESISTOR ARRAY	1	
R7516-19	ERJ12YJ6R8U	M 6.8 OHM, J,1/2W	4	
R7520	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R7521-24	ERJ12YJ6R8U	M 6.8 OHM, J,1/2W	4	
R7525	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R7526-33	EXB38V681J	RESISTOR ARRAY	8	
R7535	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R7536	ERJ3GEYJ220	M 22 OHM,J,1/16W	1	
R7537	ERJ3GEYJ470	M 47 OHM,J,1/16W	1	
R7538	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R7541-43	ERJ3GEYJ220	M 22 OHM,J,1/16W	3	
R7544-46	ERJ3GEYJ470	M 47 OHM,J,1/16W	3	
R7547-54	EXB38V470J	RESISTOR ARRAY	8	
R7555	ERJ3GEYJ470	M 47 OHM,J,1/16W	1	
R7556-59	ERJ12YJ6R8U	M 6.8 OHM, J,1/2W	4	
R7560	ERJ3GEYJ470	M 47 OHM,J,1/16W	1	
R7575	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R7577	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R7580-85	EXB38V681J	RESISTOR ARRAY	6	
R7586-91	EXB38V470J	RESISTOR ARRAY	6	
R7603-06	ERJ12YJ6R8U	M 6.8 OHM, J,1/2W	4	
R7608	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R7610	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R7613-16	ERJ12YJ6R8U	M 6.8 OHM, J,1/2W	4	
R7618	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R7620	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R7623-26	ERJ12YJ6R8U	M 6.8 OHM, J,1/2W	4	
R7628	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R7630	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R7631	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R7632	ERJ6GEYJ104	M 100KOHM,J,1/10W	1	
R7633	ERJ6GEYJ223	M 22KOHM,J,1/10W	1	
R7634	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R7635-38	ERJ3GEYJ220	M 22 OHM,J,1/16W	4	
R7639-41	ERJ3GEYJ470	M 47 OHM,J,1/16W	3	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R7642	EXB38V681J	RESISTOR ARRAY	1	
R7701	ERJ3GEYJ470	M 47 OHM,J,1/16W	1	
R7702	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R7703-05	ERJ3GEYJ470	M 47 OHM,J,1/16W	3	
R7706	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R7707	ERJ3GEYJ562	M 5.6KOHM,J,1/16W	1	
R7708	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R7709	ERJ3GEYJ470	M 47 OHM,J,1/16W	1	
R7710	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R7713	ERJ3GEYJ220	M 22 OHM,J,1/16W	1	
R7714	ERJ3GEYJ473	M 47KOHM,J,1/16W	1	
R7716	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R7721-29	ERJ3GEY0R00	M 0 OHM, 1/16W	9	
R7751-55	ERJ3GEYJ103	M 10KOHM,J,1/16W	5	
R7757	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R7759	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R7760-62	ERJ3GEYJ103	M 10KOHM,J,1/16W	3	
R7764-71	ERJ3GEY0R00	M 0 OHM, 1/16W	8	
R7773-76	ERJ3GEYJ470	M 47 OHM,J,1/16W	4	
R7777	ERJ3GEYJ473	M 47KOHM,J,1/16W	1	
R7779	ERJ6GEYJ101	M 100 OHM,J,1/10W	1	
R7780	ERJ3GEYJ223	M 22KOHM,J,1/16W	1	
R7781	ERJ3GEYJ562	M 5.6KOHM,J,1/16W	1	
R7783	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R9060-67	ERJ3GEYJ101	M 100 OHM,J,1/16W	8	
R9070	ERJ3GEYJ470	M 47 OHM,J,1/16W	1	
R9074	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R9076	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R9095	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R9097	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R9099	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R9100,01	ERJ3GEYJ103	M 10KOHM,J,1/16W	2	
R9102	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R9106	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R9107	ERJ3GEYJ332	M 3.3KOHM,J,1/16W	1	
R9108,09	ERJ3GEYJ103	M 10KOHM,J,1/16W	2	
R9110	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R9111	ERJ3GEYJ223	M 22KOHM,J,1/16W	1	
R9113	ERJ3GEYJ100	M 10 OHM,J,1/16W	1	
R9120	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R9121	ERJ3GEYJ104	M 100KOHM,J,1/16W	1	
R9127	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R9129	ERJ3GEYJ683	M 68KOHM,J,1/16W	1	
R9134	ERJ3GEYJ333	M 33KOHM,J,1/16W	1	
R9140	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R9141-45	ERJ3GEYJ101	M 100 OHM,J,1/16W	5	
R9148	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R9149	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	1	
R9150,51	ERJ3GEYJ220	M 22 OHM,J,1/16W	2	
R9152,53	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	2	
R9154,55	ERJ3GEYJ562	M 5.6KOHM,J,1/16W	2	
R9156-59	ERJ3GEYJ103	M 10KOHM,J,1/16W	4	
R9160,61	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R9164-66	ERJ3GEYJ103	M 10KOHM,J,1/16W	3	
R9167,68	ERJ3GEYJ101	M 100 OHM,J,1/16W	2	
R9169	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R9170-72	ERJ3GEYJ393	M 39KOHM,J,1/16W	3	
R9173-75	ERJ3GEYJ103	M 10KOHM,J,1/16W	3	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R9177	ERJ3GEYJ223	M 22KOHM, J, 1/16W	1	
R9178	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R9179	ERJ3GEYJ102	M 1KOHM, J, 1/16W	1	
R9180	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R9181-84	ERJ3GEYJ102	M 1KOHM, J, 1/16W	4	
R9185, 86	ERJ3GEYJ220	M 22 OHM, J, 1/16W	2	
R9187, 88	ERJ3GEYJ562	M 5.6KOHM, J, 1/16W	2	
R9189, 90	ERJ3GEYJ103	M 10KOHM, J, 1/16W	2	
R9192	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9193	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R9194	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9196	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R9198	ERJ3GEYJ472	M 4.7KOHM, J, 1/16W	1	
R9199	ERJ3GEYJ272	M 2.7KOHM, J, 1/16W	1	
R9201, 02	ERJ3GEYJ472	M 4.7KOHM, J, 1/16W	2	
R9203	ERJ3GEYJ102	M 1KOHM, J, 1/16W	1	
R9204, 05	ERJ3GEYJ472	M 4.7KOHM, J, 1/16W	2	
R9206, 07	ERJ3GEYJ102	M 1KOHM, J, 1/16W	2	
R9209	ERJ3GEYJ100	M 10 OHM, J, 1/16W	1	
R9210	ERJ3GEYJ272	M 2.7KOHM, J, 1/16W	1	
R9215	ERJ3GEYJ123	M 12KOHM, J, 1/16W	1	
R9217-22	ERJ3GEYJ103	M 10KOHM, J, 1/16W	6	
R9236	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9237	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R9244, 45	ERJ3GEYJ101	M 100 OHM, J, 1/16W	2	
R9247, 48	ERJ3GEYJ472	M 4.7KOHM, J, 1/16W	2	
R9300, 01	ERJ3GEYJ820	M 82 OHM, J, 1/16W	2	
R9302, 03	D1HG8208A002	NETWORK RESISTER	2	
R9304, 05	ERJ3GEYJ220	M 22 OHM, J, 1/16W	2	
R9306, 07	EXB38V820J	RESISTOR ARRAY	2	
R9308	D1HG8208A002	NETWORK RESISTER	1	
R9309, 10	ERJ3GEYJ220	M 22 OHM, J, 1/16W	2	
R9311, 12	ERJ3GEYJ820	M 82 OHM, J, 1/16W	2	
R9313, 14	D1HG8208A002	NETWORK RESISTER	2	
R9315, 16	ERJ3GEYJ220	M 22 OHM, J, 1/16W	2	
R9318	ERJ3GEYJ472	M 4.7KOHM, J, 1/16W	1	
R9319	ERJ3GEYJ104	M 100KOHM, J, 1/16W	1	
R9320	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R9367	ERJ3GEYJ181	M 180 OHM, J, 1/16W	1	
R9371	EXB2HV470JV	RESISTOR ARRAY	1	
R9372	ERJ3GEYJ470	M 47 OHM, J, 1/16W	1	
R9373	ERJ3GEYJ330	M 33 OHM, J, 1/16W	1	
R9374	EXB38V470J	RESISTOR ARRAY	1	
R9375	ERJ3GEYJ151	M 150 OHM, J, 1/16W	1	
R9389-91	ERJ3GEYJ103	M 10KOHM, J, 1/16W	3	
R9393-95	D1HG8208A002	NETWORK RESISTER	3	
R9396, 97	ERJ3GEYJ220	M 22 OHM, J, 1/16W	2	
R9398	EXB38V820J	RESISTOR ARRAY	1	
R9404	EXB2HV470JV	RESISTOR ARRAY	1	
R9412-21	EXB38V470J	RESISTOR ARRAY	10	
R9428	EXB38V103J	RESISTOR ARRAY	1	
R9430	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R9433	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R9437, 38	ERJ3GEYJ103	M 10KOHM, J, 1/16W	2	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R9440	EXB2HV470JV	RESISTOR ARRAY	1	
R9441	ERJ3GEYJ472	M 4.7KOHM, J, 1/16W	1	
R9442	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R9443	ERJ3GEYJ104	M 100KOHM, J, 1/16W	1	
R9444	D1HG8208A002	NETWORK RESISTER	1	
R9445	ERJ3GEYJ220	M 22 OHM, J, 1/16W	1	
R9446	EXB38V820J	RESISTOR ARRAY	1	
R9448	ERJ3GEYJ220	M 22 OHM, J, 1/16W	1	
R9449, 50	D1HG8208A002	NETWORK RESISTER	2	
R9451, 52	ERJ3GEYJ220	M 22 OHM, J, 1/16W	2	
R9453-57	D1HG8208A002	NETWORK RESISTER	5	
R9458, 59	ERJ3GEYJ820	M 82 OHM, J, 1/16W	2	
R9460, 61	ERJ3GEYJ220	M 22 OHM, J, 1/16W	2	
R9462, 63	EXB38V820J	RESISTOR ARRAY	2	
R9464, 65	ERJ3GEYJ220	M 22 OHM, J, 1/16W	2	
R9466, 67	ERJ3GEYJ820	M 82 OHM, J, 1/16W	2	
R9468	ERJ3GEYJ101	M 100 OHM, J, 1/16W	1	
R9469	ERJ3GEYJ104	M 100KOHM, J, 1/16W	1	
R9470	ERJ3GEYJ472	M 4.7KOHM, J, 1/16W	1	
R9471	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R9472	ERJ3GEYJ104	M 100KOHM, J, 1/16W	1	
R9475	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R9480	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9482-85	ERJ3EKF1001	M 1KOHM, 1/16W	4	
R9486	ERJ3GEYJ330	M 33 OHM, J, 1/16W	1	
R9487	ERJ3GEYJ151	M 150 OHM, J, 1/16W	1	
R9488	ERJ3GEYJ330	M 33 OHM, J, 1/16W	1	
R9489-95	ERJ3GEYJ470	M 47 OHM, J, 1/16W	7	
R9496	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R9497	ERJ3GEYJ472	M 4.7KOHM, J, 1/16W	1	
R9498	ERJ3GEYJ104	M 100KOHM, J, 1/16W	1	
R9506	ERJ3GEYJ220	M 22 OHM, J, 1/16W	1	
R9507	ERJ3GEYJ560	M 56 OHM, J, 1/16W	1	
R9512	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9514	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9515	ERJ3GEYJ470	M 47 OHM, J, 1/16W	1	
R9523	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R9525	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R9526	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9527, 28	EXB2HV272JV	RESISTOR ARRAY	2	
R9529, 30	ERJ3GEYJ103	M 10KOHM, J, 1/16W	2	
R9531-33	ERJ3GEYJ470	M 47 OHM, J, 1/16W	3	
R9534	EXB38V470J	RESISTOR ARRAY	1	
R9535, 36	ERJ3GEYJ470	M 47 OHM, J, 1/16W	2	
R9537	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R9539	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9542	ERJ3GEYJ680	M 68 OHM, J, 1/16W	1	
R9543, 44	ERJ3GEYJ103	M 10KOHM, J, 1/16W	2	
R9545	ERJ3GEYJ304V	M 300KOHM, J, 1/16W	1	
R9546	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R9548-50	ERJ3GEYJ103	M 10KOHM, J, 1/16W	3	
R9552-54	ERJ3GEYJ470	M 47 OHM, J, 1/16W	3	
R9556	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R9560	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R9574	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9578	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9580-83	ERJ3EKF1001	M 1KOHM, 1/16W	4	
R9584	ERJ3GEYJ330	M 33 OHM, J, 1/16W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R9585,86	ERJ3GEYJ470	M 47 OHM,J,1/16W	2	
R9587-95	EXB38V470J	RESISTOR ARRAY	9	
R9596-99	ERJ3GEYJ470	M 47 OHM,J,1/16W	4	
R9602	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9616	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9619,20	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	2	
R9622	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9624,25	ERJ3GEYJ103	M 10KOHM,J,1/16W	2	
R9628	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R9630	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R9631	EXB2HV272JV	RESISTOR ARRAY	1	
R9632-34	ERJ3GEYJ470	M 47 OHM,J,1/16W	3	
R9637	ERJ3GEYJ470	M 47 OHM,J,1/16W	1	
R9639	ERJ3GEYJ470	M 47 OHM,J,1/16W	1	
R9641	ERJ3GEYJ470	M 47 OHM,J,1/16W	1	
R9643	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9645	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9800	ERJ3EKF1302	M 23KOHM, 1/16W	1	
R9801	ERJ3EKF2402	M 24KOHM, 1/16W	1	
R9802	ERJ3EKF6202	M 62KOHM, 1/16W	1	
R9803	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9804	ERJ3EKF2402	M 24KOHM, 1/16W	1	
R9805	ERJ3EKF3002	M 30KOHM, 1/16W	1	
R9806	ERJ3EKF3902	M 39KOHM, 1/16W	1	
R9807	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9808	ERJ3GEYJ104	M 100KOHM,J,1/16W	1	
R9810	ERJ3EKF3001	M 3KOHM, 1/16W	1	
R9813	ERJ3EKF2401	M 2.4KOHM, 1/16W	1	
R9814	ERJ3EKF6802	M 68KOHM, 1/16W	1	
R9815	ERJ3EKF2202	M 22KOHM, 1/16W	1	
R9816	ERJ3EKF8202	M 82KOHM, 1/16W	1	
R9821	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R9823-28	ERJ3GEYJ101	M 100 OHM,J,1/16W	6	
R9830,31	ERJ3GEYJ103	M 10KOHM,J,1/16W	2	
R9838,39	ERJ3GEYJ101	M 100 OHM,J,1/16W	2	
R9840	ERJ3GEYJ220	M 22 OHM,J,1/16W	1	
R9841	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9842-44	ERJ3GEYJ101	M 100 OHM,J,1/16W	3	
R9845	ERJ3GEYJ562	M 5.6KOHM,J,1/16W	1	
R9846,47	EXB2HV272JV	RESISTOR ARRAY	2	
R9848,49	EXB2HV470JV	RESISTOR ARRAY	2	
R9850	ERJ3GEYJ473	M 47KOHM,J,1/16W	1	
R9854	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R9859	EXB38V101J	RESISTOR ARRAY	1	
R9868	ERJ3GEYJ104	M 100KOHM,J,1/16W	1	
R9869-71	ERJ3GEYJ103	M 10KOHM,J,1/16W	3	
R9872	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9875-77	ERJ3GEYJ103	M 10KOHM,J,1/16W	3	
R9878	ERJ3EKF3902	M 39KOHM, 1/16W	1	
R9879	ERJ3EKF2002	M 20KOHM, 1/16W	1	
R9880	ERJ3EKF3602	M 36KOHM, 1/16W	1	
R9883	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9884	ERJ3GEYJ104	M 100KOHM,J,1/16W	1	
R9891	ERJ3EKF4702	M 47KOHM, 1/16W	1	
R9892	ERJ3EKF1502	M 15KOHM, 1/16W	1	
R9893	ERJ3EKF3602	M 36KOHM, 1/16W	1	
R9896	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9897	ERJ3GEYJ104	M 100KOHM,J,1/16W	1	
RM2501	PNA4701M05TV	REMOCO RECEIVER	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
RTL	TNPA3756CR	CIRCUIT BOARD DG	1	TH-50PV600H △
RTL	TNPA3756CU	CIRCUIT BOARD DG	1	TH-50PV600M/MT △
RTL	TNPA3756DA	CIRCUIT BOARD DG	1	TH-50PV600AZ △
RTL	TNPA3760	CIRCUIT BOARD H	1	△
RTL	TNPA3768AB	CIRCUIT BOARD TA	1	△
RTL	TNPA3852	CIRCUIT BOARD HC	1	△
RTL	TNPA3761AE	CIRCUIT BOARD PA	1	△
RTL	ETXMM610MEF	CIRCUIT BOARD P	1	△
RTL	TNPA3821	CIRCUIT BOARD C1	1	△
RTL	TNPA3822	CIRCUIT BOARD C2	1	△
RTL	TNPA3823	CIRCUIT BOARD C3	1	△
RTL	TNPA3824	CIRCUIT BOARD C4	1	△
RTL	TNPA3825	CIRCUIT BOARD C5	1	△
RTL	TNPA3826	CIRCUIT BOARD C6	1	△
RTL	TZTNP01BETB	CIRCUIT BOARD D	1	△
RTL	TNPA3827	CIRCUIT BOARD SC	1	△
RTL	TNPA3832	CIRCUIT BOARD SD	1	△
RTL	TNPA3828	CIRCUIT BOARD SS	1	△
RTL	TNPA3829	CIRCUIT BOARD SS2	1	△
RTL	TNPA3830	CIRCUIT BOARD SS3	1	△
RTL	TNPA3831	CIRCUIT BOARD SU	1	△
RTL	TNPA3764AF	CIRCUIT BOARD G	1	△
RTL	TNPA3848AD	CIRCUIT BOARD GK	1	△
RTL	TNPA3762AE	CIRCUIT BOARD K	1	△
RTL	RD-SD0010	SD MODULE	1	△
RTL	TNPA3765AC	CIRCUIT BOARD GS	1	△
RTL	TNPA3763AC	CIRCUIT BOARD S	1	△
S1	K1KA03BA0061	3P CONNECTOR	1	
SC2	K1KA02A00626	2P CONNECTOR	1	
SC20	K1KA20AA0008	20P CONNECTOR	1	
SC23	K1KA03AA0193	3P CONNECTOR	1	
SC30	K1KA08AA0192	8P CONNECTOR	1	
SC41,42	K1ML80B00001	80P CONNECTOR	2	
SC45,46	K1KA09A00239	9P CONNECTOR	2	
SCMM2,M3	TMME260	CLAMPER	2	
SD1-D4	K1MN96B00006	96P CONNECTOR	4	
SD46	K1KB09A00045	9P CONNECTOR	1	
SS11	K1KA02A00626	2P CONNECTOR	1	
SS12	K1KA10AA0194	10P CONNECTOR	1	
SS20,21	K1KA07A00170	7P CONNECTOR	2	
SS22,23	K1KB07AA0087	7P CONNECTOR	2	
SS33	K1KA04AA0193	4P CONNECTOR	1	
SS34	K1KA03AA0193	3P CONNECTOR	1	
SS43	K1KA12AA0194	12P CONNECTOR	1	
SS44	K1KA04AA0193	4P CONNECTOR	1	
SS51-56	K1MN13B00020	13P CONNECTOR	6	
SU1-U4	K1MN96B00006	96P CONNECTOR	4	
SU45	K1KB09A00045	9P CONNECTOR	1	
SW2500	K0F162B00002	SWITCH	1	
SW3753-57	EVQ11G05R	SWITCH	5	
T6602	ETS25AZ149AD	TRANS	1	
TA5,A6	K1KB15B00013	15P CONNECTOR	2	
TU001	ENG9F301GF	TUNER	1	△
TU002	ENG39A01GF	TUNER	1	△
VR6000	EVMEASA00B14	CONTROL 10KOHMB 0.3W	1	
VR6600	EVMEASA00B13	CONTROL 1KOHMB 0.3W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
VR6602	EVMEASA00B53	CONTROL 5KOHMB 0.3W	1	
X1100	H0J100500030	CRYSTAL	1	
X1101	H0J327200114	CRYSTAL	1	
X2101	H0J184500027	CRYSTAL	1	
X4004	H0J270500087	CRYSTAL	1	
X4006	H0J202500016	CRYSTAL	1	
X9000	H2D200500011	CRYSTAL	1	
X9500	H0J200500038	CRYSTAL	1	
ZA2101-08	TESA169	SHIELD CLIP	8	
ZA2300,01	K4CZ01000027	COMPATIBLE WITH JALCO K9	2	
ZA3401-03	K4CZ01000027	COMPATIBLE WITH JALCO K9	3	
ZA3405	K4CZ01000027	COMPATIBLE WITH JALCO K9	1	
ZA3701	K4CD01000013	TERMINAL	1	
ZA4001,02	K4CD08000002	TERMINAL	2	
ZA6001-03	K4CD01000011	TERMINAL	3	
ZA6401-03	K4CD01000011	TERMINAL	3	
ZA7101-05	K4CD01000013	TERMINAL	5	
ZA7201-05	K4CD01000013	TERMINAL	5	
ZA7301-05	K4CD01000013	TERMINAL	5	
ZA7401-05	K4CD01000013	TERMINAL	5	
ZA7501-05	K4CD01000013	TERMINAL	5	
ZA7601-05	K4CD01000013	TERMINAL	5	
ZA9001	K4CD01000011	TERMINAL	1	
A101,02	RA362MSV7	ARRESTOR	2	△
C101	ECQU2A105ML	P 1UF, 250V	1	△
C102	ECQU2A224ML	P 0.22UF, 250V	1	△
C103,04	ECKENA221KBR	C 221P 250V	2	△
C106,07	MMXC2W105K	C 1P 450V	2	
C108	ECJ2XB1H223K	C 0.022UF, K, 50V	1	
C109	ECJ2FB1H104K	C 0.1UF, K, 50V	1	
C110	ECJ2XC1H471J	C 470PF, J, 50V	1	
C111	ECJ2XB1H102K	C 1000PF, K, 50V	1	
C112	KZE1E470	C 470U 25V	1	
C113	ECJ2XC1H471J	C 470PF, J, 50V	1	
C114	ECJ2XC1H101J	C 100PF, J, 50V	1	
C115	ECQE6472B45	C 4700U 630V	1	
C116,17	KMQ2W221L	C 220U 450V	2	
C118	ECJ2FB1H104K	C 0.1UF, K, 50V	1	△
C119	ECKDNA331KB7	C 330PF, Z,	1	
C120	ECJ2FB1H104K	C 0.1UF, K, 50V	1	
C121	ECJ2XB1H223K	C 0.022UF, K, 50V	1	
C122,23	ECJ2FB1H104K	C 0.1UF, K, 50V	2	
C127	KMQ2W221L	C 220U 450V	1	
C128	TBB106K1A	C 10U 10V	1	
C129	ECJ2FB1H104K	C 0.1UF, K, 50V	1	
C201,02	KZE1E470	C 470U 25V	2	
C203,04	RR3DD101K7	C 100P 2KV	2	
C206	ECWH8473HV	P 0.047PF, J, 8KV	1	
C251	KMQ220901Z	C 900U 220V	1	
C253,54	KMQ220901Z	C 900U 220V	2	
C256,57	ECQE2473SKF	C 0.047U 250V	2	
C301	KZE1E470	C 470U 25V	1	
C302,03	RR3DD101K7	C 100P 2KV	2	
C305	ECWH8183HV	C 0.018UF 800V	1	
C306	KZE1E470	C 470U 25V	1	
C351-53	KZE1E182S	C 1800UF 25V	3	
C354,55	ECQV1H474JL	P 0.47UF, J, 50V	2	
C356	KZE1E821L	C 8200UF 25V	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C357	TEB104K5	C 0.1UF 50V	1	
C358	KZE1E331S	C 330UF 25V	1	
C359	TEB104K5	C 0.1UF 50V	1	
C360	KZE1E101	C 100UF 25V	1	
C361	TEB104K5	C 0.1UF 50V	1	
C363	KZE1E821L	C 8200UF 25V	1	
C364	TEB104K5	C 0.1UF 50V	1	
C365	KZE2A270	C 27UF 100V	1	
C401	KZE2A270	C 27UF 100V	1	
C402	KZE2A471S	C 470UF 100V	1	
C404,05	KZE2A471S	C 470UF 100V	2	
C501	ECQU2A473ML	P 0.047UF, M, 250V	1	△
C502,03	ECJ2FB1H104K	C 0.1UF, K, 50V	2	
C504	KZE1E101	C 100UF 25V	1	
C505	KZE1E470	C 470U 25V	1	
C506	KXG2W330	C 330UF 450V	1	
C508	ECJ2FB1H104K	C 0.1UF, K, 50V	1	
C509	ECJ2XB1H103K	C 0.01UF, K, 50V	1	
C510	KZE1H101	C 100UF 50V	1	
C514	KZE1E101	C 100UF 25V	1	
C515	ECJ2FB1H104K	C 0.1UF, K, 50V	1	
C551	ECKENA221KBR	C 221P 250V	1	△
C552	KZE1E331S	C 330UF 25V	1	
C555	TBB474K2	C 0.47UF 25V	1	
C556	KZE1E101	C 100UF 25V	1	
C557	TBB475K1	C 4.7UF 16V	1	
C558	KZE1A471	C 470UF 10V	1	
C559-61	TEB104K5	C 0.1UF 50V	3	
D101,02	MA111	DIODE	2	
D104	S3V60	DIODE	1	
D107	MA111	DIODE	1	
D109	ERA15-10	DIODE	1	
D201,02	MA165	DIODE	2	
D203,04	MA728	DIODE	2	
D251	YG901C3R	DIODE	1	
D252	MA111	DIODE	1	
D253-55	YG901C3R	DIODE	3	
D301,02	MA165	DIODE	2	
D303,04	MA728	DIODE	2	
D351,52	YG805C06R	DIODE	2	
D355	AG01A	DIODE	1	
D401	YG901C3R	DIODE	1	
D402	AG01	DIODE	1	
D403	YG901C3R	DIODE	1	
D501	SLWBA80	DIODE	1	△
D502,03	ERA22-10	DIODE	2	
D505	MA111	DIODE	1	
D506	ST3D82	DIODE	1	
D508	AG01A	DIODE	1	
D511	ERA91-02	DIODE	1	
D551	RK39	DIODE	1	
D554	MA165	DIODE	1	
D555	MA111	DIODE	1	
D556	MA165	DIODE	1	
F201	216005BP	FUSE 250V 5A	1	△
F301	216005BP	FUSE 250V 5A	1	△
F501	216002BP	FUSE 250V 2A	1	△
IC101	FA5502P	IC	1	
IC401	AN1431T	LINEAR IC	1	
IC501	MIP3E30MP	IC	1	△
K101	DG12D1-0	RELAY	1	△
K102	DLS12D1-0	RELAY	1	△
L101,02	P3180207Z	CHOKE COIL	2	△
L103	ETB44CZ129AD	TRANS	1	
L104	EXCELSR35T	BEAD CHOKE	1	
L106	EXCELSR35T	BEAD CHOKE	1	
L108	EXCELSR35T	BEAD CHOKE	1	
L352,53	EXCELD35C	BEAD CHOKE	2	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
L501	EXCELSA35	BEAD CHOKE	1	
L502	EXCELD35C	BEAD CHOKE	1	
MC101	MP00P7	MODULE	1	△
MC201	MLZNC101	MODULE	1	△
MC202	MP00R1	MODULE	1	△
MC301	MLZNC221	MODULE	1	△
MC502	MLWNB103	MODULE	1	△
MC601	MLSZA100	MODULE	1	△
MC701	MLZDC103	MODULE	1	△
P2	B2P3-VH-B	CONNECTOR	1	
P5	B11B-PH-KS	CONNECTOR	1	
P9	B3P4VH-B-L	CONNECTOR	1	△
P10	B6B-PH-KS	CONNECTOR	1	
P11	B2P3-VH-B	CONNECTOR	1	
P12	B10B-PH-KS	CONNECTOR	1	
P23	B3B-PH-KS	CONNECTOR	1	
P25	B20B-PHDS	CONNECTOR	1	
PC503	PS2581A	PHOTO CAPLER	1	△
PC505,06	PS2581A	PHOTO CAPLER	2	△
Q103	2SD2185	TRANSISTOR	1	
Q104	2SB1440	TRANSISTOR	1	
Q106	2SD1819A	TRANSISTOR	1	
Q301,02	2SK3568	FET	2	△
Q351,52	2SK3813	FET	2	
Q353,54	2SB1218A	TRANSISTOR	2	
Q401	2SA1699	TRANSISTOR	1	
Q402	2SK3302	FET	1	
Q403	2SD601A	TRANSISTOR	1	
Q404,05	2SK2391	FET	2	
Q406	2SD601A	TRANSISTOR	1	
Q501	2SK3302	FET	1	
Q502	2SK2731T	FET	1	
Q551,52	HAT1130R	FET	2	
Q553	2SB710A	TRANSISTOR	1	
R101	ERC12UGK185	S 1.8MOHM, K,1/2W	1	
R103	R5B100J	5W 10 OHM	1	
R104-06	ERJ6ENF1213	M 121KOHM, 1/10W	3	
R107	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R108	ERJ6ENF1213	M 121KOHM, 1/10W	1	
R109-11	RF5EJR18B	5W 0.18 OHM	3	
R113	ERJ6ENF3302	M 33KOHM, 1/10W	1	
R114	ERJ6ENF2701	M 2.7KOHM, 1/10W	1	
R115	ERJ6GEYJ103	M 10KOHM, J, 1/10W	1	
R116	ERJ12YJ470	M 47 OHM, J, 1/2W	1	
R117	ERJ12YJ330	M 33 OHM, J, 1/2W	1	
R118	ERJ6GEYJ103	M 10KOHM, J, 1/10W	1	
R119	ERJ6GEYJ101	M 100 OHM, J, 1/10W	1	
R120	ERJ12YJ470	M 47 OHM, J, 1/2W	1	
R122	ERJ6GEYJ154	M 150KOHM, J, 1/10W	1	
R123	ERJ6GEYJ103	M 10KOHM, J, 1/10W	1	
R125	ERJ12YJ470	M 47 OHM, J, 1/2W	1	
R127-29	ERJ6GEYJ183	M 18KOHM, J, 1/10W	3	
R130	ERJ6GEYJ104	M 100KOHM, J, 1/10W	1	
R131	ER0S2CKF4993	M 499KOHM, F, 1/4W	1	
R132,33	ERJ6ENF2493	M 249KOHM, 1/10W	2	
R134	ERJ6GEYJ470	M 47 OHM, J, 1/10W	1	
R135	ERJ6GEYJ103	M 10KOHM, J, 1/10W	1	
R136	ERJ6ENF3162	M31.6KOHM, 1/10W	1	
R137	ERJ6GEYJ123	M 12KOHM, J, 1/10W	1	
R138	ERJ6GEYJ474	M 470KOHM, J, 1/10W	1	
R139	ERJ6ENF3302	M 33KOHM, 1/10W	1	
R140-42	ERJ6ENF5493	M 549KOHM, 1/10W	3	
R143	ERJ6ENF6041	M6.04KOHM, 1/10W	1	
R144	ERJ6ENF6191	M6.19KOHM, 1/10W	1	
R145	ERJ6GEYJ204	M 200KOHM, J, 1/10W	1	
R146	ERJ6GEYJ684	M 680KOHM, J, 1/10W	1	
R147	ERJ6GEYJ393	M 39KOHM, J, 1/10W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R149	ERJ6GEYJ393	M 39KOHM, J, 1/10W	1	
R150,51	ERJ6ENF2493	M 249KOHM, 1/10W	2	
R201,02	ERJ12YJ221U	M 220 OHM, J, 1/2W	2	
R203,04	ERJ12YJ220	M 22 OHM, J, 1/2W	2	
R205-07	ERJ12YJ683	M 68KOHM, 1/2W	3	
R208,09	ERJ6GEYJ103	M 10KOHM, J, 1/10W	2	
R210	ERX12SJ1R0	M 0.1 OHM, J, 1/2W	1	
R251,52	ERG2SJ183H	M 18KOHM, J, 2W	2	
R253-55	ERJ6GEYJ114	M 110KOHM, J, 1/10W	3	
R256,57	ERJ6GEYJ682	M 6.8KOHM, J, 1/10W	2	
R258-61	ERJ6ENF6192	M61.9KOHM, 1/10W	4	
R262	ERJ6GEYJ220	M 22 OHM, J, 1/10W	1	
R301,02	ERJ12YJ101	M 100 OHM, J, 1/2W	2	
R303,04	ERJ12YJ220	M 22 OHM, J, 1/2W	2	
R305-07	ERJ12YJ683	M 68KOHM, 1/2W	3	
R308,09	ERJ6GEYJ103	M 10KOHM, J, 1/10W	2	
R310	ERX12SJ1R0	M 0.1 OHM, J, 1/2W	1	
R351	ERJ6GEYJ103	M 10KOHM, J, 1/10W	1	
R353	ERJ6GEYJ223	M 22KOHM, J, 1/10W	1	
R354	ERJ6GEYJ101	M 100 OHM, J, 1/10W	1	
R356,57	ERJ6GEYJ103	M 10KOHM, J, 1/10W	2	
R358	ERJ6GEYJ222	M 2.2KOHM, J, 1/10W	1	
R359,60	ERJ6GEYJ223	M 22KOHM, J, 1/10W	2	
R361	ERJ6GEYJ103	M 10KOHM, J, 1/10W	1	
R362	ERDS2TJ101	C 100 OHM, J, 1/4W	1	
R363	ERJ6GEYJ332	M 3.3KOHM, J, 1/10W	1	
R364	ERJ6GEYJ101	M 100 OHM, J, 1/10W	1	
R365-67	ERJ6GEYJ223	M 22KOHM, J, 1/10W	3	
R368	ERJ6GEYJ101	M 100 OHM, J, 1/10W	1	
R369,70	ERJ6GEYJ222	M 2.2KOHM, J, 1/10W	2	
R371	ERJ6ENF1622	M16.2KOHM, 1/10W	1	
R372	ERJ6GEYJ1R0	M 1 OHM, J, 1/10W	1	
R373	ERDS2TJ471	C 470 OHM, J, 1/4W	1	
R401	ERJ12YJ100	M 10 OHM, J, 1/2W	1	
R402,03	ERJ12YJ104U	M 100KOHM, 1/2W	2	
R404	ERJ6GEYJ103	M 10KOHM, J, 1/10W	1	
R405,06	ERJ6GEYJ184	M 180KOHM, J, 1/10W	2	
R407	ERJ6GEYJ103	M 10KOHM, J, 1/10W	1	
R408	ERJ6GEYJ102	M 1KOHM, J, 1/10W	1	
R409	ERG2SJ682	M 6.8KOHM, J, 2W	1	
R410	ERJ6GEYJ472	M 4.7KOHM, J, 1/10W	1	
R412	ERJ6GEYJ104	M 100KOHM, J, 1/10W	1	
R413	ERJ6GEYJ473	M 47KOHM, J, 1/10W	1	
R414-17	ERJ6GEYJ123	M 12KOHM, J, 1/10W	4	
R418	ERJ6GEYJ332	M 3.3KOHM, J, 1/10W	1	
R420	ERJ6GEYJ101	M 100 OHM, J, 1/10W	1	
R421	ERJ6ENF4751	M4.75KOHM, 1/10W	1	
R422	ERJ6ENF1581	M1.58KOHM, 1/10W	1	
R423,24	ERJ6ENF7152	M71.5KOHM, 1/10W	2	
R425	ERJ6ENF3002	M 30KOHM, 1/10W	1	
R426	RF2EJR47B	W0.47 OHM, J, 2W	1	
R428	ERJ6ENF6342	M6.34KOHM, 1/10W	1	
R429	ERJ6ENF5362	M5.36KOHM, 1/10W	1	
R430	ERJ6GEYJ103	M 10KOHM, J, 1/10W	1	
R474	ERJ6ENF1052	M10.5KOHM, 1/10W	1	
R477-80	ERJ6ENF1052	M10.5KOHM, 1/10W	4	
R501	ERJ12YJ474	M 470KOHM, 1/2W	1	
R503	ERJ12YJ474	M 470KOHM, 1/2W	1	
R505	ERJ6GEYJ334	M 330KOHM, J, 1/10W	1	
R507,08	ERJ6GEYJ334	M 330KOHM, J, 1/10W	2	
R509-12	ERJ6ENF8253	M 825KOHM, 1/10W	4	
R514,15	ERJ6ENF8253	M 825KOHM, 1/10W	2	
R518	ERJ12YJ100	M 10 OHM, J, 1/2W	1	
R519	ERJ6GEYJ103	M 10KOHM, J, 1/10W	1	
R528,29	ERJ6ENF2703	M 270KOHM, 1/10W	2	
R530	ER0S2TKF5363	M 536KOHM, F, 1/4W	1	
R531	ERJ6GEYJ4R7	M 4.7 OHM, J, 1/10W	1	
R560	ERJ6GEYJ473	M 47KOHM, J, 1/10W	1	
R561	ERDS2TJ332	C 3.3KOHM, J, 1/4W	1	
R563	ERJ6GEYJ332	M 3.3KOHM, J, 1/10W	1	
R564	ERJ6GEYJ391	M 390 OHM, J, 1/10W	1	
R565	ERJ6GEYJ473	M 47KOHM, J, 1/10W	1	
R566	ERJ6GEYJ222	M 2.2KOHM, J, 1/10W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R567	ERJ6GEYJ103	M 10KOHM, J, 1/10W	1	
R568	ERJ6GEYJ102	M 1KOHM, J, 1/10W	1	
R569,70	ERJ12YJ151	M 150 OHM, J, 1/2W	2	
R571	ERJ6GEYJ332	M 3.3KOHM, J, 1/10W	1	
R572,73	ERJ6ENF2703	M 270KOHM, 1/10W	2	
R574	ER0S2TKF5363	M 536KOHM, F, 1/4W	1	
R580	ERJ6GEYJ102	M 1KOHM, J, 1/10W	1	
RF101	A5MC100JP2	139C 10	1	△
T201	ETB57LZ156AD	TRANS	1	△
T301	ETB50LZ116AD	TRANS	1	△
T501	ETB25KA1C6AD	TRANS	1	△
VR251	EVMEASA01B54	VARIABLE RESISTOR	1	
VR351	EVMEASA01B14	VARIABLE RESISTOR	1	
VR401	EVMEASA01B34	VARIABLE RESISTOR	1	
Z101	TND14V751	VARISTOR	1	△
Z102	ERZVGAD471	VARISTOR	1	△
Z501	ERZVGAD471	VARISTOR	1	△
ZD101	MA8051	ZENER DIODE	1	
ZD351-54	MA8150	ZENER DIODE	4	
ZD405,06	MA4300N	ZENER DIODE	2	
ZD407	MA4120N	ZENER DIODE	1	
ZD408	MA8220	ZENER DIODE	1	
ZD501	MA8270	ZENER DIODE	1	
ZD502	MA4300N	ZENER DIODE	1	